How to use Cura 15.04

Note:

1、 We advise new user to use Cura for Slicing.

2、The datas you will slice depend on the item you need to print.

3、 Before you start printing, please make sure the parts of printer work well and the distance between nozzle and hotbed is about 0.1mm(A4 Paper thickness).

Ps: Most datas was default, you need to change them depends on the object you want to print.

Step1:

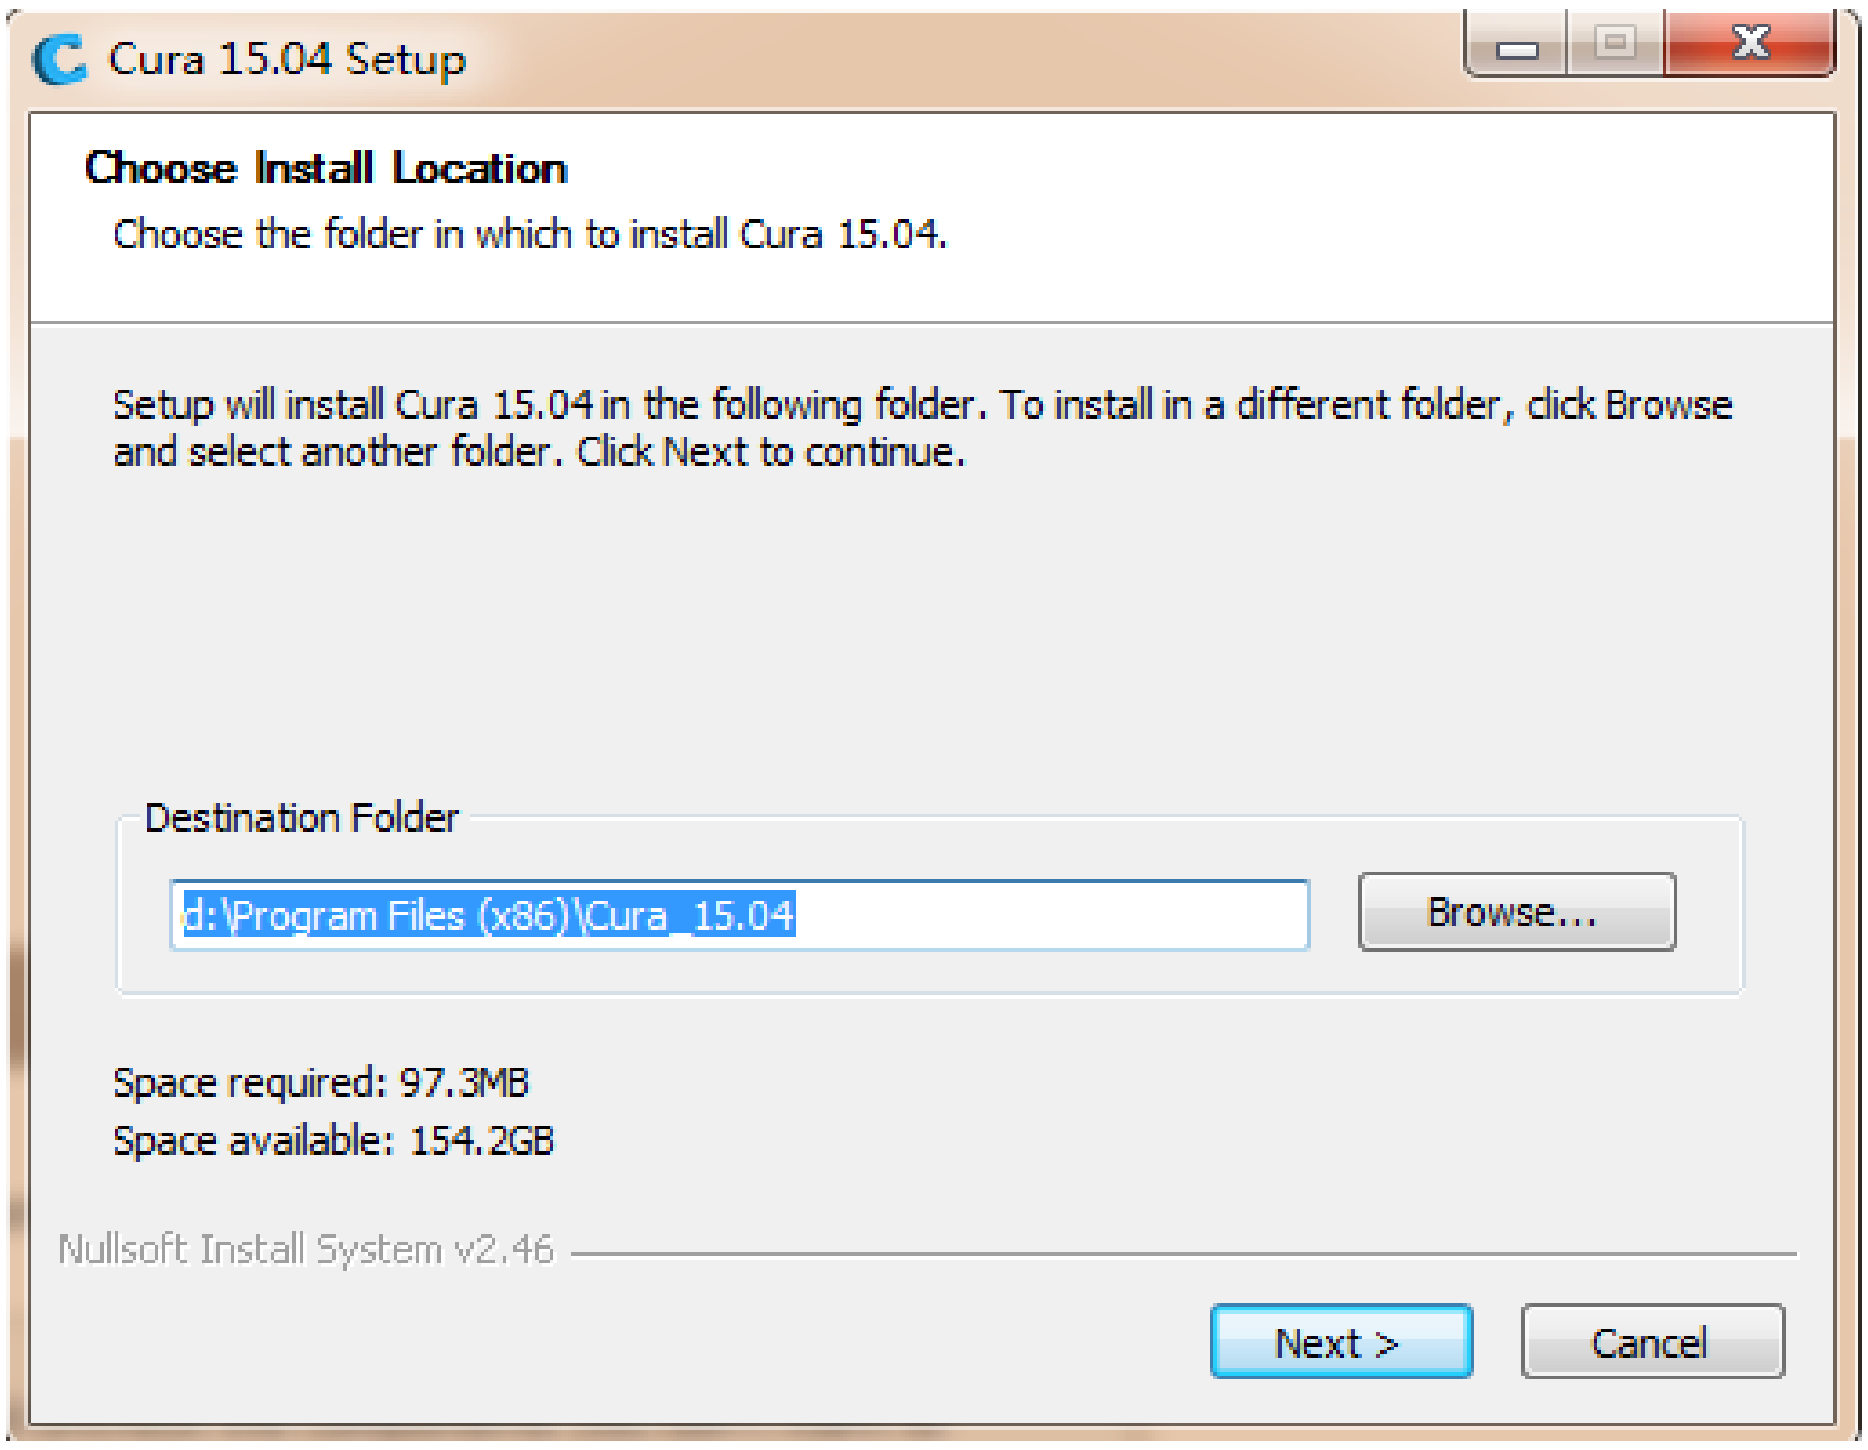
Cura 15.04 Setup
Choose Install Location
Choose the folder in which to install Cura 15.04.
Setup will install Cura 15.04 in the following folder. To install in a different folder, click Browse and select another folder. Click Next to continue.
Destination Folder
d:\Program Files (x86)\Cura_15.04
Browse...
Space required: 97.3MB
Space available: 154.2GB
Nullsoft Install System v2.46
Next >
Cancel

Step2:

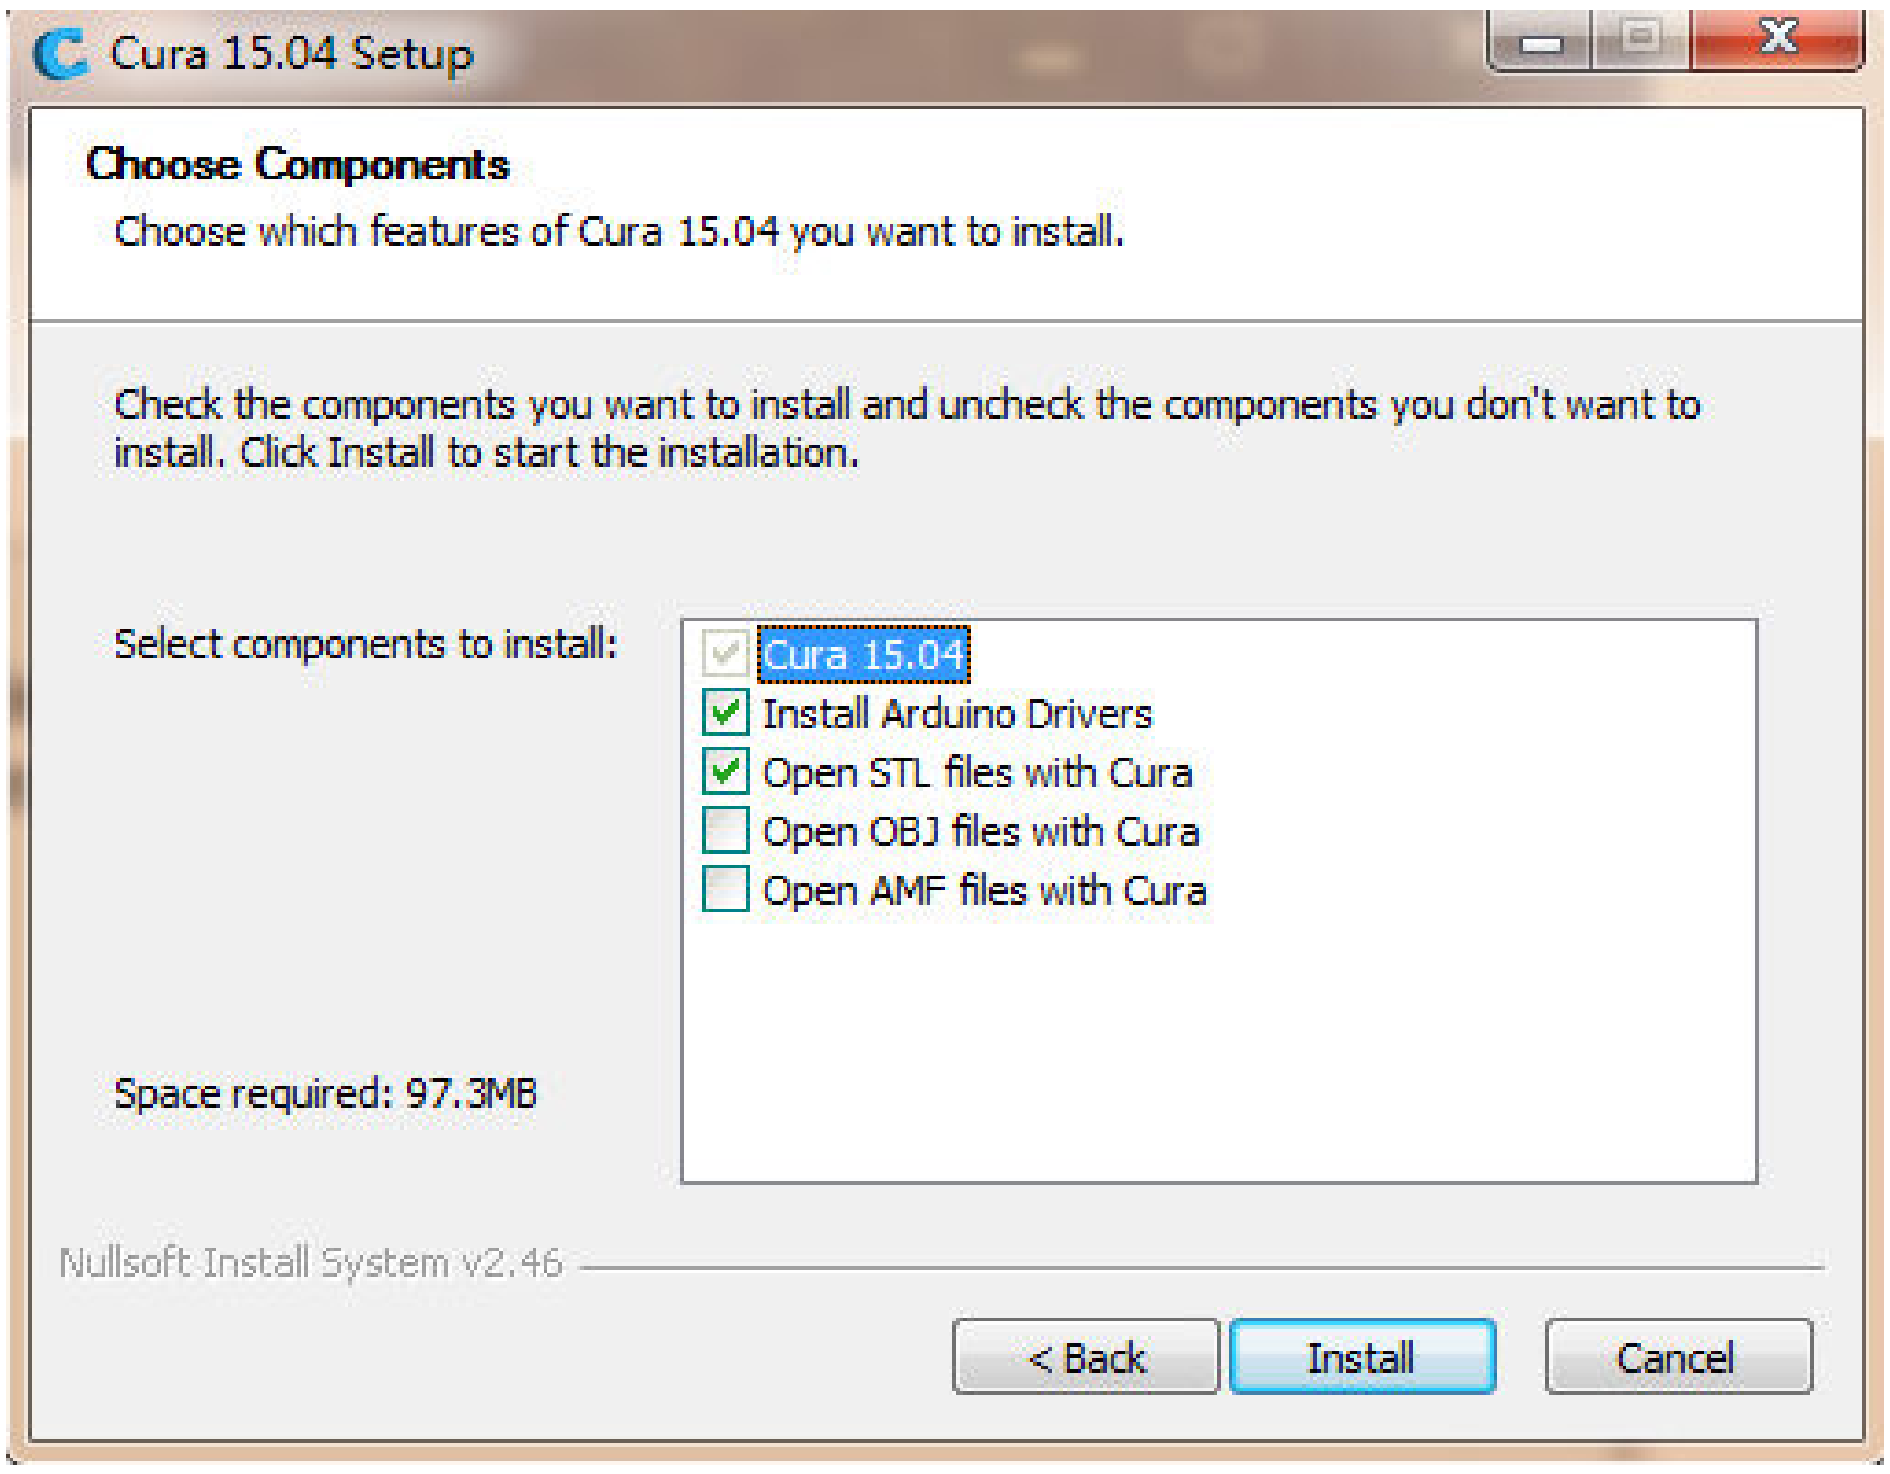
Cura 15.04 Setup
Choose Components
Choose which features of Cura 15.04 you want to install.
Check the components you want to install and uncheck the components you don't want to install. Click Install to start the installation.
Select components to install:
Cura 15.04
Install Arduino Drivers
Open STL files with Cura
Open OBJ files with Cura
Open AMF files with Cura
Space required: 97.3MB
Nullsoft Install System v2.46
< Back
Install
Cancel

Step3:

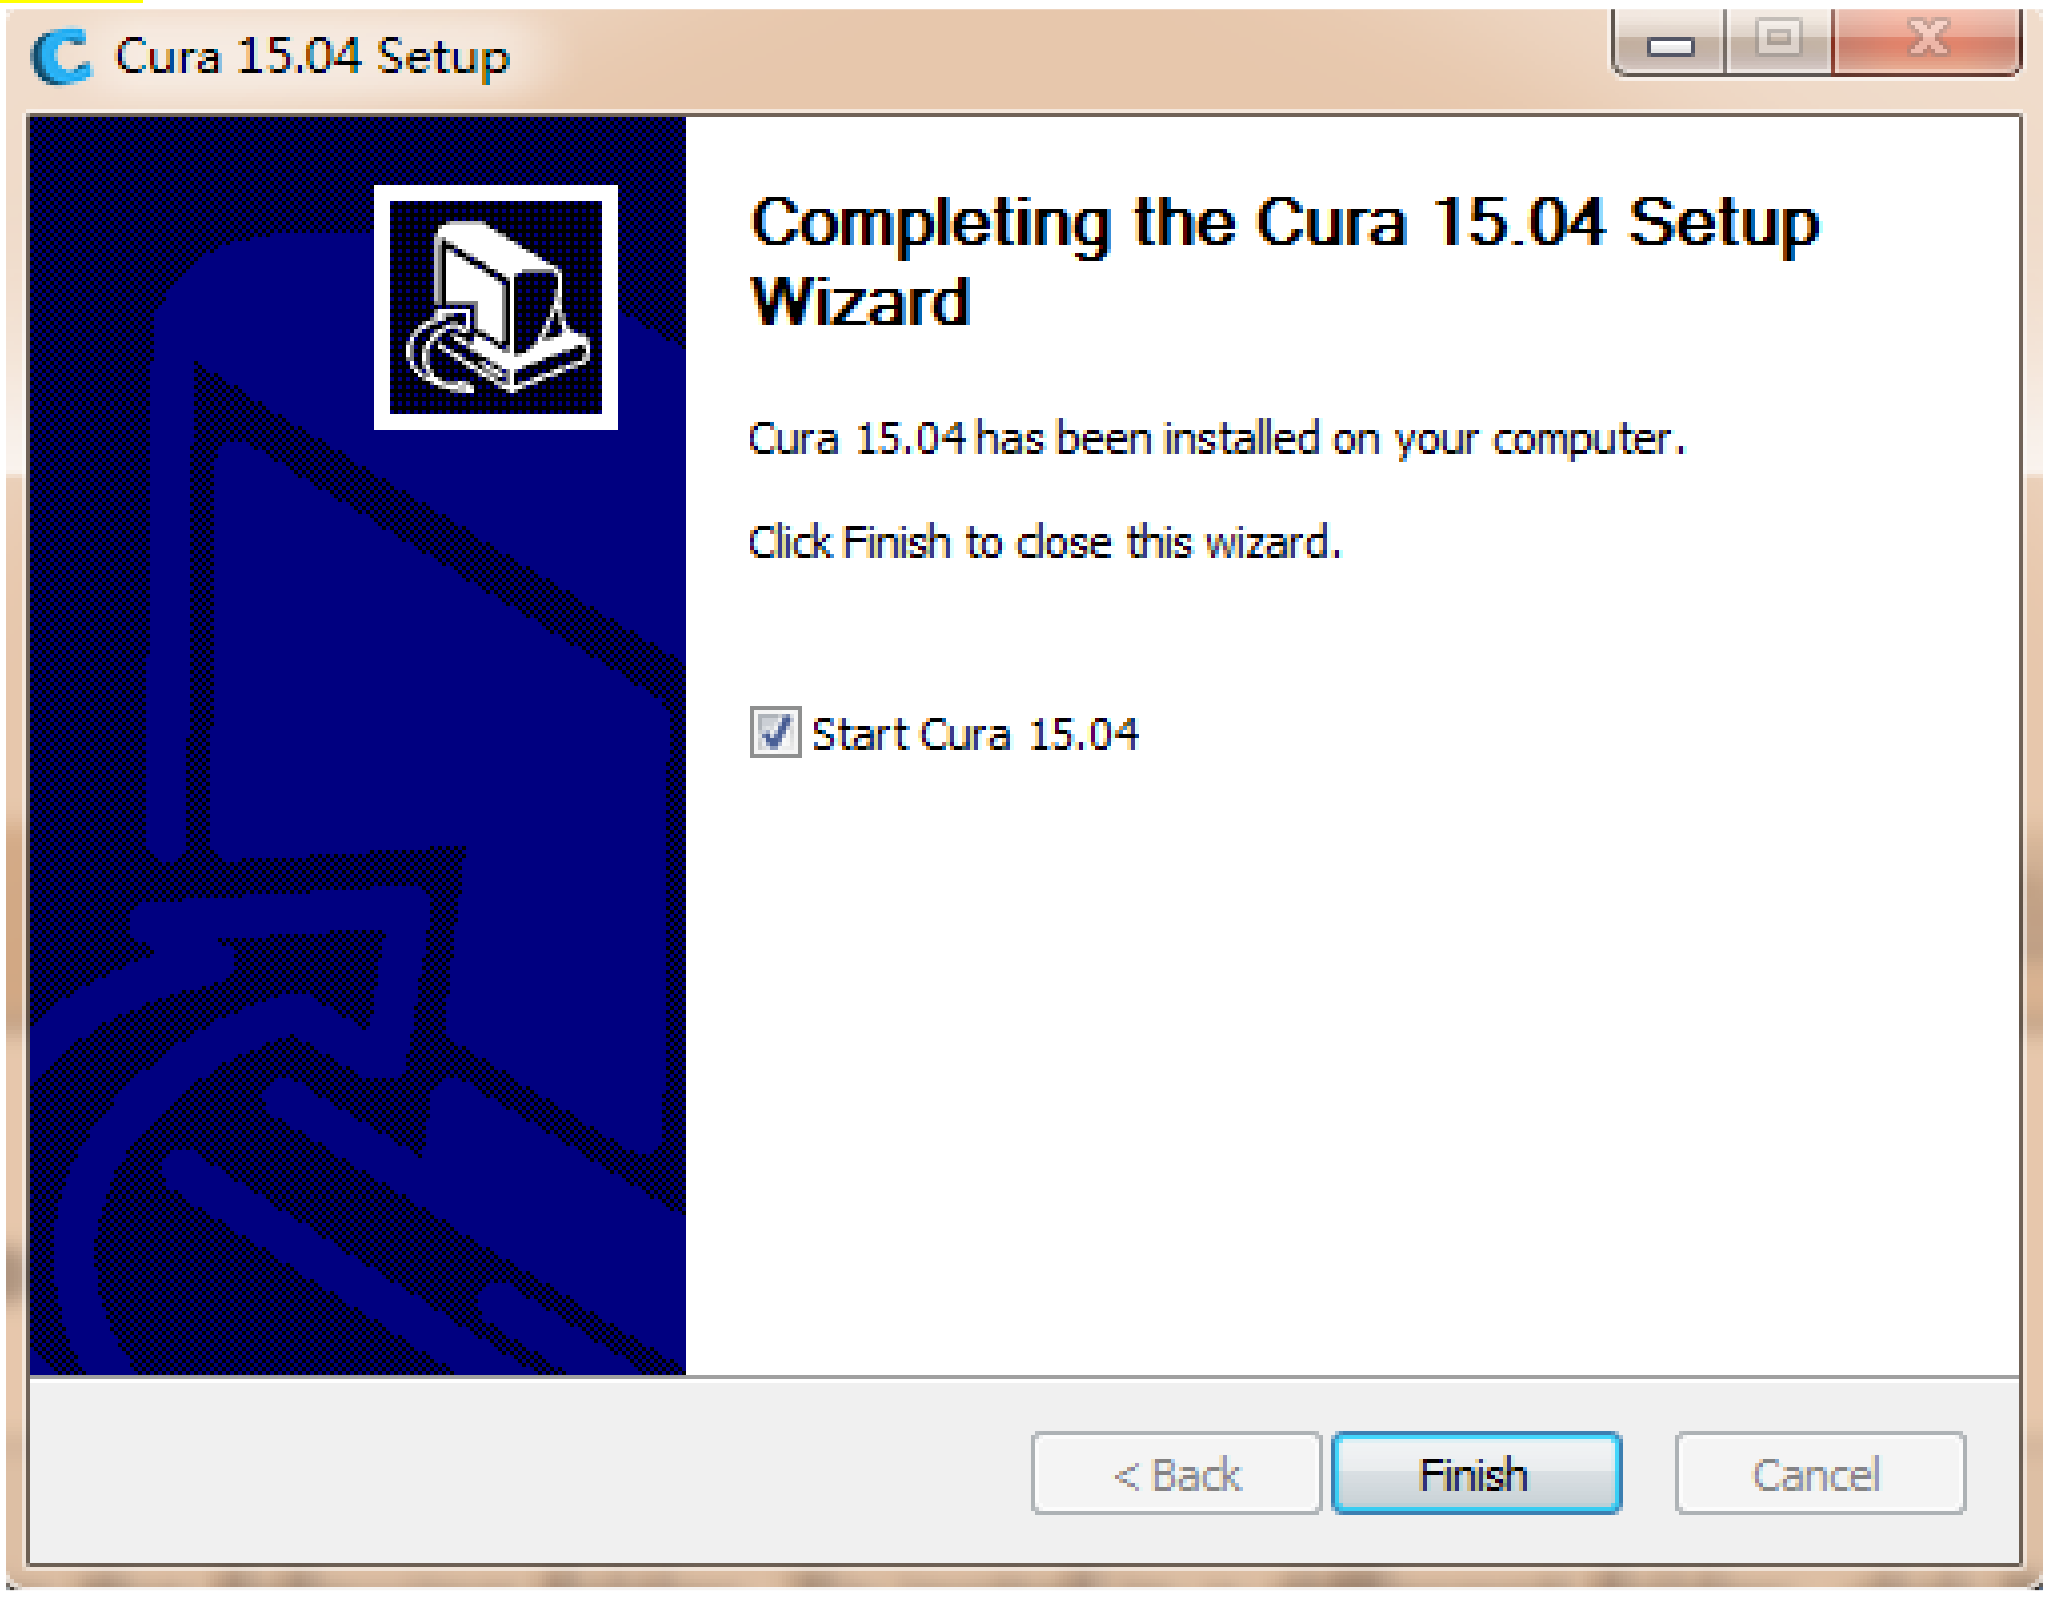
Cura 15.04 Setup
Completing the Cura 15.04 Setup Wizard
Cura 15.04 has been installed on your computer.
Click Finish to close this wizard.
Start Cura 15.04
< Back
Finish
Cancel

Step4:

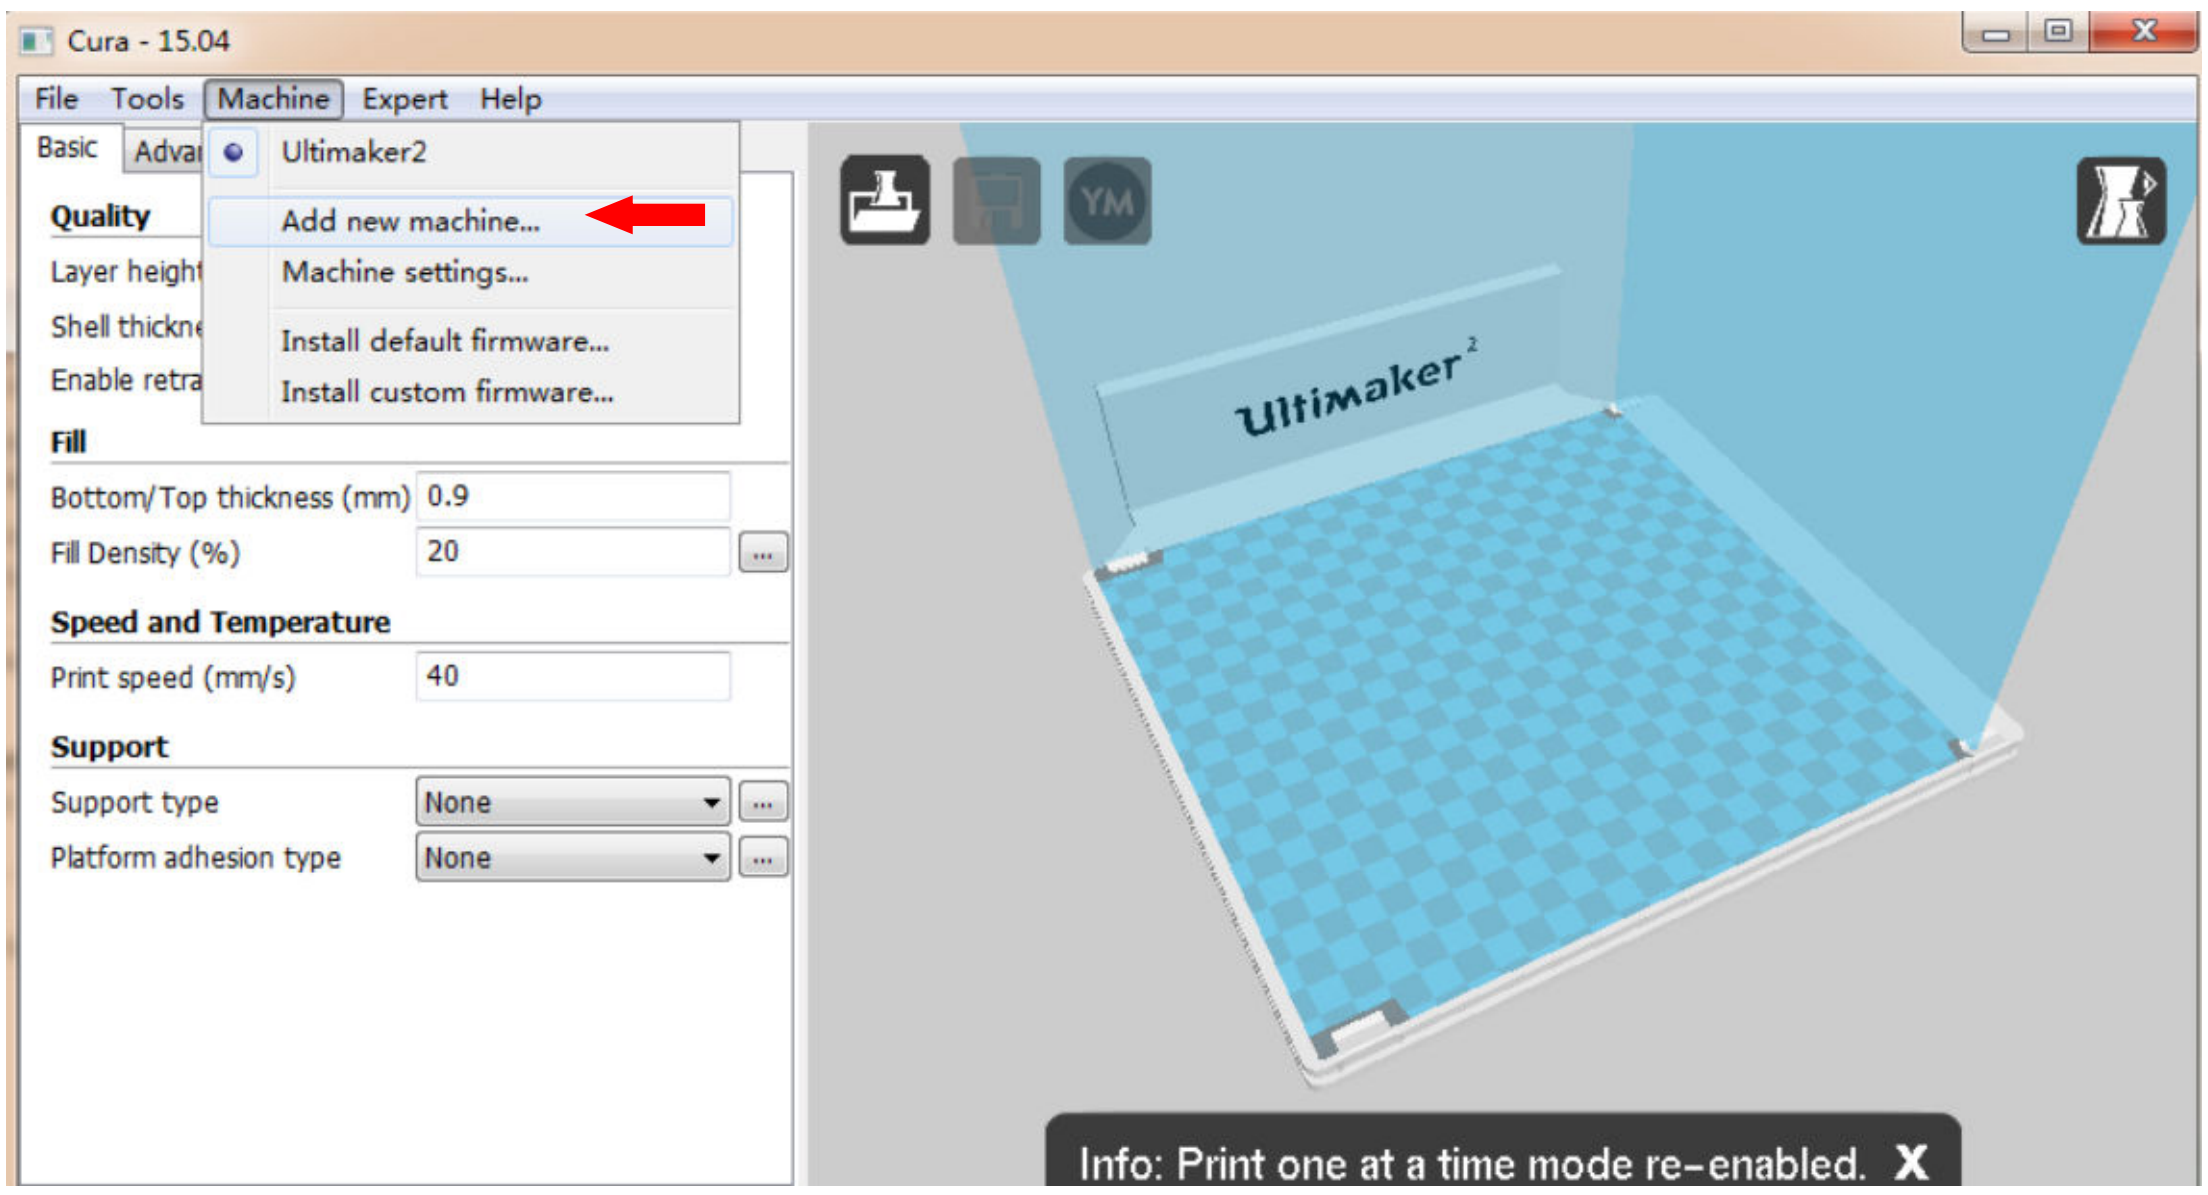
Cura - 15.04
File
Tools
Machine
Expert
Help
Basic
Ultimaker2
Add new machine...
Machine settings...
Install default firmware...
Install custom firmware...
Quality
Fill
Bottom/Top thickness (mm)
0.9
Fill Density (%)
20
Speed and Temperature
Print speed (mm/s)
40
Support
Support type
None
Platform adhesion type
None
Ultimaker
Info: Print one at a time mode re-enabled.

Step5:

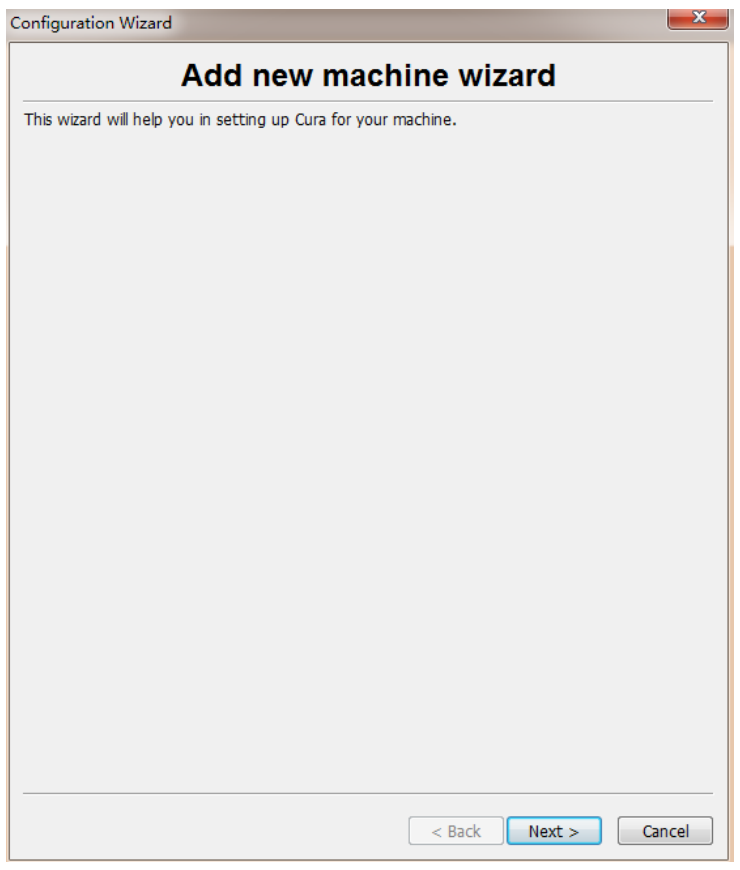

Step6:

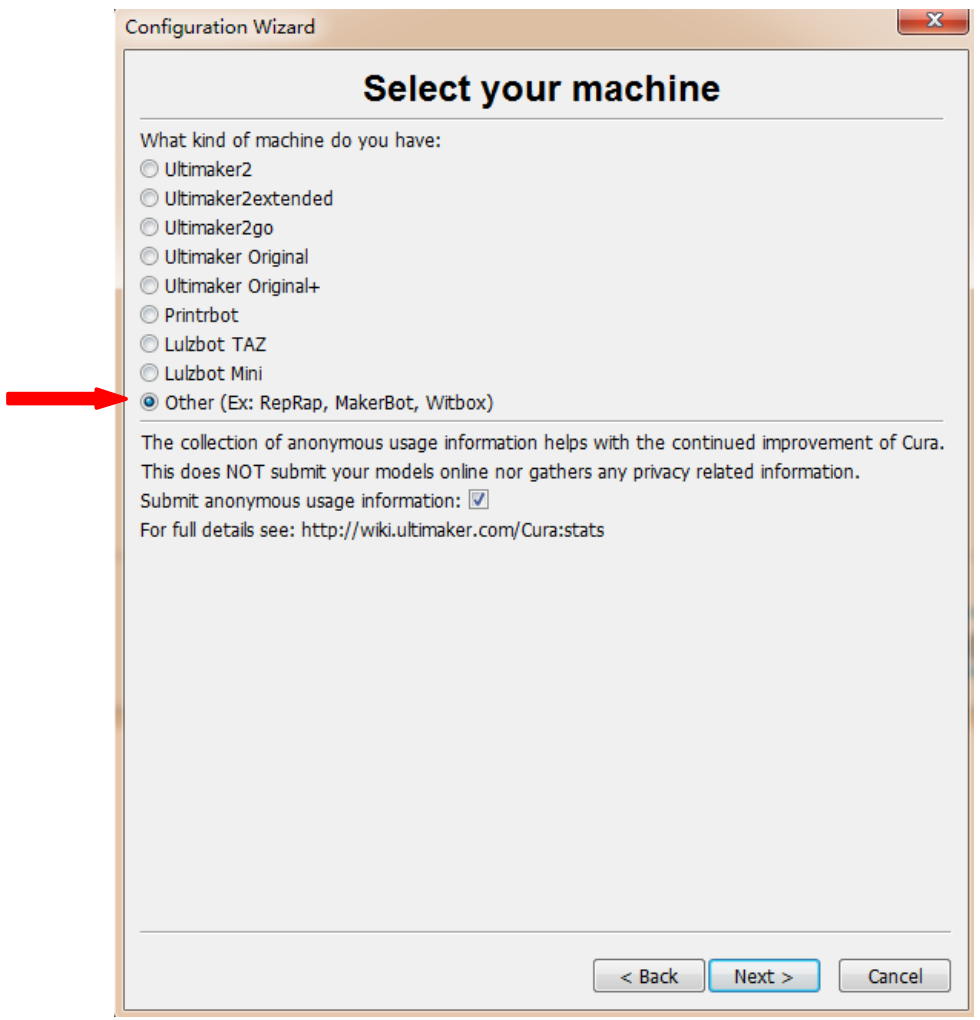

Step7:

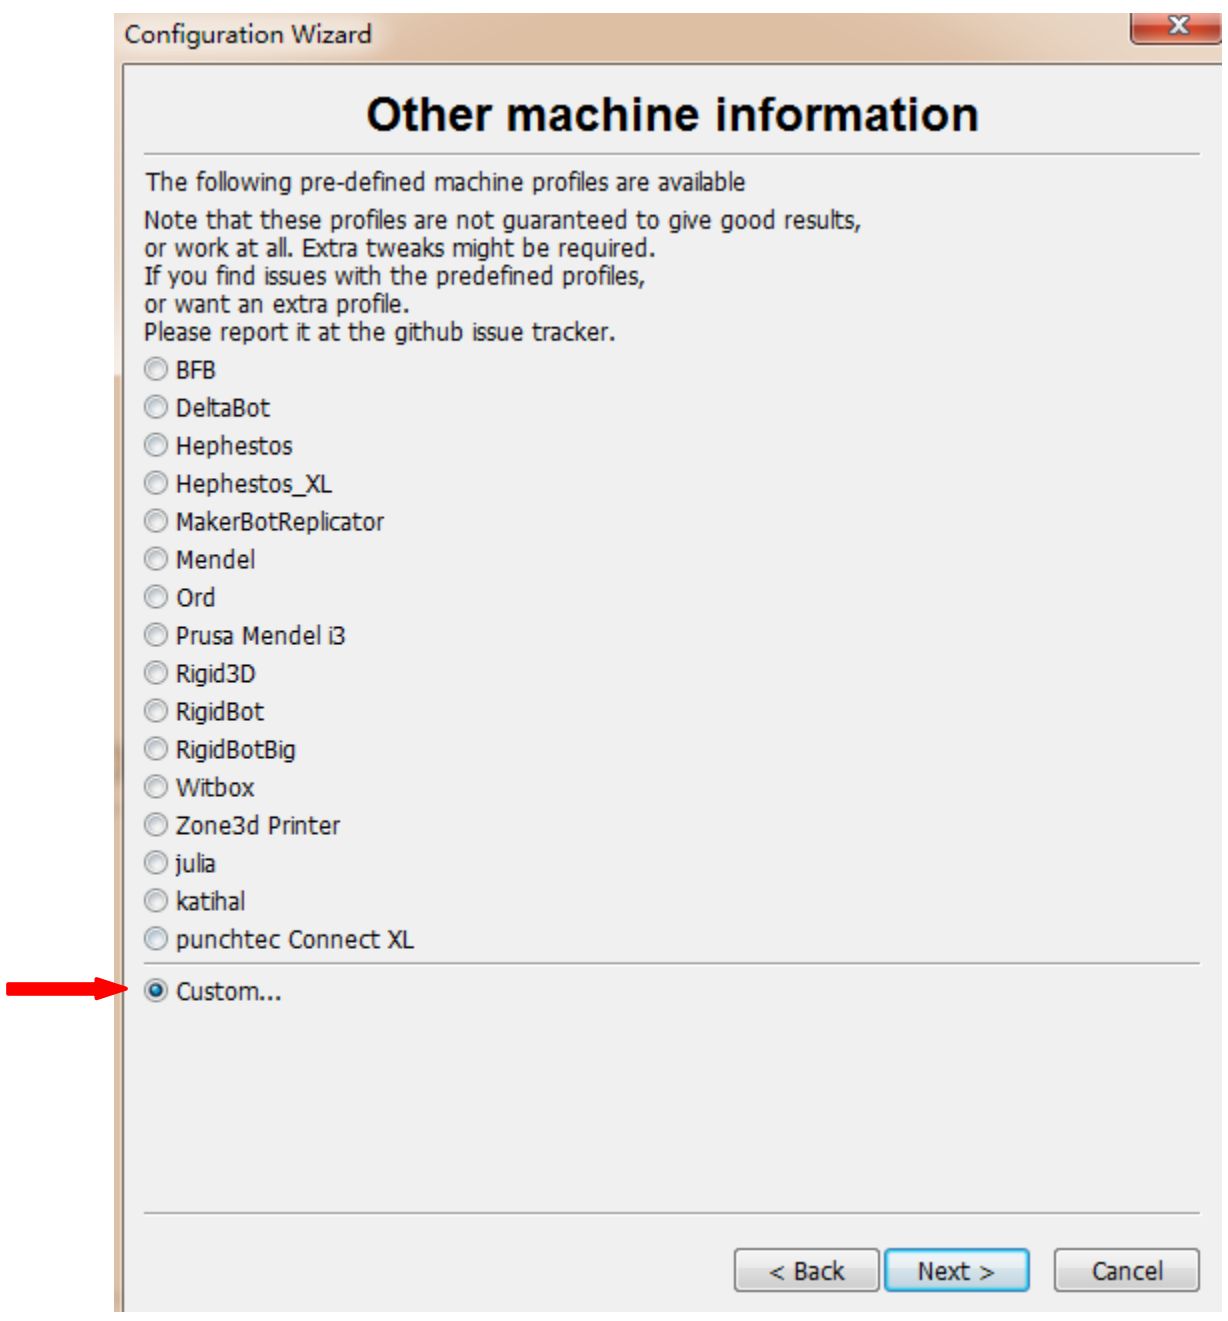

Step8:

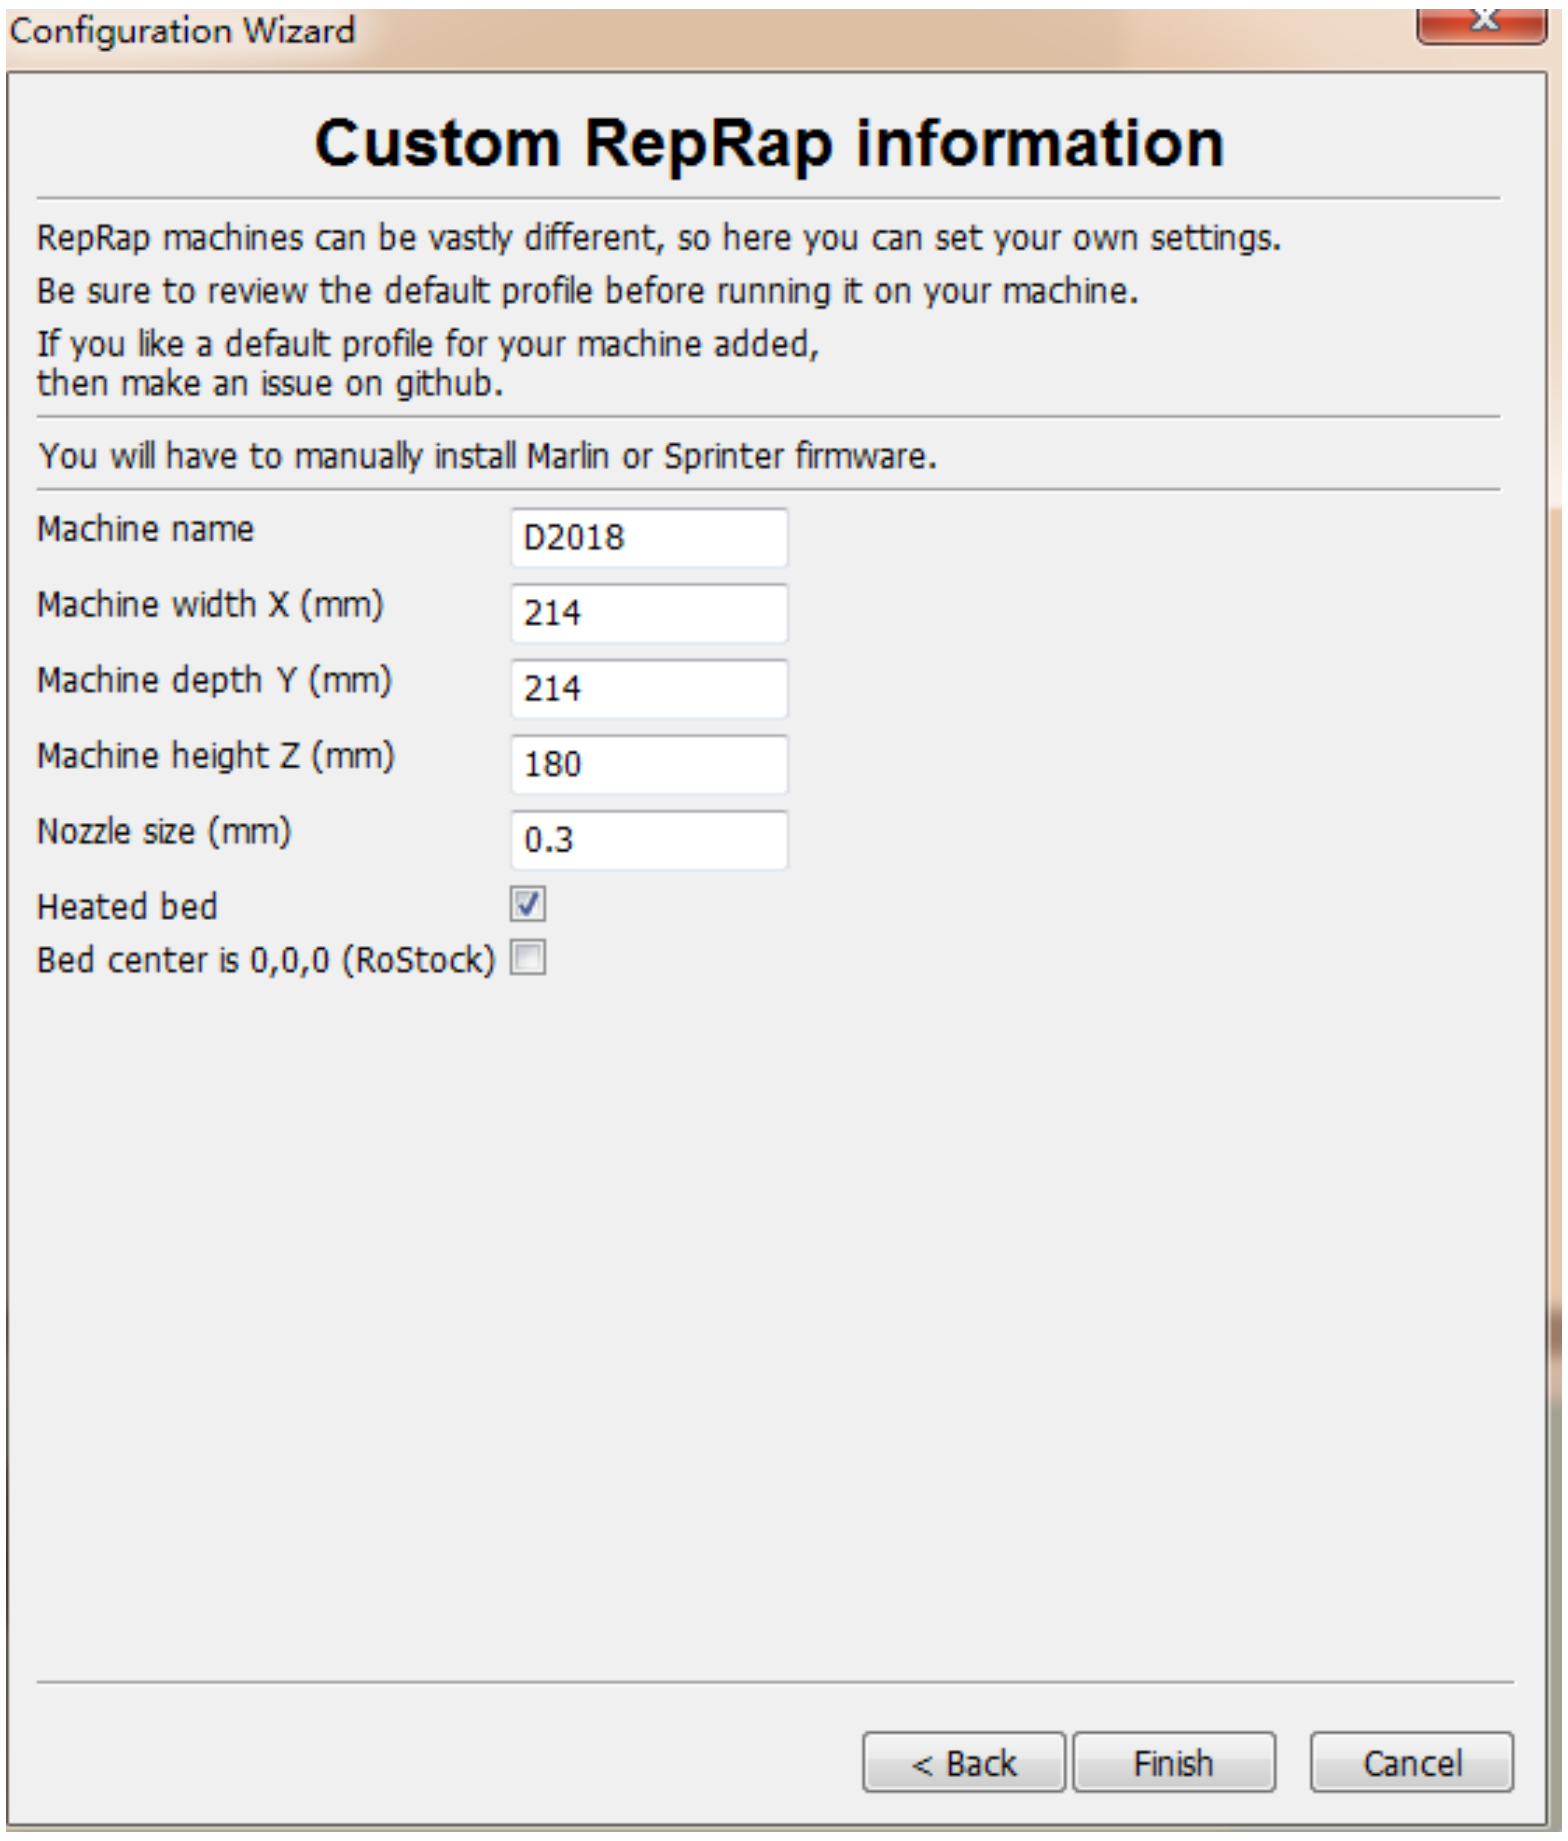
Configuration Wizard
Custom RepRap information
RepRap machines can be vastly different, so here you can set your own settings.
Be sure to review the default profile before running it on your machine.
If you like a default profile for your machine added,
then make an issue on github.
You will have to manually install Marlin or Sprinter firmware.
Machine name
D2018
Machine width X (mm)
214
Machine depth Y (mm)
214
Machine height Z (mm)
180
Nozzle size (mm)
0.3
Heated bed
Bed center is 0,0,0 (RoStock)
< Back
Finish
Cancel

Step9:

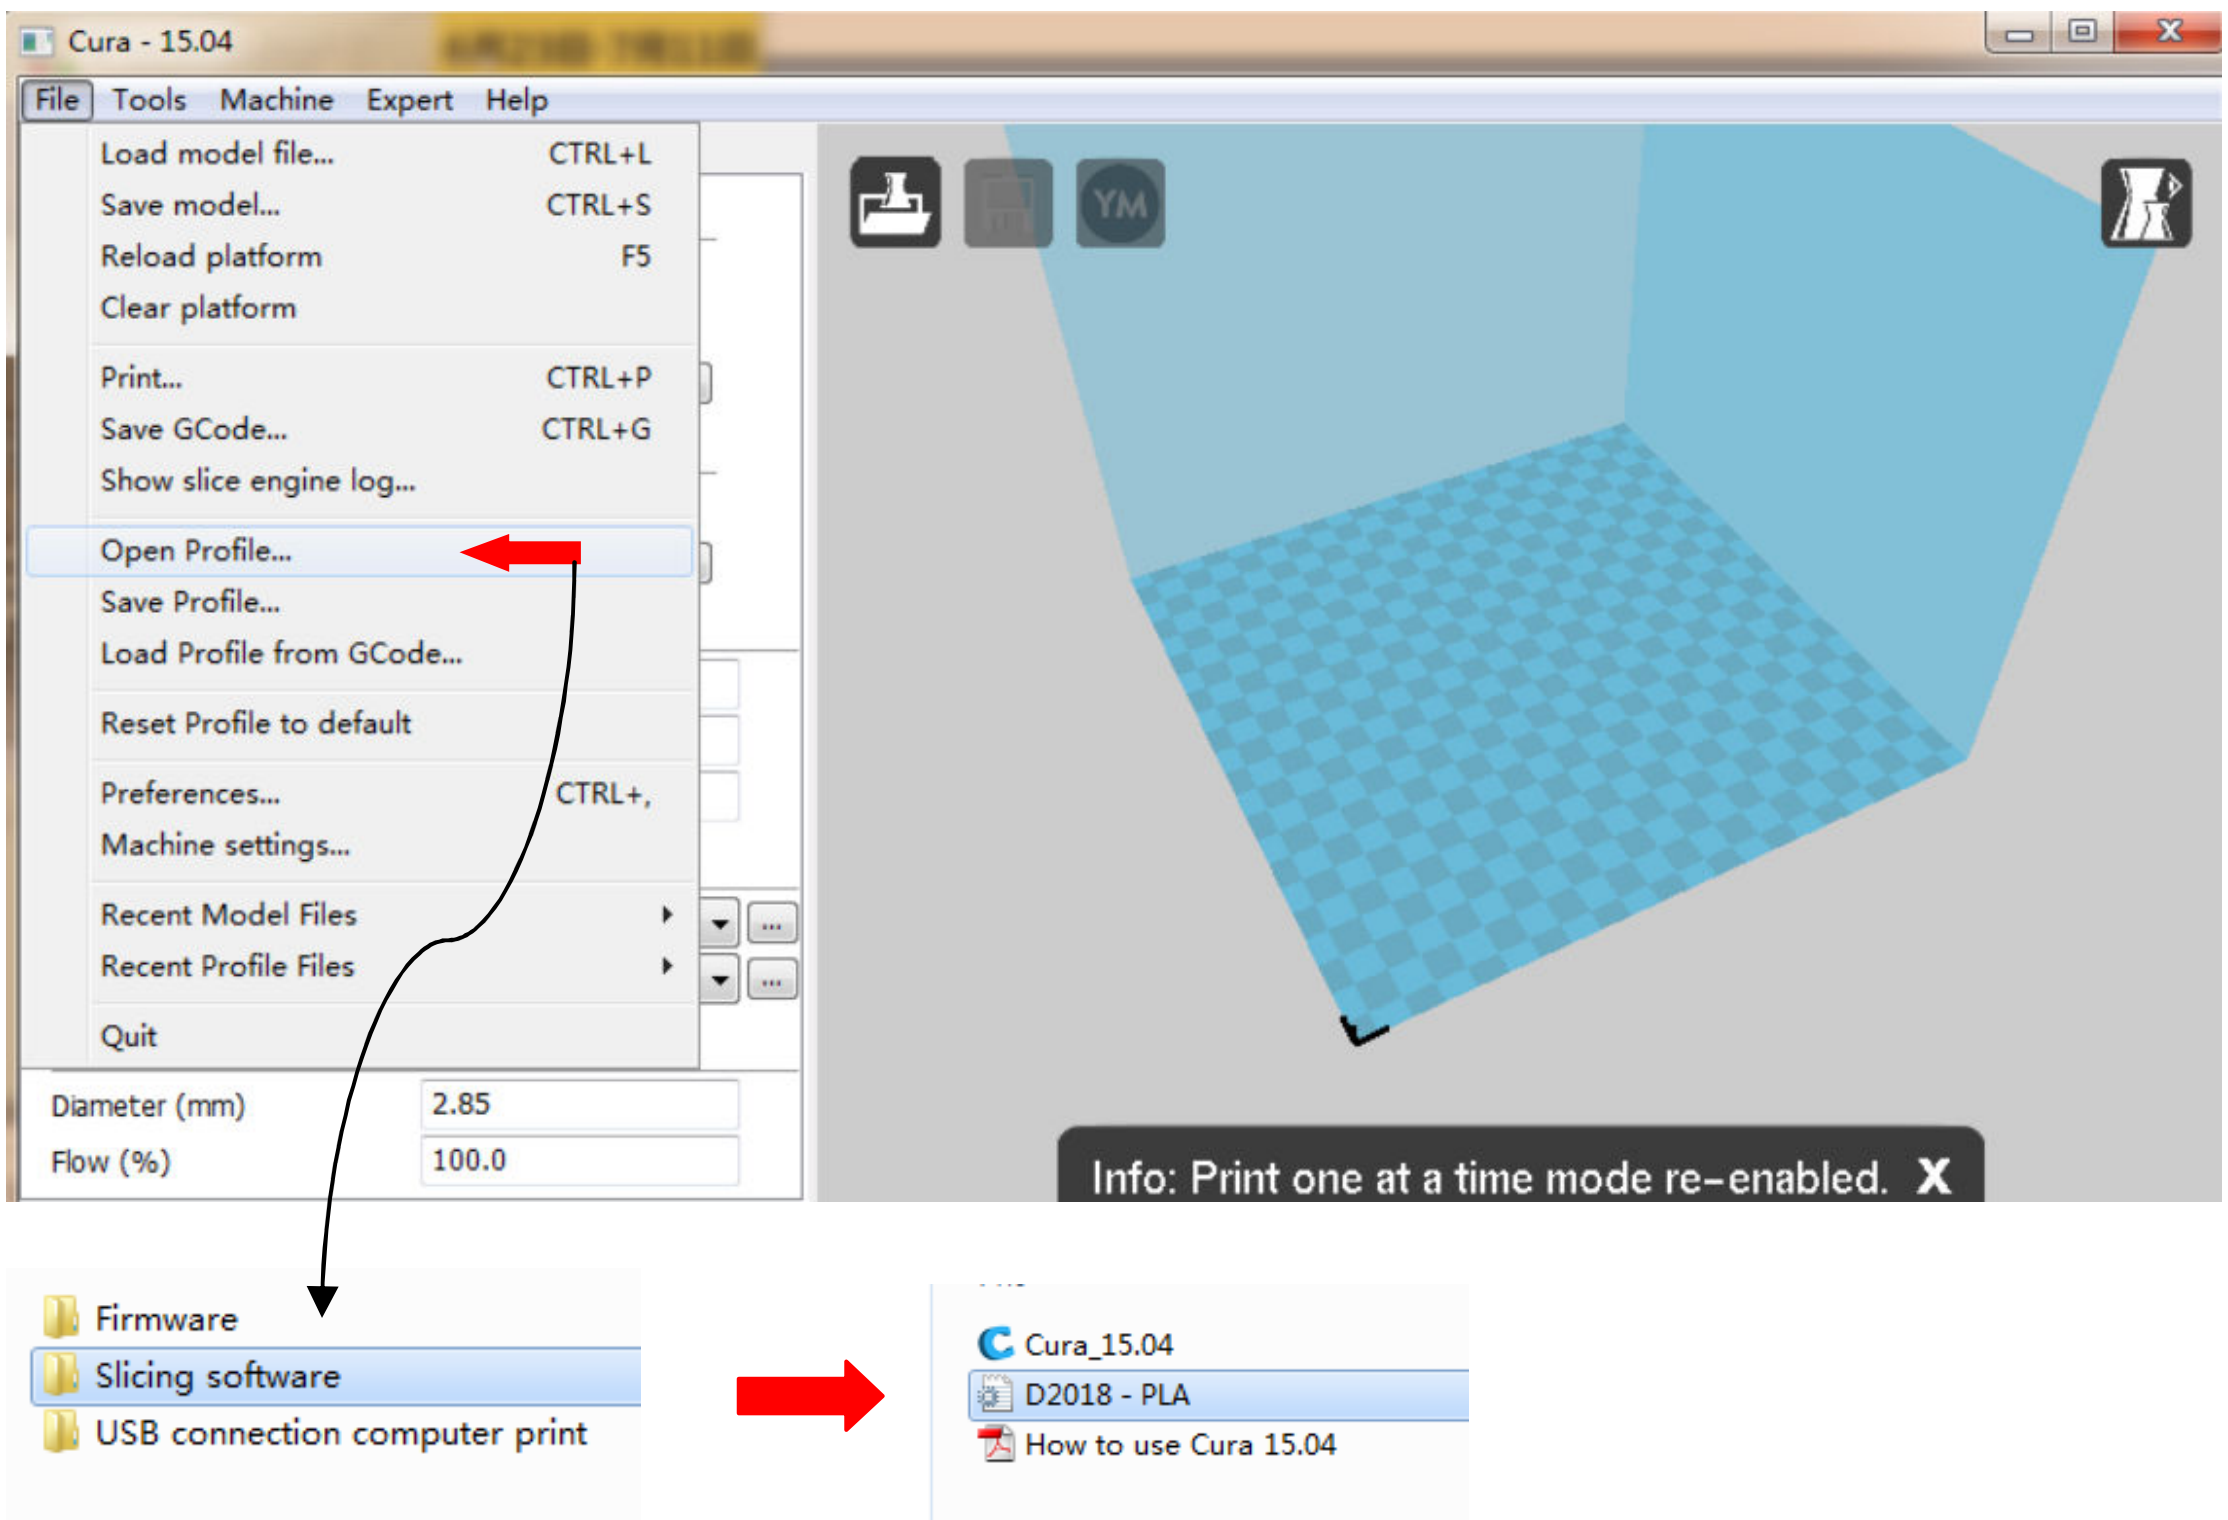
Cura - 15.04
File
Tools
Machine
Expert
Help
Load model file... CTRL+L
Save model... CTRL+S
Reload platform F5
Clear platform
Print... CTRL+P
Save GCode... CTRL+G
Show slice engine log...
Open Profile...
Save Profile...
Load Profile from GCode...
Reset Profile to default
Preferences... CTRL+,
Machine settings...
Recent Model Files
Recent Profile Files
Quit
Diameter (mm)
2.85
Flow (%)
100.0
Info: Print one at a time mode re-enabled. X
Firmware
Slicing software
USB connection computer print
Cura_15.04
D2018 - PLA
How to use Cura 15.04

Step10:

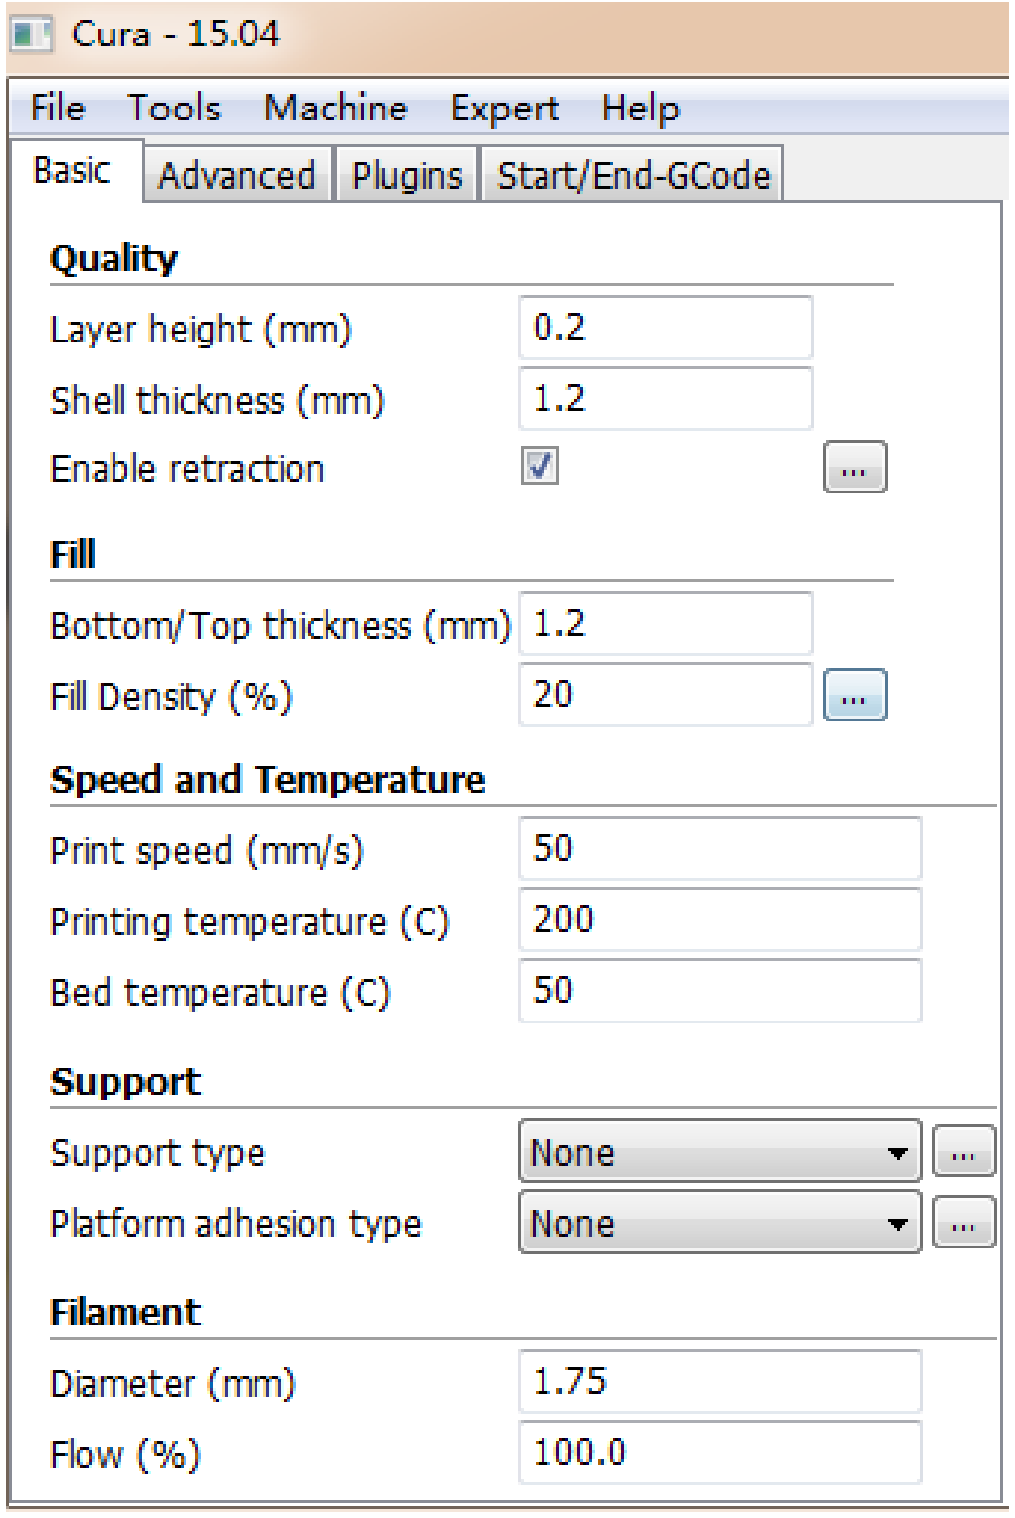
Cura - 15.04
File Tools Machine Expert Help
Basic Advanced Plugins Start/End-GCode
Quality
Layer height (mm) 0.2
Shell thickness (mm) 1.2
Enable retraction
Fill
Bottom/Top thickness (mm) 1.2
Fill Density (%) 20
Speed and Temperature
Print speed (mm/s) 50
Printing temperature (C) 200
Bed temperature (C) 50
Support
Support type None
Platform adhesion type None
Filament
Diameter (mm) 1.75
Flow (%) 100.0

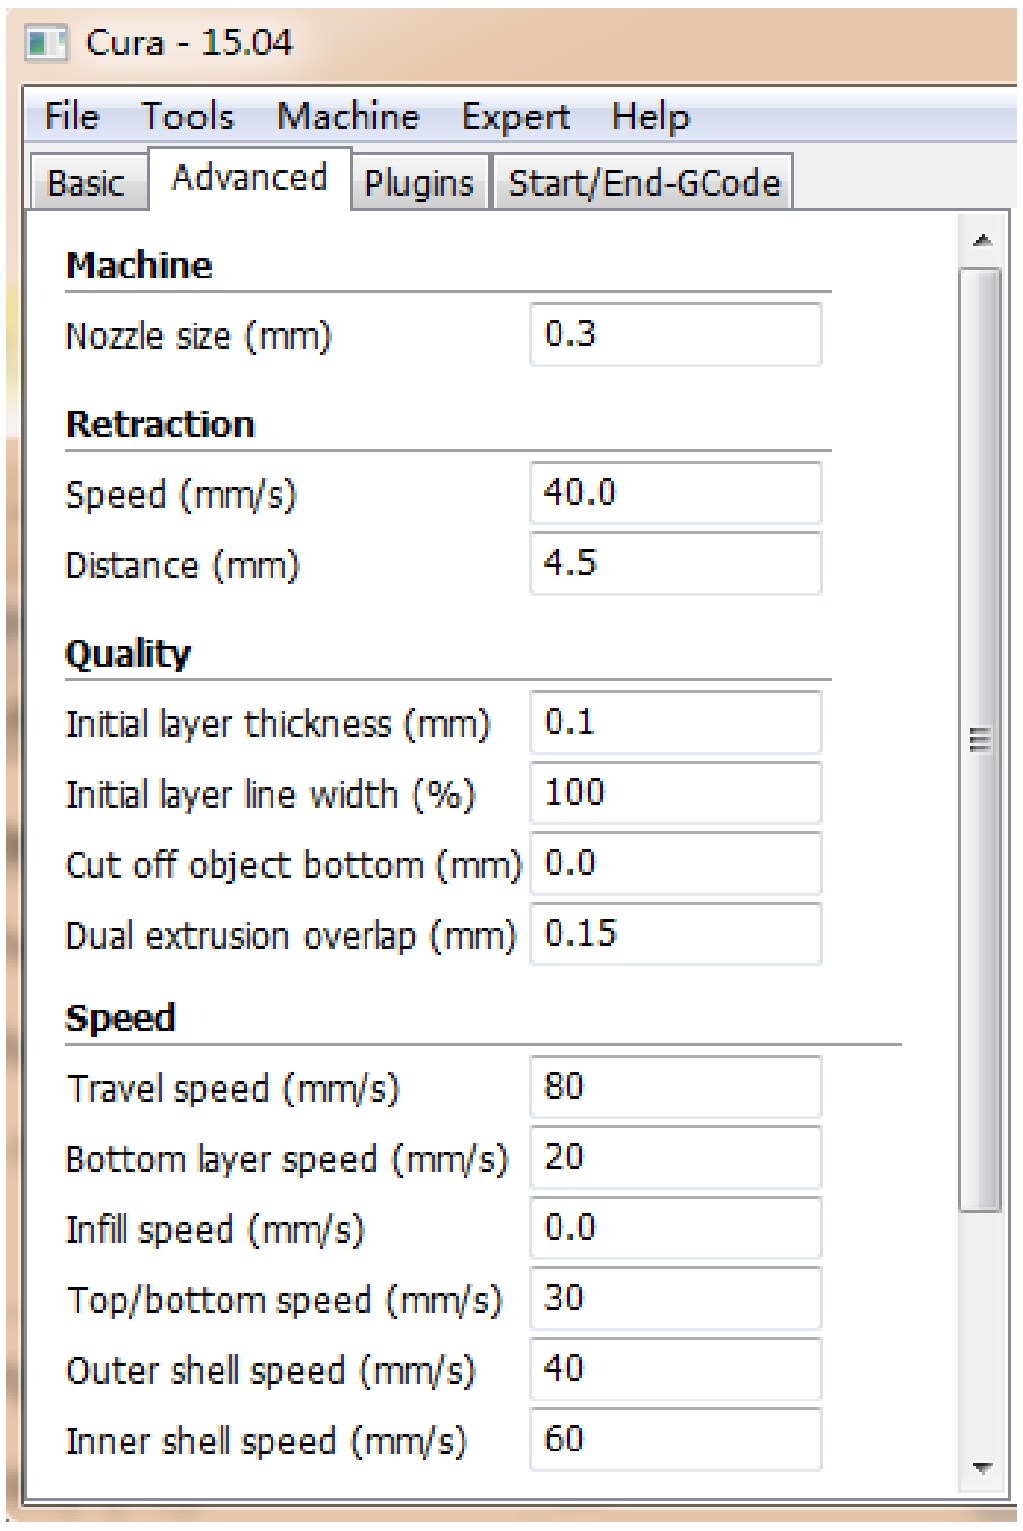
Cura - 15.04
File Tools Machine Expert Help
Basic Advanced Plugins Start/End-GCode
Machine
Nozzle size (mm) 0.3
Retraction
Speed (mm/s) 40.0
Distance (mm) 4.5
Quality
Initial layer thickness (mm) 0.1
Initial layer line width (%) 100
Cut off object bottom (mm) 0.0
Dual extrusion overlap (mm) 0.15
Speed
Travel speed (mm/s) 80
Bottom layer speed (mm/s) 20
Infill speed (mm/s) 0.0
Top/bottom speed (mm/s) 30
Outer shell speed (mm/s) 40
Inner shell speed (mm/s) 60

Step11:

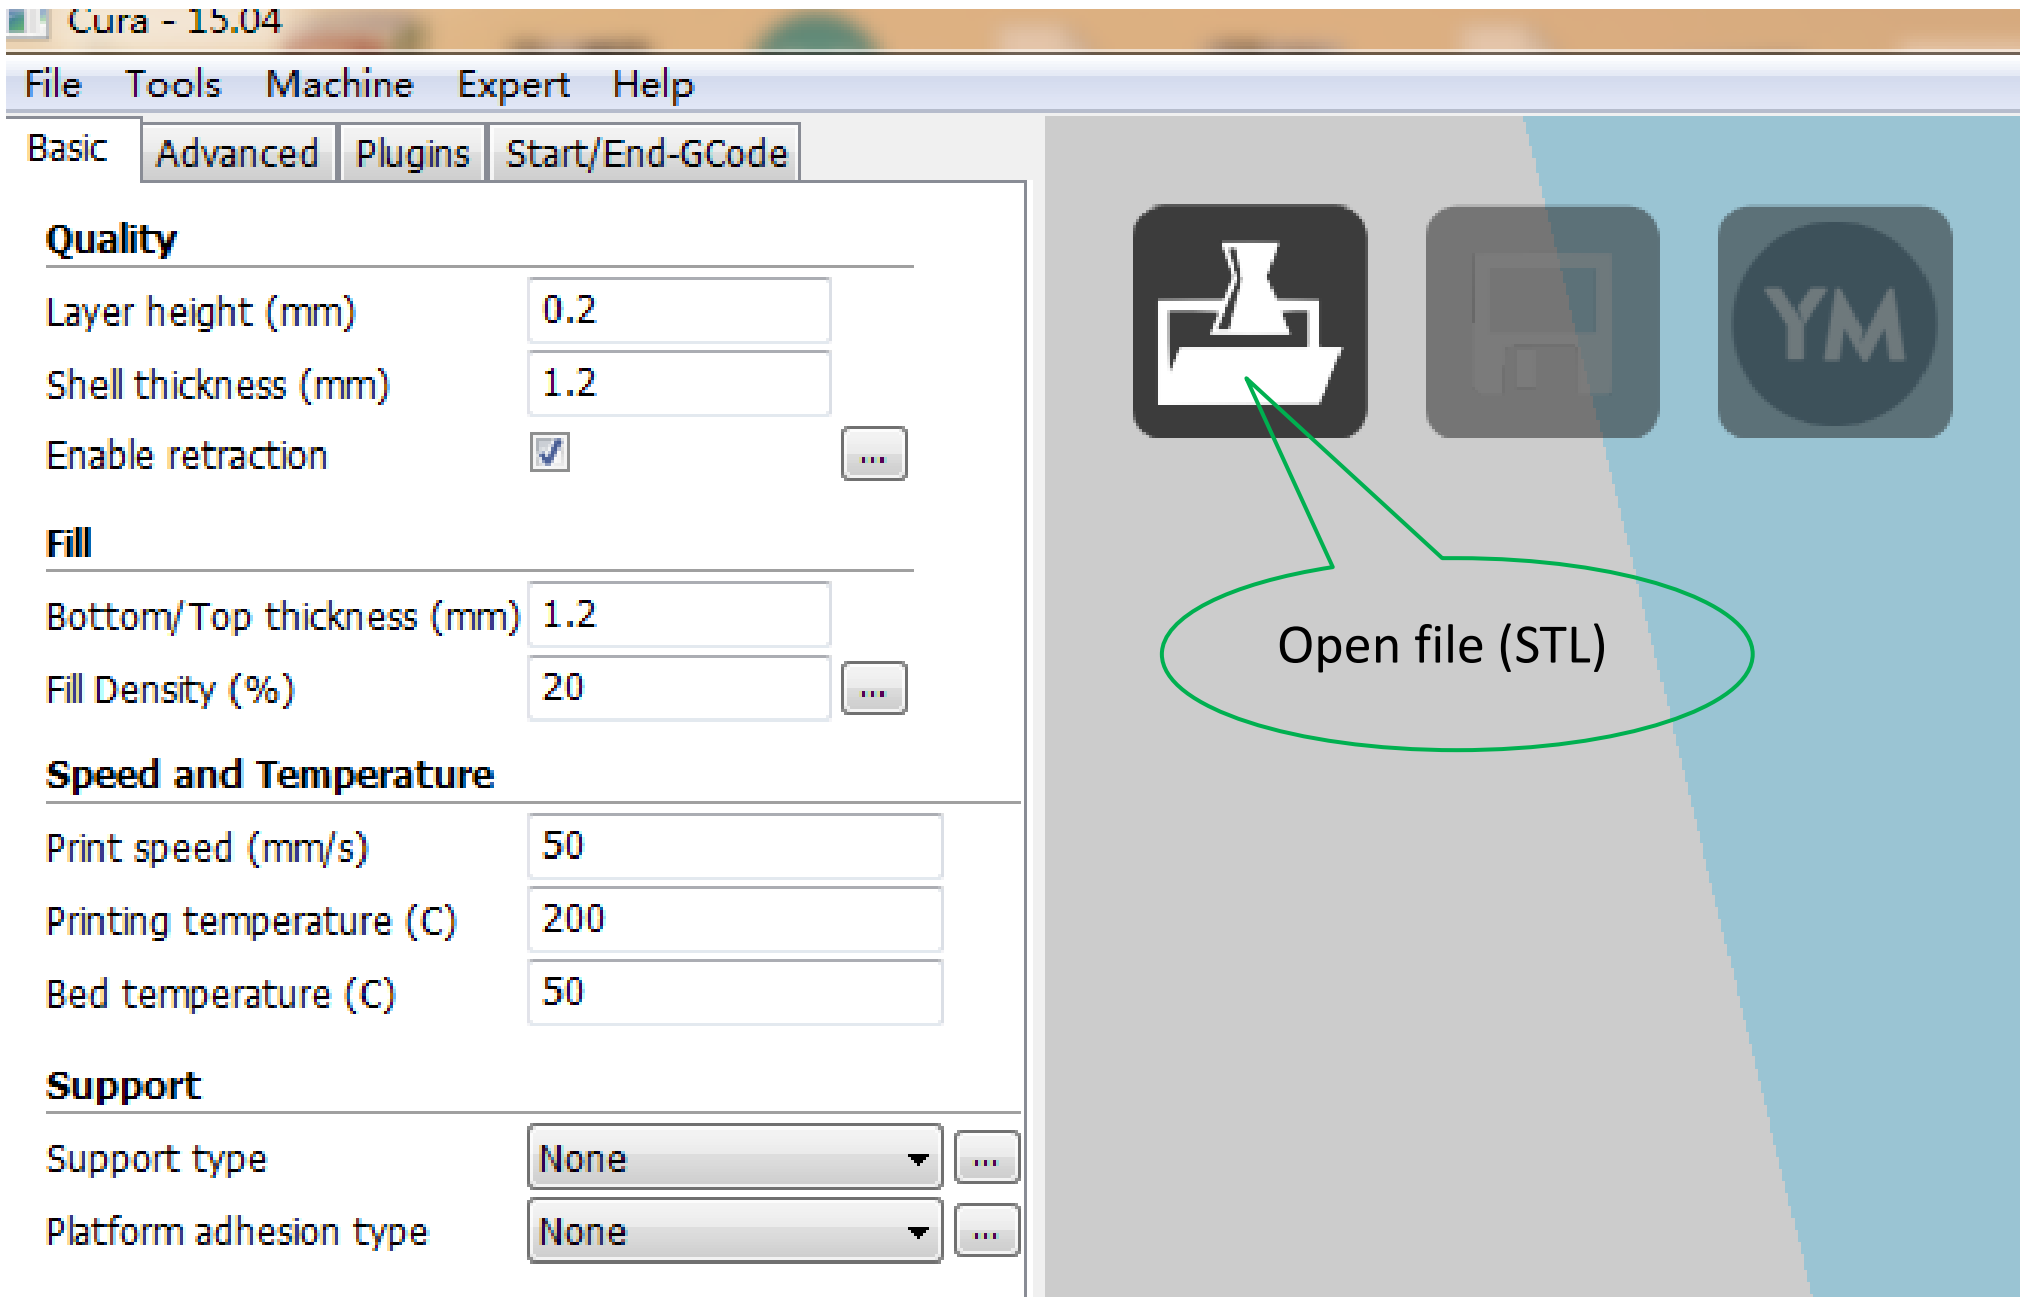

Step12:

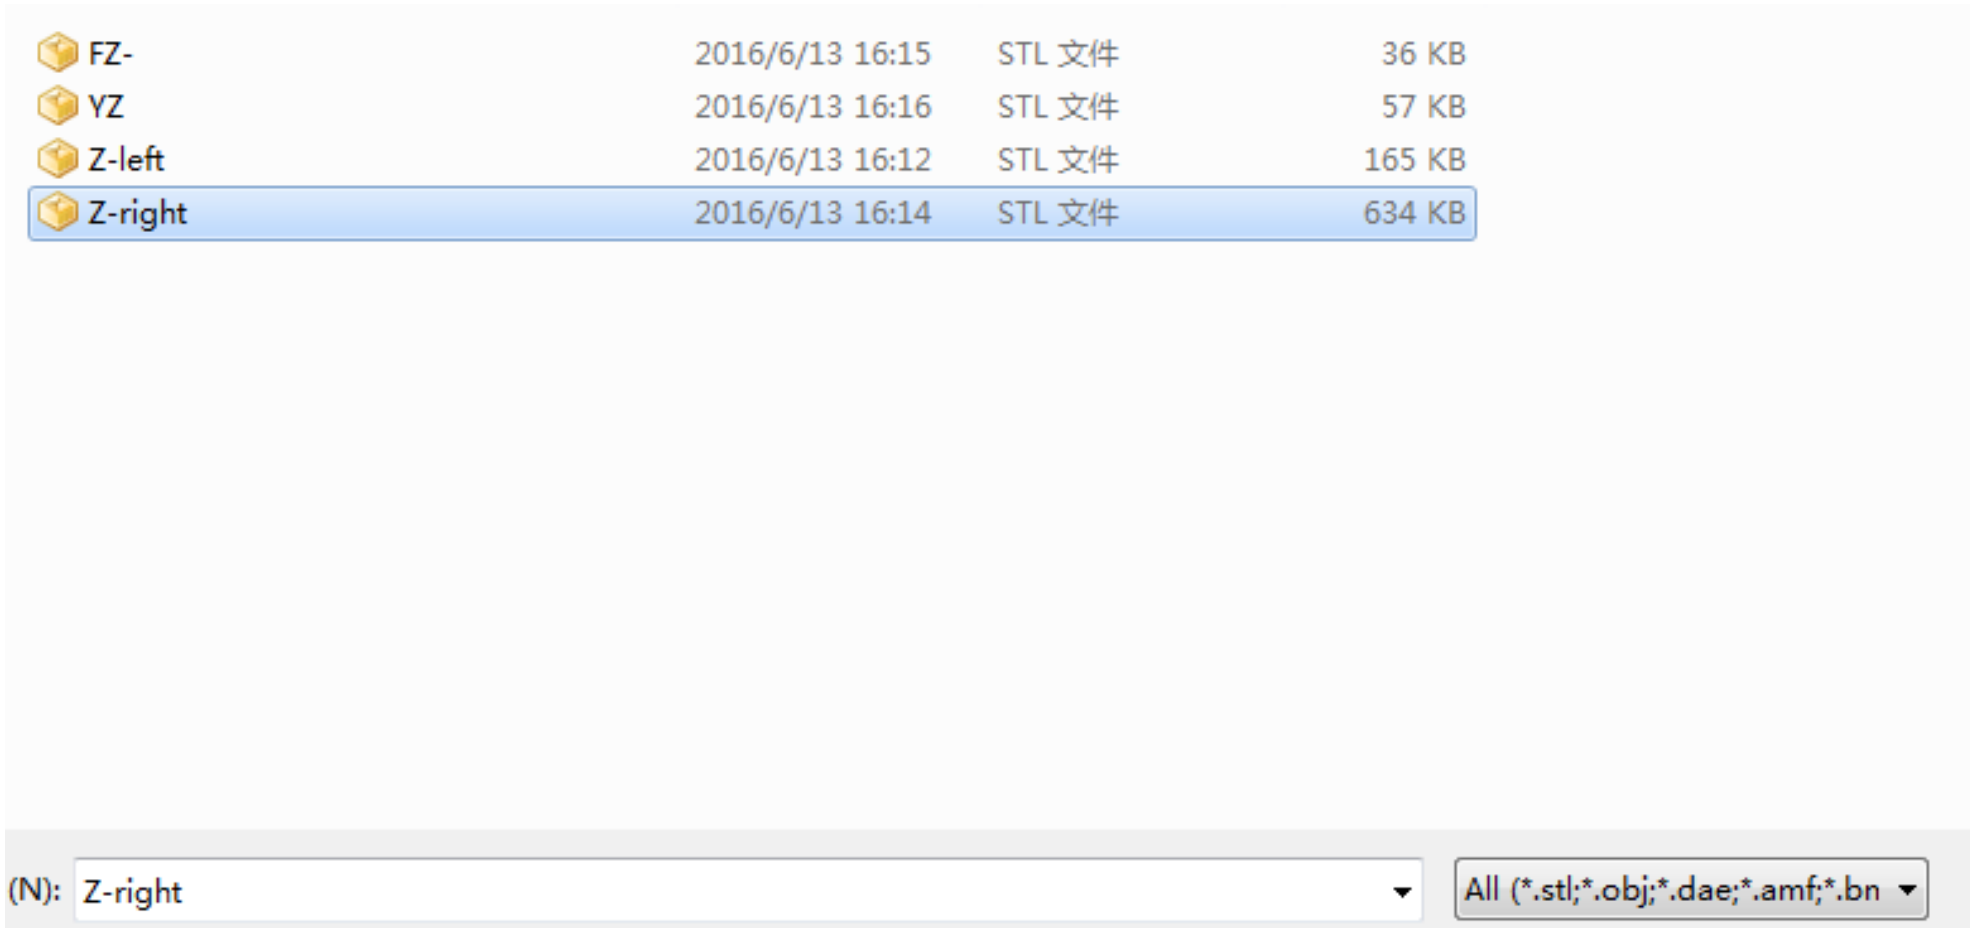

Step13:

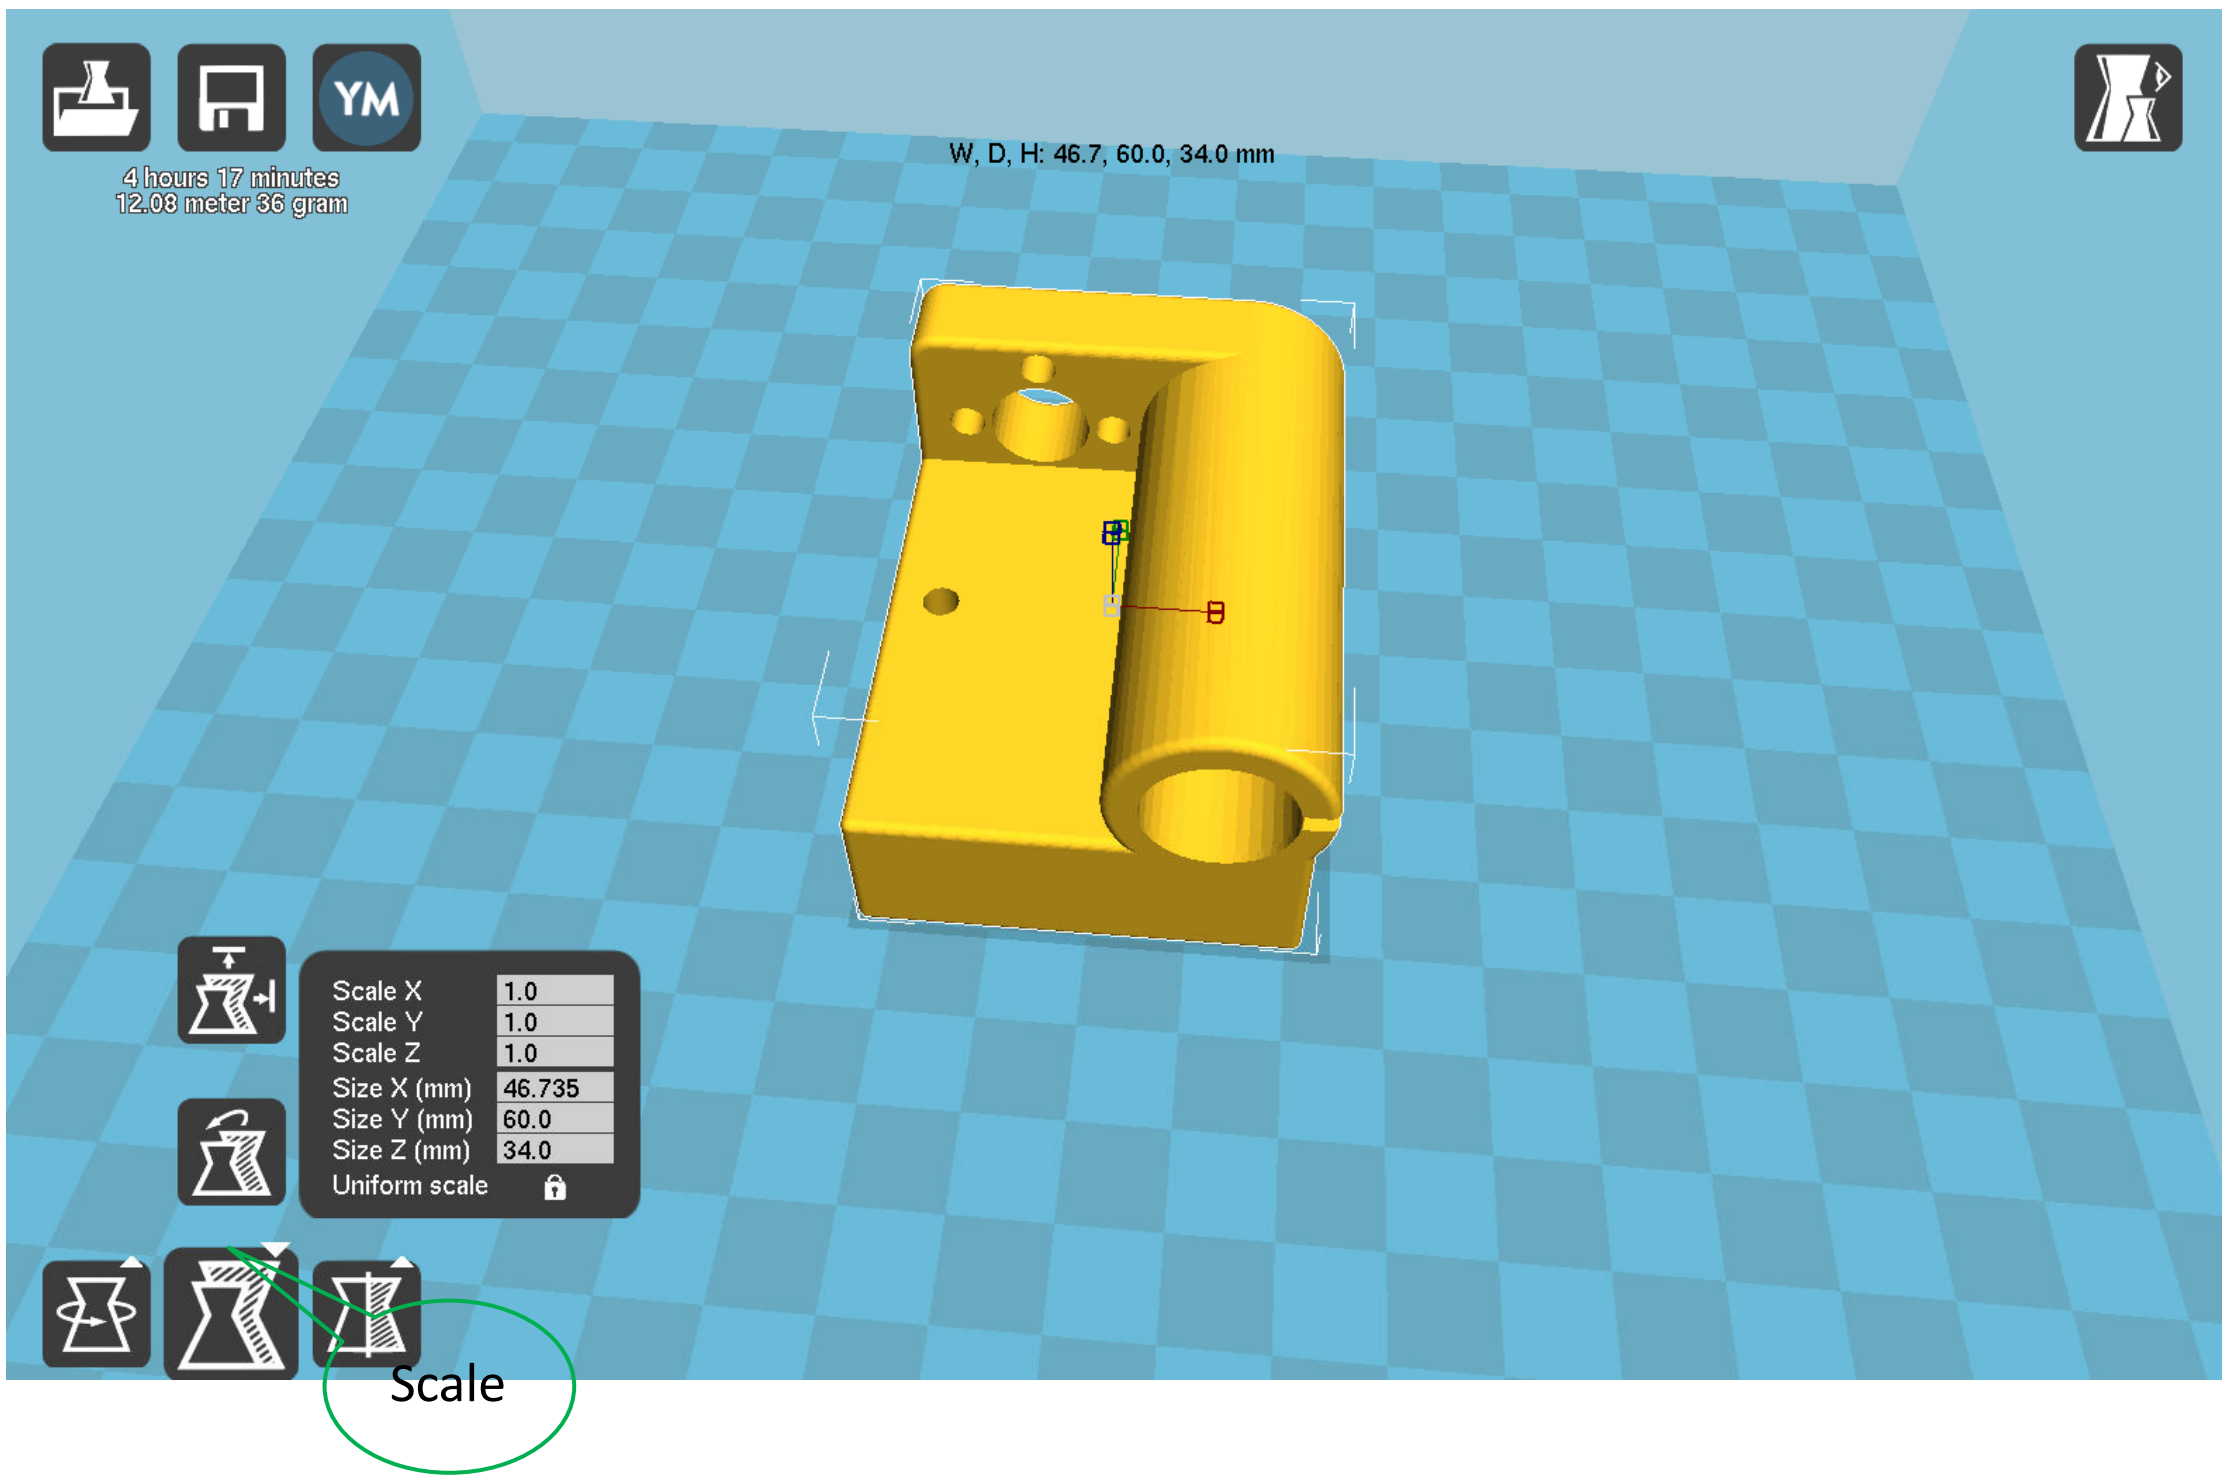

Step14:

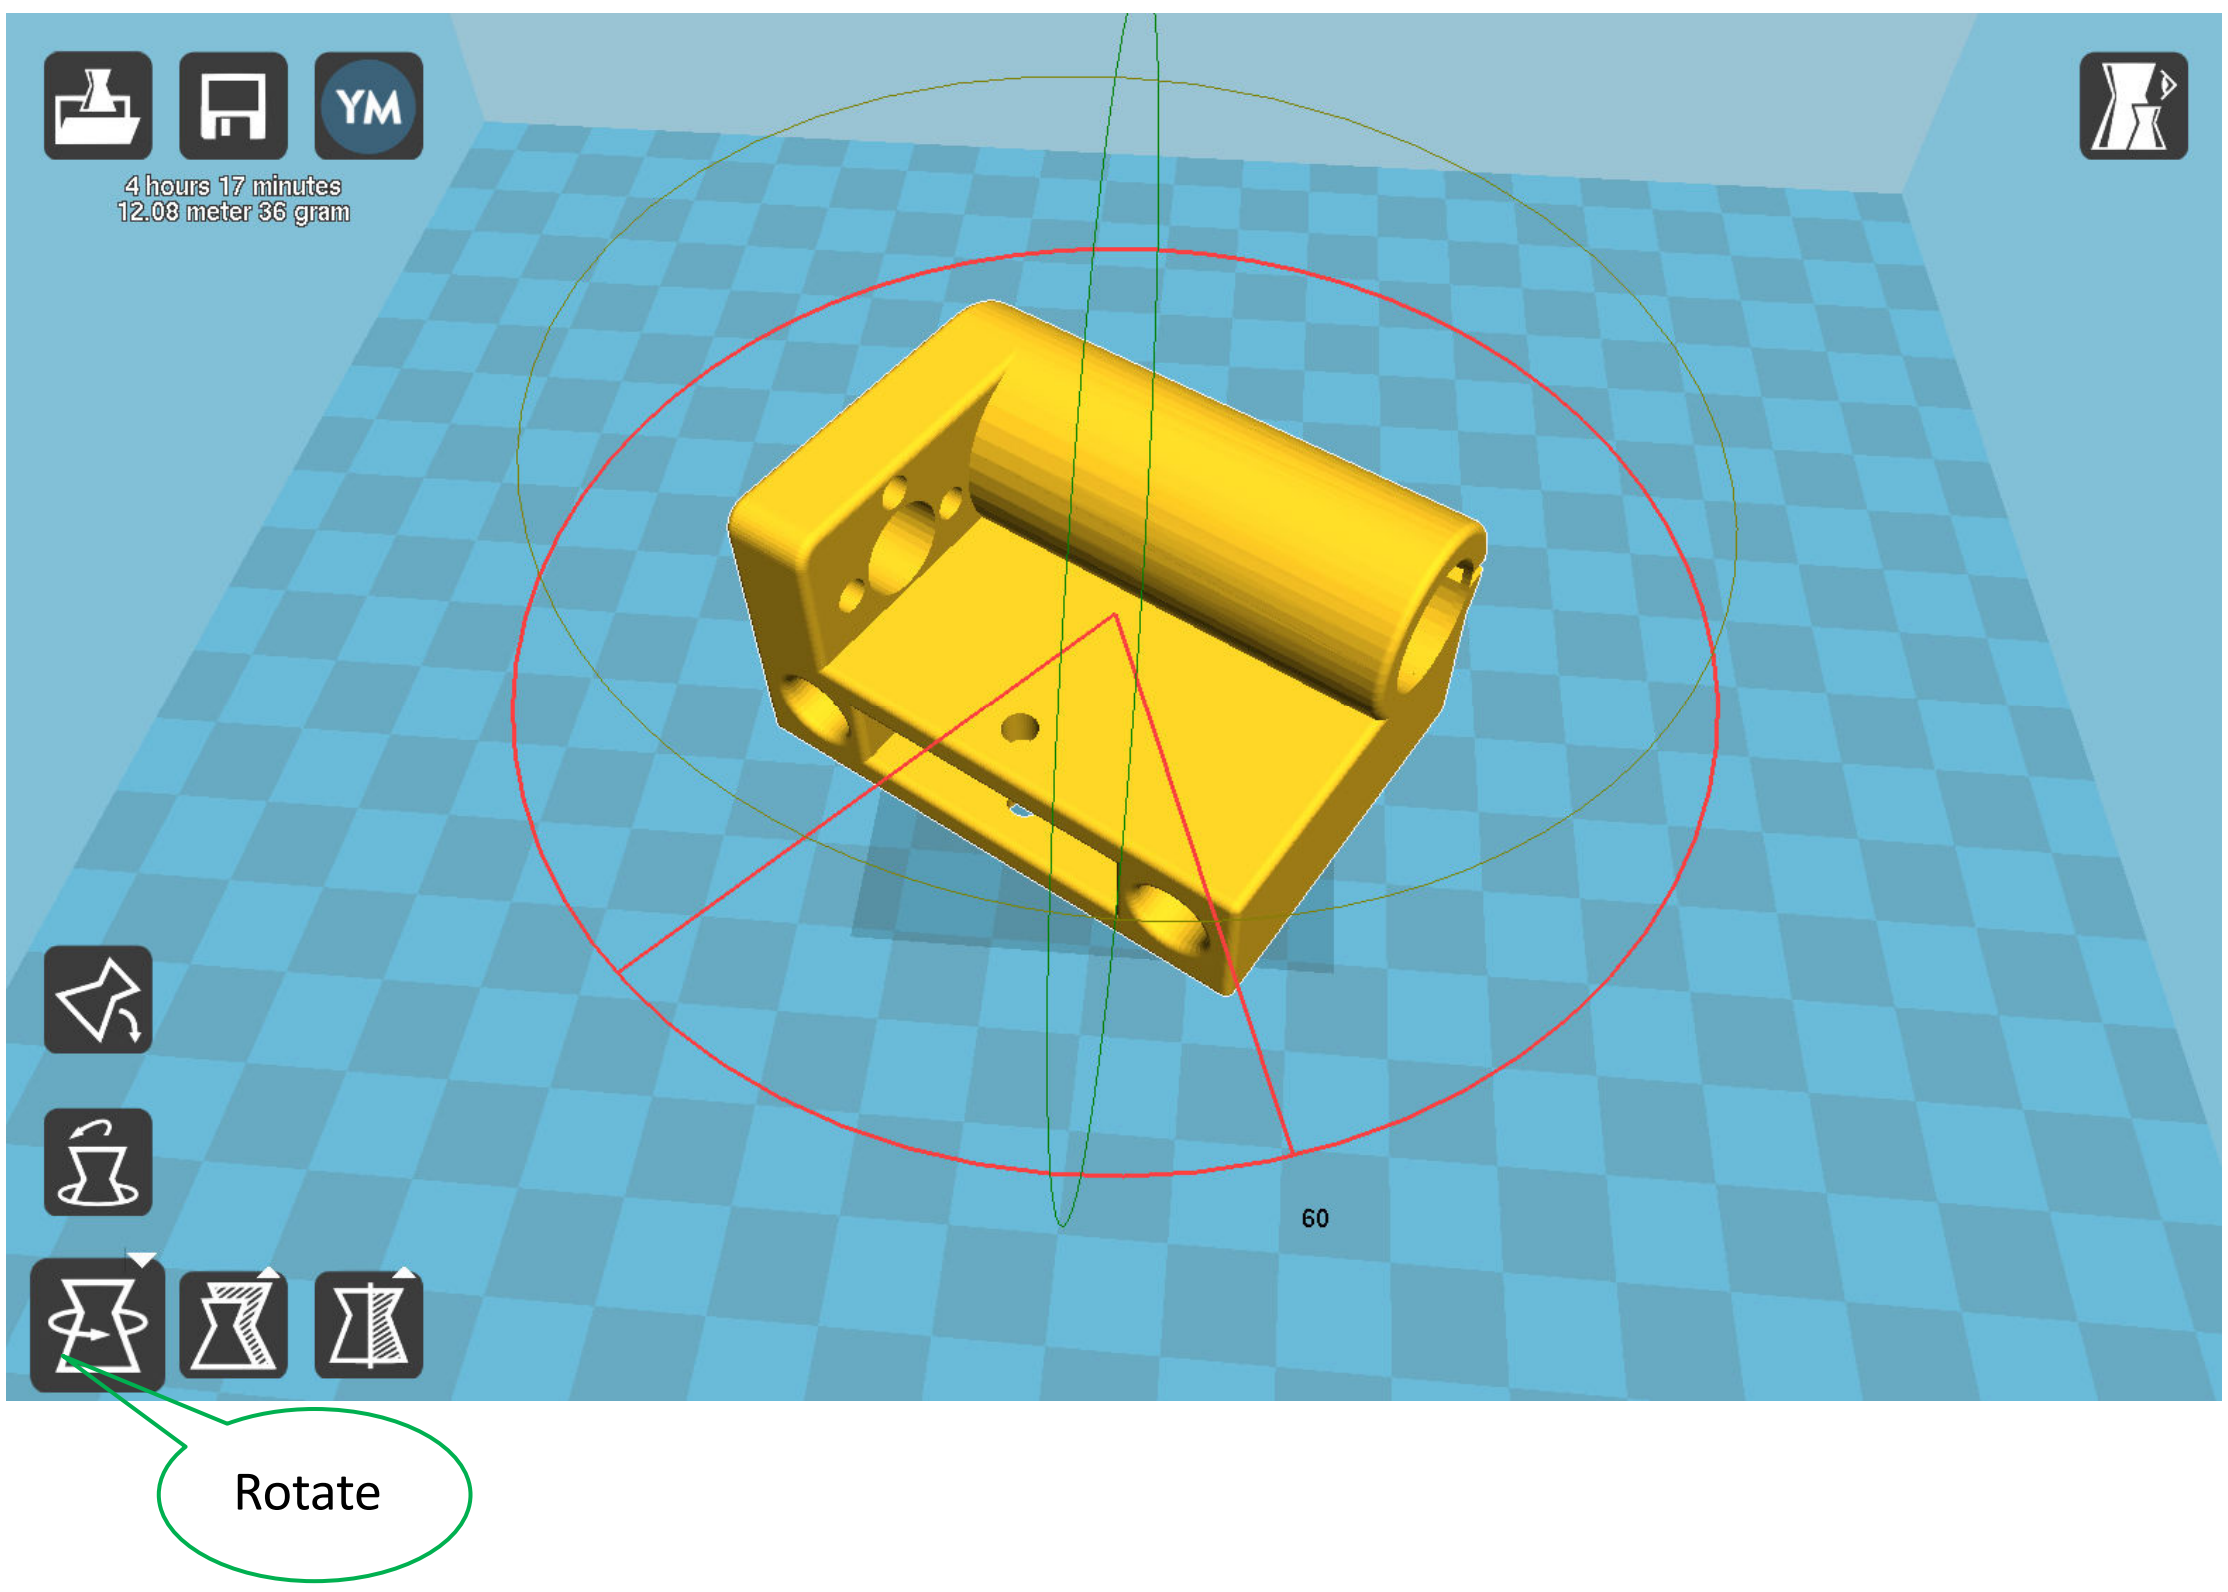

Save as G-code

Step15: