


V-Front Longline Bralette

A wire-free bralette with a long band under the bust.

TECHNICAL DRAWING (from the same draft)

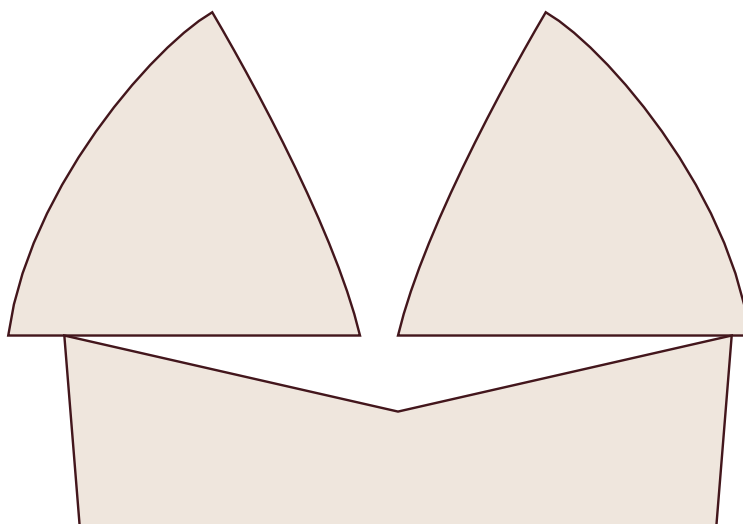

BODY MEASUREMENTS FOR THIS PATTERN

Bust (body)	92 cm (36.2 in)
Underbust (body)	78 cm (30.7 in)
Bust – underbust difference	14 cm (5.5 in)
Finished underbust band length	68.6 cm (27.0 in)

PATTERN PIECES

Triangle (cup) — 2 fabric + 2 lining (mirrored)
 Long front band — 1 fabric + 1 lining
 Long back band — 2 fabric + 2 lining (mirrored)

MATERIALS

Fabric: lycra, microfiber, cotton with elastane or lace; lining in tulle or light microfiber.
 Underbust elastic, 1.2 cm / ½ in (if the band is elastic) and 8 mm (⅜ in) picot elastic for the edges.
 Straps: 1 cm (⅜ in) elastic, 2 strips of 40 cm (15.7 in) + 2 adjusters. Hook-and-eye closure, 3 rows, 2 hooks.

HOW TO PRINT

A4: print at 100 % (“Actual size”) with “Fit to page” turned off. Follow the assembly map.




Plotter: send the sheet at actual size as it is (the file is already at 1:1 scale).

Before cutting, measure the test square: 10 × 10 cm (3.94 × 3.94 in).

ORDER OF CONSTRUCTION

1. Cut the pieces with the greatest stretch running across (horizontal on the pattern).
2. If the cup has a dart or seams, close them first in the fabric and in the lining separately; join them right sides together along the top edge.
3. Join the cups to the band (or to the center gore and the wings), matching the notches.
4. Apply the elastic to the edges, 10 % shorter, and attach the closure or the ties.
5. Try it on before finishing: strap length is adjusted while worn.

Pattern drafted with classic pattern-making formulas from the measurements above (one size, wire-free). A 0.6 cm (¼ in) allowance is included. Make a first sample in scrap fabric: on cups, the fine fit is done at the fitting.

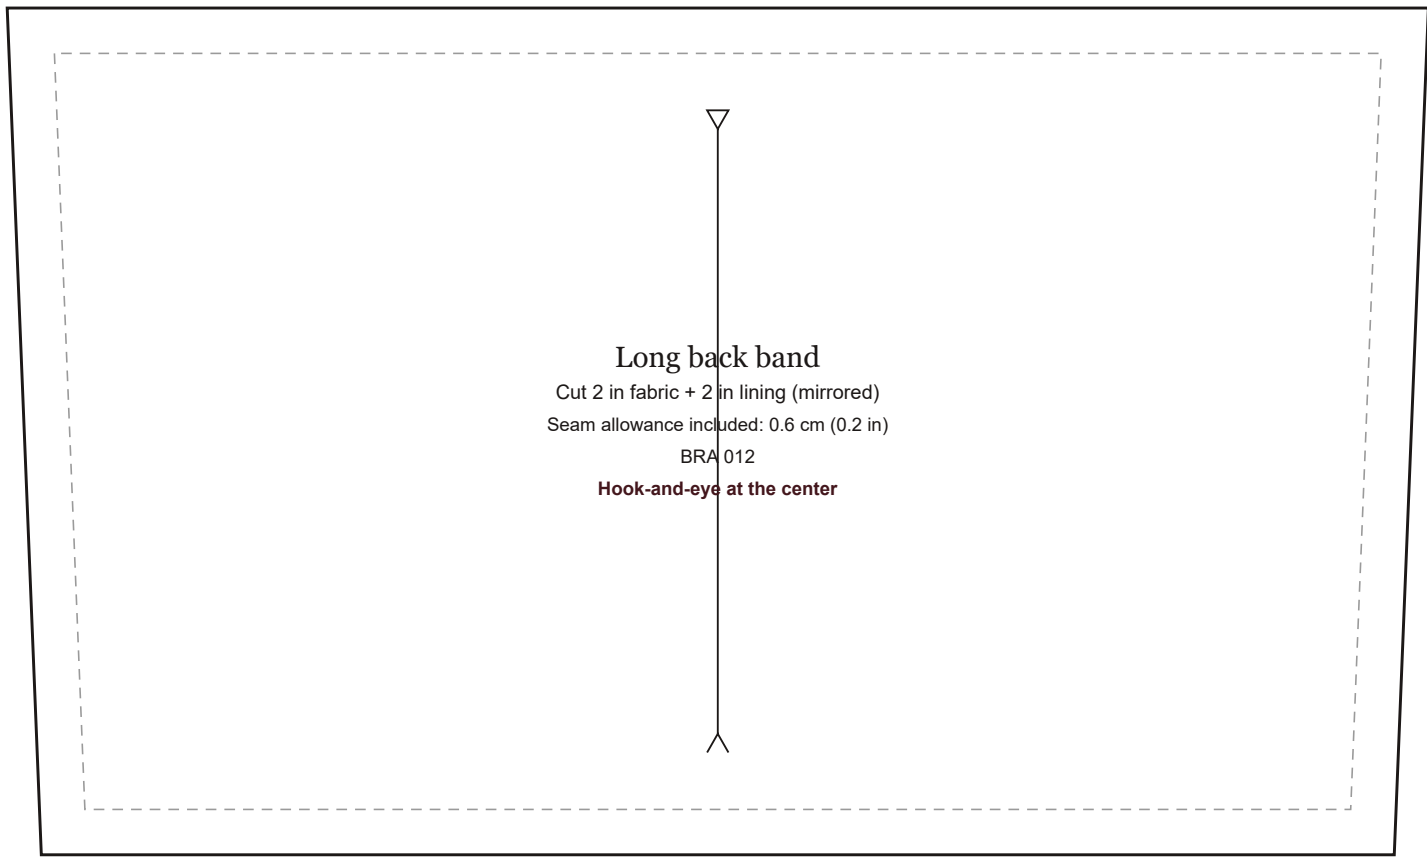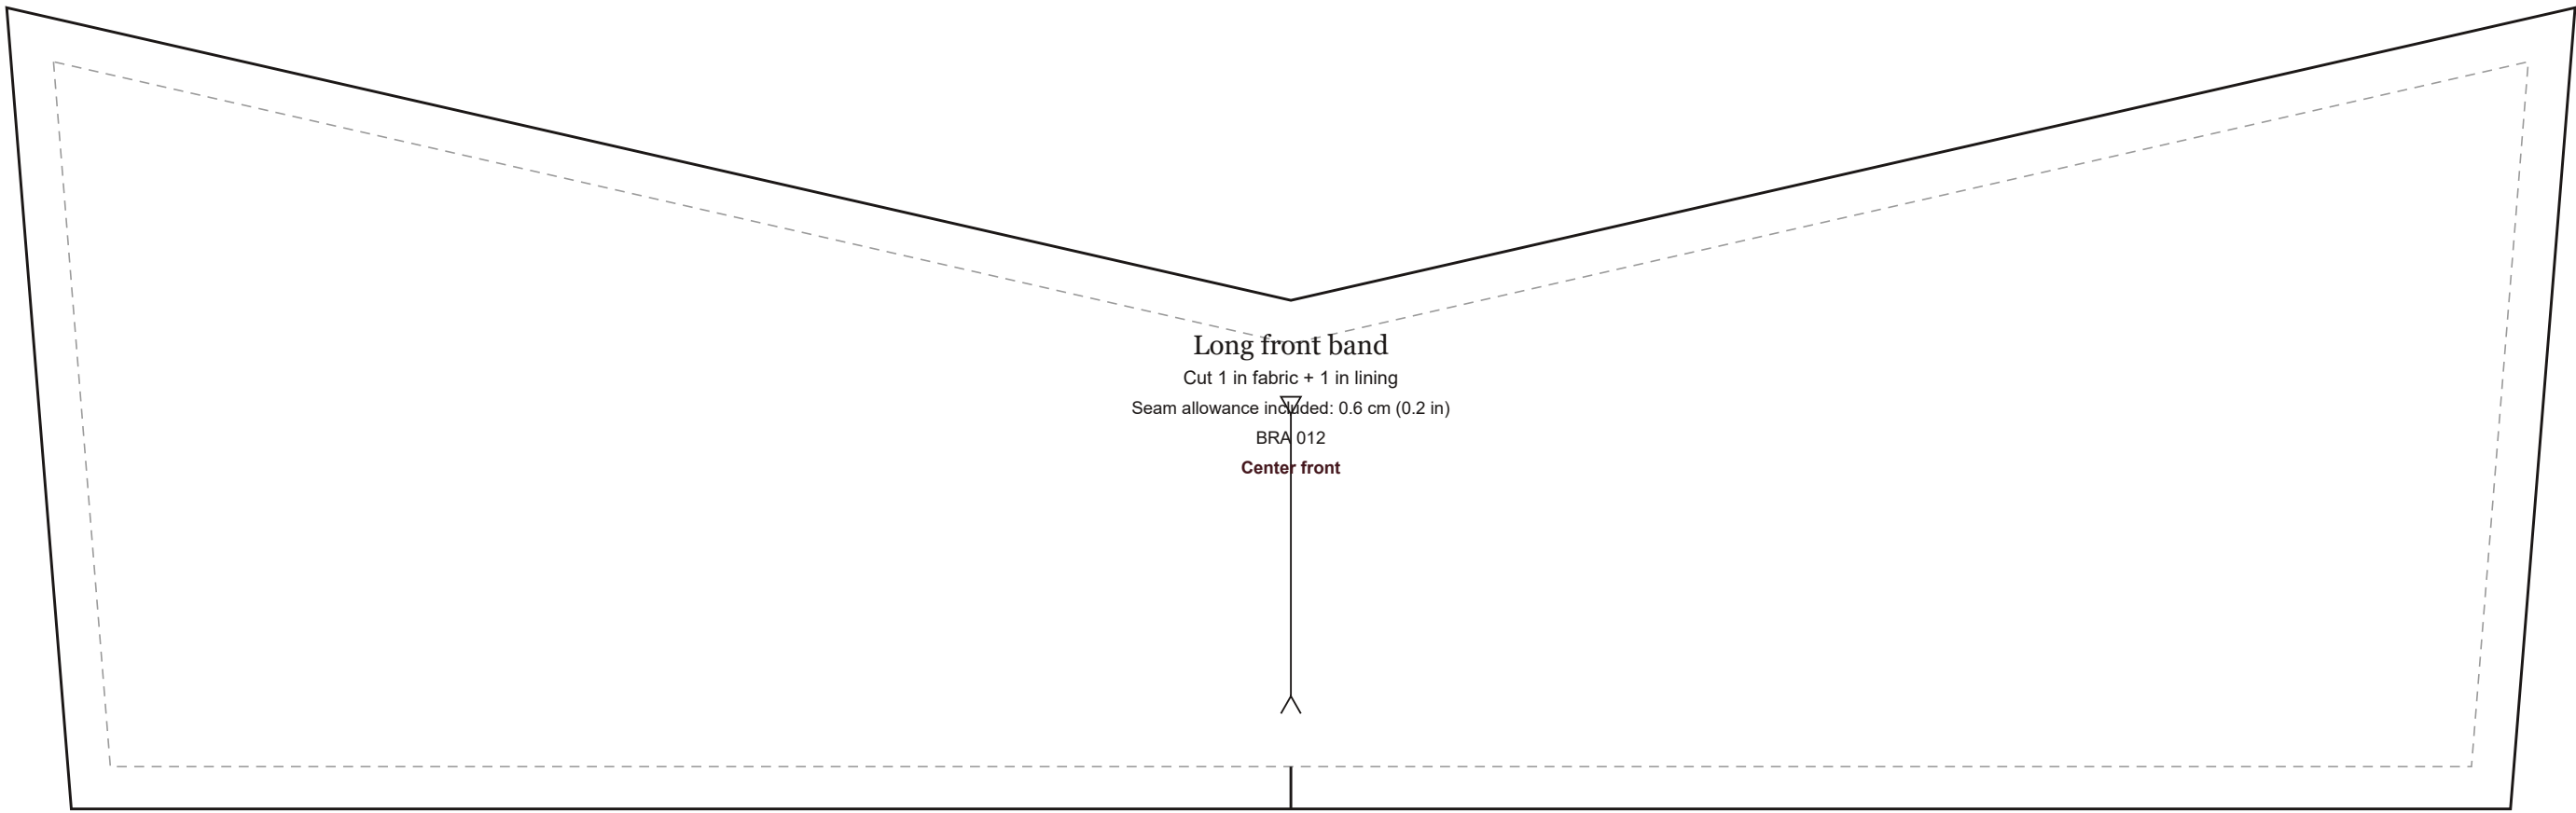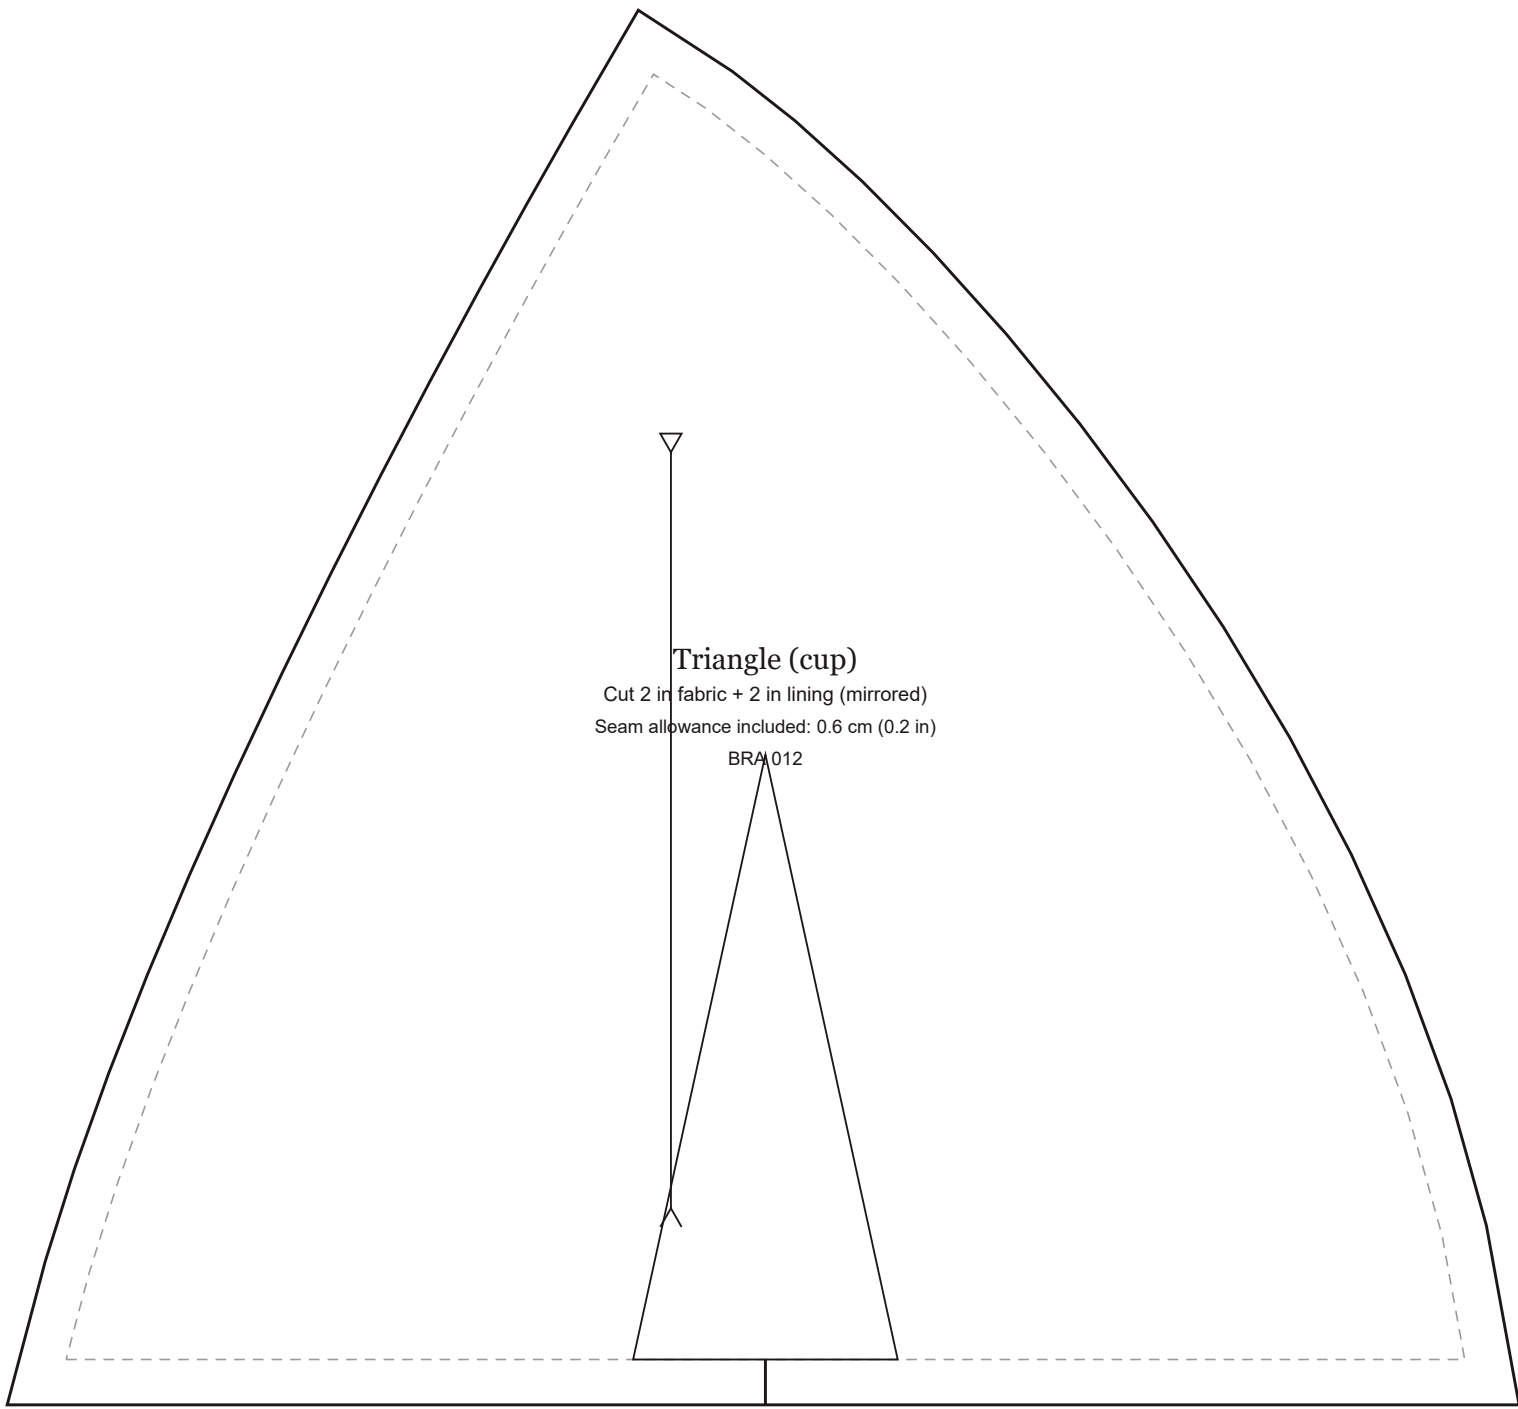

TEST SQUARE

It must measure 10 × 10 cm
(3.94 × 3.94 in). If it does not,
check you printed at 100 %
("Actual size", no scaling).

BRA 012