


Classic Low-Rise Tanga

A medium-coverage tanga, for stretch fabric or lace.

TECHNICAL DRAWING (from the same draft)

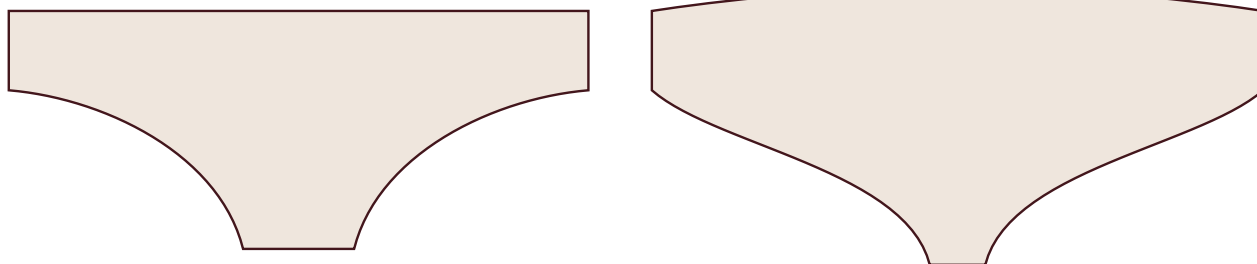

BODY MEASUREMENTS FOR THIS PATTERN

Hip (body)	98 cm (38.6 in)
Waist (body)	70 cm (27.6 in)
Top edge	8 cm (3.1 in) below waist
Finished top-edge circumference	75.1 cm (29.6 in)
Side height	5 cm (2.0 in)
Total rise (front + gusset + back)	45.5 cm (17.9 in)

PATTERN PIECES

Front — 1 fabric
 Back — 1 fabric
 Gusset — 1 fabric + 1 cotton

MATERIALS

Fabric: lycra, microfiber or stretch lace (at least 30 % stretch across the width).
 Cotton lining for the gusset: 10 × 15 cm (4 × 6 in).
 Picot lingerie elastic, 8–10 mm (3/8 in): 1.6 m (1.7 yd) (legs and waist).

HOW TO PRINT

A4: print at 100 % (“Actual size”) with “Fit to page” turned off. Follow the assembly map.




Plotter: send the sheet at actual size as it is (the file is already at 1:1 scale).

Before cutting, measure the test square: 10 × 10 cm (3.94 × 3.94 in).

ORDER OF CONSTRUCTION

1. Cut with the greatest stretch of the fabric running across (horizontal on the pattern).
2. Sew the gusset: front sandwiched between the fabric and the lining (burrito method), then the back. Turn right side out.
3. Close the side seams with a serger or a narrow zigzag.
4. Apply the elastic to the legs and waist 10 % shorter than the edge, picot facing outwards; fold over and topstitch with zigzag.

Pattern drafted with classic pattern-making formulas from the measurements above (one size). A 0.6 cm (1/4 in) allowance is included all round (on the legs and waist it is the elastic fold-over). Make a first sample in scrap fabric.

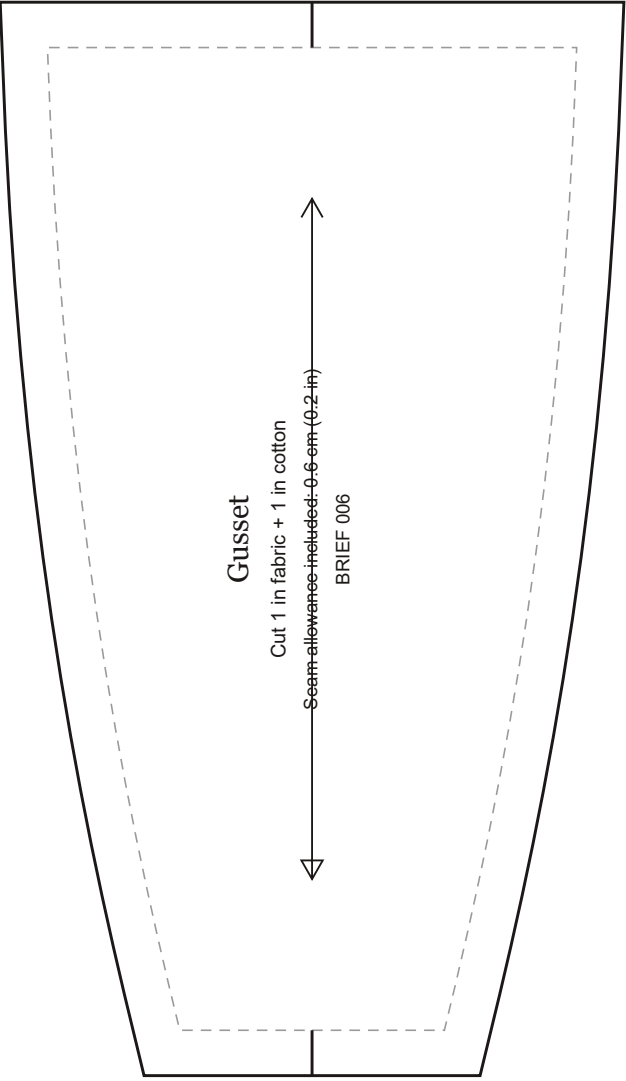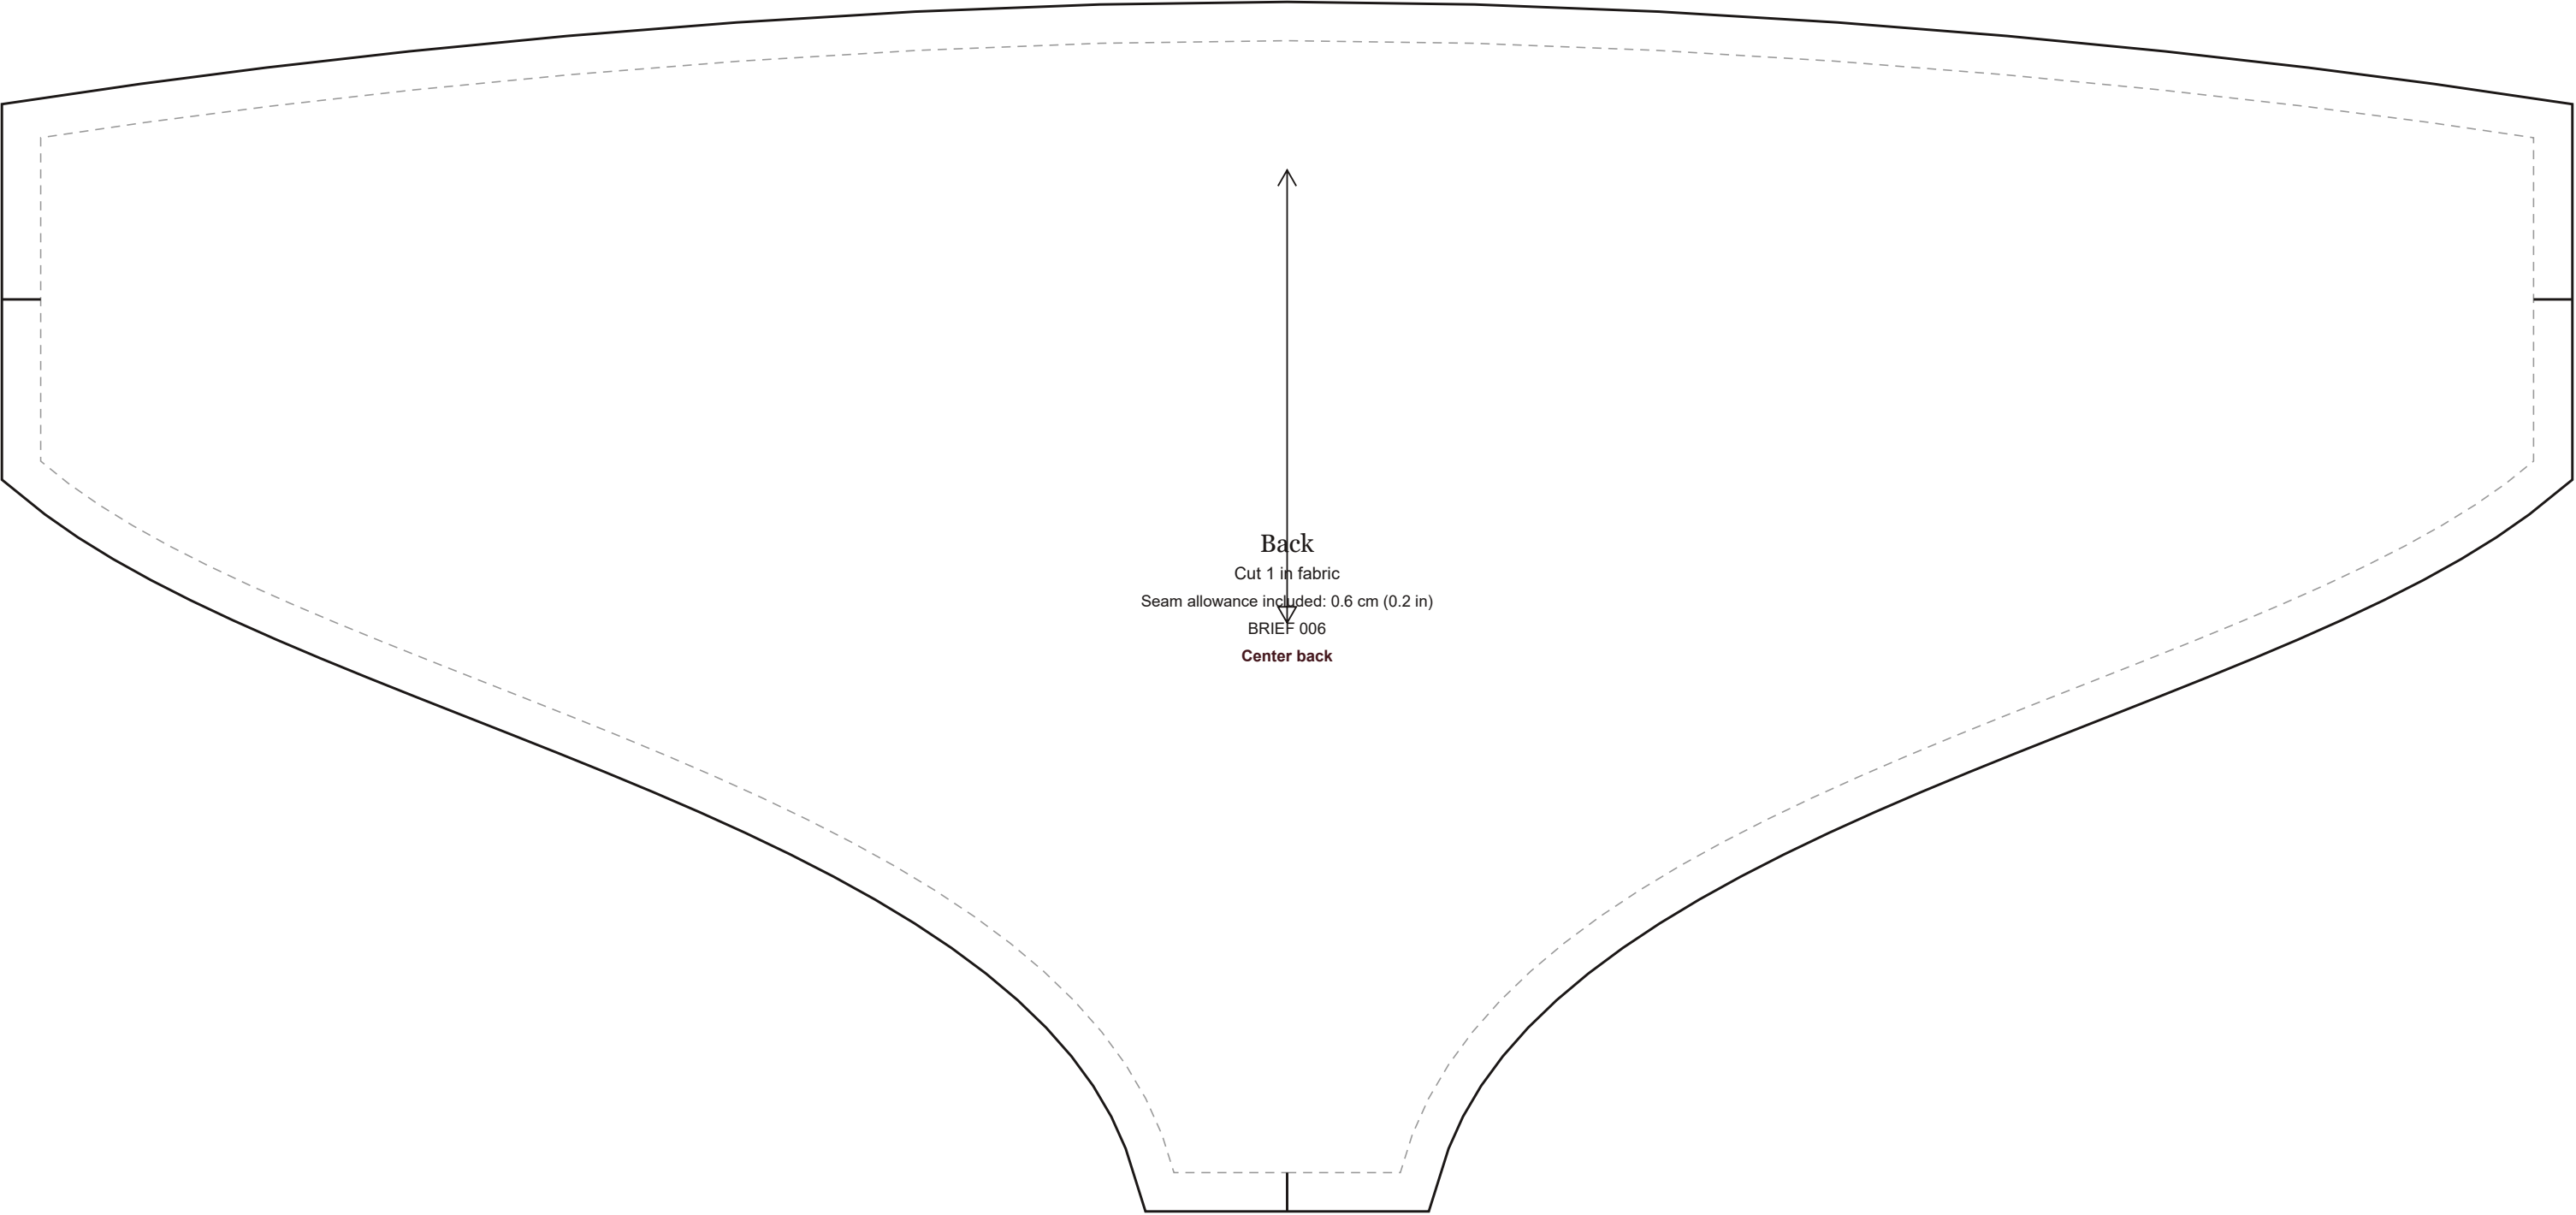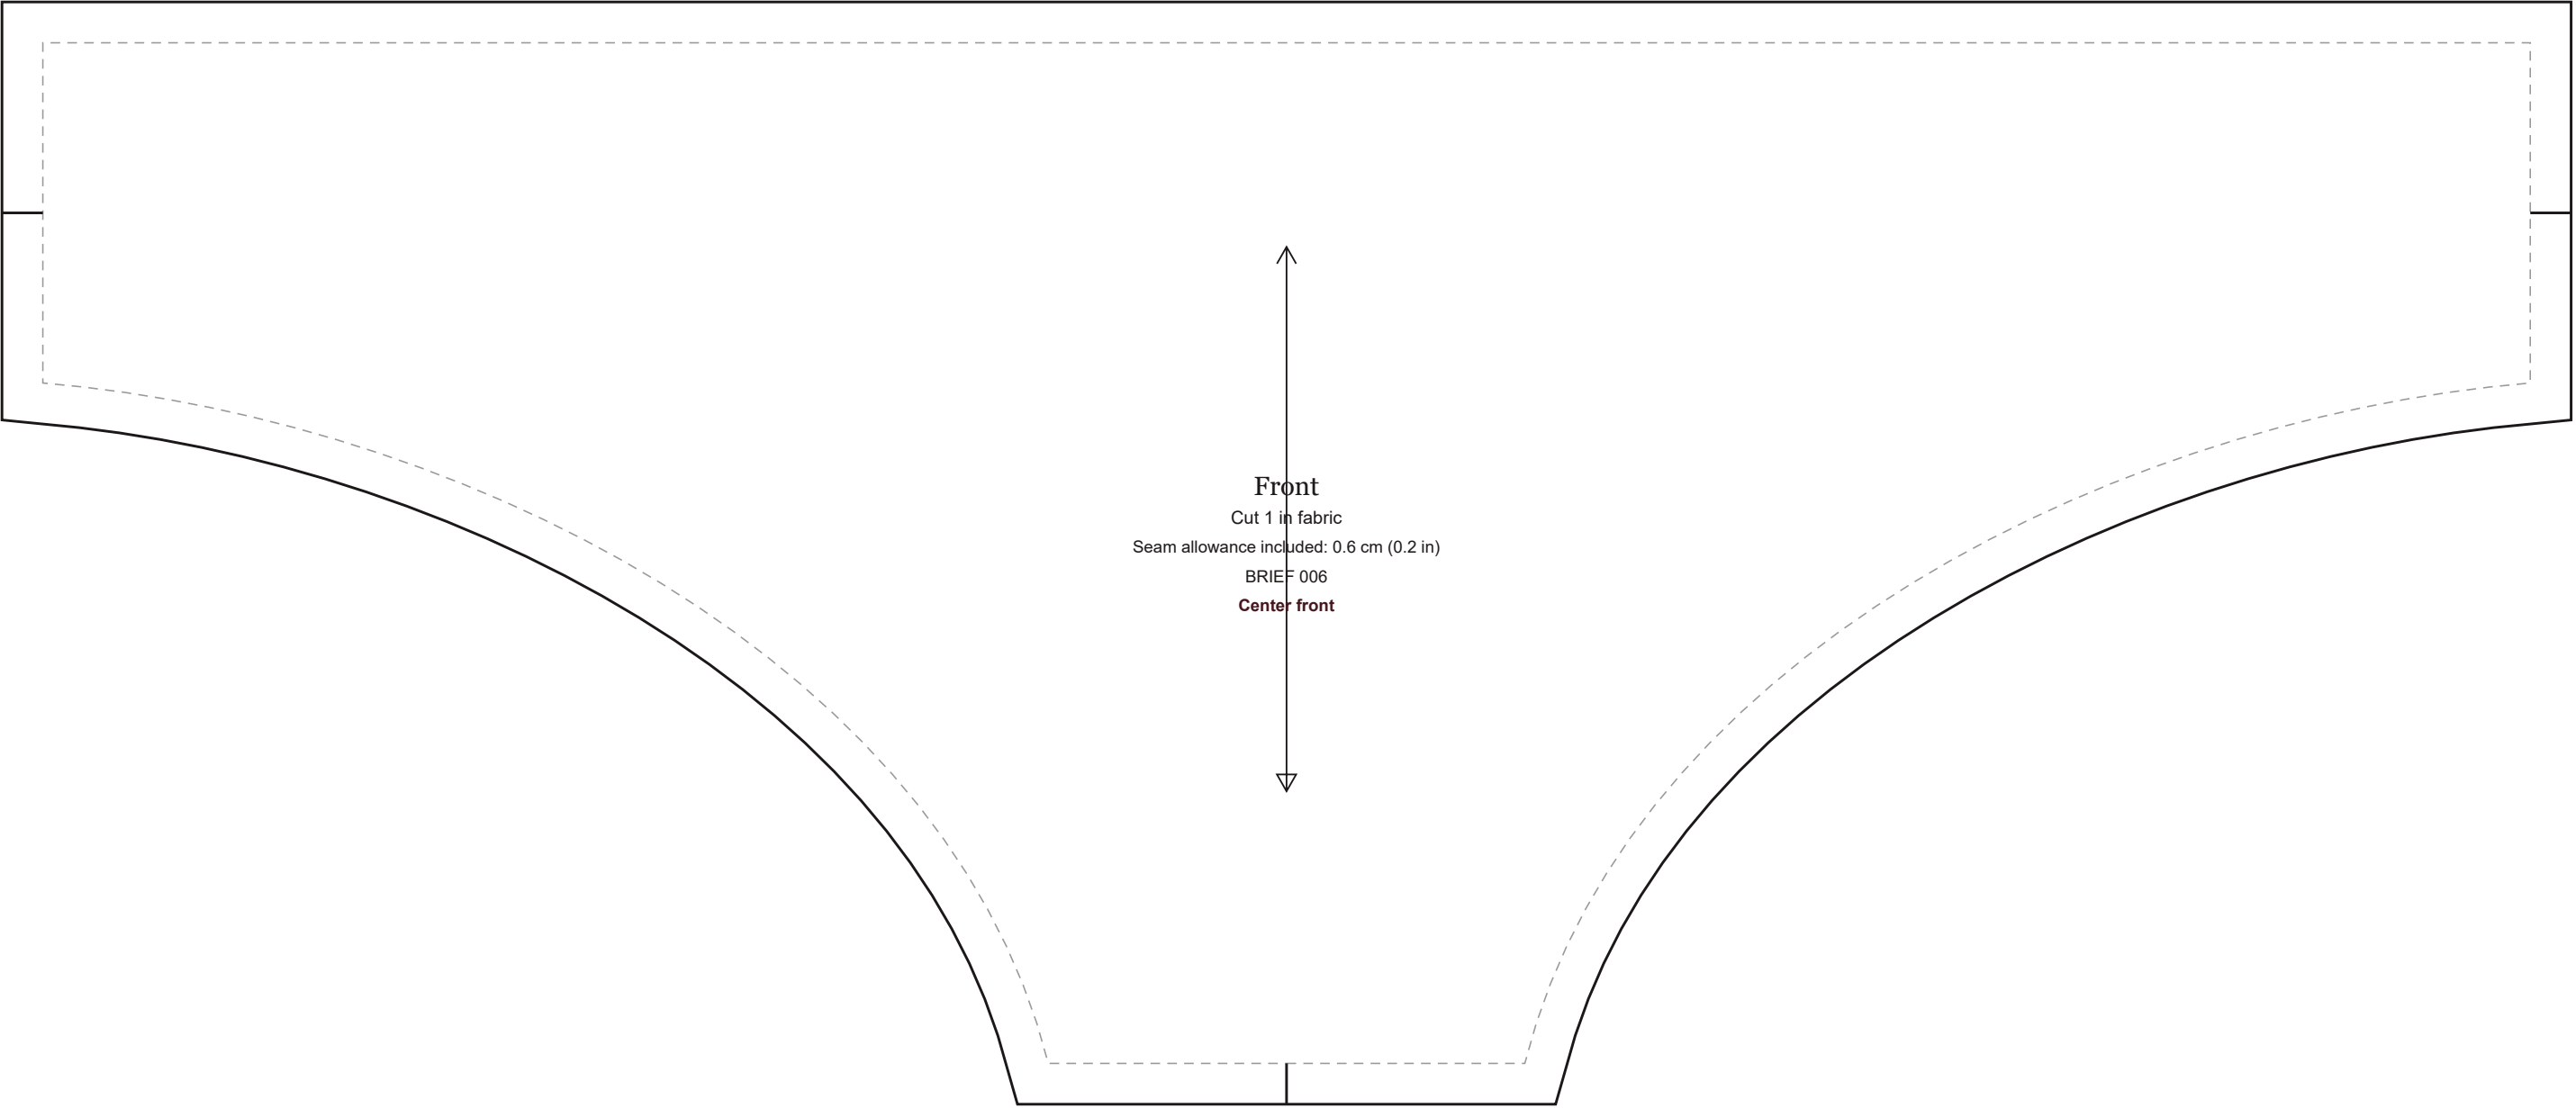

TEST SQUARE

It must measure 10 × 10 cm
(3.94 × 3.94 in). If it does not,
check you printed at 100 %
("Actual size", no scaling).

BRIEF 006