
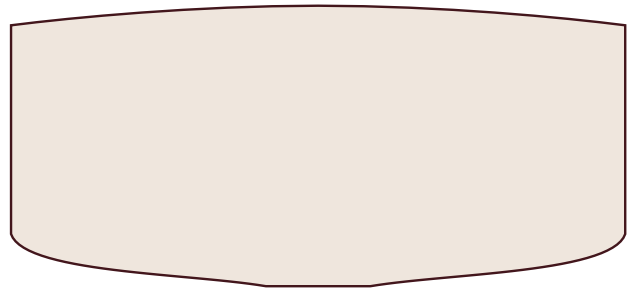


Straight-Leg Boyshort

A short-leg boyshort with full coverage.

TECHNICAL DRAWING (from the same draft)

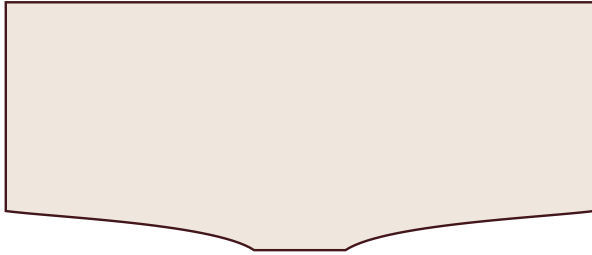

BODY MEASUREMENTS FOR THIS PATTERN

Hip (body)	98 cm (38.6 in)
Waist (body)	70 cm (27.6 in)
Top edge	4 cm (1.6 in) below waist
Finished top-edge circumference	92.2 cm (36.3 in)
Side height	16 cm (6.3 in)
Total rise (front + gusset + back)	53.5 cm (21.1 in)

PATTERN PIECES

Front — 1 fabric
 Back — 1 fabric
 Gusset — 1 fabric + 1 cotton

MATERIALS

Fabric: lycra, microfiber or stretch lace (at least 30 % stretch across the width).
 Cotton lining for the gusset: 10 × 15 cm (4 × 6 in).
 Picot lingerie elastic, 8–10 mm (3⁄8 in): 1.7 m (1.9 yd) (legs and waist).

HOW TO PRINT

A4: print at 100 % (“Actual size”) with “Fit to page” turned off. Follow the assembly map.




Plotter: send the sheet at actual size as it is (the file is already at 1:1 scale).

Before cutting, measure the test square: 10 × 10 cm (3.94 × 3.94 in).

ORDER OF CONSTRUCTION

1. Cut with the greatest stretch of the fabric running across (horizontal on the pattern).
2. Sew the gusset: front sandwiched between the fabric and the lining (burrito method), then the back. Turn right side out.
3. Close the side seams with a serger or a narrow zigzag.
4. Apply the elastic to the legs and waist 10 % shorter than the edge, picot facing outwards; fold over and topstitch with zigzag.

Pattern drafted with classic pattern-making formulas from the measurements above (one size). A 0.6 cm (¼ in) allowance is included all round (on the legs and waist it is the elastic fold-over). Make a first sample in scrap fabric.

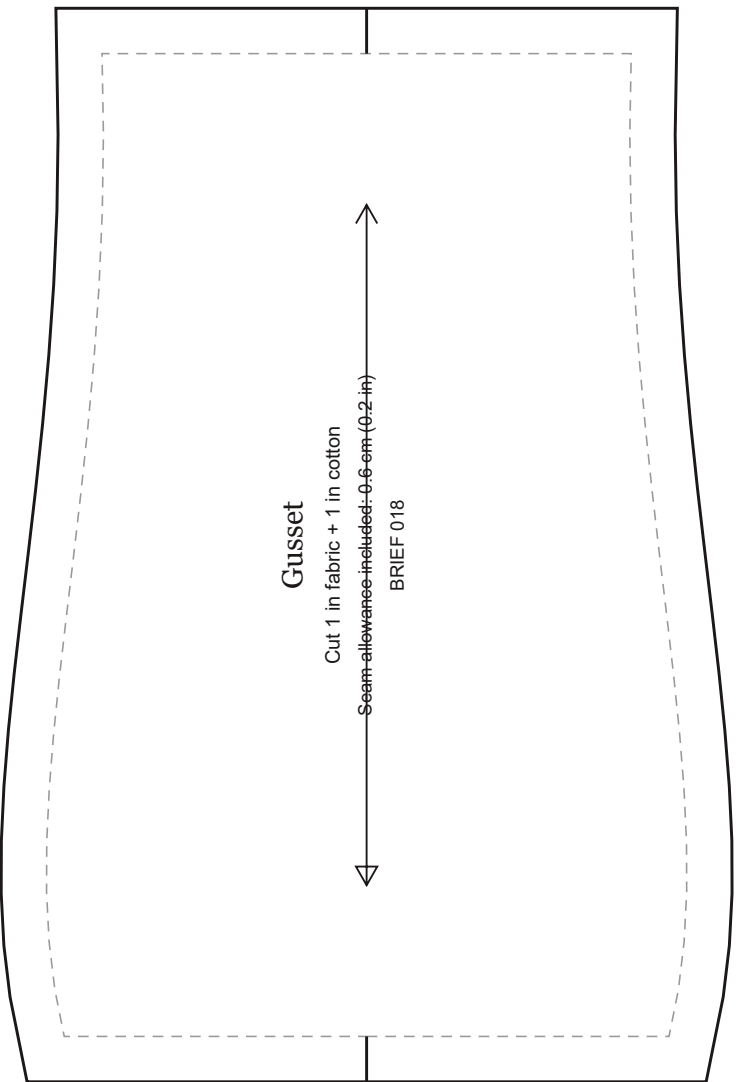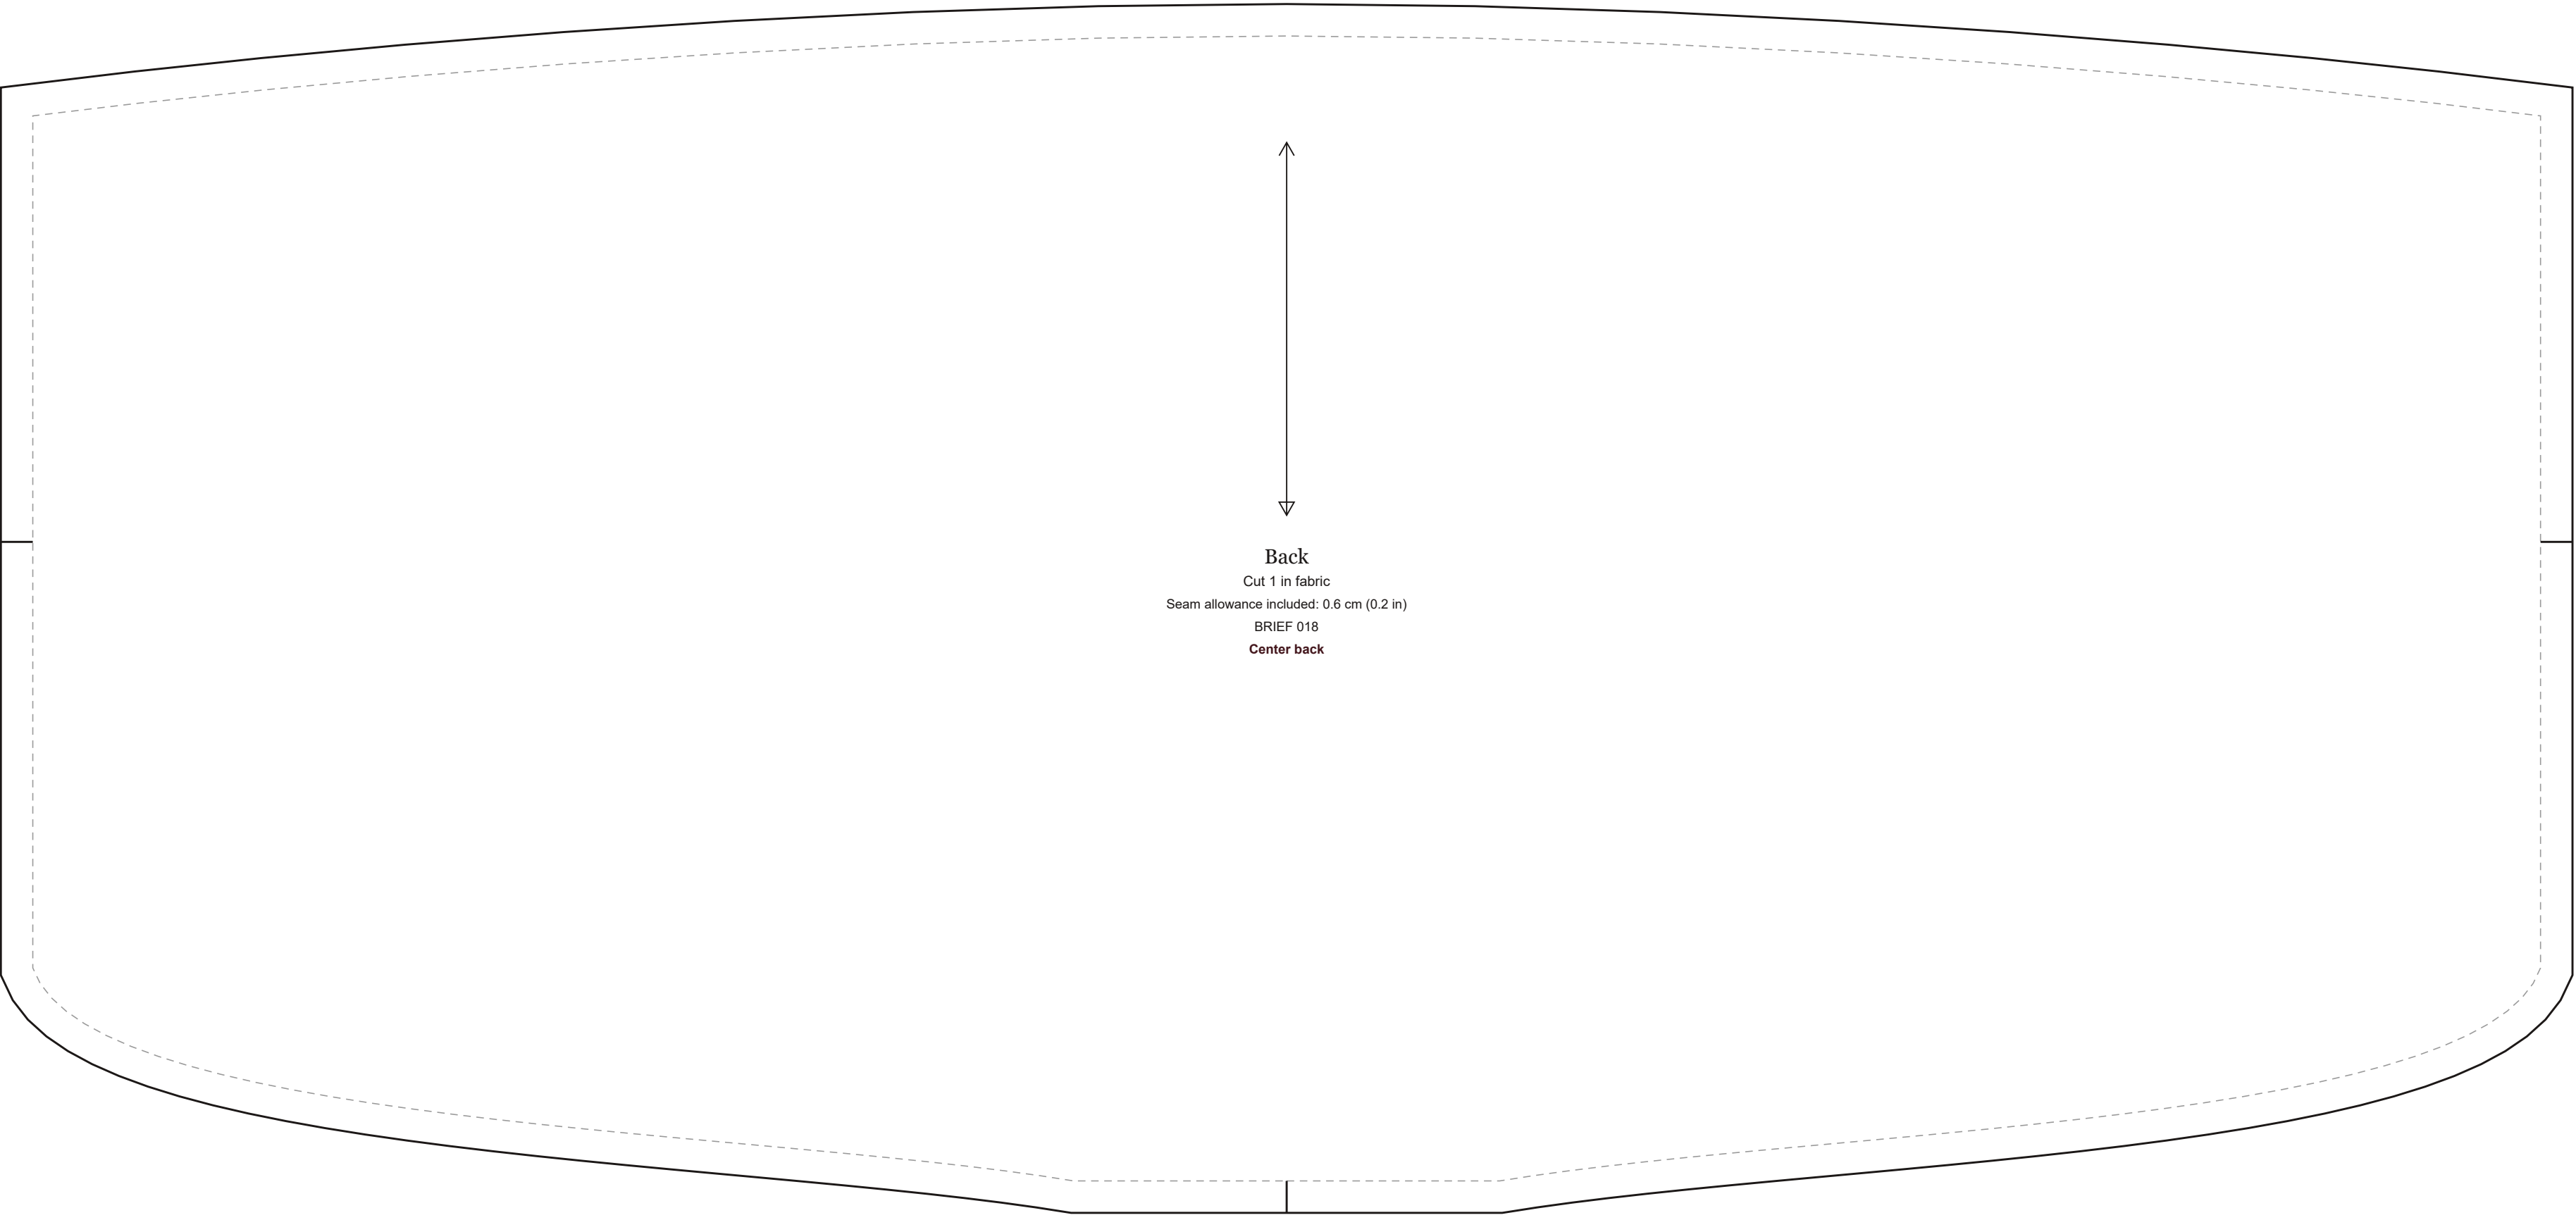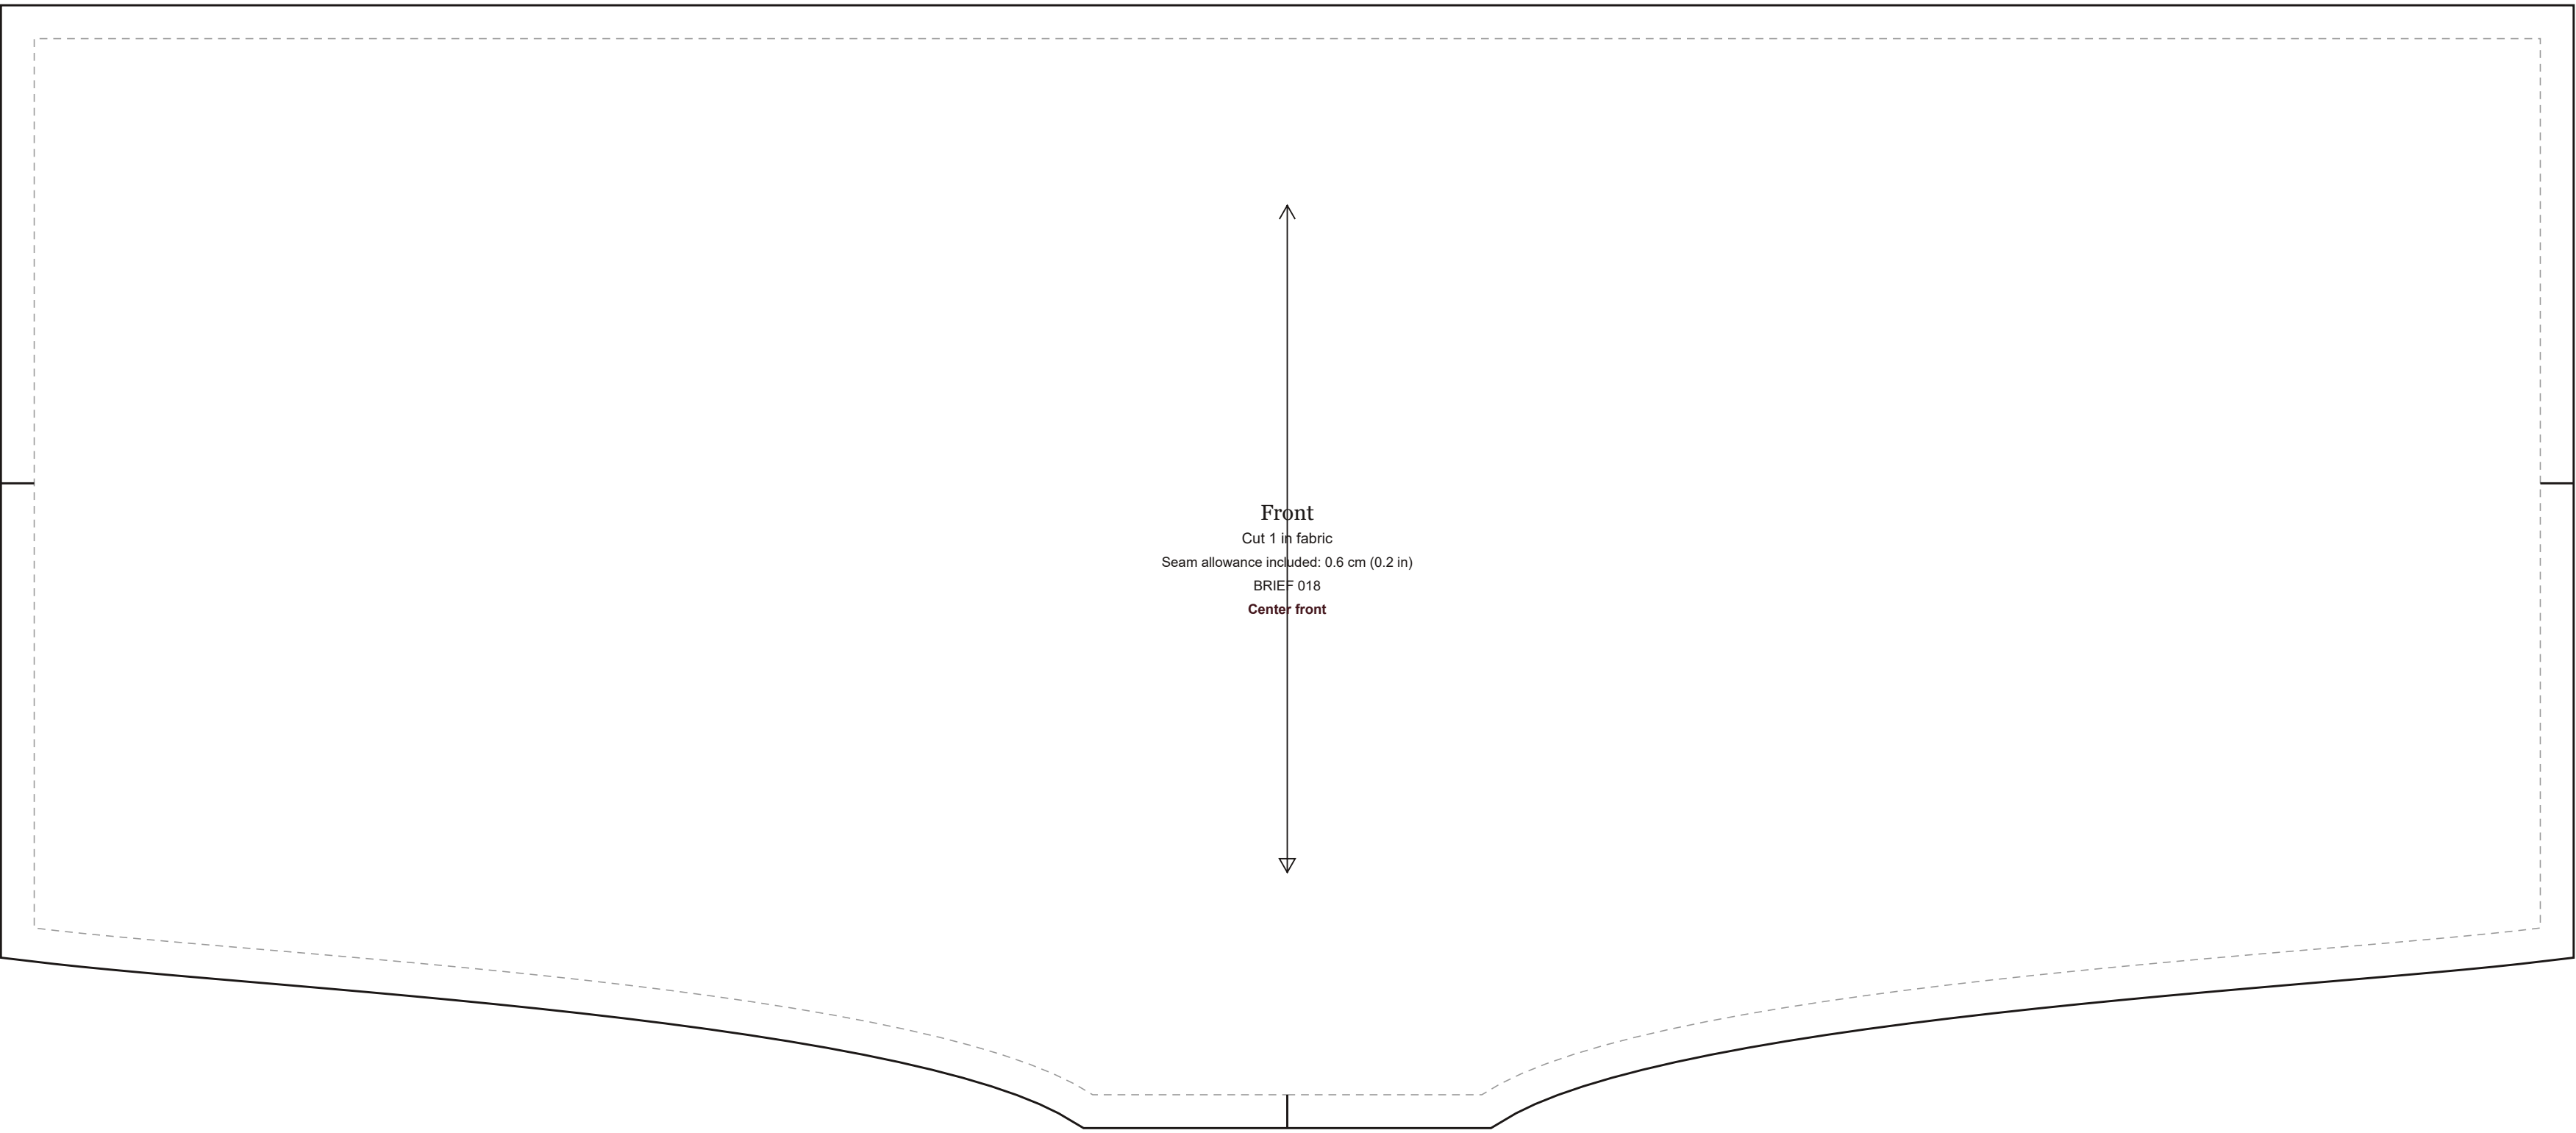

TEST SQUARE
It must measure 10 × 10 cm
(3.94 × 3.94 in). If it does not,
check you printed at 100 %
("Actual size", no scaling).

BRIEF 018