


Waist Cincher · 6 Panels · Straight Edge

A short waist corset, from under the bust to the high hip. Busk front and back lacing.

TECHNICAL DRAWING (from the same draft)

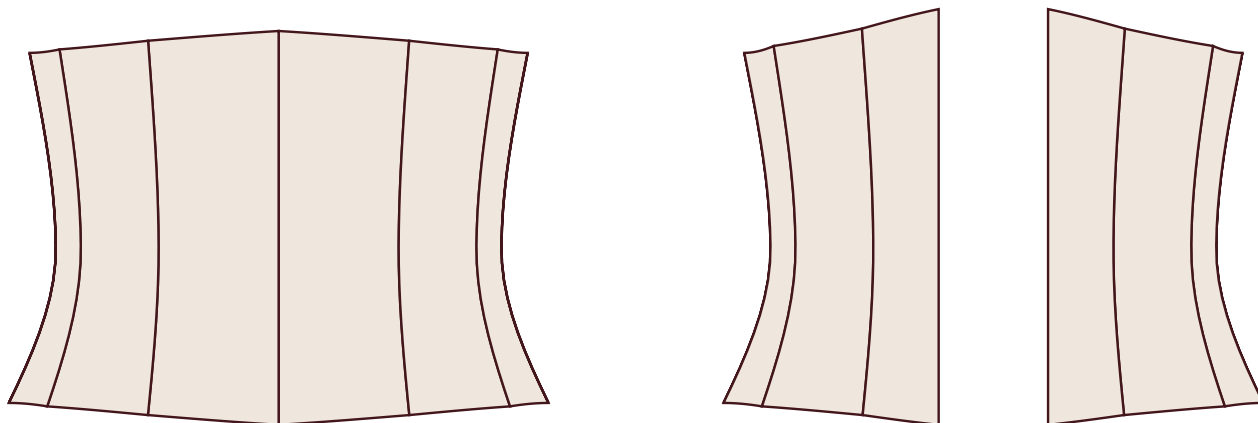

BODY MEASUREMENTS FOR THIS PATTERN

Bust (body)	92 cm (36.2 in)
Underbust (body)	78 cm (30.7 in)
Waist (body)	70 cm (27.6 in)
High hip, 12 cm (4.7 in) below waist	92 cm (36.2 in)
Hip, 20 cm (7.9 in) below waist	98 cm (38.6 in)
Waist reduction	6 cm (2.4 in)
Finished waist (without lacing gap)	64 cm (25.2 in)
Lacing gap at the back	5 cm (2.0 in)
Center front length	18 cm (7.1 in)
Center back length	19 cm (7.5 in)

PATTERN PIECES

- Panel 1 · Center front — 2 fabric + 2 coutil (mirrored)
- Panel 2 · Front — 2 fabric + 2 coutil (mirrored)
- Panel 3 · Front — 2 fabric + 2 coutil (mirrored)
- Panel 4 · Back — 2 fabric + 2 coutil (mirrored)
- Panel 5 · Back — 2 fabric + 2 coutil (mirrored)
- Panel 6 · Center back — 2 fabric + 2 coutil (mirrored)

ORDER OF CONSTRUCTION

- Cut the 6 panels in fabric and in coutil, mirrored. Mark the waist and the notches.
- Make a toile in canvas first and try it on: the fit is corrected at the seams, never at the center.
- Join the panels in order (1 to 2, 2 to 3...), matching the waist notches. Press the seams open.
- Insert the busk at the center front and stitch the waist tape inside, from side to side.
- Sew the boning channels over each seam (1.2 cm / ½ in) and on both sides of the eyelets.
- Insert the bones (1 cm / ⅜ in shorter than the channel), bind the top and bottom edges and set the marked eyelets.

Pattern drafted with classic pattern-making formulas from the measurements above (one size). Every body is different: always make a sample in scrap fabric before cutting your final fabric, and adjust at the seams. Circles on the pattern: eyelets.

MATERIALS

Outer fabric: 0.4 m (0.4 yd) (satin, brocade, jacquard or gabardine). Coutil or strong canvas: the same.
 Busk: 25 cm (10 in). Spiral steel bones, 7 mm (¼ in): 14.
 Metal eyelets, 5 mm with washers: 14. Flat lacing cord: 4 m (4.4 yd). Bias binding for the edges: 2.5 m (2.7 yd).
 Waist tape (twill), 2.5 cm (1 in) wide: 70 cm (27.6 in).

HOW TO PRINT

A4: print at 100 % ("Actual size") with "Fit to page" turned off. Follow the assembly map.

Plotter: send the sheet at actual size as it is (the file is already at 1:1 scale).


Before cutting, measure the test square: 10 × 10 cm (3.94 × 3.94 in).

ASSEMBLY MAP


10 A4 sheets · 2 rows (A–B) × 5 columns (1–5).



- 1. Print every sheet at 100 % ("Actual size"). Measure the test square: 10 × 10 cm (3.94 × 3.94 in).
- 2. Trim each sheet along the gray dotted line at the top and on the left (not needed for row A or column 1).
- 3. Lay the trimmed sheet over its neighbor until the gray line and the cross marks match, then tape it down.
- 4. Assemble row by row (A1, A2, A3...), then join the rows together.


A1 Print 1: Center back 100% (3.94 x 3.94 in) 100% (3.94 x 3.94 in) Print 2: Back 100% (3.94 x 3.94 in) 100% (3.94 x 3.94 in)	A2 Print 3: Front 100% (3.94 x 3.94 in) 100% (3.94 x 3.94 in) Print 4: Back 100% (3.94 x 3.94 in) 100% (3.94 x 3.94 in)	A3 Print 5: Back 100% (3.94 x 3.94 in) 100% (3.94 x 3.94 in) Print 6: Center back 100% (3.94 x 3.94 in) 100% (3.94 x 3.94 in)	A4 Print 7: Back 100% (3.94 x 3.94 in) 100% (3.94 x 3.94 in) Print 8: Center back 100% (3.94 x 3.94 in) 100% (3.94 x 3.94 in) TEST SQUARE 100% (3.94 x 3.94 in) 100% (3.94 x 3.94 in)	A5
B1 100% (3.94 x 3.94 in) 100% (3.94 x 3.94 in)	B2	B3	B4	B5

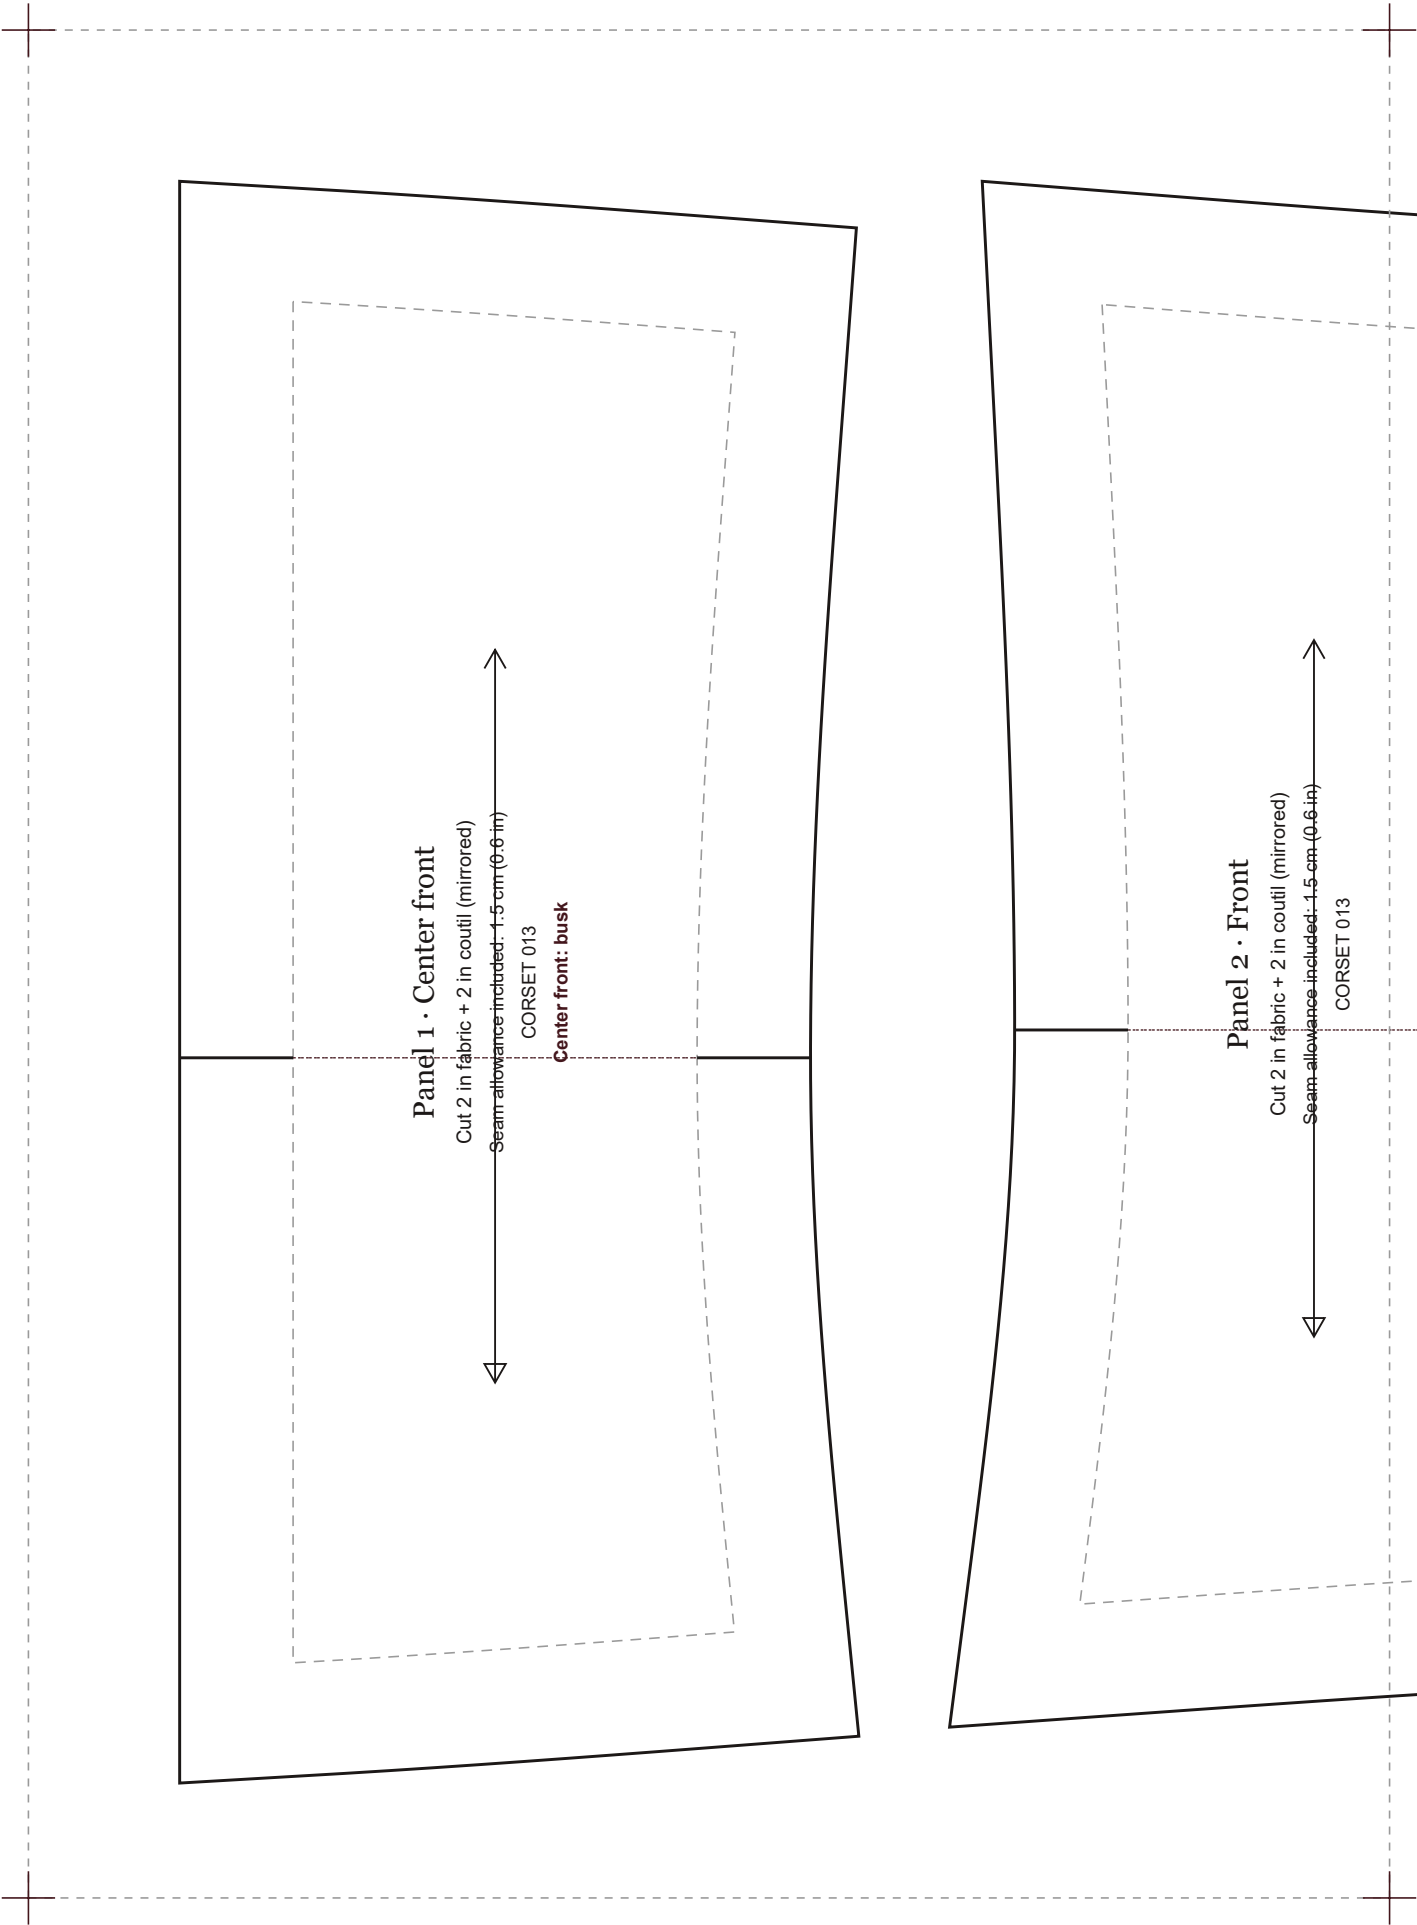


CORSET 013 · Waist Cincher · 6 Panels · Straight Edge · scale 1:1 · 77.7 × 26.3 cm (30.6 × 10.3 in)

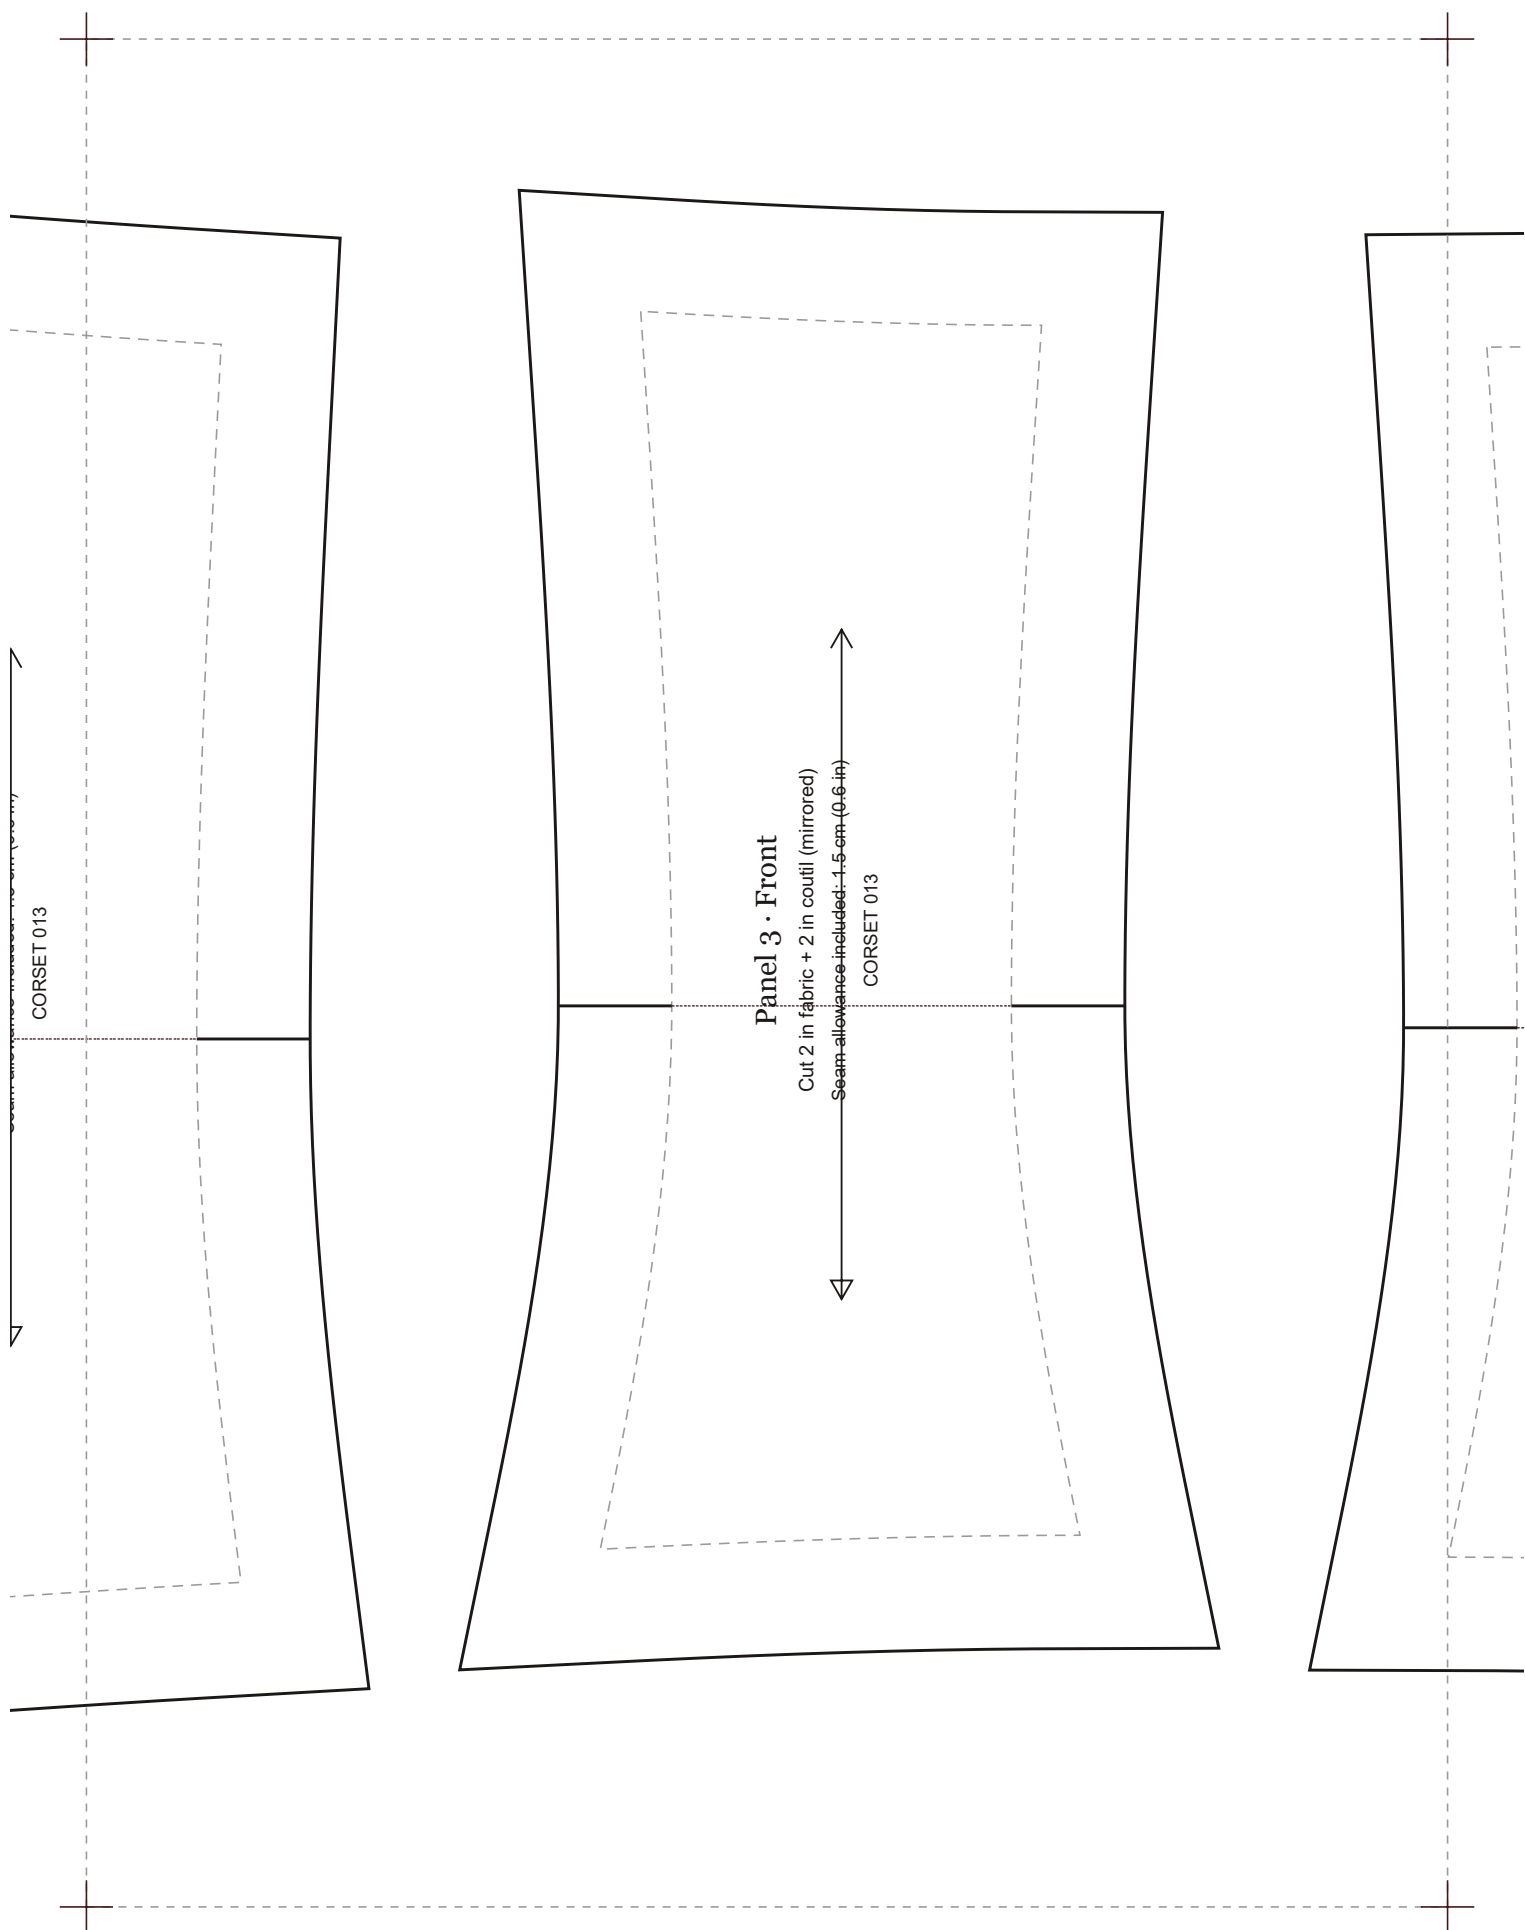

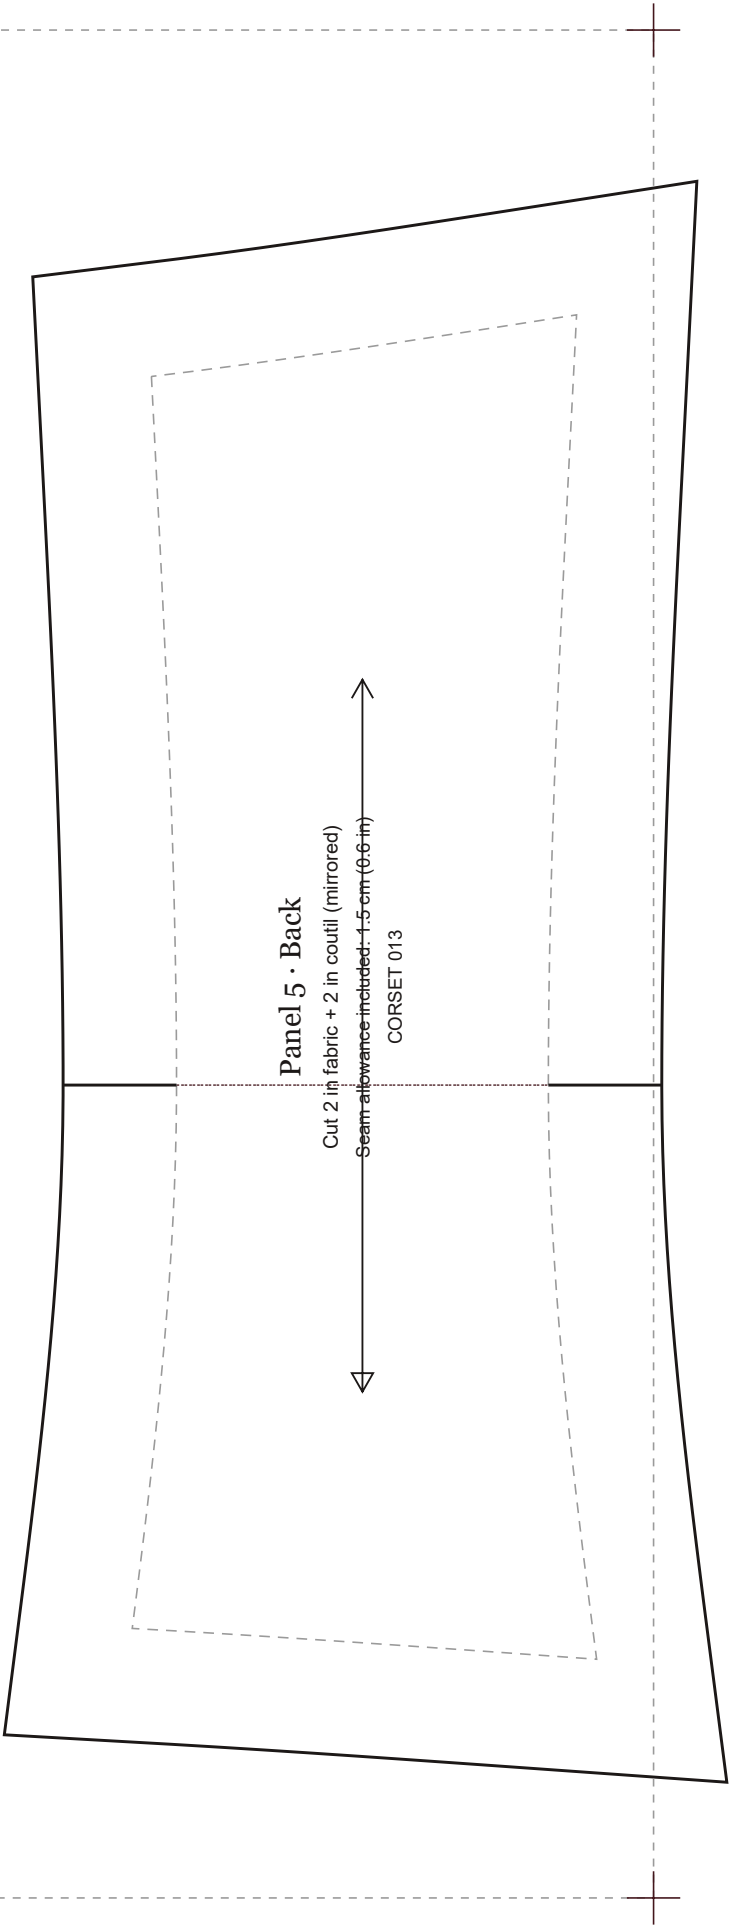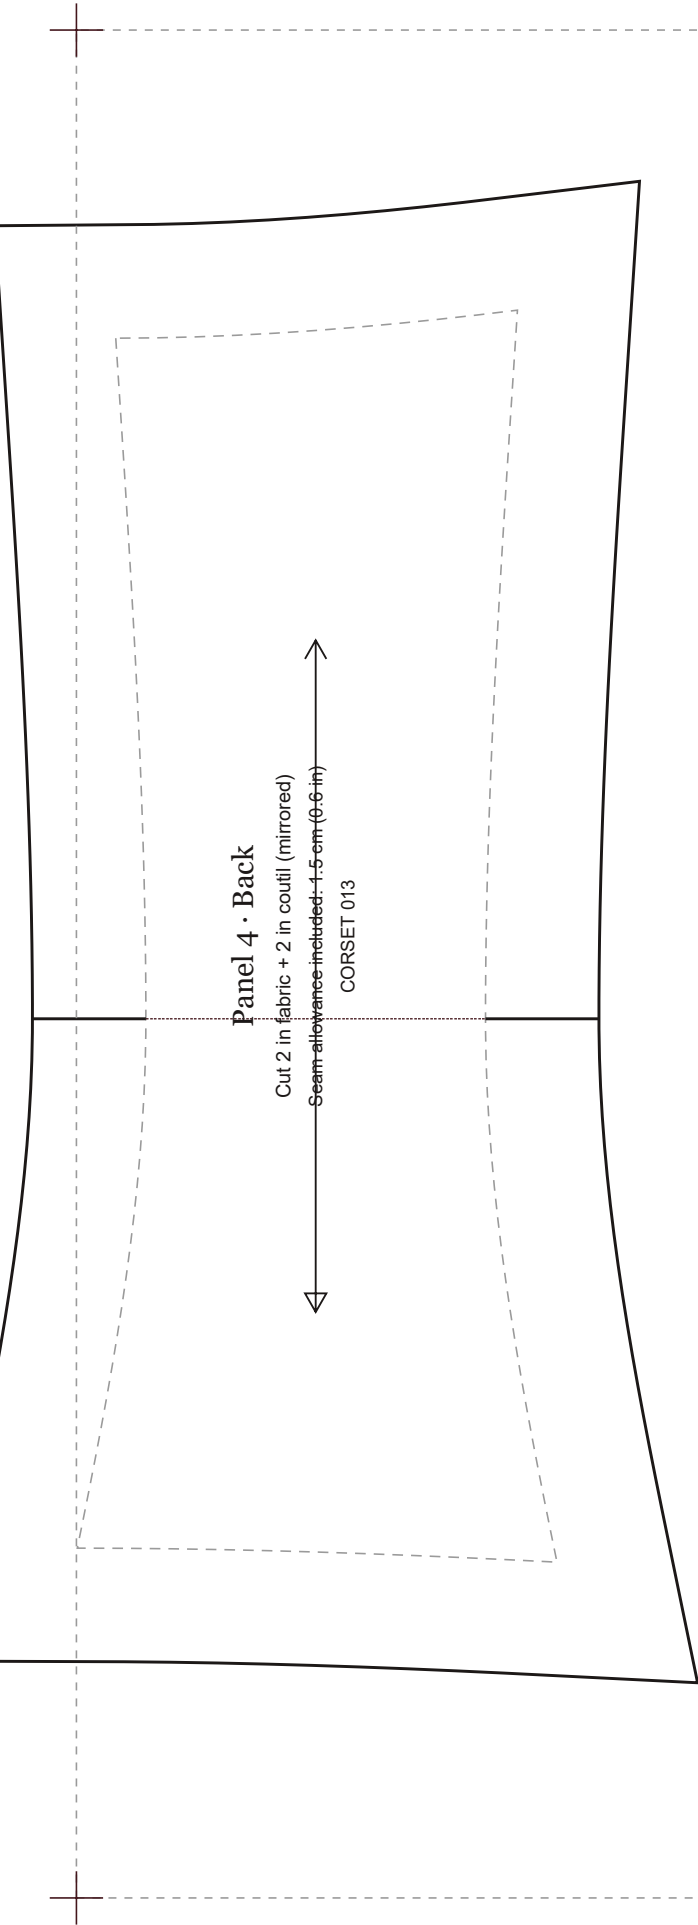

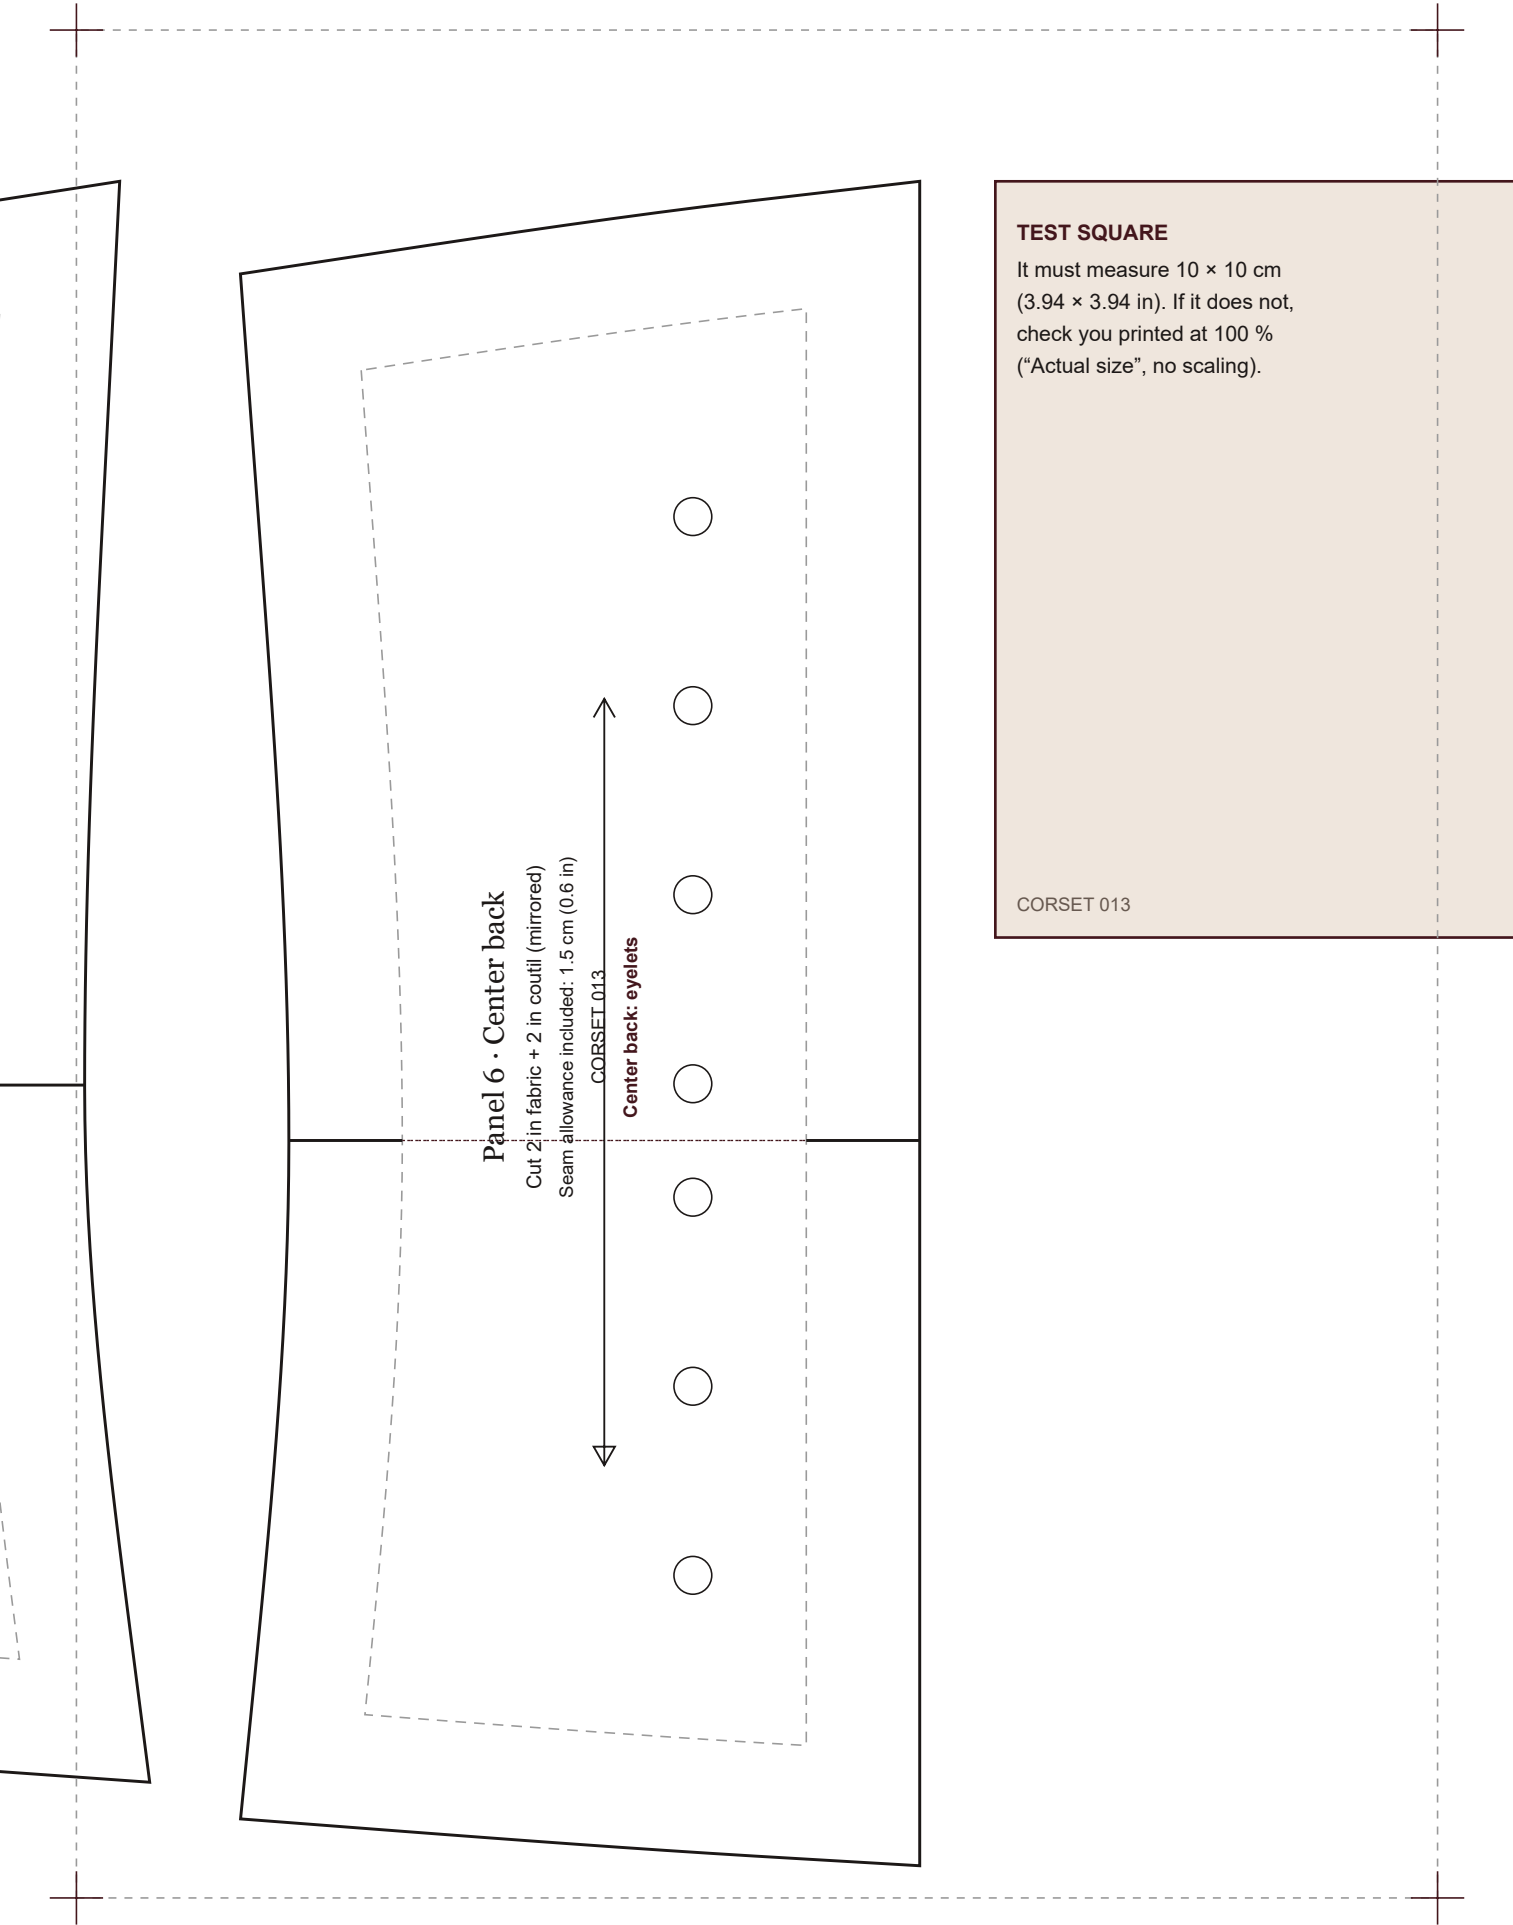

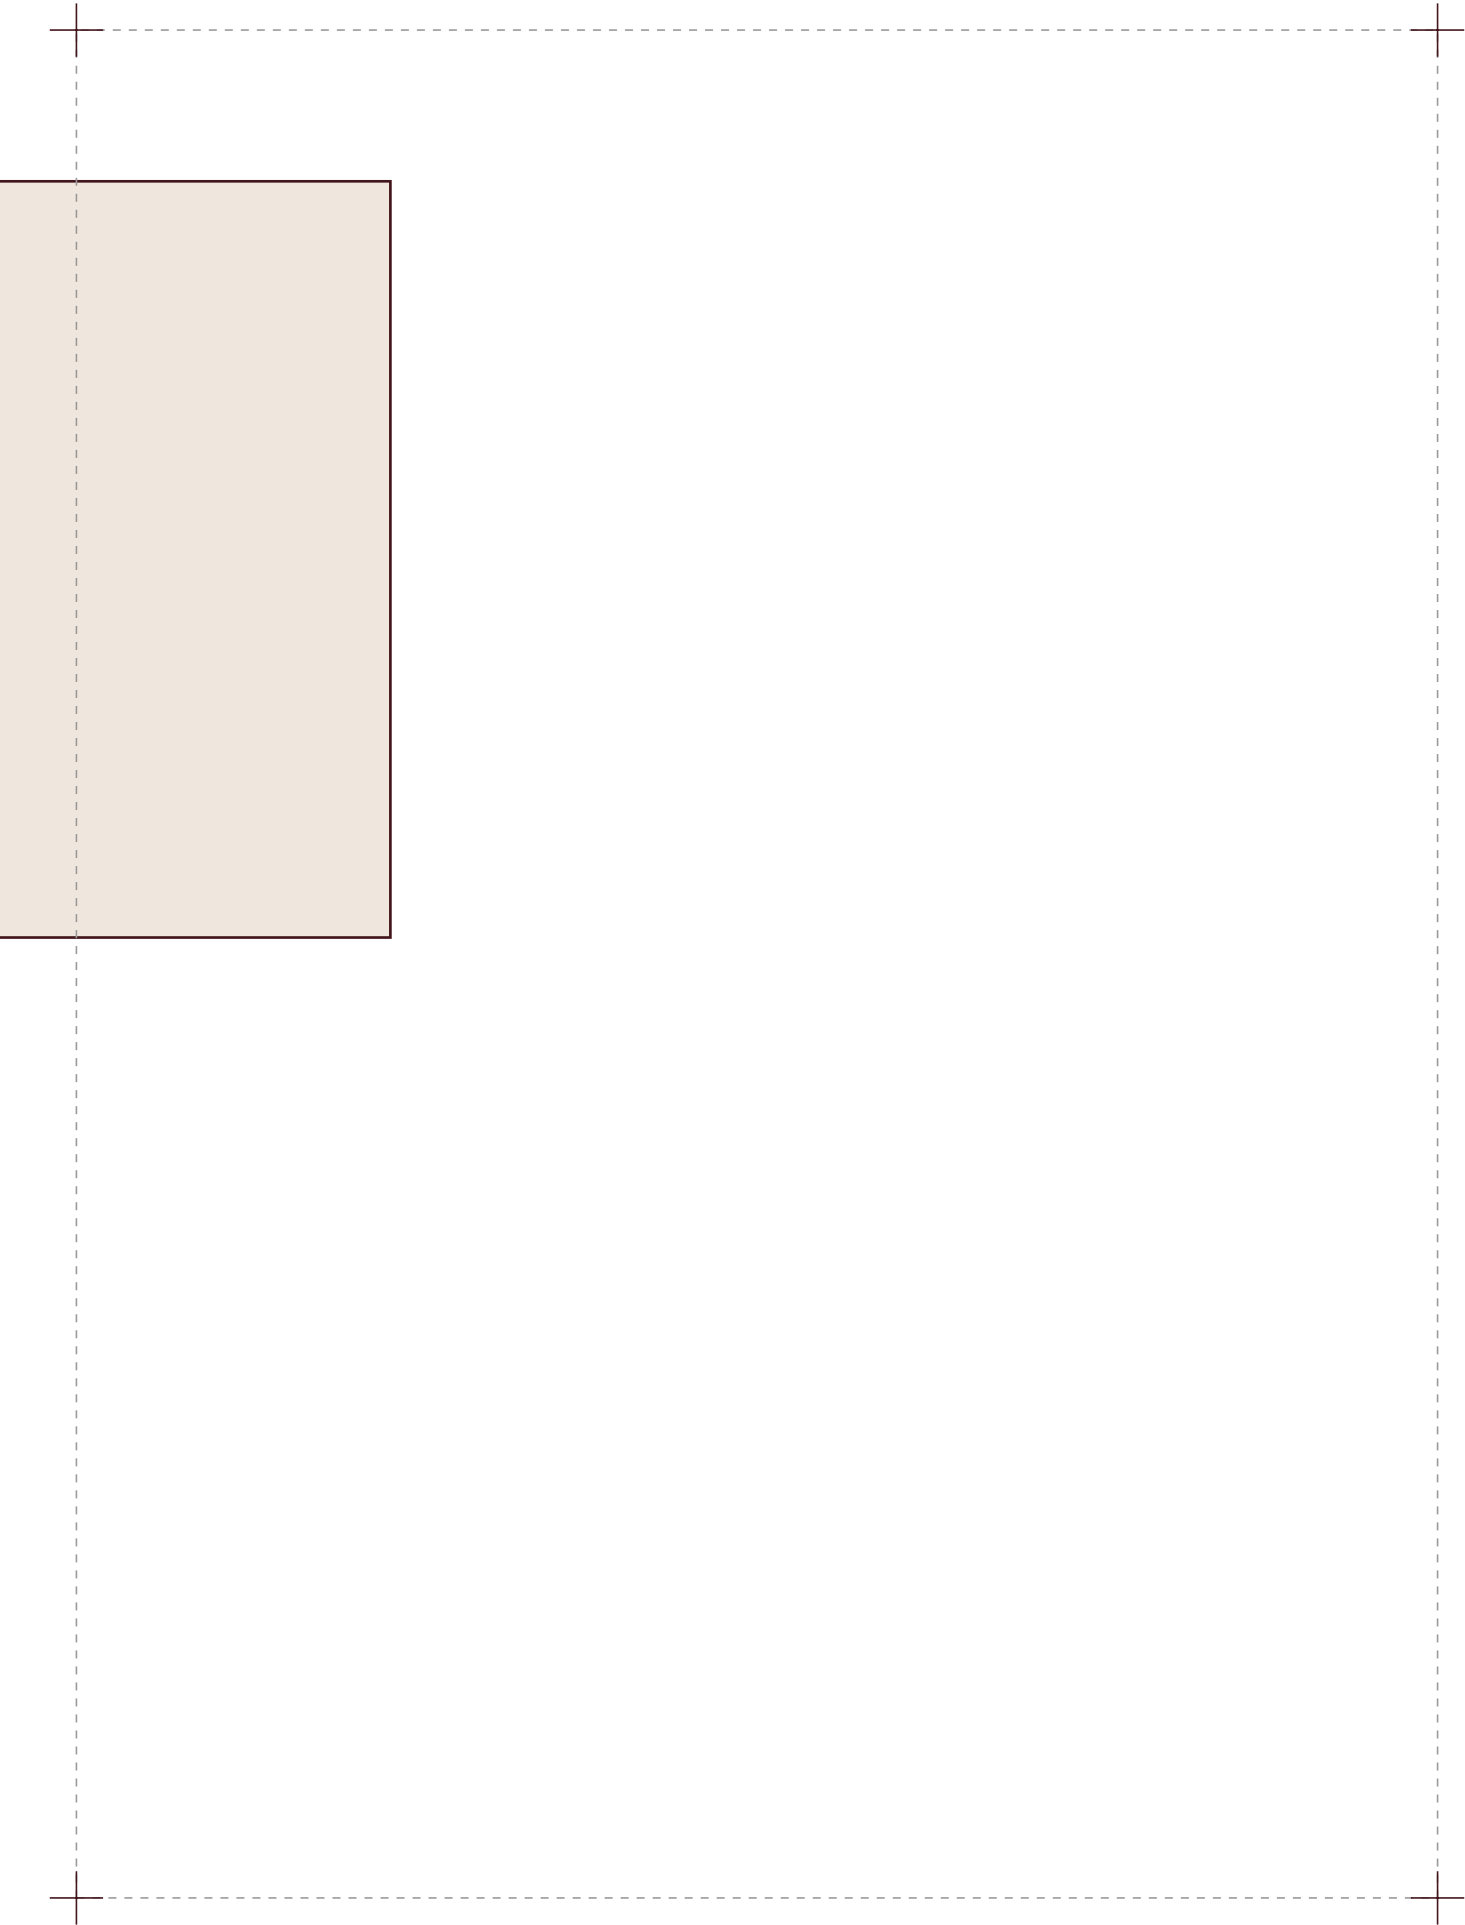

CORSET 013 · Waist Cincher · 6 Panels · Straight Edge · scale 1:1 · 77.7 × 26.3 cm (30.6 × 10.3 in)

