


Straight-Neckline Overbust · 10 Panels · Front Lacing

A straight-neckline overbust, to wear on its own or as an evening piece.

TECHNICAL DRAWING (from the same draft)

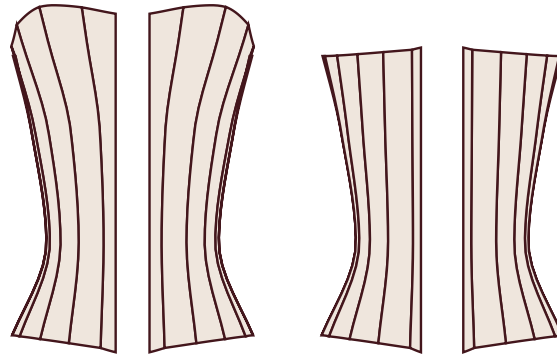

BODY MEASUREMENTS FOR THIS PATTERN

Bust (body)	92 cm (36.2 in)
Underbust (body)	78 cm (30.7 in)
Waist (body)	70 cm (27.6 in)
High hip, 12 cm (4.7 in) below waist	92 cm (36.2 in)
Hip, 20 cm (7.9 in) below waist	98 cm (38.6 in)
Waist reduction	6 cm (2.4 in)
Finished waist (without lacing gap)	64 cm (25.2 in)
Lacing gap at the back	5 cm (2.0 in)
Lacing gap at the front	4 cm (1.6 in)
Center front length	40 cm (15.7 in)
Center back length	36 cm (14.2 in)

PATTERN PIECES

Panel 1 · Center front — 2 fabric + 2 coutil (mirrored)
 Panel 2 · Front — 2 fabric + 2 coutil (mirrored)
 Panel 3 · Front — 2 fabric + 2 coutil (mirrored)
 Panel 4 · Front — 2 fabric + 2 coutil (mirrored)
 Panel 5 · Front — 2 fabric + 2 coutil (mirrored)
 Panel 6 · Back — 2 fabric + 2 coutil (mirrored)
 Panel 7 · Back — 2 fabric + 2 coutil (mirrored)
 Panel 8 · Back — 2 fabric + 2 coutil (mirrored)
 Panel 9 · Back — 2 fabric + 2 coutil (mirrored)
 Panel 10 · Center back — 2 fabric + 2 coutil (mirrored)

ORDER OF CONSTRUCTION

1. Cut the 10 panels in fabric and in coutil, mirrored. Mark the waist and the notches.
2. Make a toile in canvas first and try it on: the fit is corrected at the seams, never at the center.
3. Join the panels in order (1 to 2, 2 to 3...), matching the waist notches. Press the seams open.
4. On overbust styles, also match the underbust notch and fit the toile with the bra you will wear underneath (or with nothing).
5. Set eyelets at the center front and stitch the waist tape inside, from side to side.
6. Sew the boning channels over each seam (1.2 cm / ½ in) and on both sides of the eyelets.
7. Insert the bones (1 cm / ⅜ in shorter than the channel), bind the top and bottom edges and set the marked eyelets.

Pattern drafted with classic pattern-making formulas from the measurements above (one size). Every body is different: always make a sample in scrap fabric before cutting your final fabric, and adjust at the seams. Circles on the pattern: eyelets.

MATERIALS

Outer fabric: 0.6 m (0.6 yd) (satin, brocade, jacquard or gabardine). Coutil or strong canvas: the same.
 No busk: front lacing (eyelets on panel 1). Spiral steel bones, 7 mm (¼ in): 22.
 Metal eyelets, 5 mm with washers: 58. Flat lacing cord: 6 m (6.6 yd). Bias binding for the edges: 2.5 m (2.7 yd).
 Waist tape (twill), 2.5 cm (1 in) wide: 70 cm (27.6 in).

HOW TO PRINT

A4: print at 100 % ("Actual size") with "Fit to page" turned off. Follow the assembly map.



Plotter: send the sheet at actual size as it is (the file is already at 1:1 scale).


Before cutting, measure the test square: 10 × 10 cm (3.94 × 3.94 in).


ASSEMBLY MAP

24 A4 sheets · 4 rows (A–D) × 6 columns (1–6).


- 1. Print every sheet at 100 % (“Actual size”). Measure the test square: 10 × 10 cm (3.94 × 3.94 in).
- 2. Trim each sheet along the gray dotted line at the top and on the left (not needed for row A or column 1).
- 3. Lay the trimmed sheet over its neighbor until the gray line and the cross marks match, then tape it down.
- 4. Assemble row by row (A1, A2, A3...), then join the rows together.


A1 	A2 	A3 	A4 	A5 	A6 
B1 	B2 	B3 	B4 	B5 	B6 
C1 	C2	C3	C4	C5	C6
D1	D2	D3	D4	D5	D6

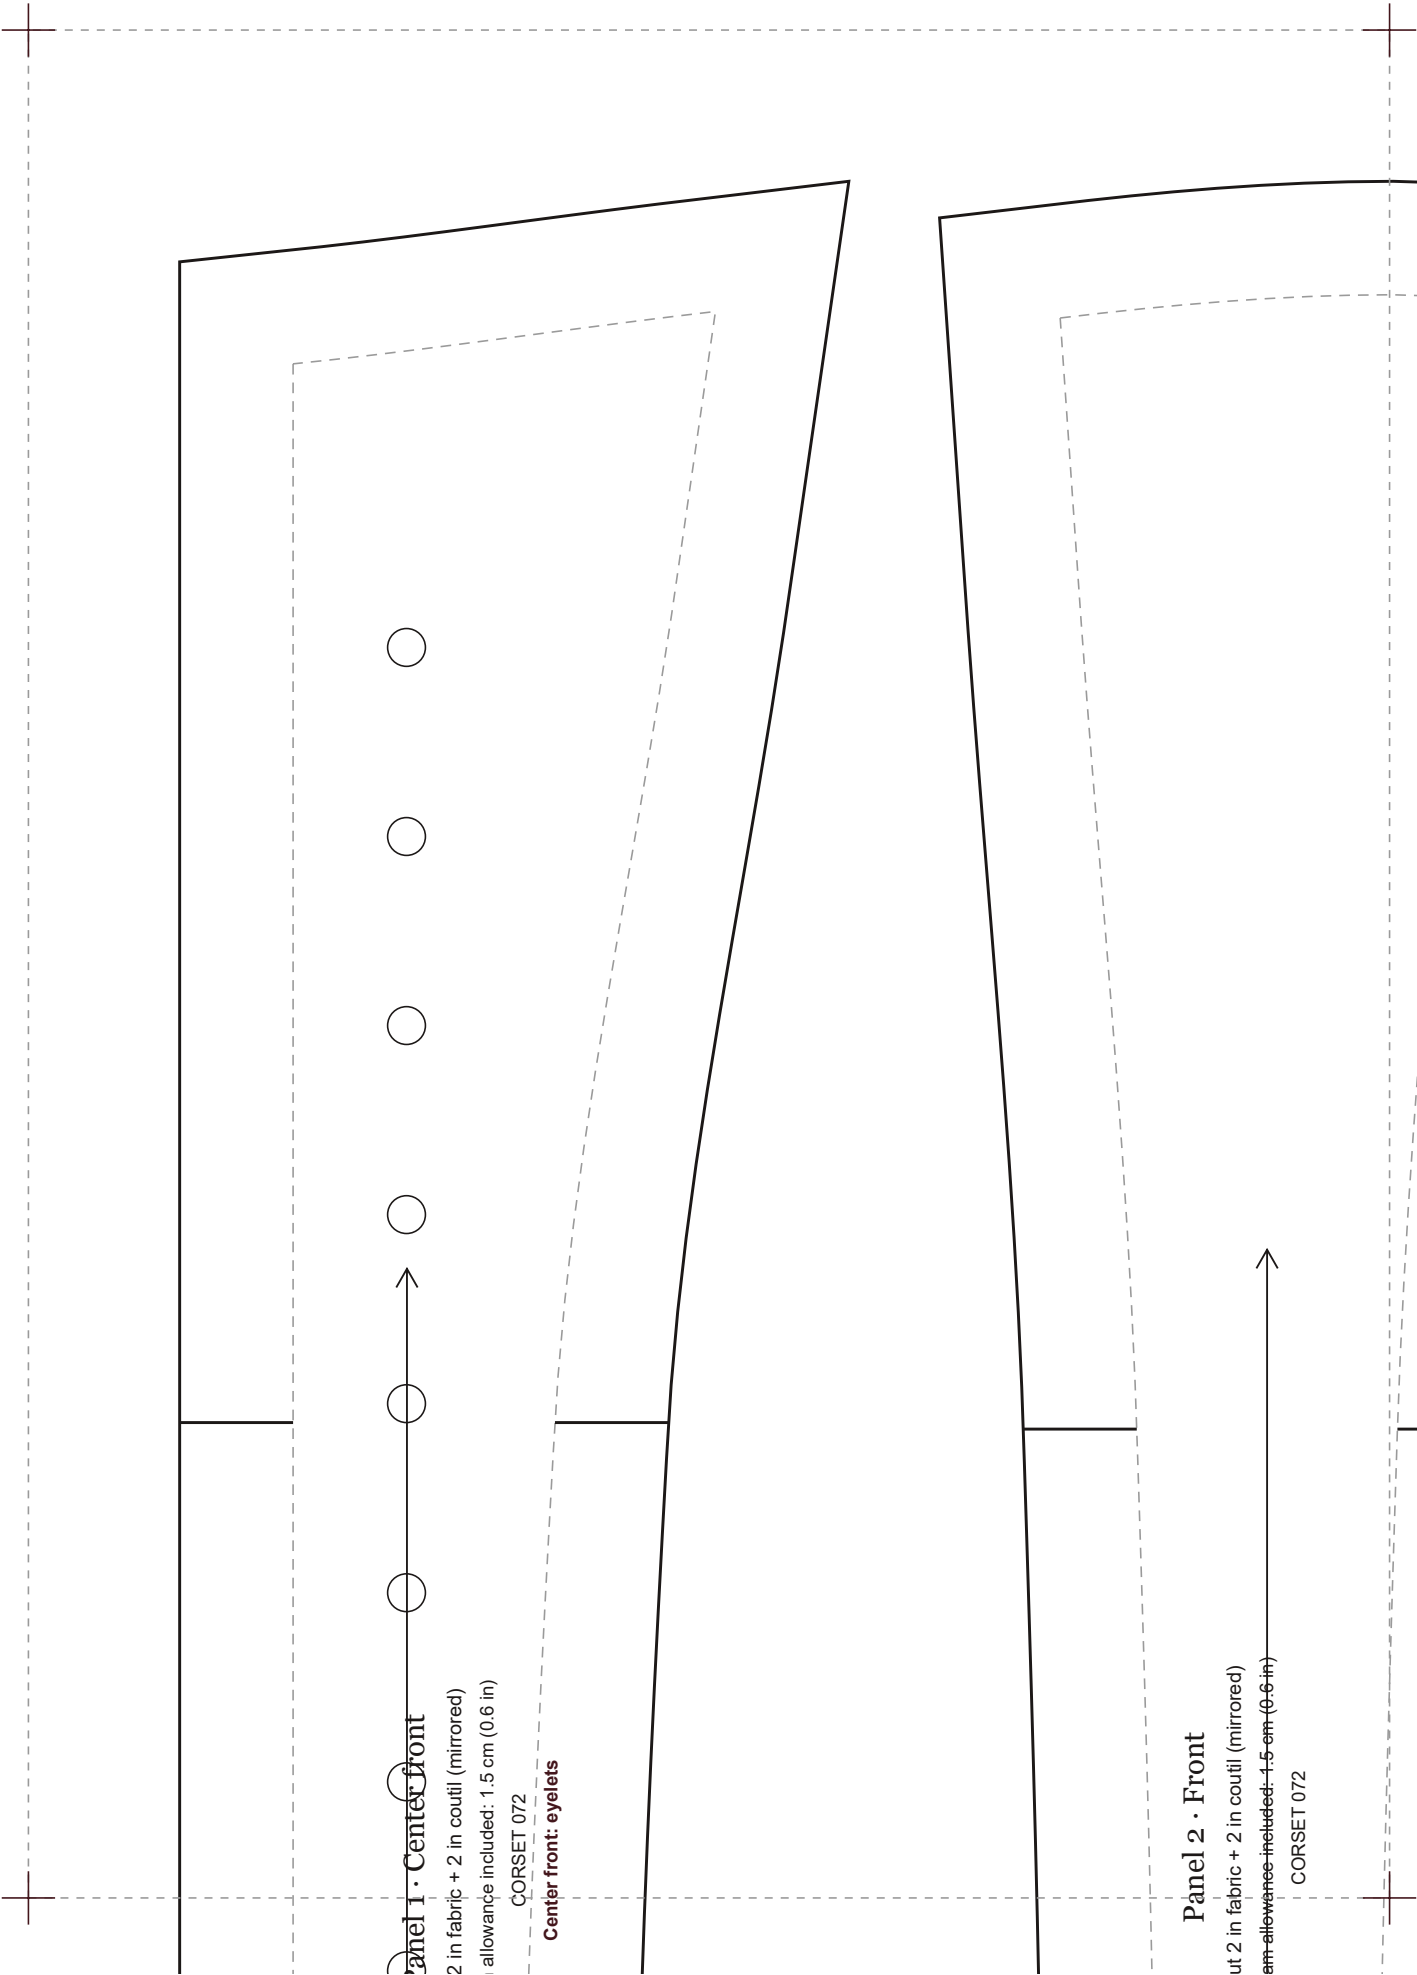

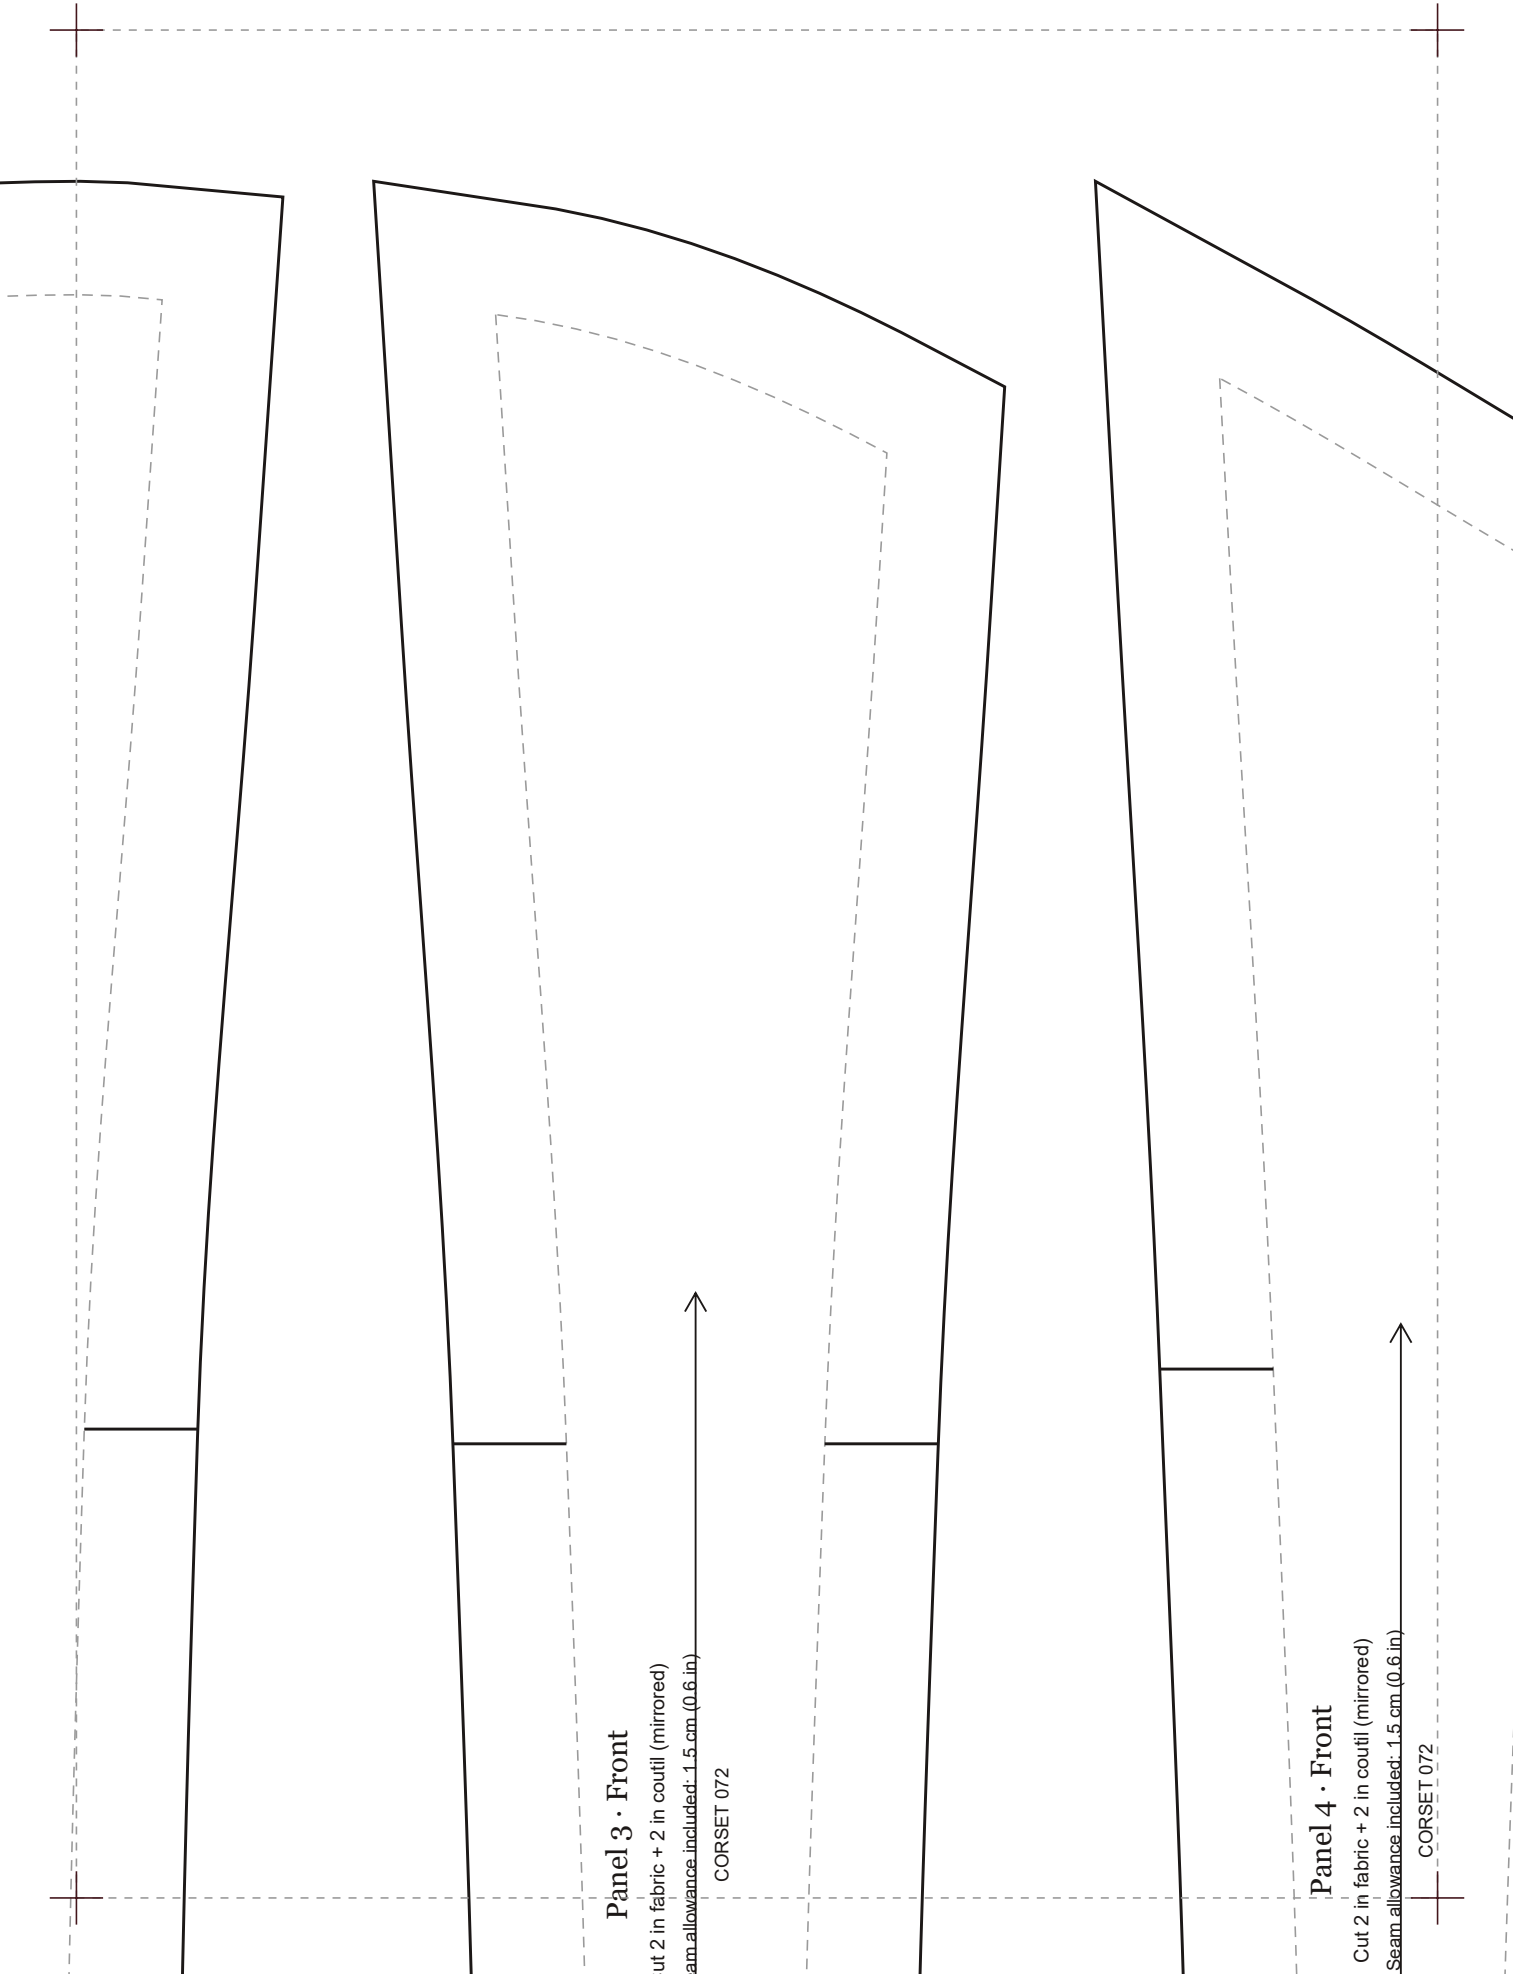



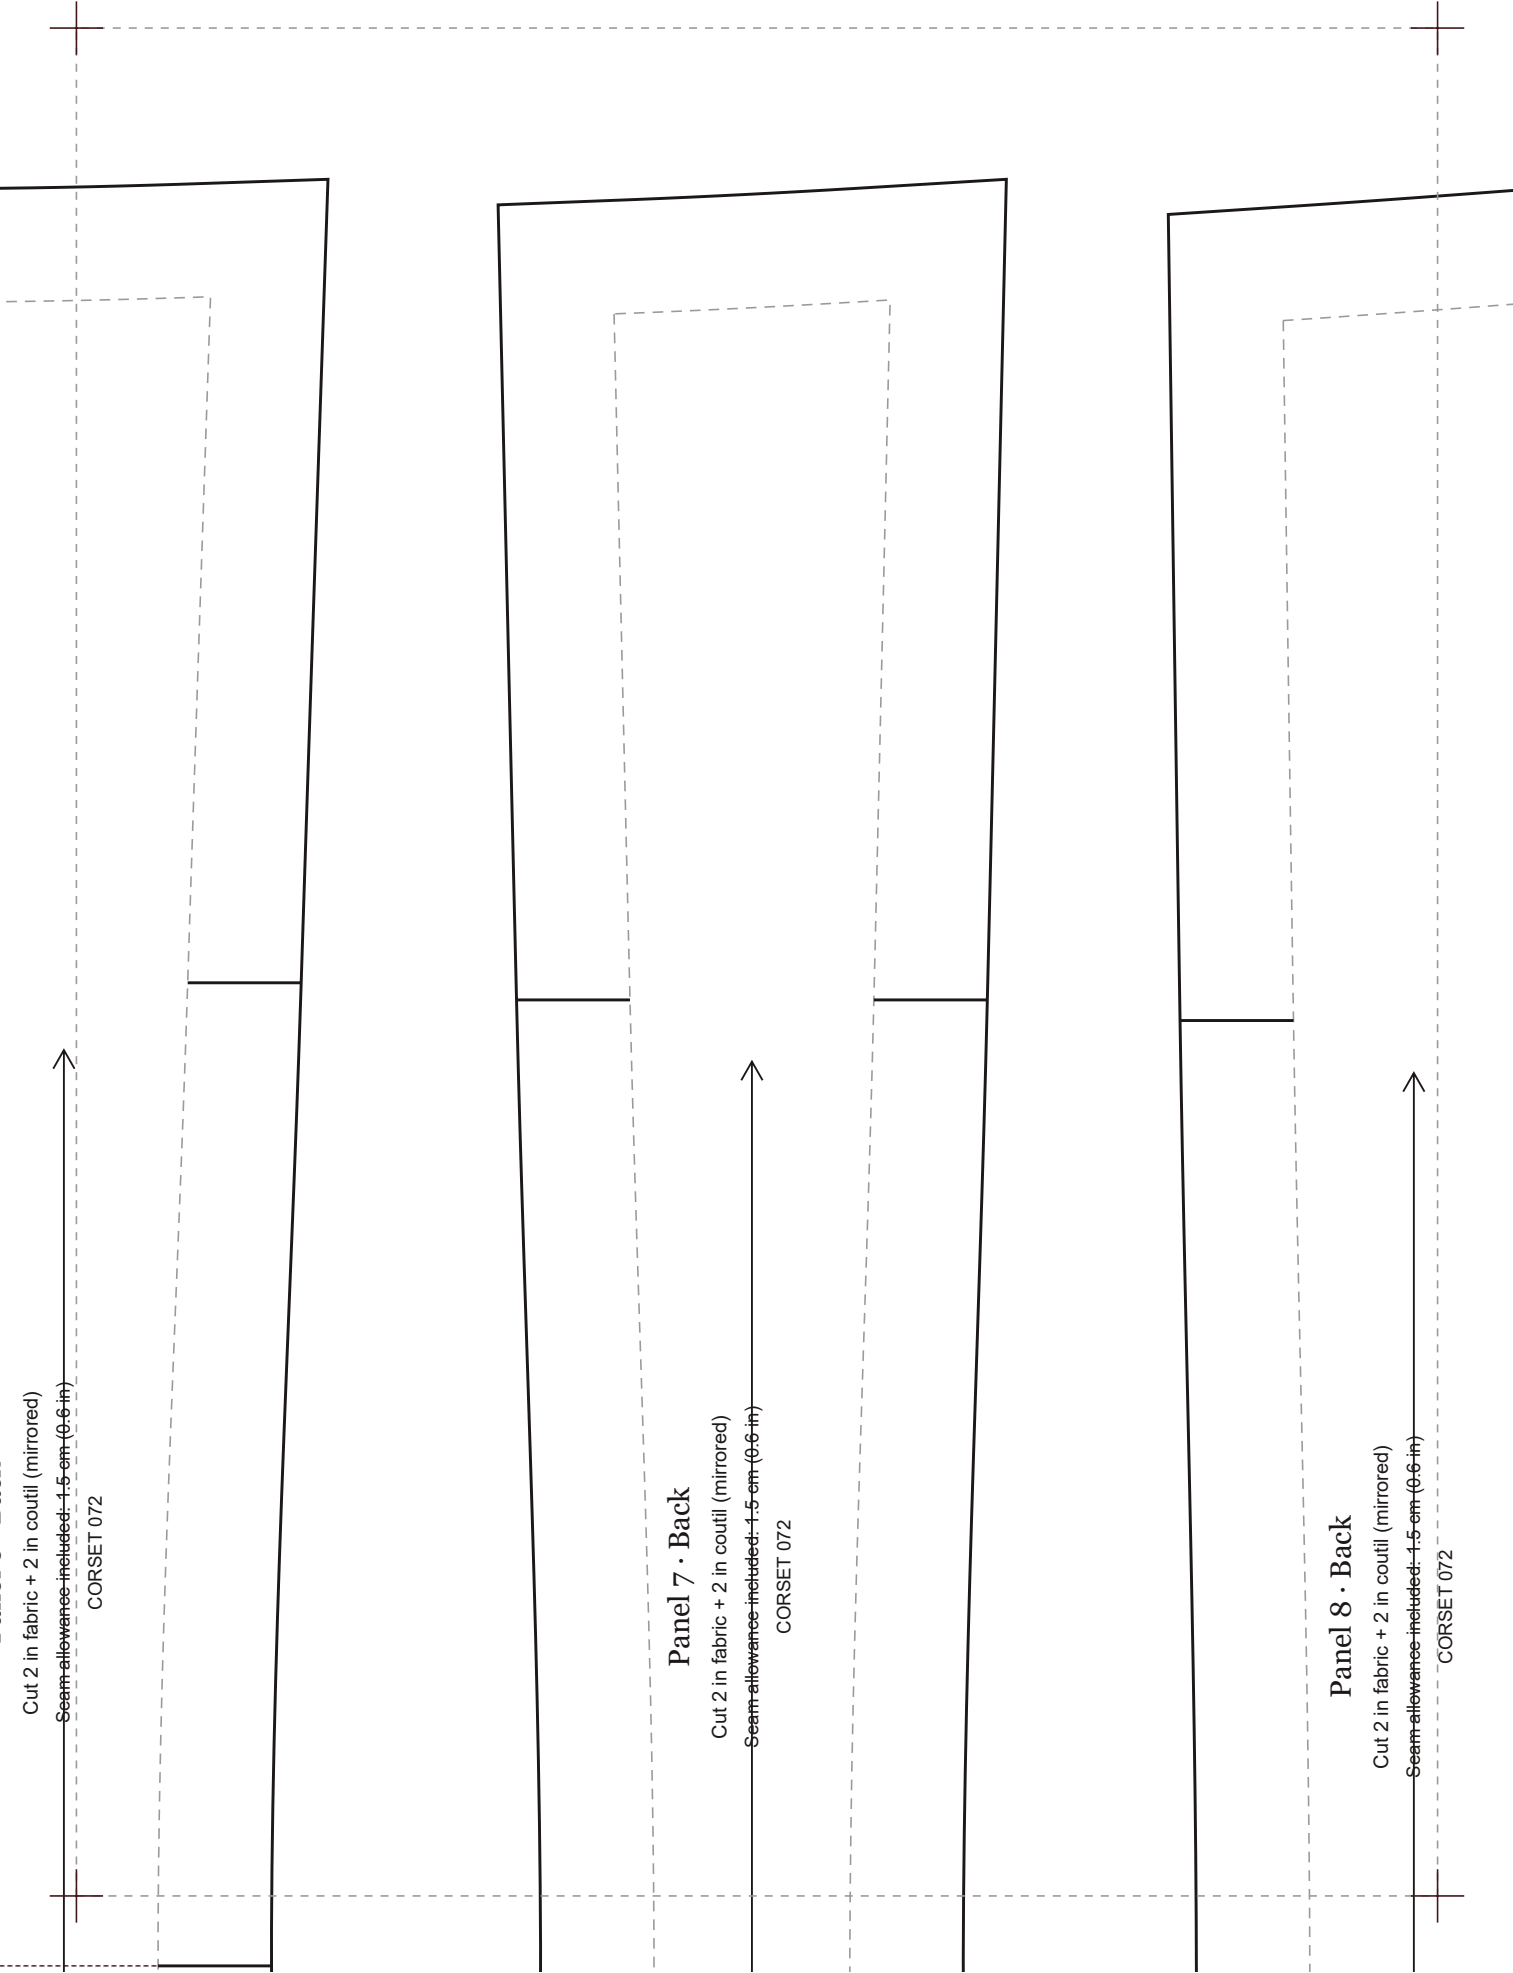


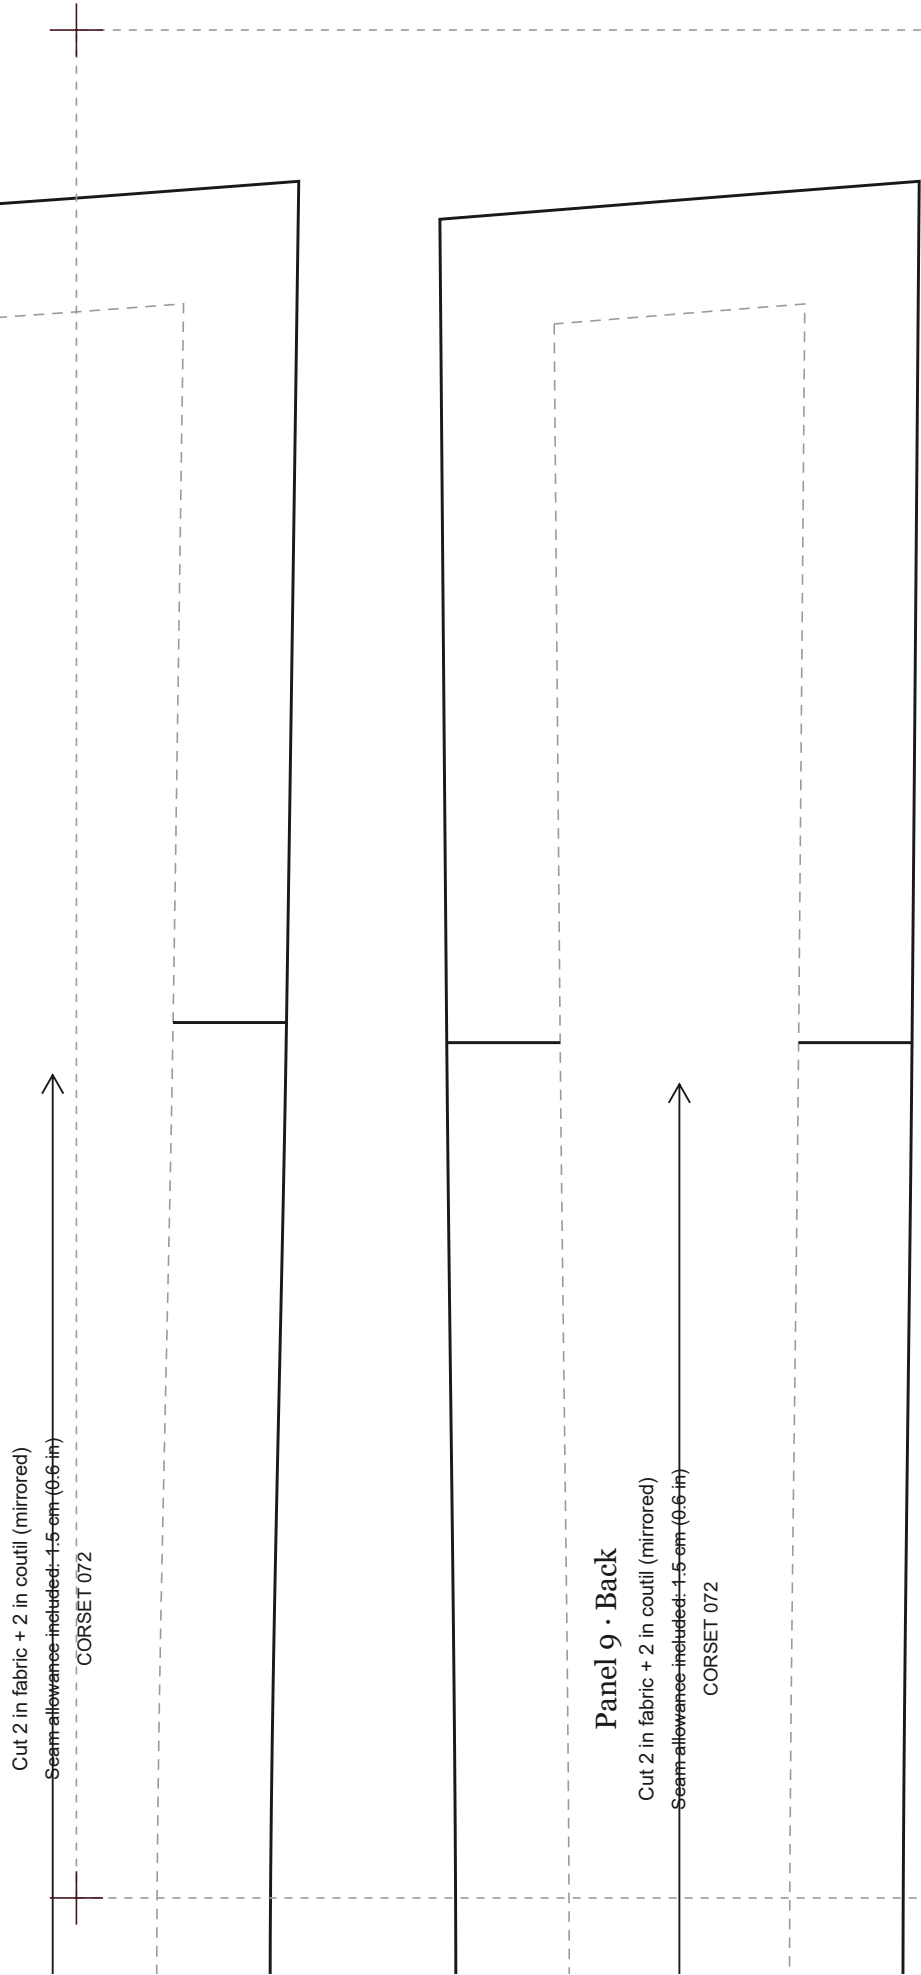



TEST SQUARE


It must measure 10 × 10 cm (3.94 × 3.94 in). If it does not, check you printed at 100 % ("Actual size", no scaling).


CORSET 072

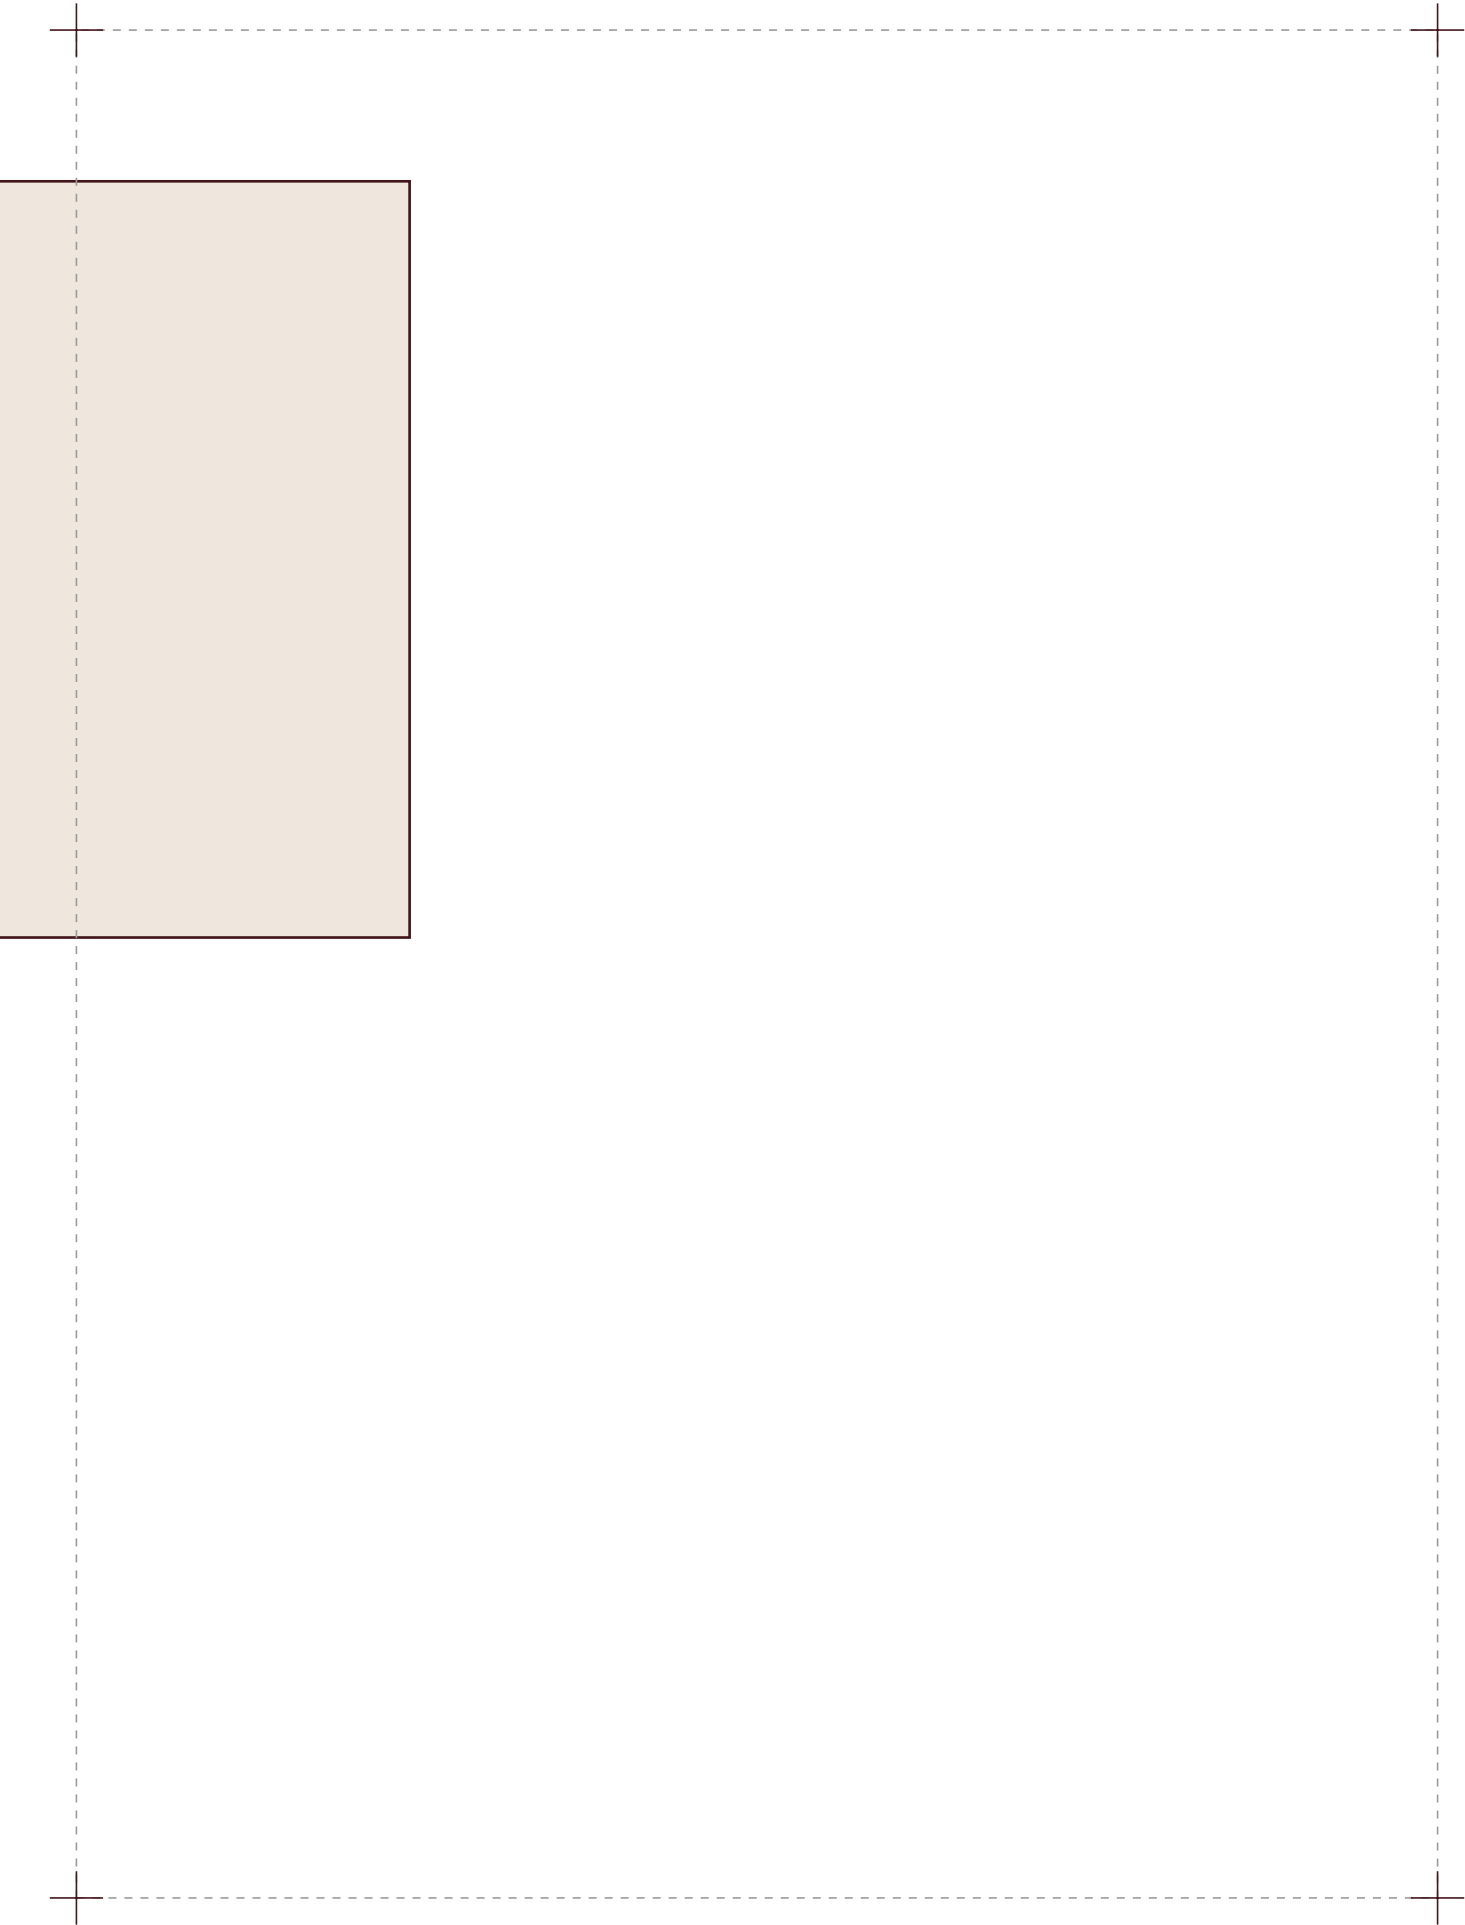


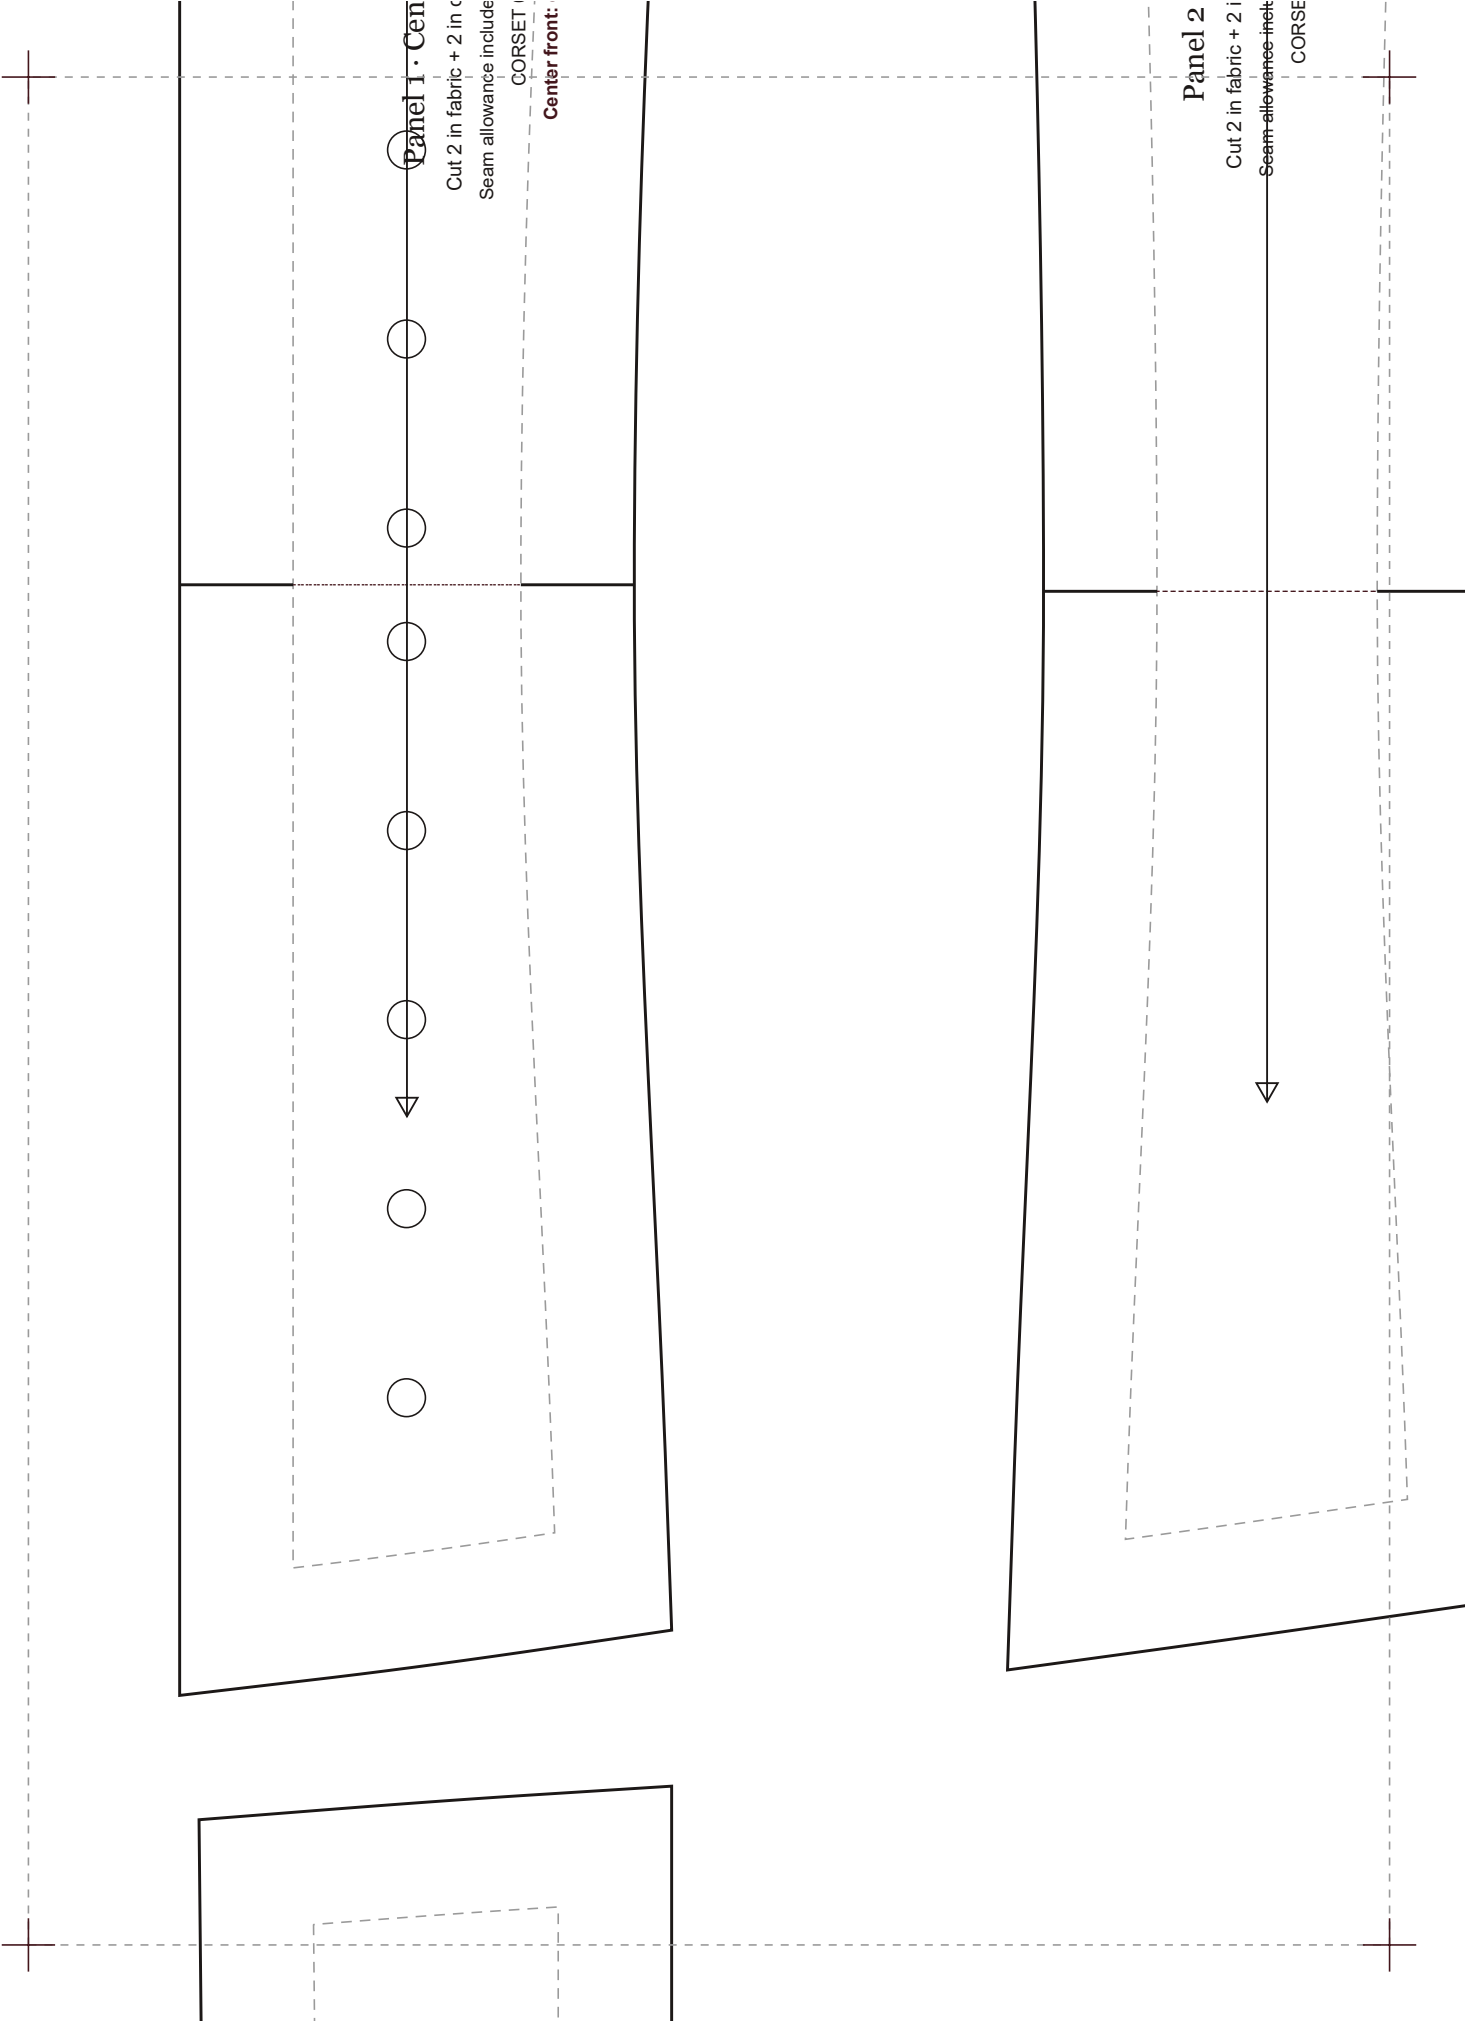

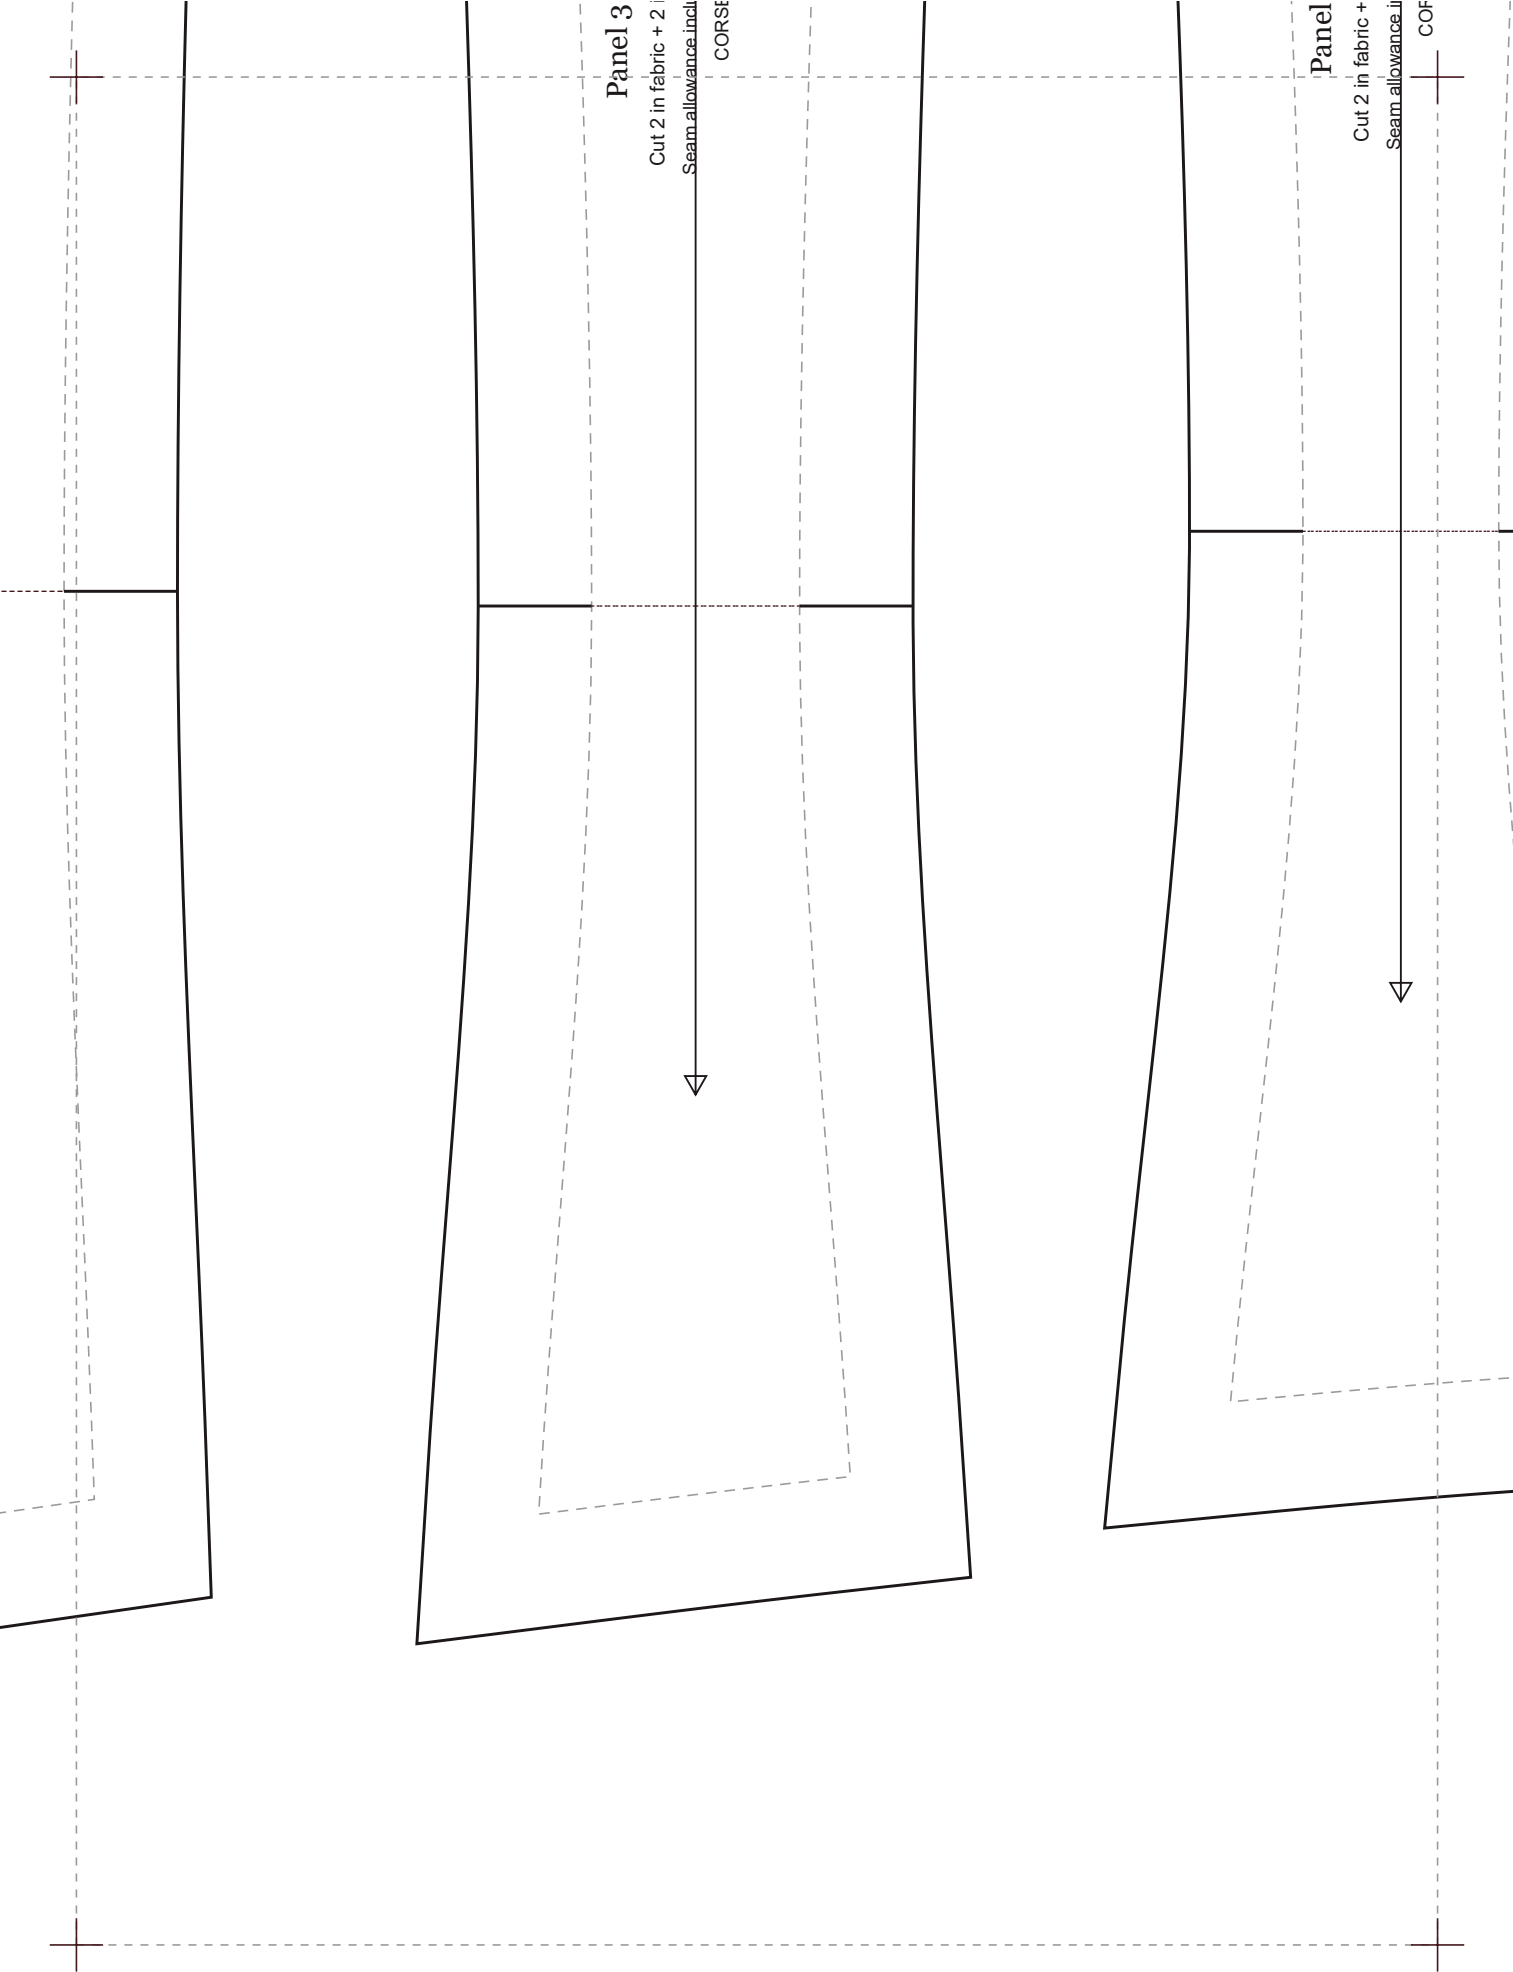


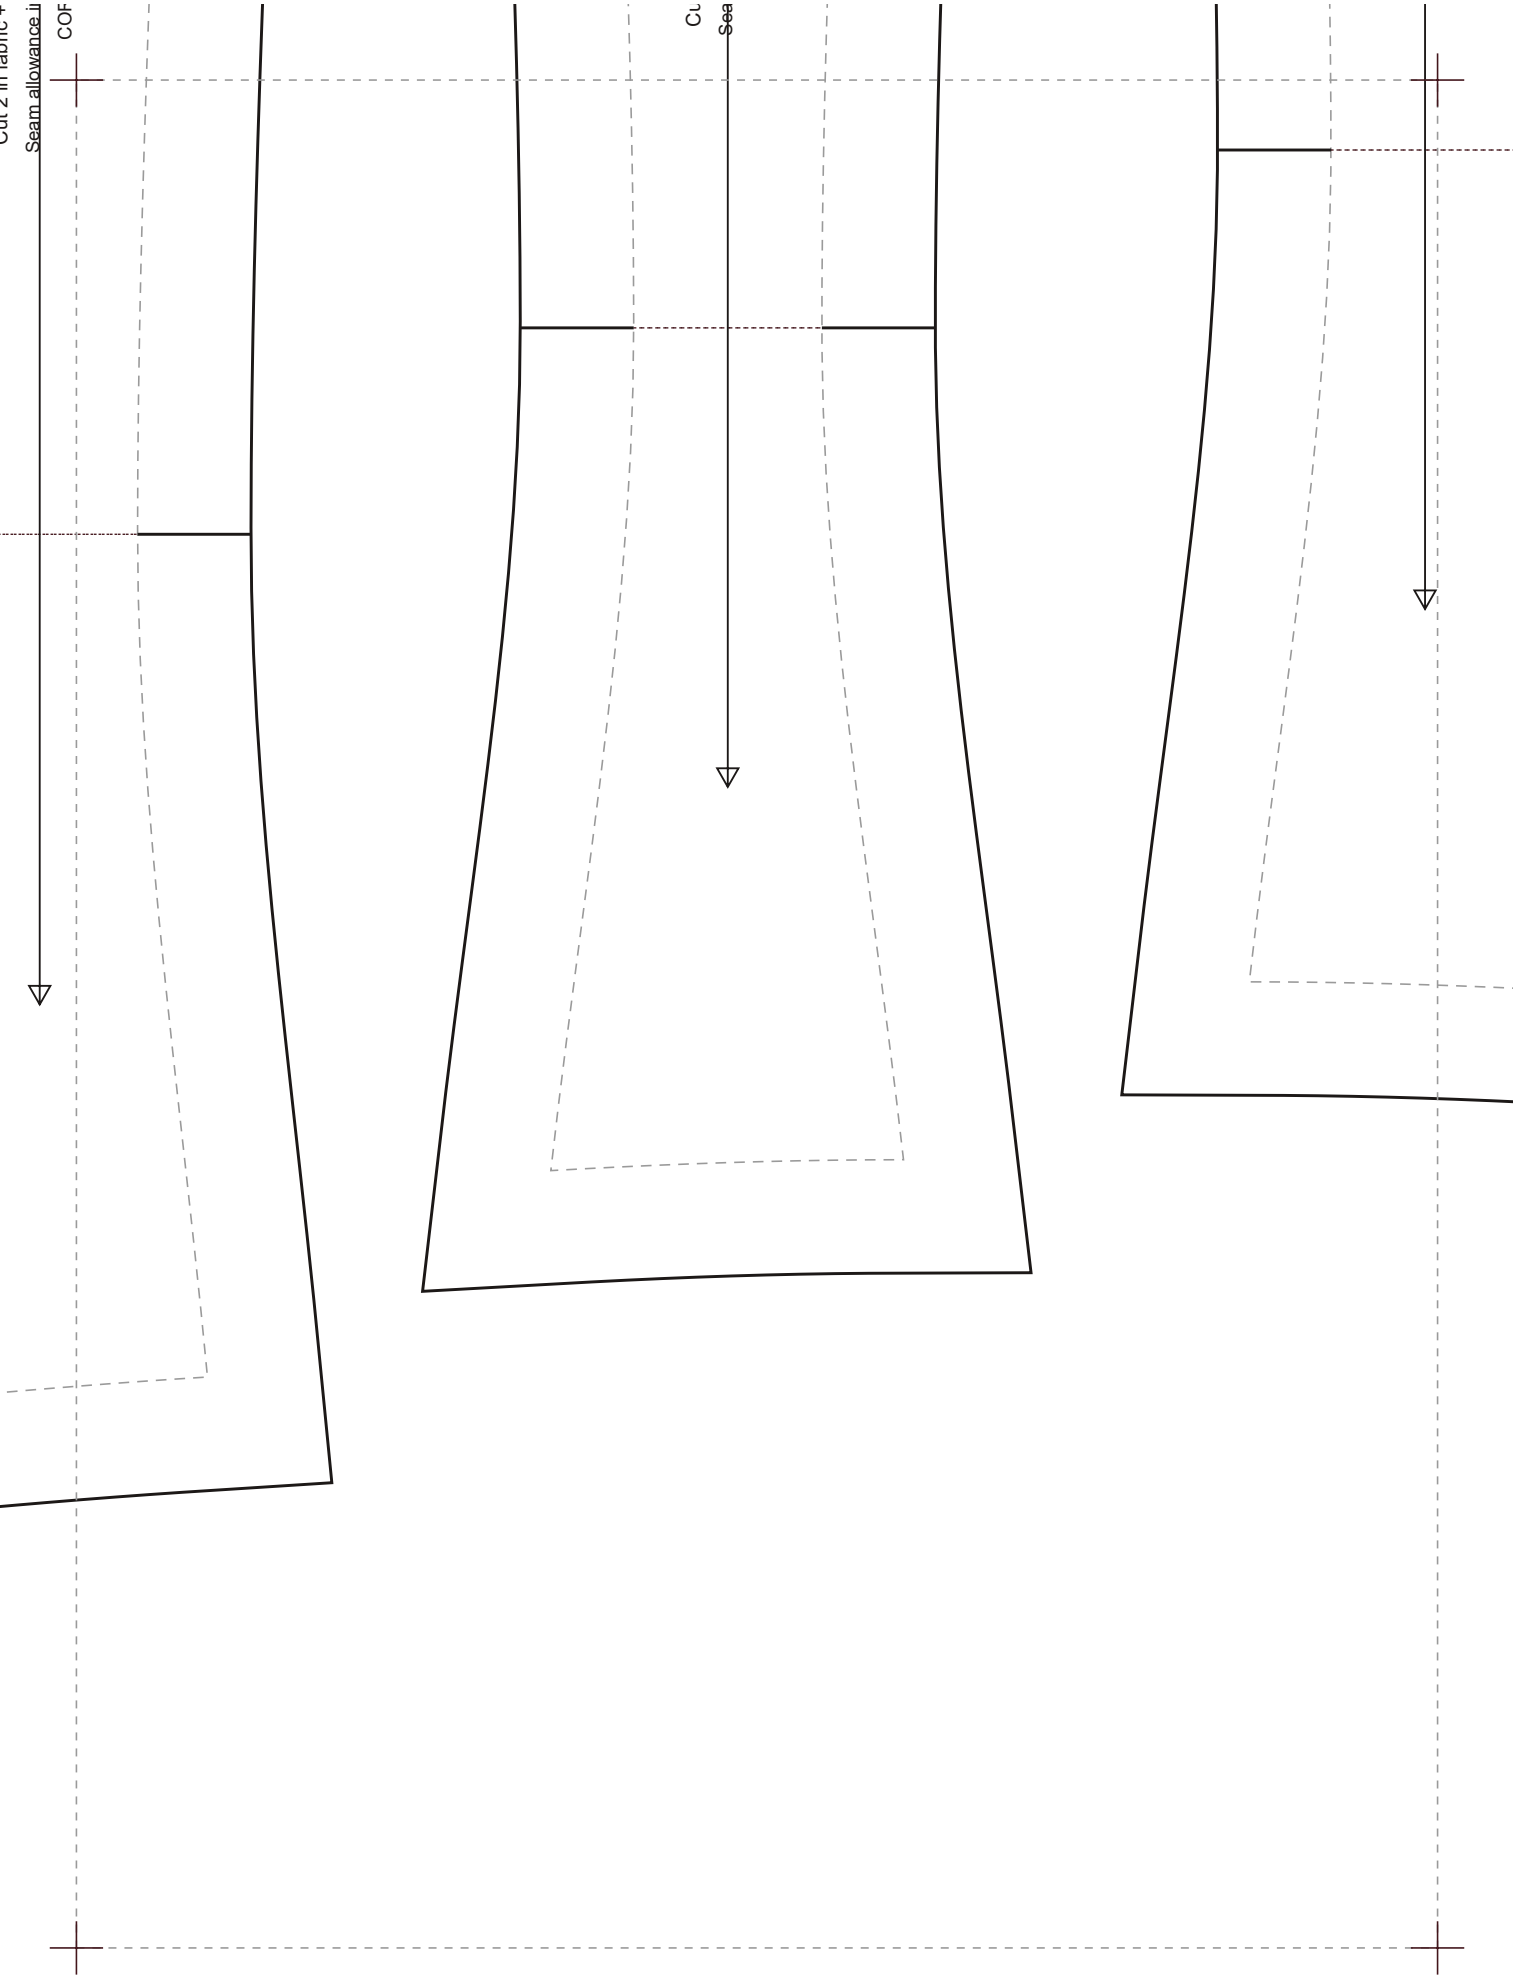


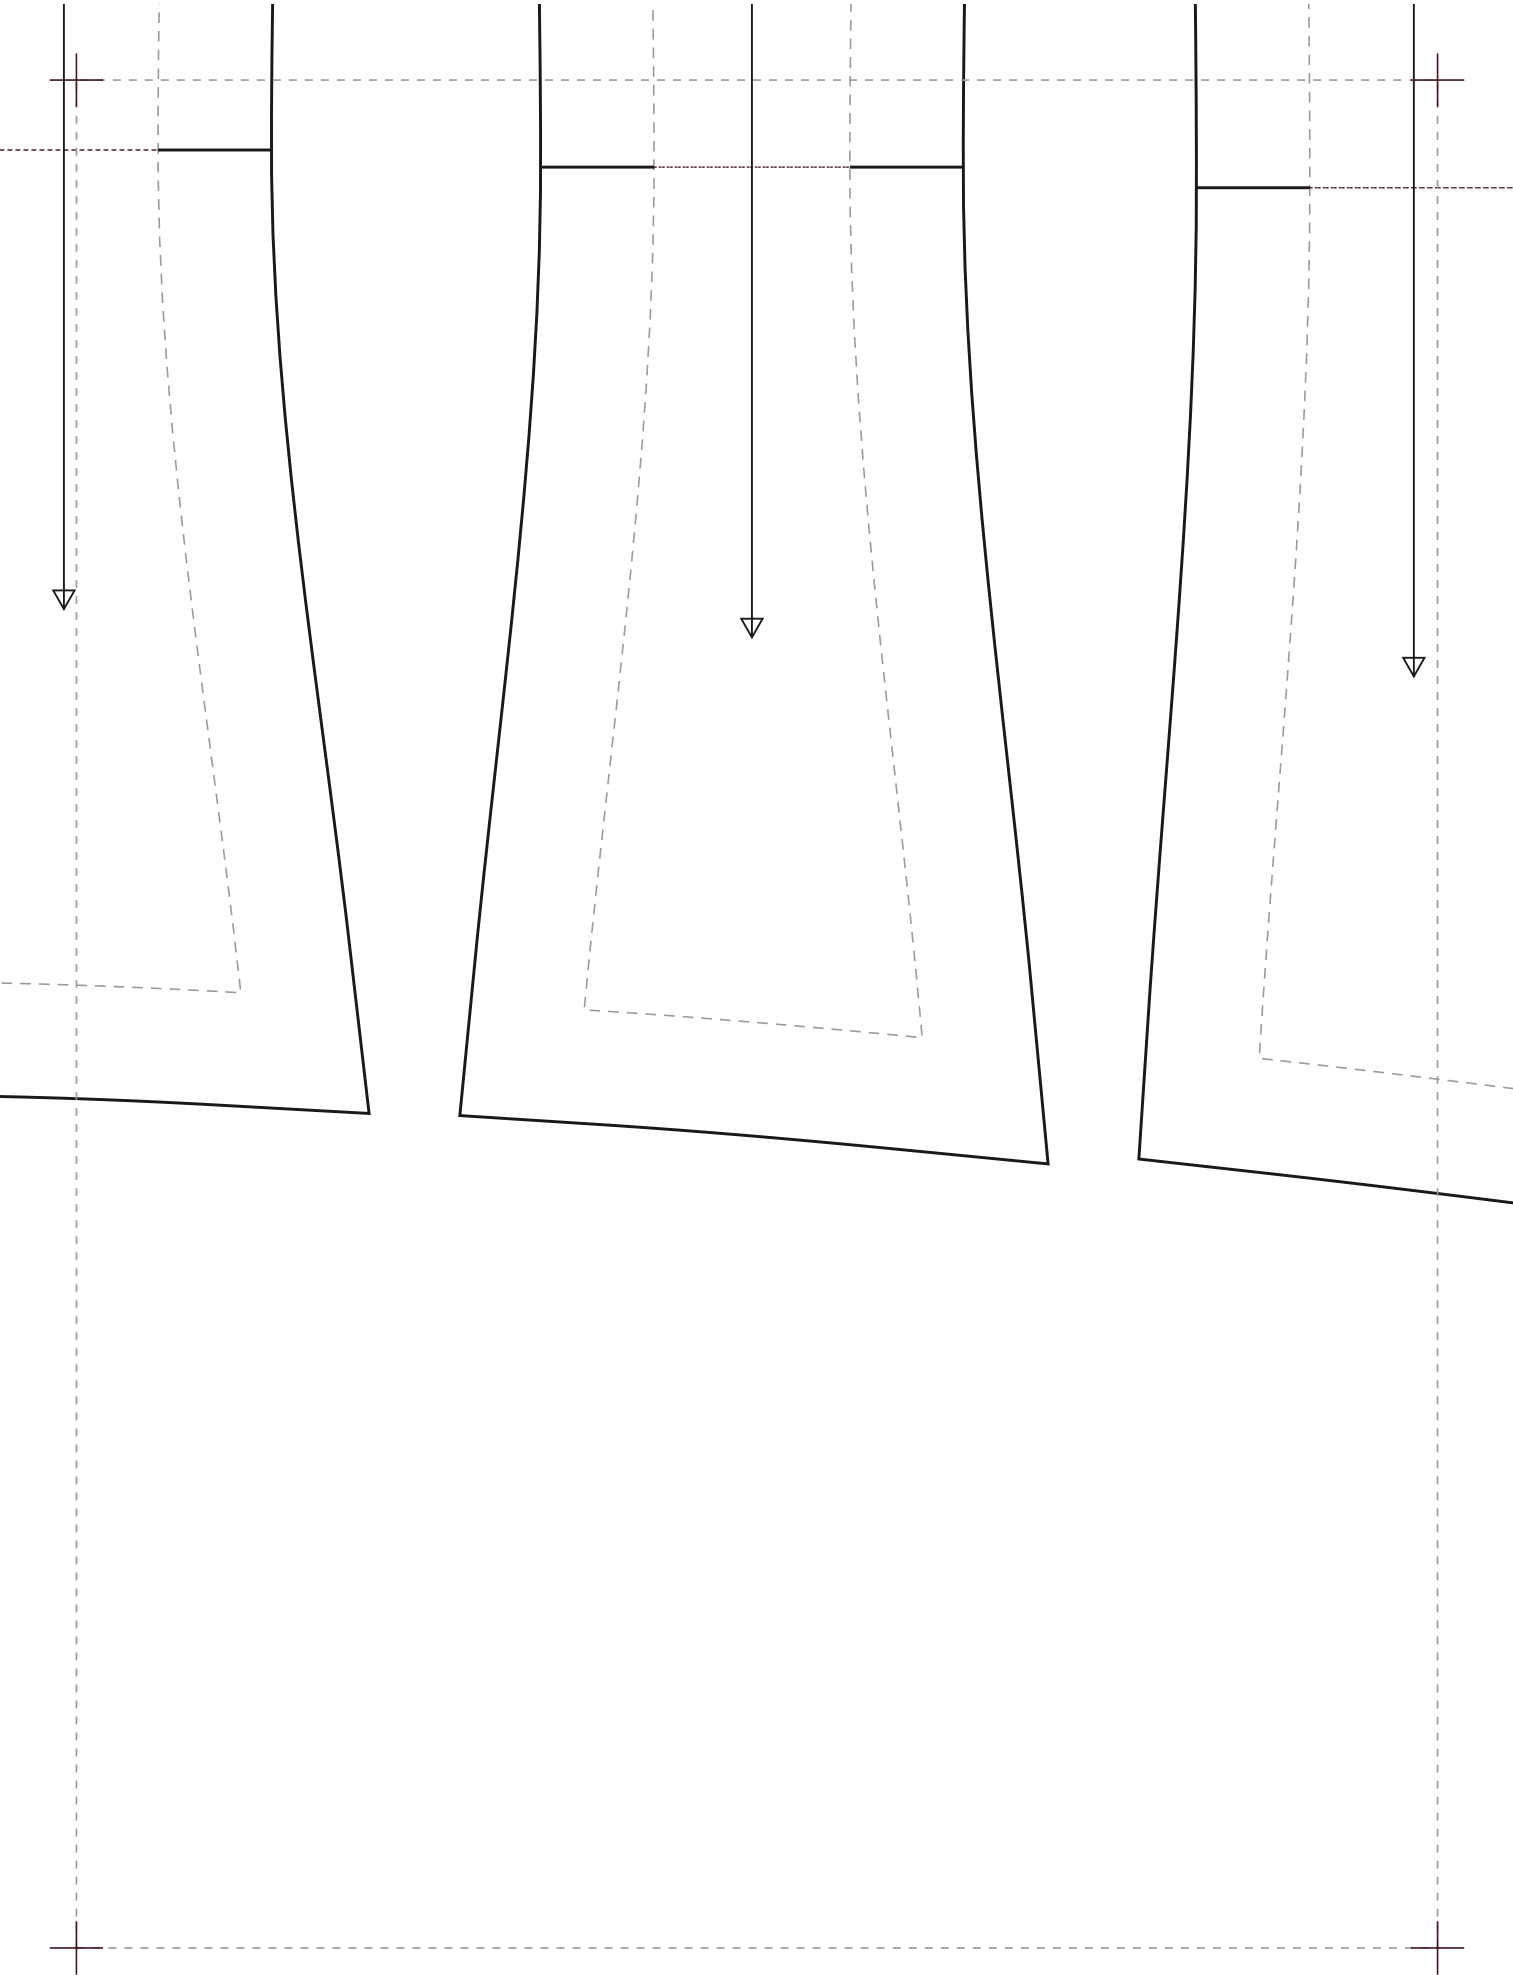

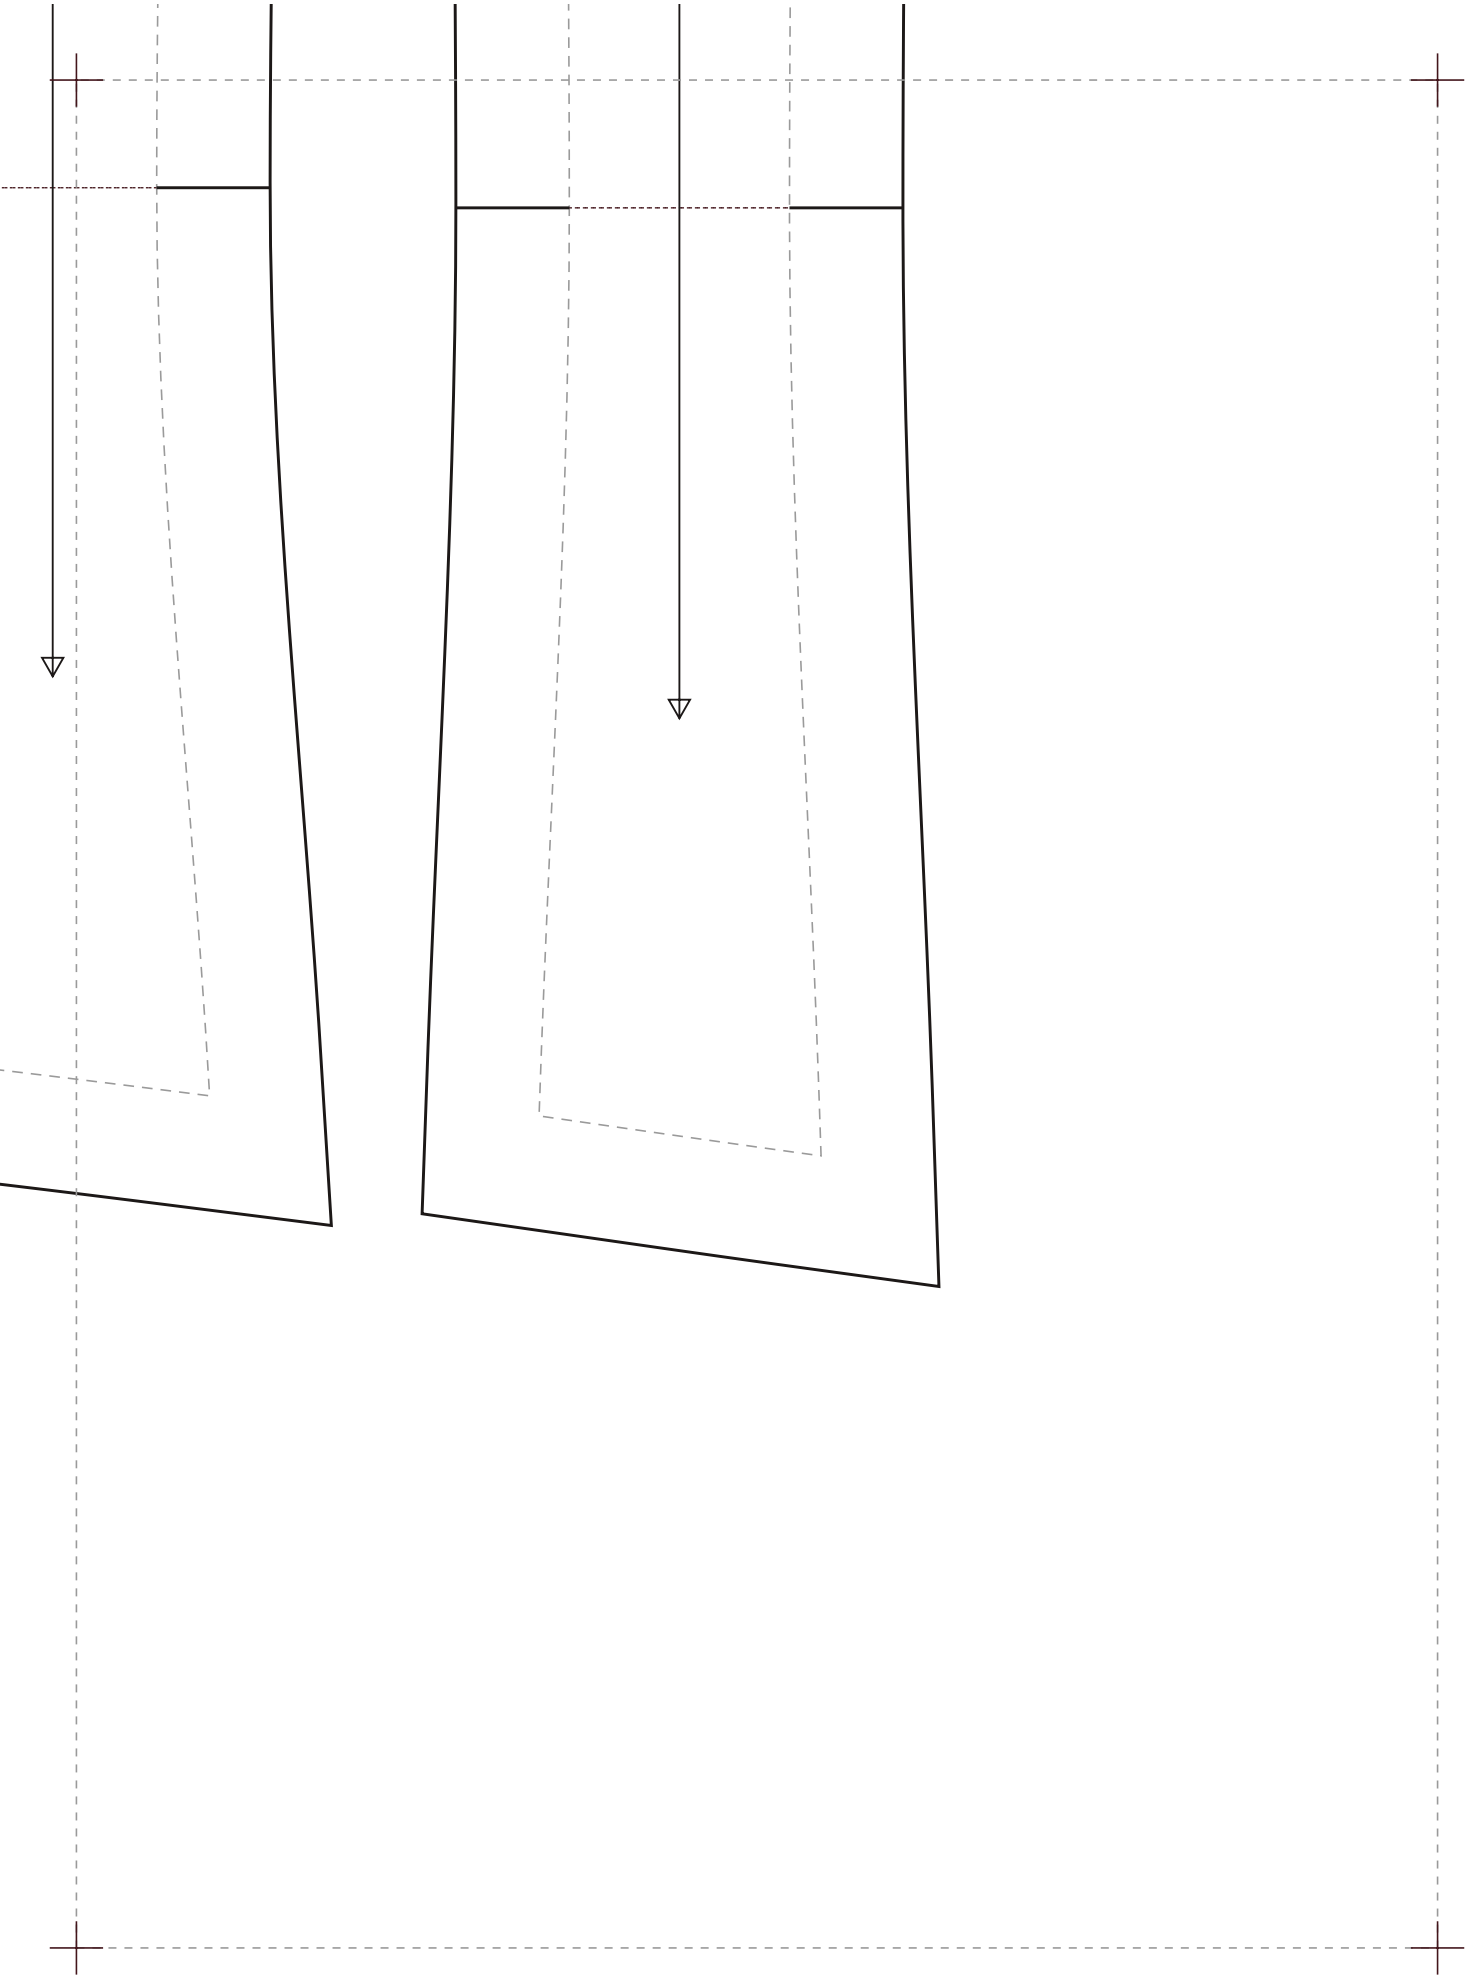



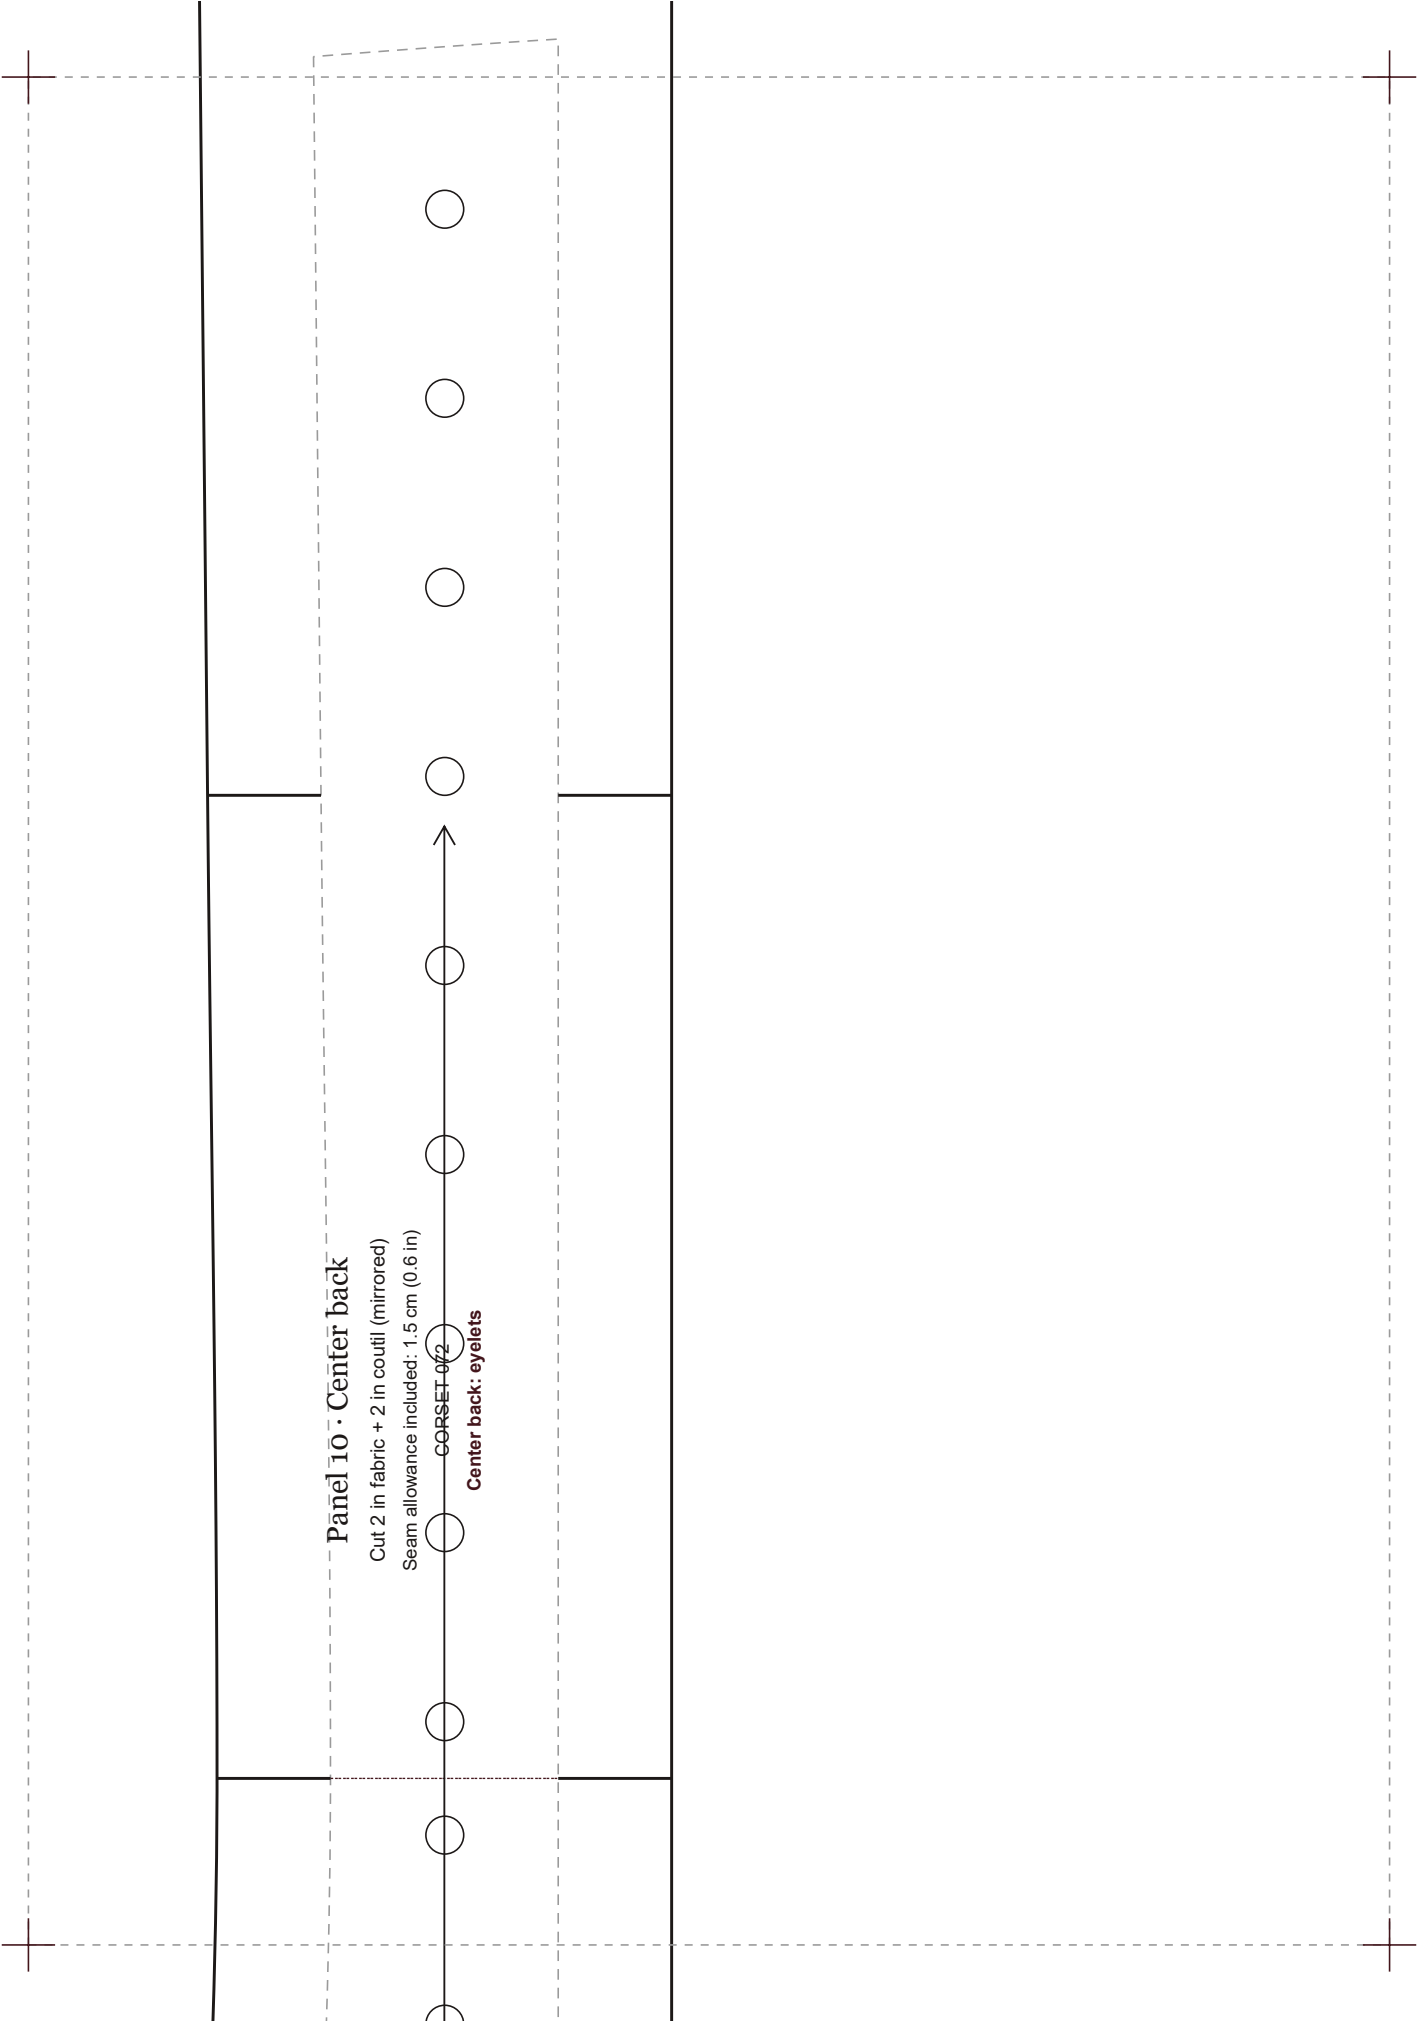












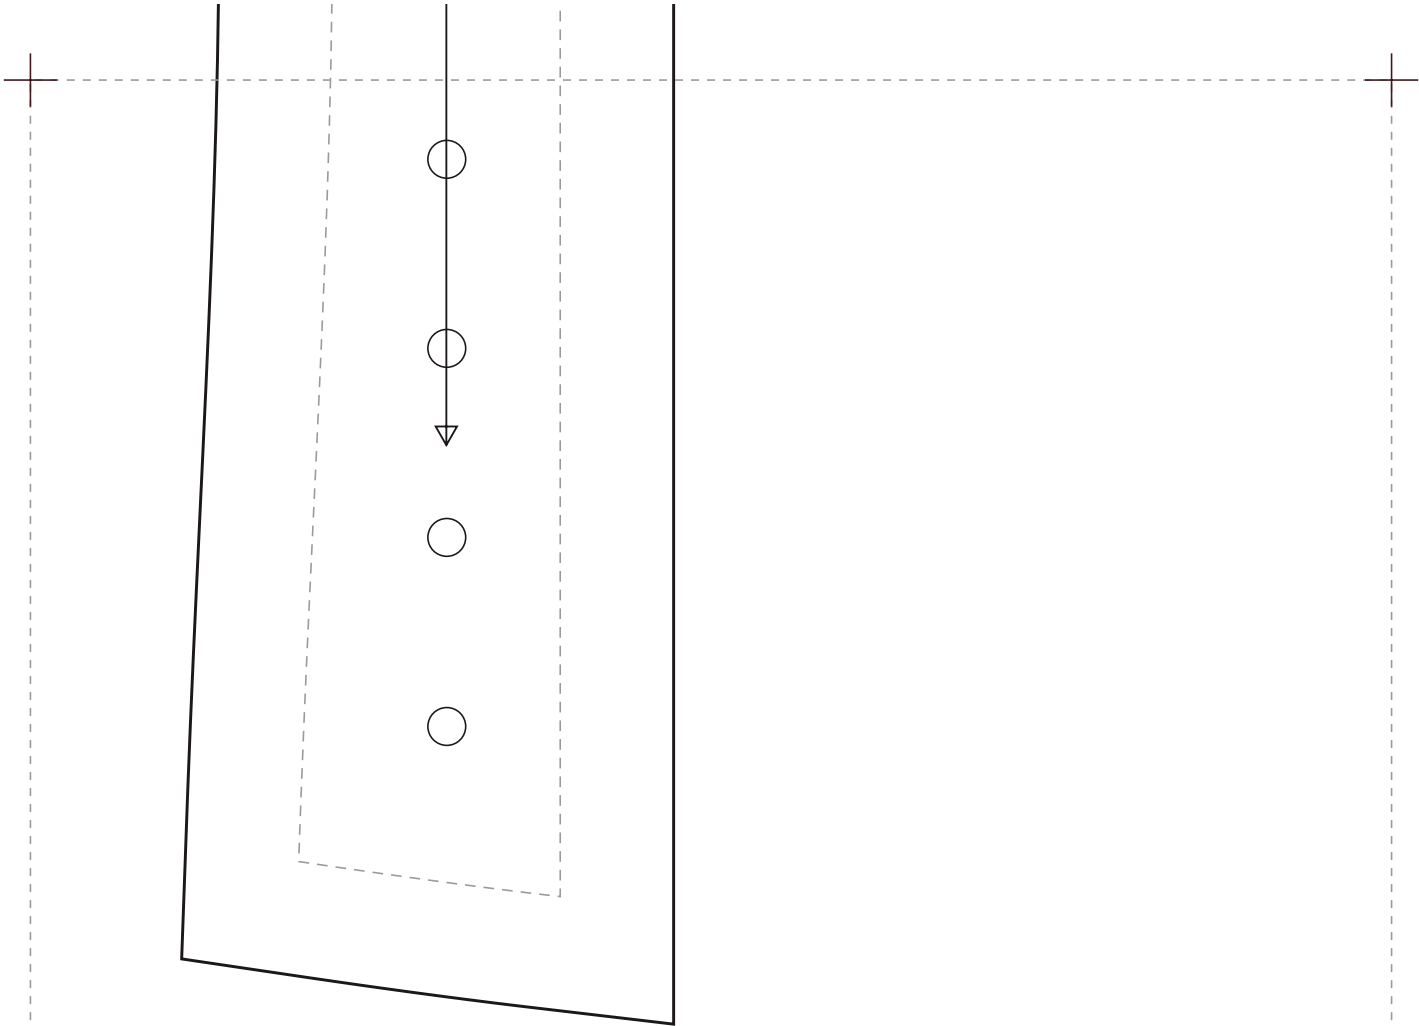

CORSET 072 · Straight-Neckline Overbust · 10 Panels · Front Lacing · scale 1:1 · 95.9 × 88.6 cm (37.8 × 34.9 in)

3 × 34.9 in)





