


Balconette Overbust · 8 Panels · Pointed Edge

A balconette overbust with a low, curved neckline that lifts the bust.

TECHNICAL DRAWING (from the same draft)

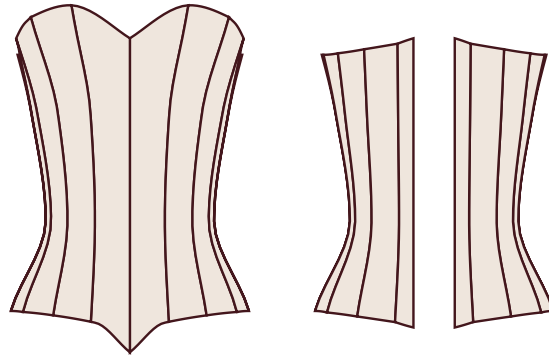

BODY MEASUREMENTS FOR THIS PATTERN

Bust (body)	92 cm (36.2 in)
Underbust (body)	78 cm (30.7 in)
Waist (body)	70 cm (27.6 in)
High hip, 12 cm (4.7 in) below waist	92 cm (36.2 in)
Hip, 20 cm (7.9 in) below waist	98 cm (38.6 in)
Waist reduction	6 cm (2.4 in)
Finished waist (without lacing gap)	64 cm (25.2 in)
Lacing gap at the back	5 cm (2.0 in)
Center front length	38 cm (15.0 in)
Center back length	35 cm (13.8 in)

PATTERN PIECES

- Panel 1 · Center front — 2 fabric + 2 coutil (mirrored)
- Panel 2 · Front — 2 fabric + 2 coutil (mirrored)
- Panel 3 · Front — 2 fabric + 2 coutil (mirrored)
- Panel 4 · Front — 2 fabric + 2 coutil (mirrored)
- Panel 5 · Back — 2 fabric + 2 coutil (mirrored)
- Panel 6 · Back — 2 fabric + 2 coutil (mirrored)
- Panel 7 · Back — 2 fabric + 2 coutil (mirrored)
- Panel 8 · Center back — 2 fabric + 2 coutil (mirrored)

ORDER OF CONSTRUCTION

1. Cut the 8 panels in fabric and in coutil, mirrored. Mark the waist and the notches.
2. Make a toile in canvas first and try it on: the fit is corrected at the seams, never at the center.
3. Join the panels in order (1 to 2, 2 to 3...), matching the waist notches. Press the seams open.
4. On overbust styles, also match the underbust notch and fit the toile with the bra you will wear underneath (or with nothing).
5. Insert the busk at the center front and stitch the waist tape inside, from side to side.
6. Sew the boning channels over each seam (1.2 cm / ½ in) and on both sides of the eyelets.
7. Insert the bones (1 cm / ⅜ in shorter than the channel), bind the top and bottom edges and set the marked eyelets.

Pattern drafted with classic pattern-making formulas from the measurements above (one size). Every body is different: always make a sample in scrap fabric before cutting your final fabric, and adjust at the seams. Circles on the pattern: eyelets.

MATERIALS

Outer fabric: 0.6 m (0.6 yd) (satin, brocade, jacquard or gabardine). Coutil or strong canvas: the same.
 Busk: 30 cm (12 in). Spiral steel bones, 7 mm (¼ in): 18.
 Metal eyelets, 5 mm with washers: 26. Flat lacing cord: 6 m (6.6 yd). Bias binding for the edges: 2.5 m (2.7 yd).
 Waist tape (twill), 2.5 cm (1 in) wide: 70 cm (27.6 in).

HOW TO PRINT

A4: print at 100 % ("Actual size") with "Fit to page" turned off. Follow the assembly map.


Plotter: send the sheet at actual size as it is (the file is already at 1:1 scale).


Before cutting, measure the test square: 10 × 10 cm (3.94 × 3.94 in).

ASSEMBLY MAP


18 A4 sheets · 3 rows (A–C) × 6 columns (1–6).


1. Print every sheet at 100 % ("Actual size"). Measure the test square: 10 × 10 cm (3.94 × 3.94 in).
2. Trim each sheet along the gray dotted line at the top and on the left (not needed for row A or column 1).
3. Lay the trimmed sheet over its neighbor until the gray line and the cross marks match, then tape it down.
4. Assemble row by row (A1, A2, A3...), then join the rows together.

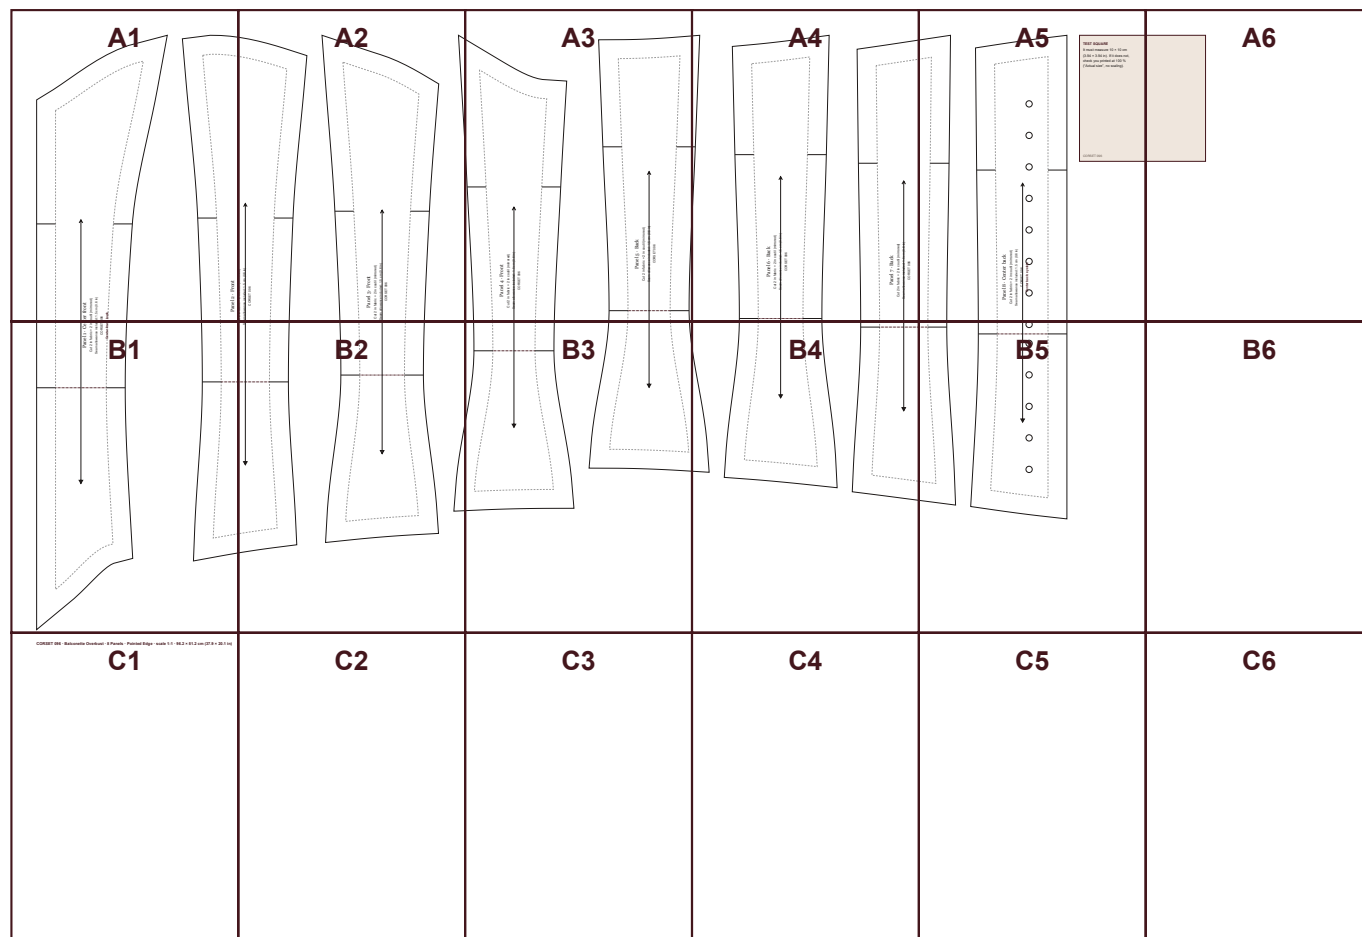

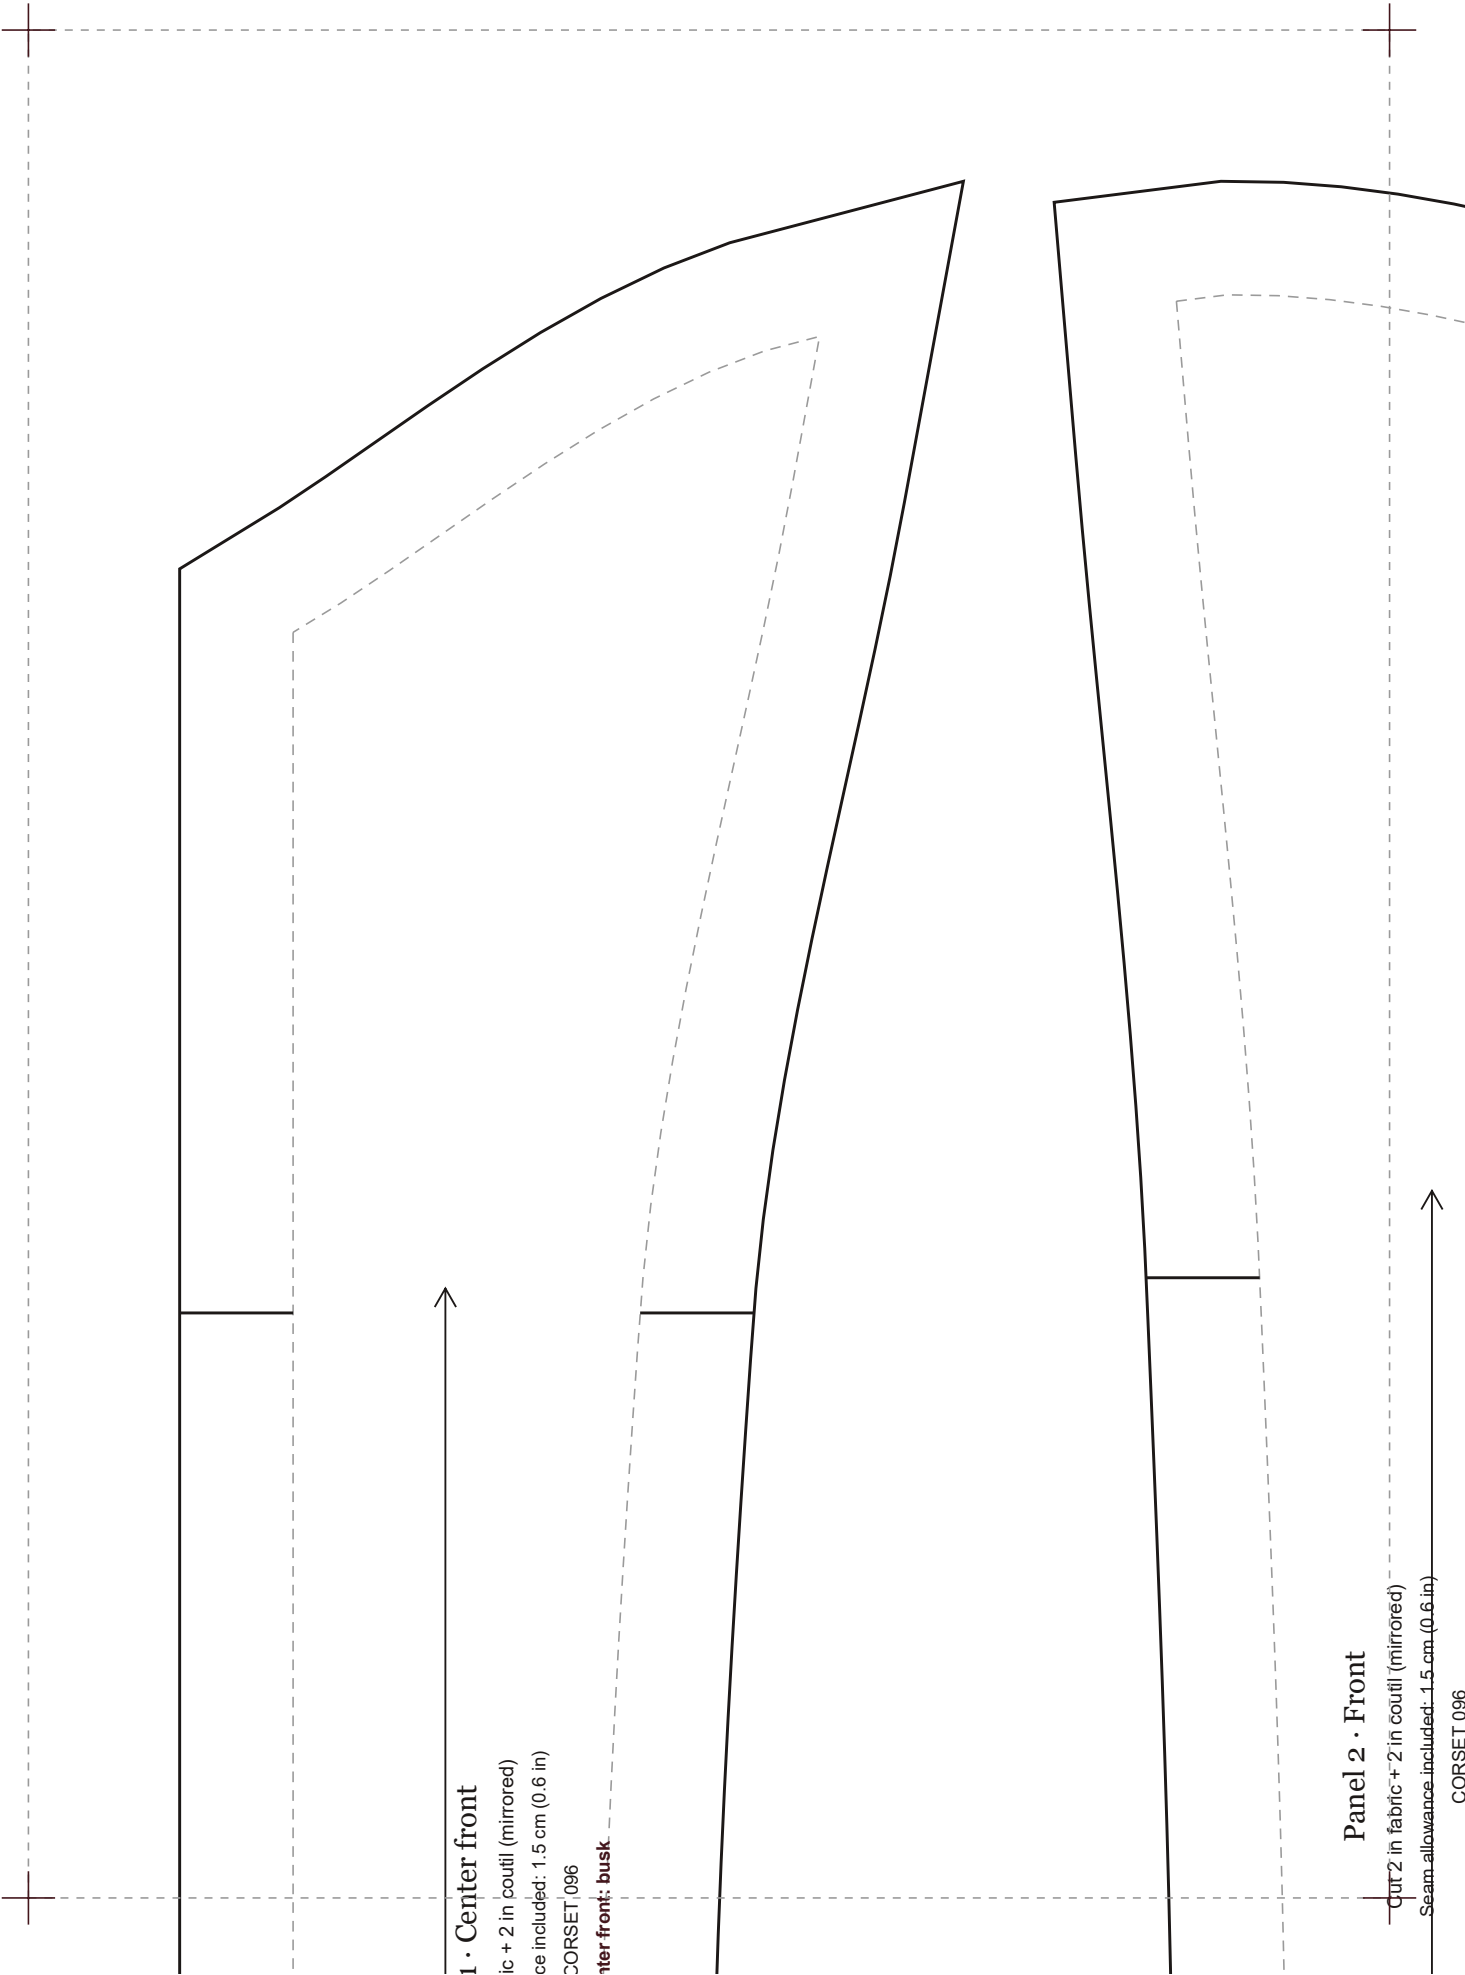



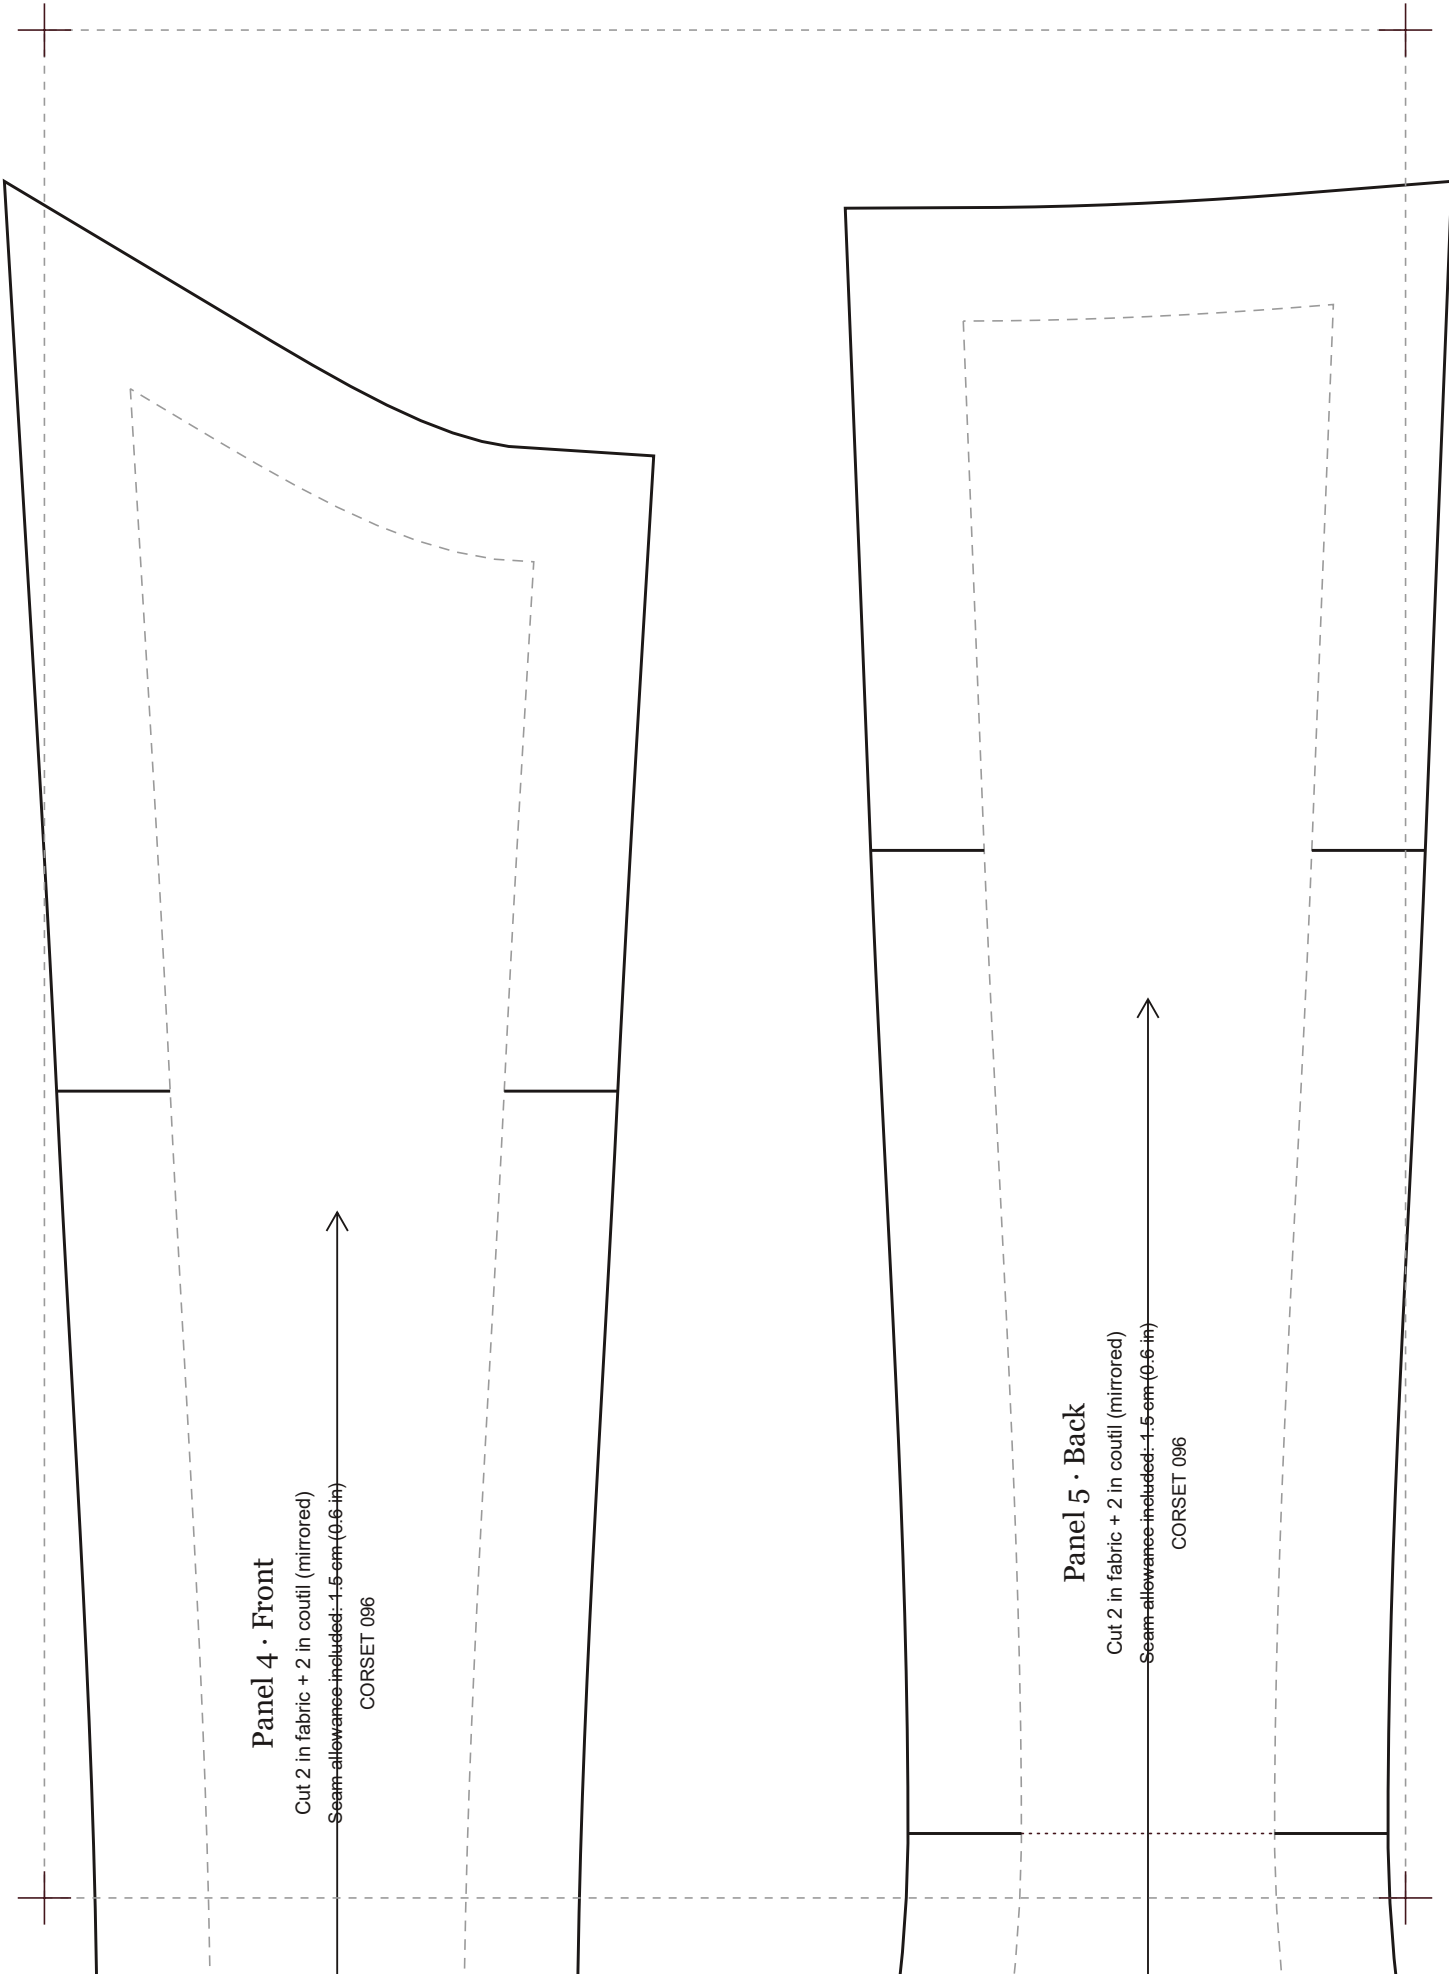

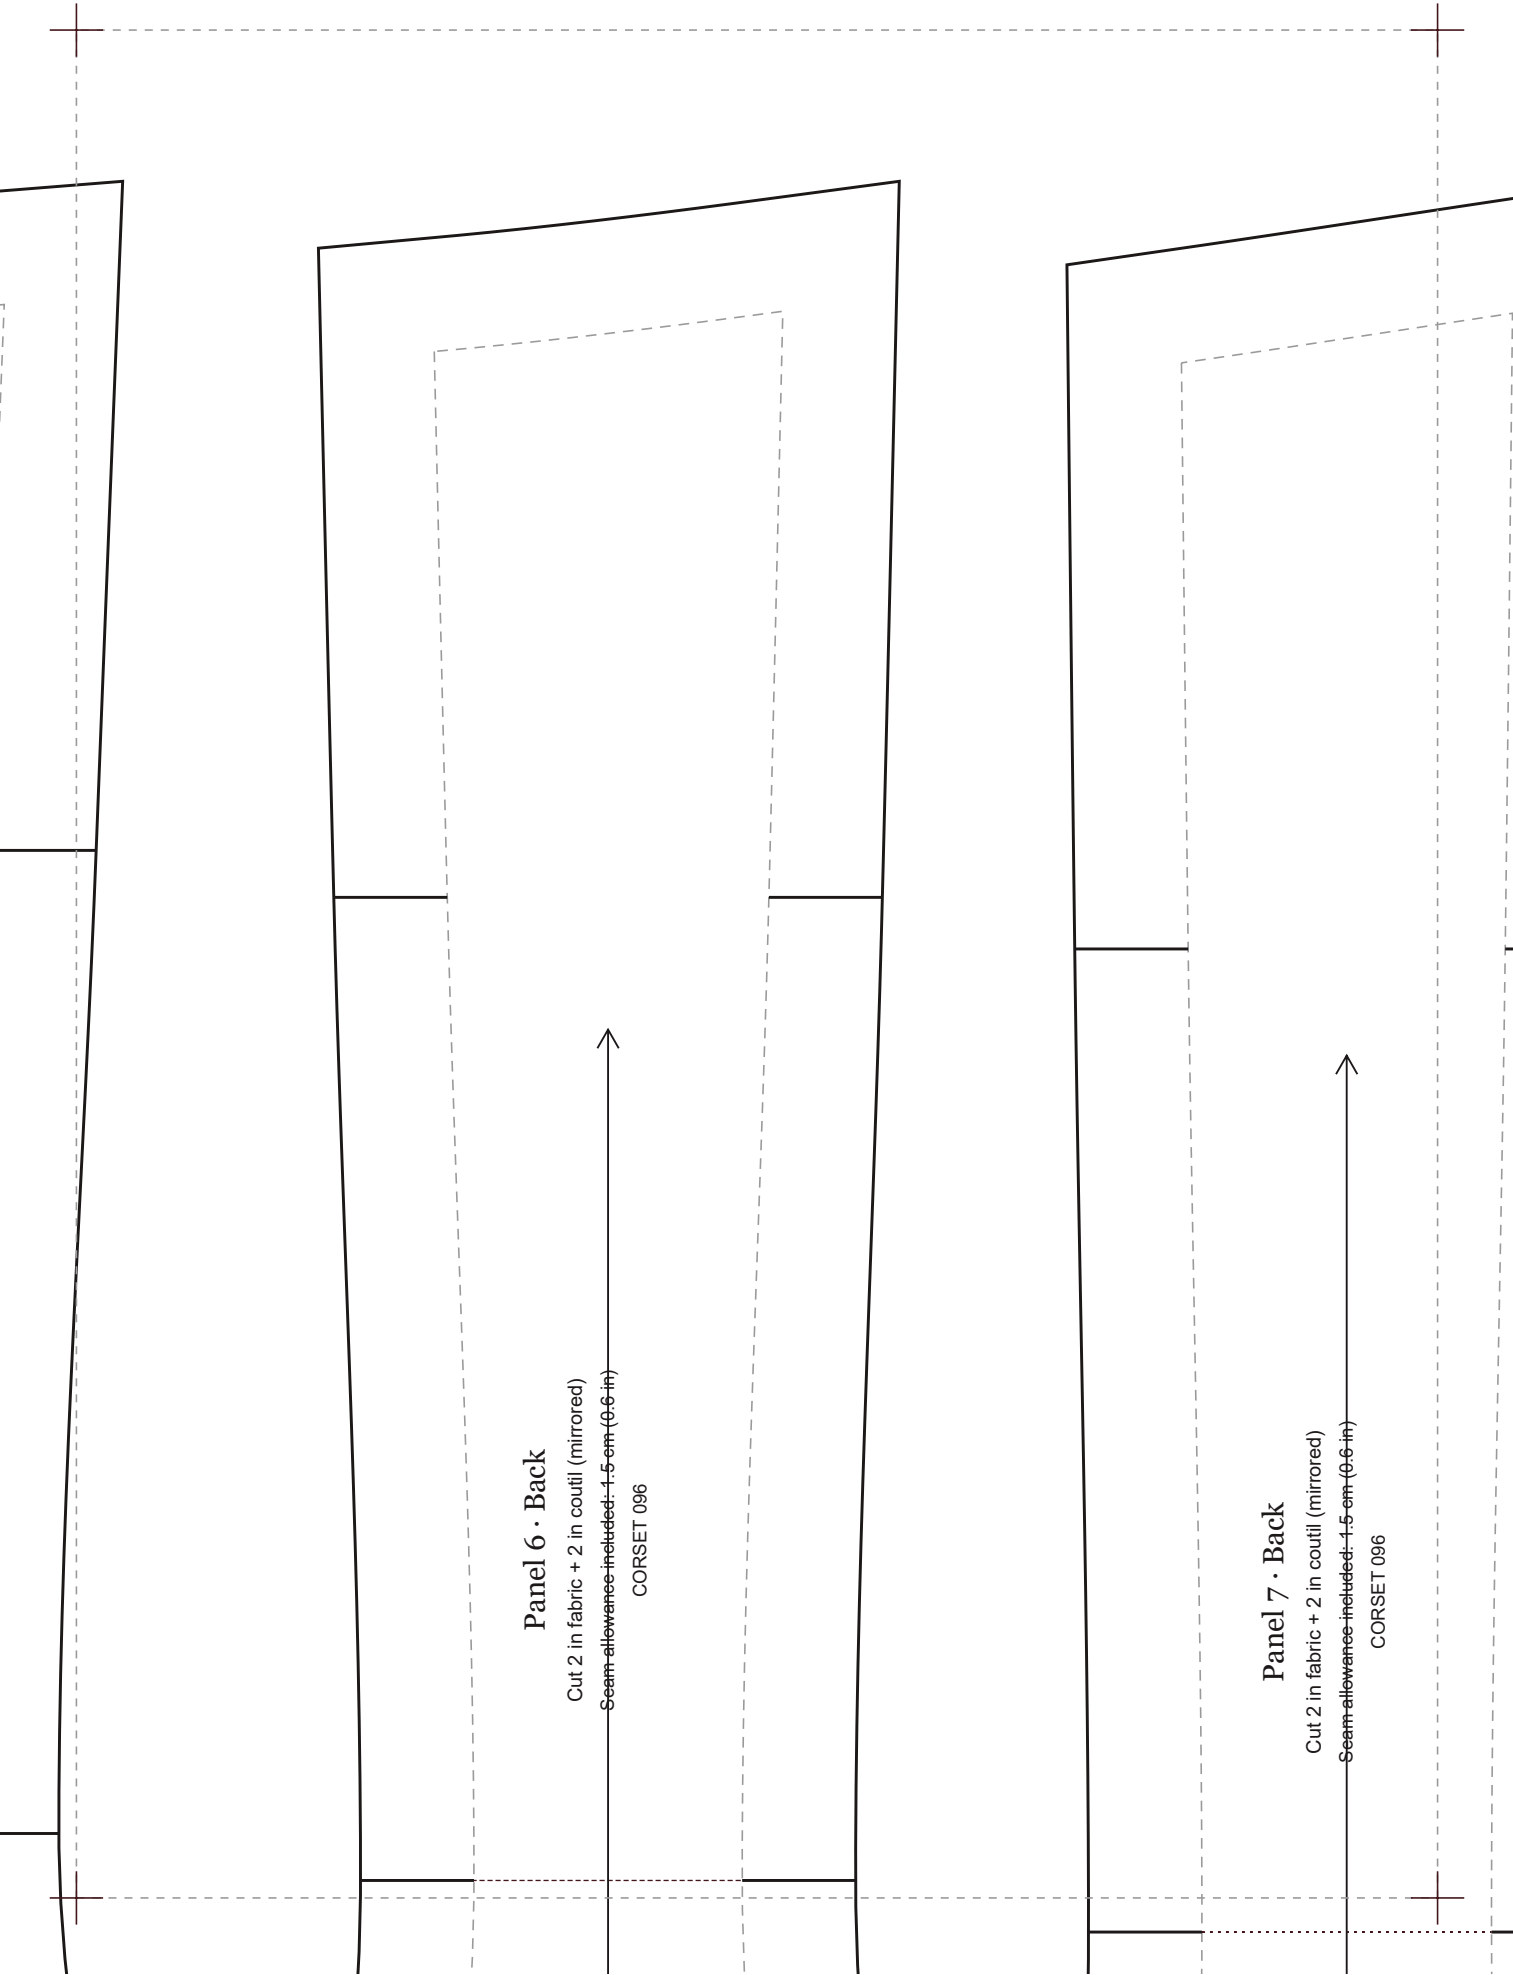

CORSET 096

Panel 8 · Center back

Cut 2 in fabric + 2 in coutil (mirrored)
Seam allowance included: 1.5 cm (0.6 in)


CORSET 096


Center back: eyelets

TEST SQUARE


It must measure 10 × 10 cm
(3.94 × 3.94 in). If it does not,
check you printed at 100 %
("Actual size", no scaling).


CORSET 096

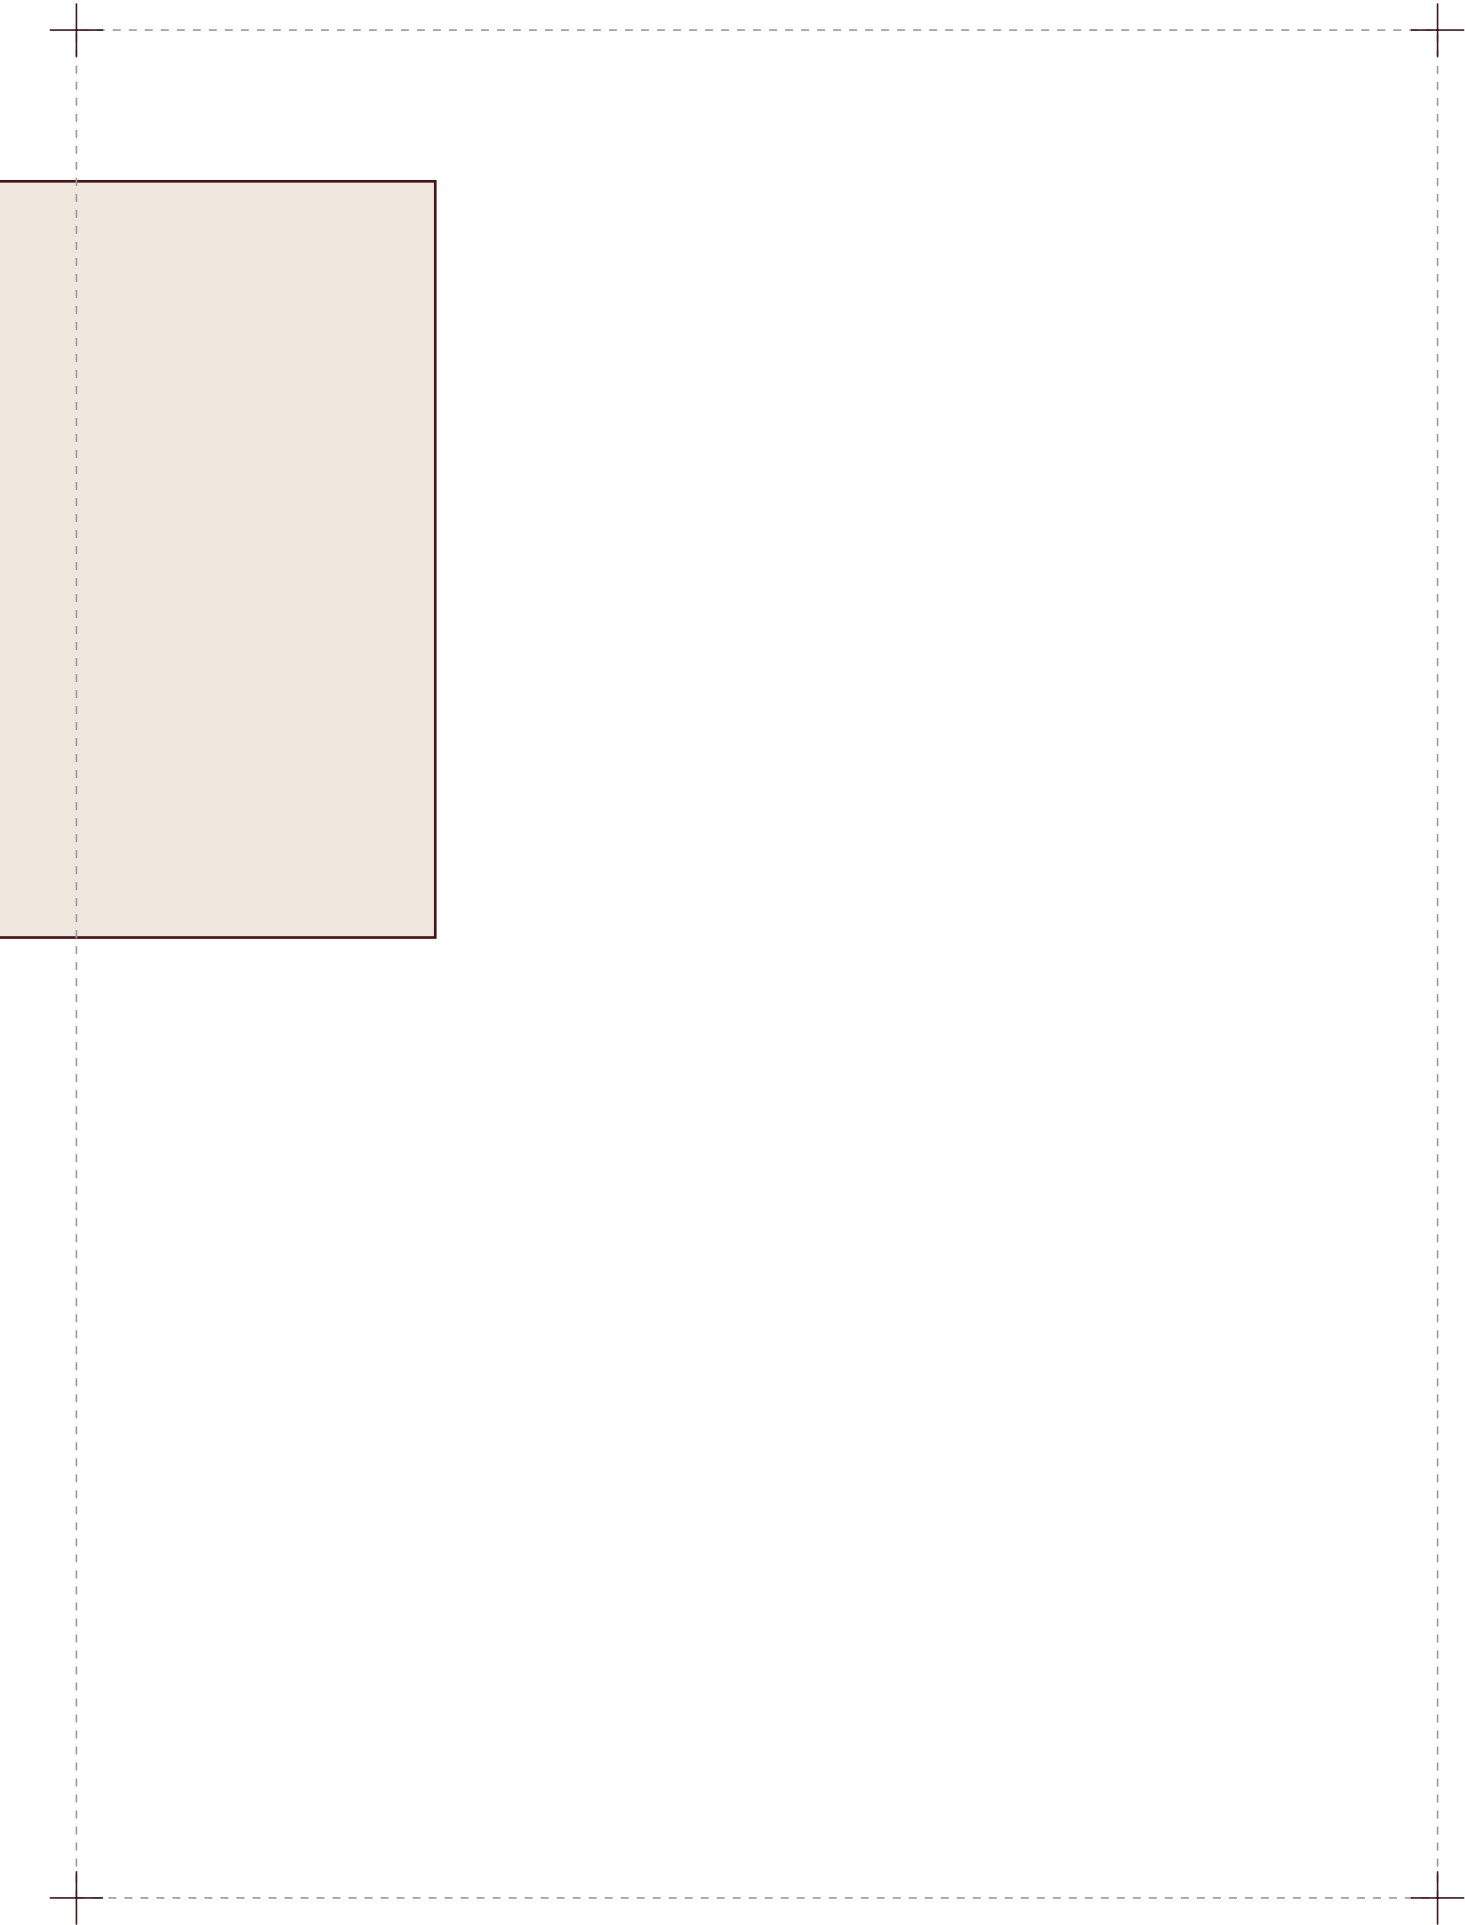


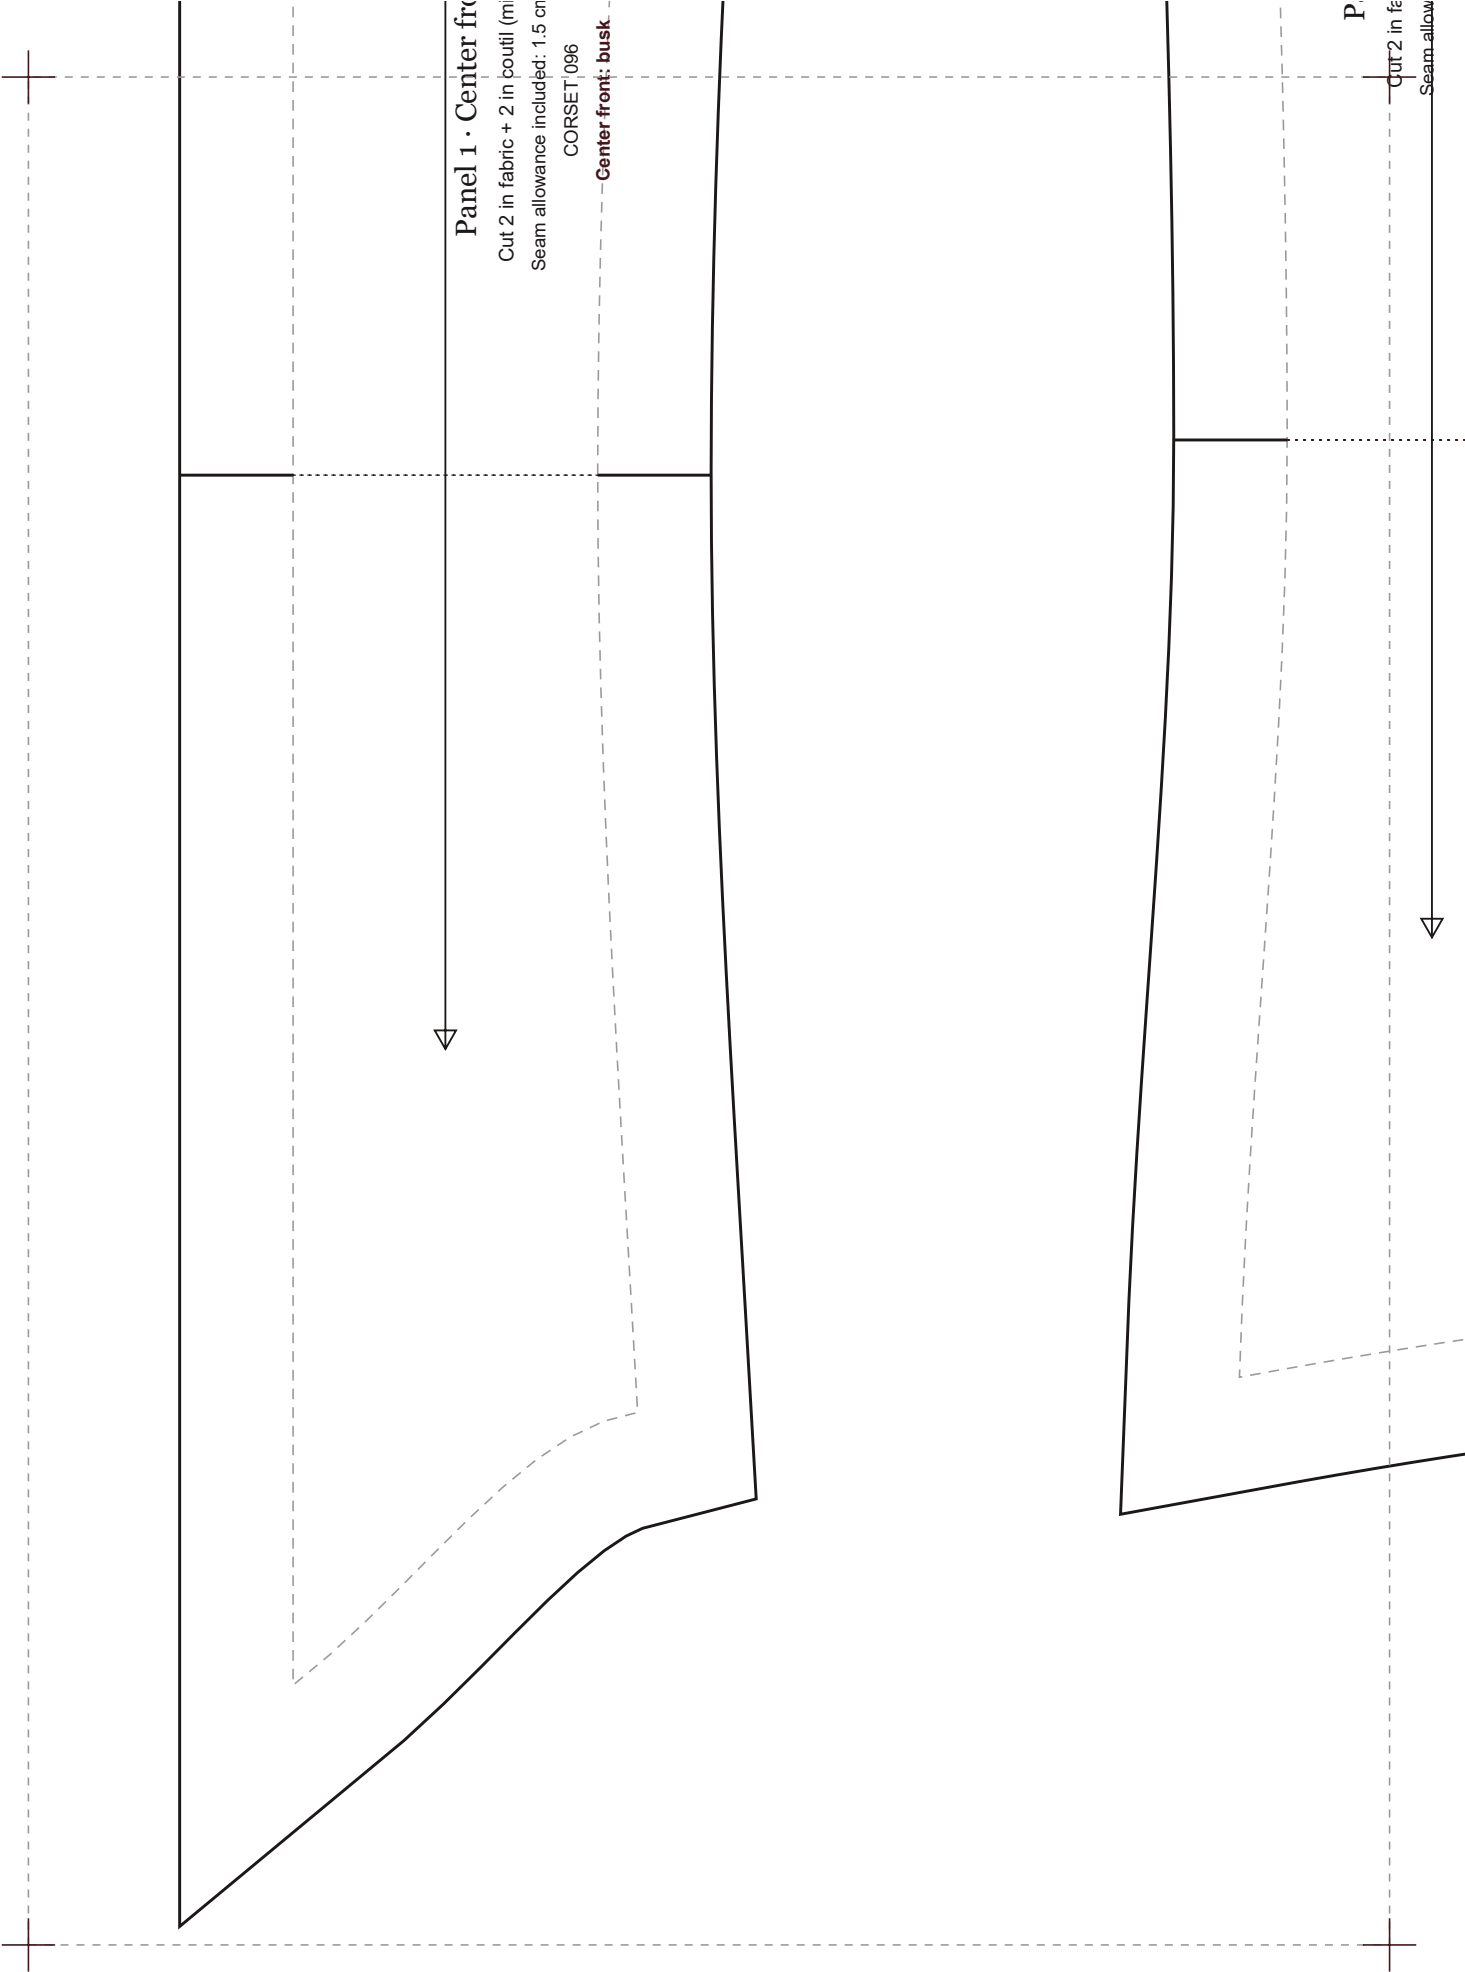


CORSET 096 · Balconette Overbust · 8 Panels · Pointed Edge · scale 1:1 · 96.2 × 51.2 cm (37.9 × 20.1 in)

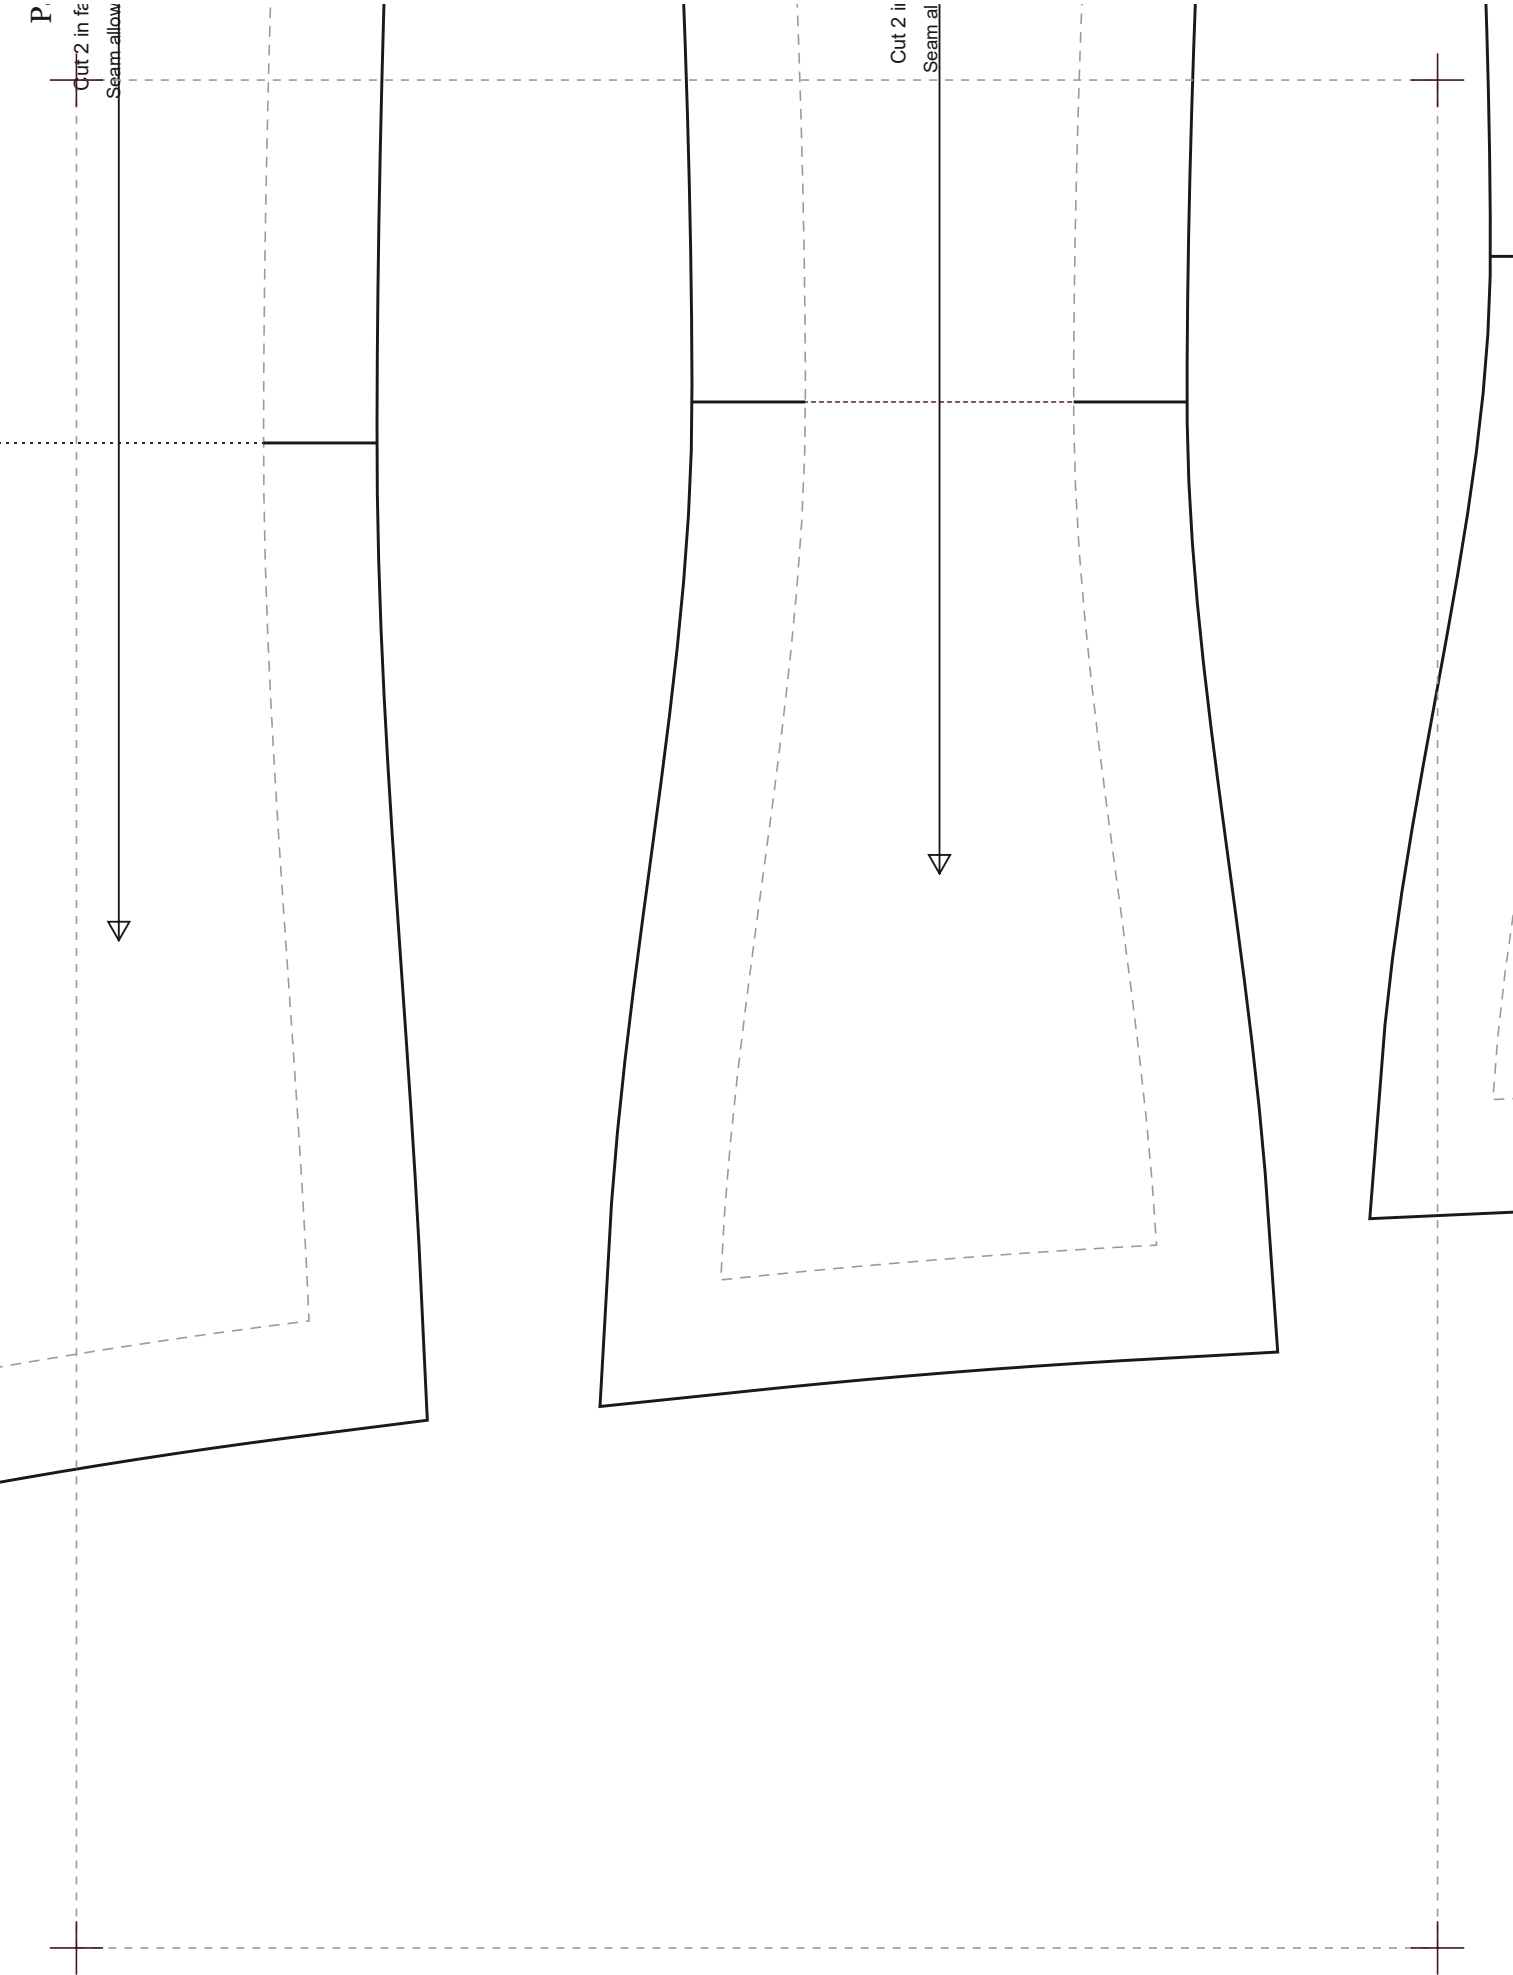

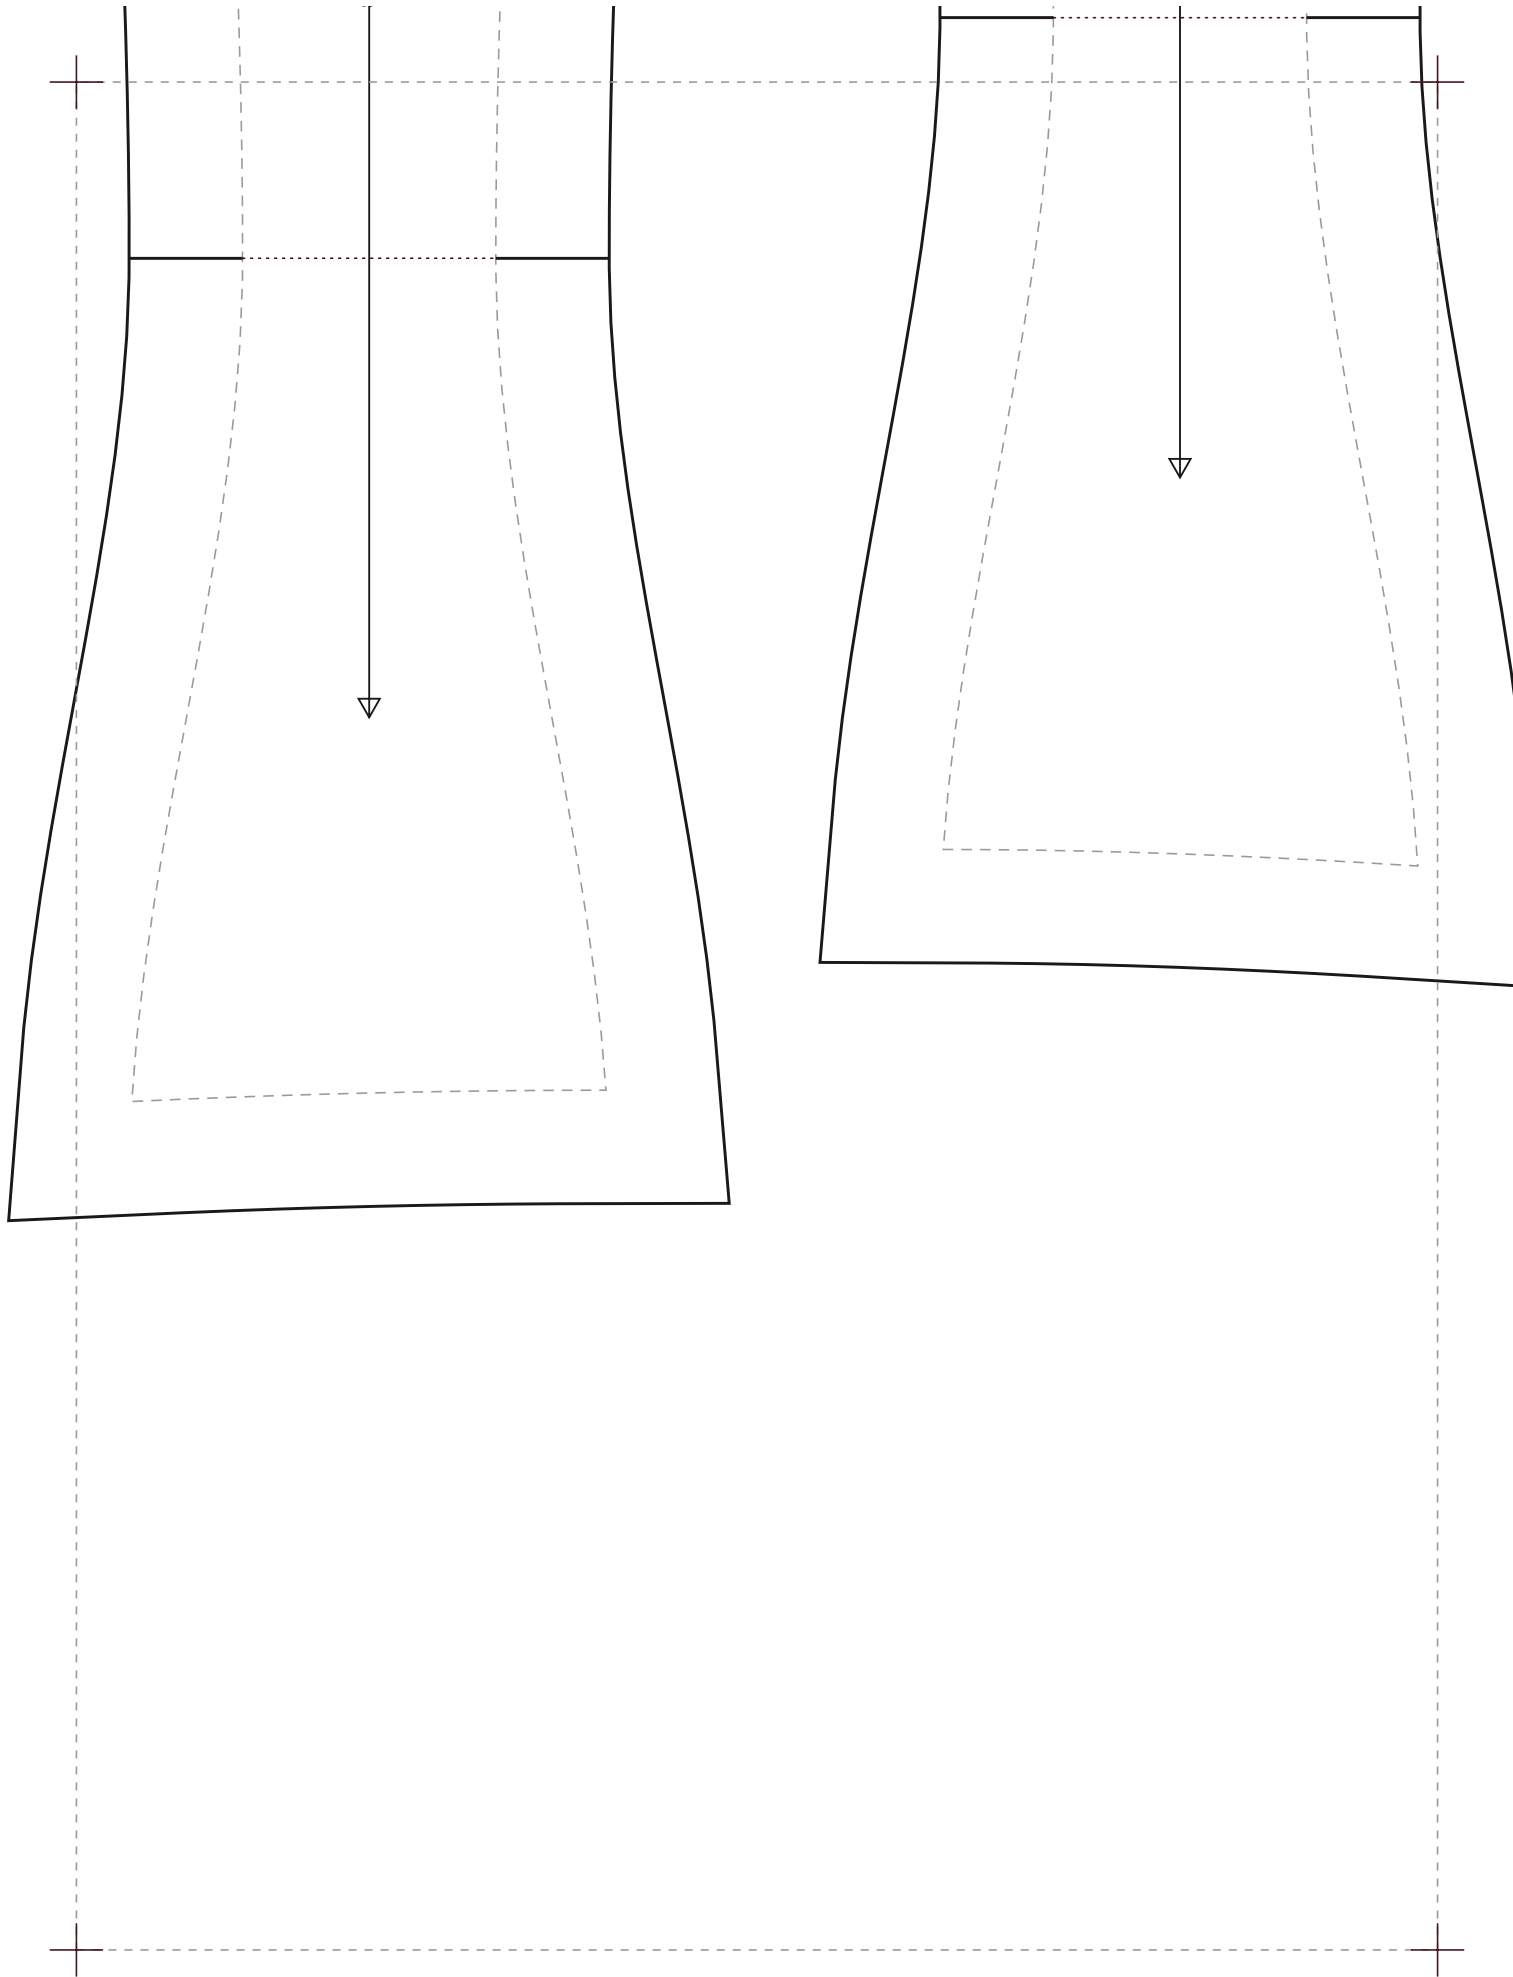

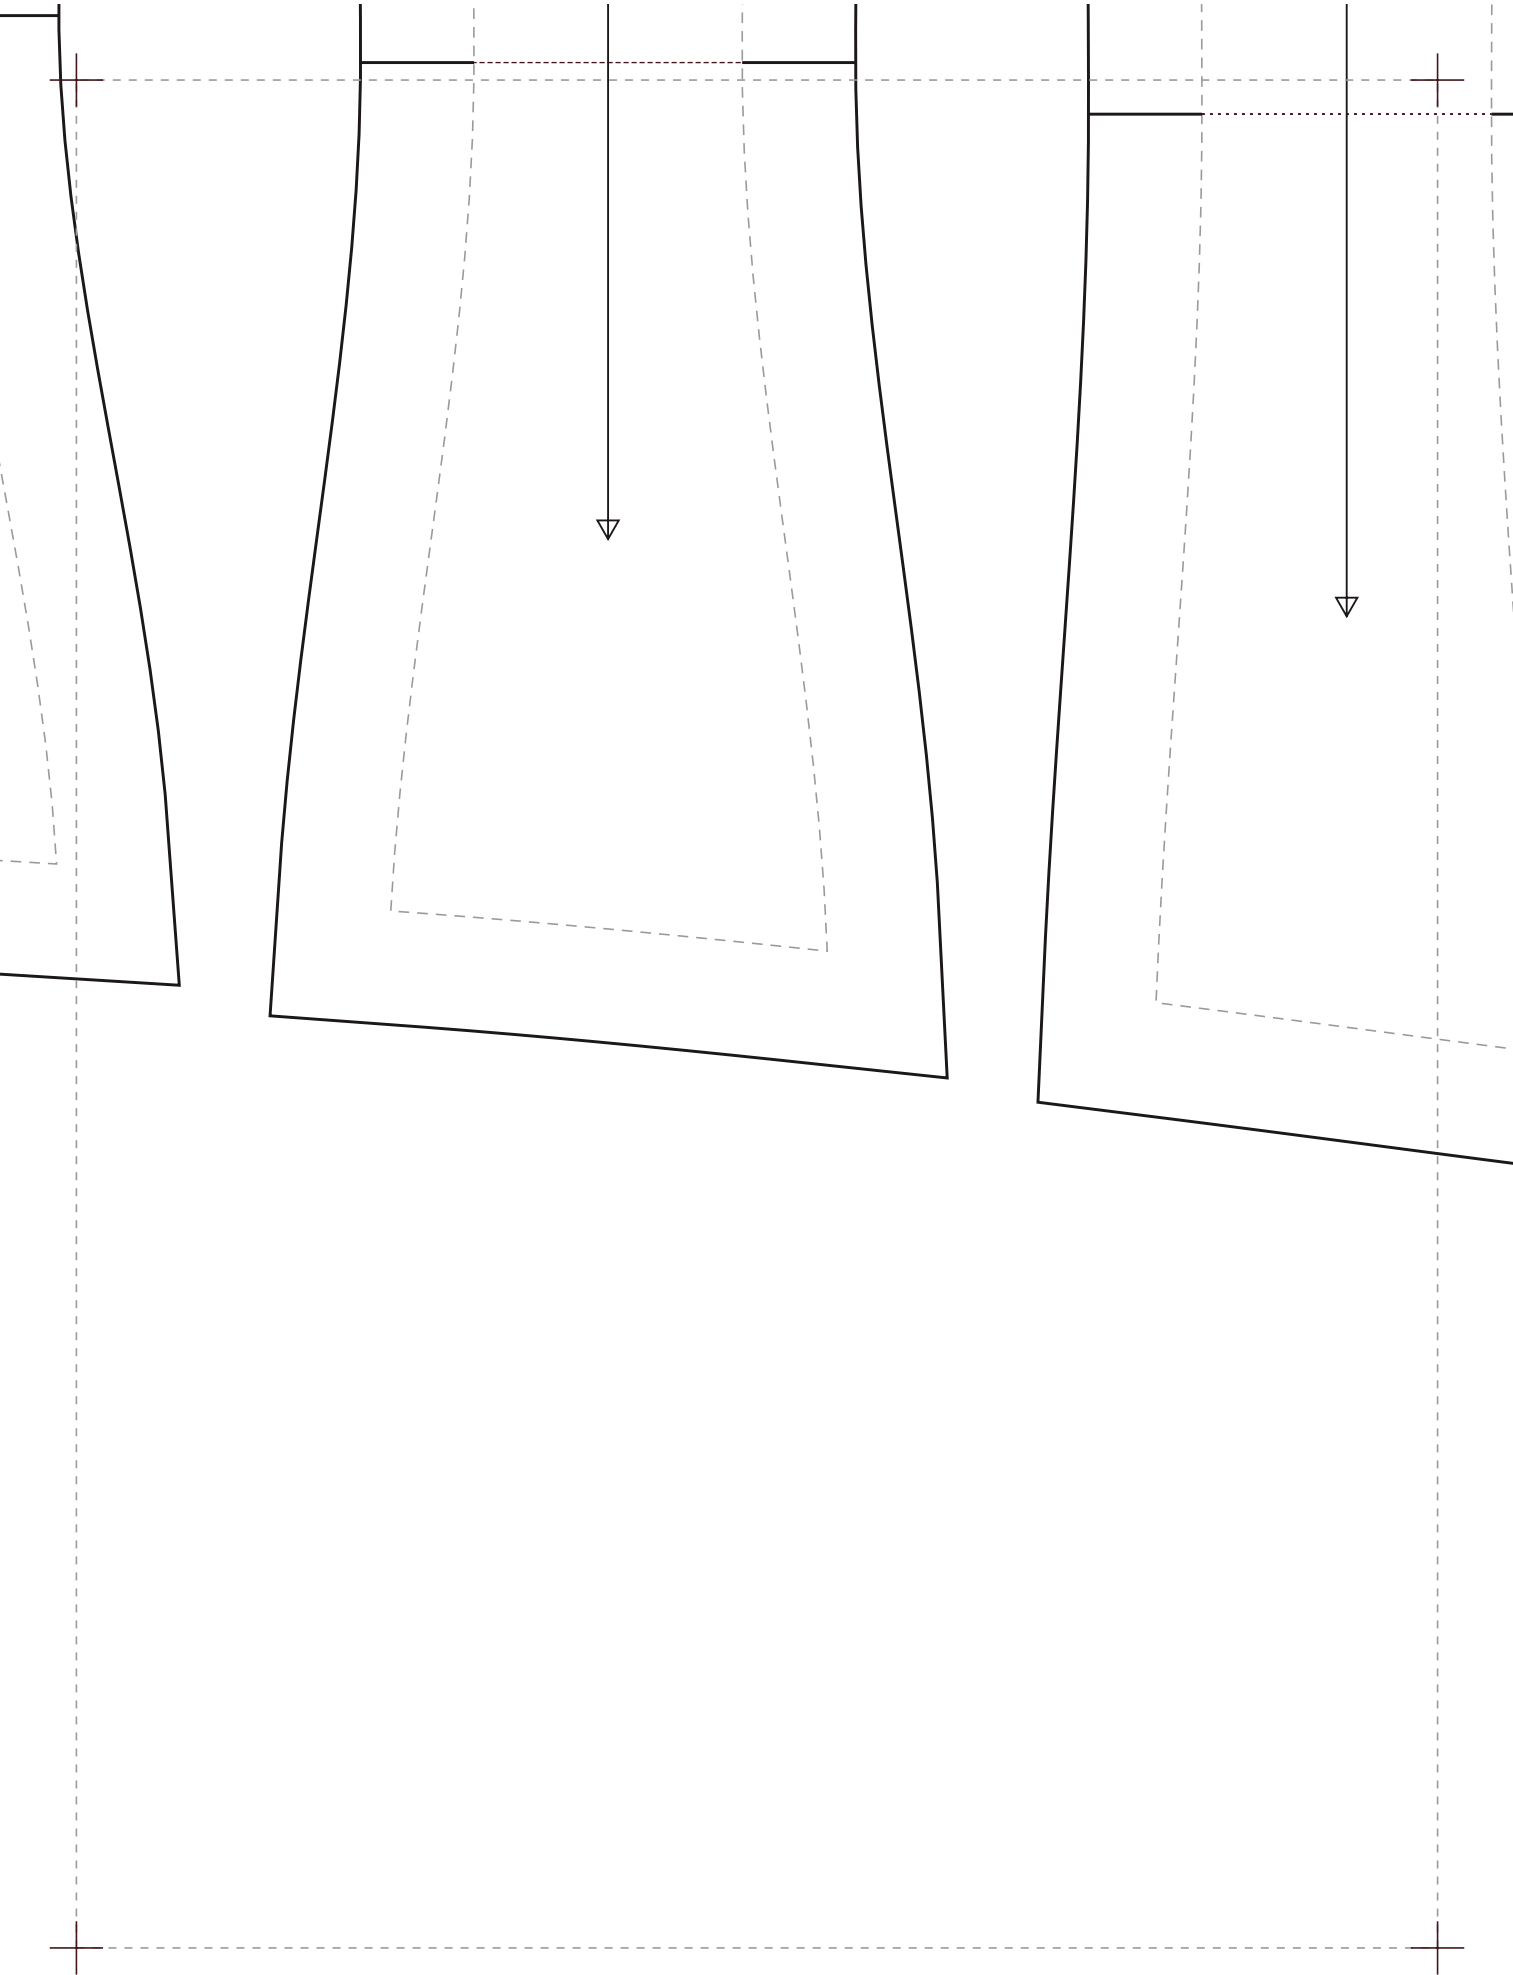

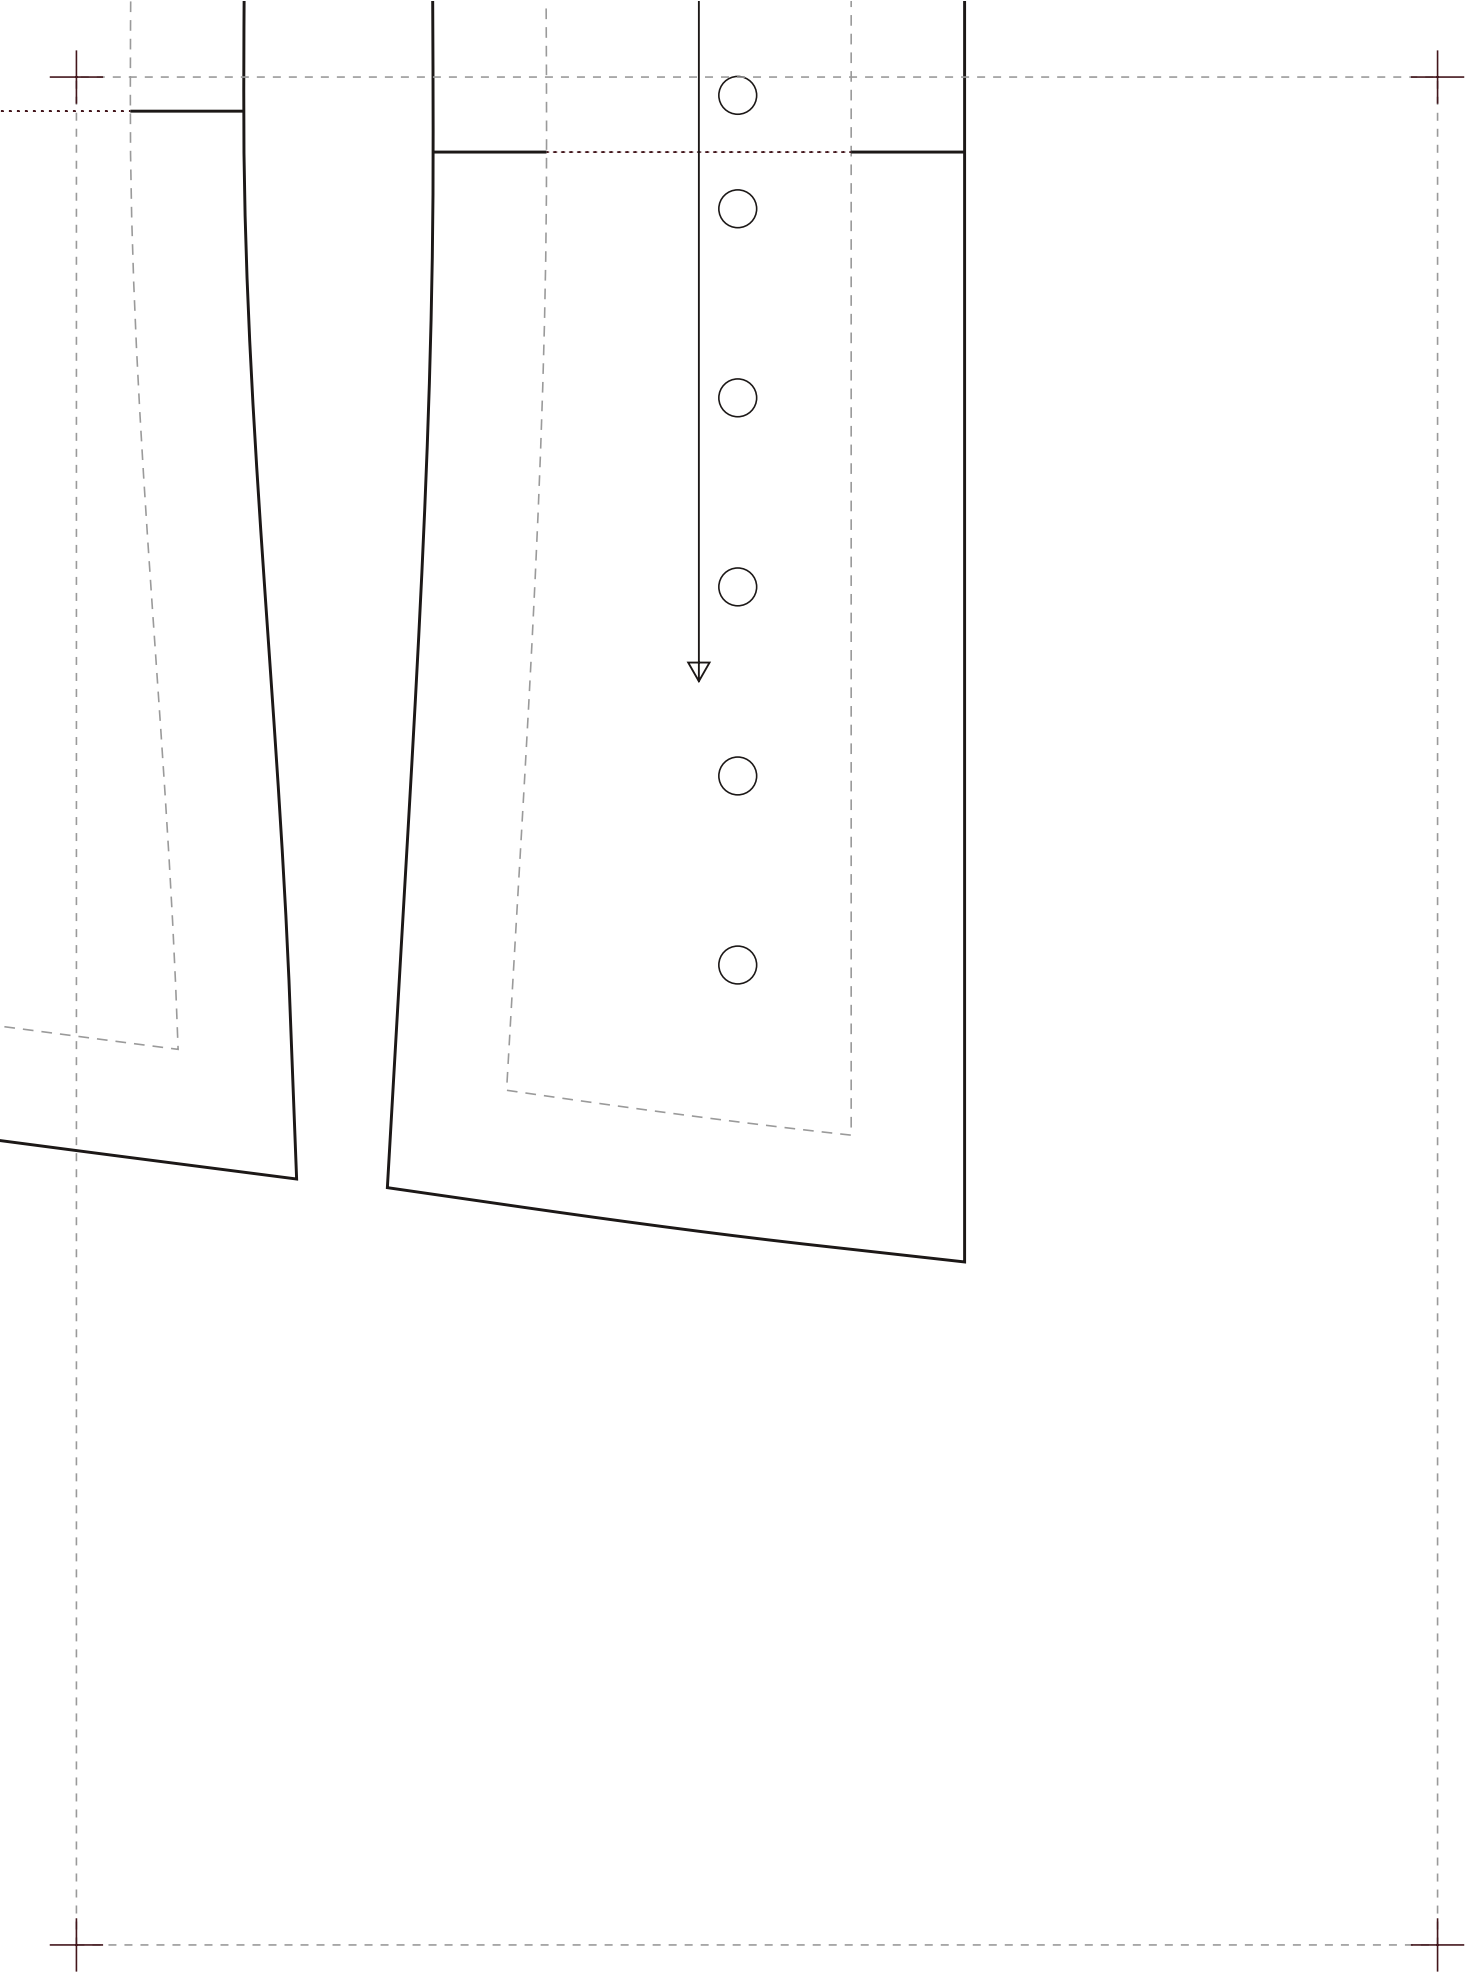





CORSET 096 · Balconette Overbust · 8 Panels · Pointed Edge · scale 1:1 · 96.2 × 51.2 cm (37.9 × 20.1 in)

in)

