

FlexPod Express Technical Specifications

FlexPod

NetApp March 25, 2024

This PDF was generated from https://docs.netapp.com/us-en/flexpod/fp-def/fp-express-tech-spec_overview.html on March 25, 2024. Always check docs.netapp.com for the latest.

Table of Contents

FI	exPod Express Technical Specifications	. 1
	TR-4293: FlexPod Express Technical Specifications	. 1
	FlexPod platforms	. 1
	FlexPod Rules	. 1
	Supported versus validated FlexPod configurations	. 1
	Storage Software	. 2
	Minimum hardware requirements	. 2
	Minimum Software Requirements	. 3
	Connectivity requirements	. 4
	Other requirements	. 4
	Optional Features	. 5
	Cisco components	. 6
	NetApp components	. 8
	Power and cabling requirements	12
	Technical Specifications and References.	15
	Previous architectures and equipment.	20
	Legacy equipment	24
	Additional Information	25

FlexPod Express Technical Specifications

TR-4293: FlexPod Express Technical Specifications

Karthick Radhakrishnan, Arvind Ramakrishnan, Lindsey Street, Savita Kumari, NetApp

FlexPod Express is a predesigned, best practice architecture that is built on the Cisco Unified Computing System (Cisco UCS) and the Cisco Nexus family of switches, and the storage layer is built by using the NetApp FAS or the NetApp E-Series storage. FlexPod Express is a suitable platform for running various virtualization hypervisors and bare metal operating systems (OSs) and enterprise workloads.

FlexPod Express delivers not only a baseline configuration, but also the flexibility to be sized and optimized to accommodate many different use cases and requirements. This document categorizes the FlexPod Express configurations based on the storage system used, FlexPod Express with NetApp FAS and FlexPod Express with E-Series.

FlexPod platforms

There are three FlexPod platforms:

- FlexPod Datacenter. This platform is a massively scalable virtual data center infrastructure suited for workload enterprise applications, virtualization, VDI, and public and private cloud. FlexPod Datacenter has its own specifications, which are documented in TR-4036: FlexPod Datacenter Technical Specifications.
- FlexPod Express. This platform is a compact converged infrastructure that is targeted for remote office and edge use cases.

This document provides the technical specifications for the FlexPod Express platform.

FlexPod Rules

The FlexPod design allows a flexible infrastructure that encompasses many different components and software versions.

Use the rule sets as a guide for building or assembling a valid FlexPod configuration. The numbers and rules listed in this document are the minimum requirements for FlexPod; they can be expanded in the included product families as required for different environments and use cases.

Supported versus validated FlexPod configurations

The FlexPod architecture is defined by the set of rules described in this document. The hardware components and software configurations must be supported by the Cisco Hardware Compatibility List (HCL) and the NetApp Interoperability Matrix Tool (IMT).

Each Cisco Validated Design (CVD) or NetApp Verified Architecture (NVA) is a possible FlexPod configuration. Cisco and NetApp document these configuration combinations and validate them with extensive end-to-end testing. The FlexPod deployments that deviate from these configurations are fully supported if they follow the guidelines in this document and all the components are listed as compatible in the Cisco HCL and NetApp IMT.

For example, adding additional storage controllers or Cisco UCS servers and upgrading software to newer versions is fully supported if the software, hardware, and configurations meet the guidelines defined in this document.

Storage Software

FlexPod Express supports storage systems that run NetApp ONTAP or SANtricity operating systems.

NetApp ONTAP

The NetApp ONTAP software is the operating system that runs on AFF and FAS storage systems. ONTAP provides a highly scalable storage architecture that enables nondisruptive operations, nondisruptive upgrades, and an agile data infrastructure.

For more information about ONTAP, see the ONTAP product page.

E-Series SANtricity software

E-Series SANtricity software is the operating system that runs on E-Series storage systems. SANtricity provides a highly flexible system that meets varying application needs and offers built-in high availability and a wide variety of data protection features.

For more information, see the SANtricity product page.

Minimum hardware requirements

This section describes the minimum hardware requirements for the different versions of FlexPod Express.

FlexPod Express with NetApp FAS

The hardware requirements for FlexPod Express solutions that use NetApp FAS controllers for underlying storage include the configurations describe in this section.

CIMC-based configuration (standalone rack servers)

The Cisco Integrated Management Controller (CIMC) configuration includes the following hardware components:

- Two 10Gbps standard Ethernet switches in a redundant configuration (Cisco Nexus 31108 is recommended, with Cisco Nexus 3000 and 9000 models supported)
- Cisco UCS C-Series standalone rack servers
- Two AFF C190, AFF A250, FAS2600, or FAS 2700 series controllers in a high-availability (HA) pair configuration deployed as a two-node cluster

Cisco UCS-managed configuration

The Cisco UCS-managed confirmation includes the following hardware components:

- Two 10Gbps standard Ethernet switches in a redundant configuration (Cisco Nexus 3524 is recommended)
- One Cisco UCS 5108 alternating current (AC) blade server chassis
- Two Cisco UCS 6324 fabric interconnects
- Cisco UCS B-Series servers (at least four Cisco UCS B200 M5 blade servers)
- Two AFF C190, AFF A250, FAS2750, or FAS2720 controllers in an HA pair configuration (requires two available unified target adapter 2 [UTA2] ports per controller)

FlexPod Express with E-Series

The hardware requirements for the FlexPod Express with E-Series starter configuration include:

- Two Cisco UCS 6324 fabric interconnects
- One Cisco UCS Mini chassis 5108 AC2 or DC2 (the Cisco UCS 6324 fabric interconnects are only supported in the AC2 and DC2 chassis)
- Cisco UCS B-Series servers (at least two Cisco UCS B200 M4 blade servers)
- One HA pair configuration of an E-Series E2824 storage system loaded with minimum 12 disk drives
- Two 10Gbps standard Ethernet switches in a redundant configuration (existing switches in the data center can be used)

These hardware components are required to build a starter configuration of the solution; additional blade servers and disk drives can be added as needed. The E-Series E2824 storage system can be replaced with a higher platform and can also be run as an all-flash system.

Minimum Software Requirements

This section describes the minimum software requirements for the different versions of FlexPod Express.

Software requirements for FlexPod Express with NetApp AFF or FAS

The software requirements for the FlexPod Express with NetApp FAS include:

- ONTAP 9.1 or later
- Cisco NX-OS version 7.0(3)I6(1) or later
- In the Cisco UCS- managed configuration, Cisco UCS Manager UCS 4.0(1b)

All software must be listed and supported in the NetApp IMT. Certain software features might require more recent versions of code than the minimums listed in previous architectures.

Software requirements for FlexPod Express with E-Series

The software requirements for the FlexPod Express with E-Series include:

- · E-Series SANtricity software 11.30 or higher
- Cisco UCS Manager 4.0(1b).

All software must be listed and supported in the NetApp IMT.

Connectivity requirements

This section describes the connectivity requirements for the different versions of FlexPod Express.

Connectivity requirements for FlexPod Express with NetApp FAS

The connectivity requirements for FlexPod Express with NetApp FAS include:

- NetApp FAS storage controllers must be directly connected to the Cisco Nexus switches, except in the Cisco UCS-managed configuration, where storage controllers are connected to the fabric interconnects.
- No additional equipment can be placed inline between the core FlexPod components.
- Virtual port channels (vPCs) are required to connect the Cisco Nexus 3000/9000 series switches to the NetApp storage controllers.
- · Although it is not required, enabling jumbo frame support is recommended throughout the environment.

Connectivity requirements for FlexPod Express with NetApp E-Series

The connectivity requirements for FlexPod Express with E-Series include:

- The E-Series storage controllers must be directly connected to the fabric interconnects.
- No additional equipment should be placed inline between the core FlexPod components.
- vPCs are required between the fabric interconnects and the Ethernet switches.

Connectivity requirements for FlexPod Express with NetApp AFF

The connectivity requirements for FlexPod Express with NetApp AFF include:

- NetApp AFF storage controllers must be directly connected to the Cisco Nexus switches, except in the Cisco UCS–managed configuration, where storage controllers are connected to the fabric. interconnects.
- No additional equipment can be placed inline between the core FlexPod components.
- Virtual port channels (vPCs) are required to connect the Cisco Nexus 3000/9000 series switches to the NetApp storage controllers.
- Although it is not required, enabling jumbo frame support is recommended throughout the environment.

Other requirements

Additional requirements for FlexPod Express include the following:

- · Valid support contracts are required for all equipment, including:
 - SMARTnet support for Cisco equipment
 - SupportEdge Advisor or SupportEdge Premium support for NetApp equipment
- All software components must be listed and supported in the NetApp IMT.
- All NetApp hardware components must be listed and supported on NetApp Hardware Universe.
- All Cisco hardware components must be listed and supported on Cisco HCL.

Optional Features

This section describes the optional features for FlexPod Express.

iSCSI boot option

The FlexPod Express architecture uses iSCSI boot. The minimum requirements for the iSCSI boot option include:

- An iSCSI license/feature activated on the NetApp storage controller
- A two-port 10Gbps Ethernet adapter on each node in the NetApp storage controller HA pair
- · An adapter in the Cisco UCS server that is capable of iSCSI boot

Configuration options

This section provides more information about the configuration required and validated in the FlexPod Express architecture.

FlexPod Express with Cisco UCS C-Series and AFF C190 Series

The following figure illustrates the FlexPod Express with Cisco UCS C-Series and AFF C190 series solution. This solution supports both 10GbE uplinks.

Cisco Nexus 31108 Switches Cisco UCS C220 M5 C-Series (Standalone server) vSphere 6.7 NetApp AFF C190 Storage Controller

FlexPod Express


For more information about this configuration, see the FlexPod Express with VMware vSphere 6.7 and NetApp

-Mgmt-10GbE

CIMC

FlexPod Express with Cisco UCS Mini and AFF A220 and FAS 2750/2720

The following figure illustrates the FlexPod Express with Cisco UCS- managed configuration.

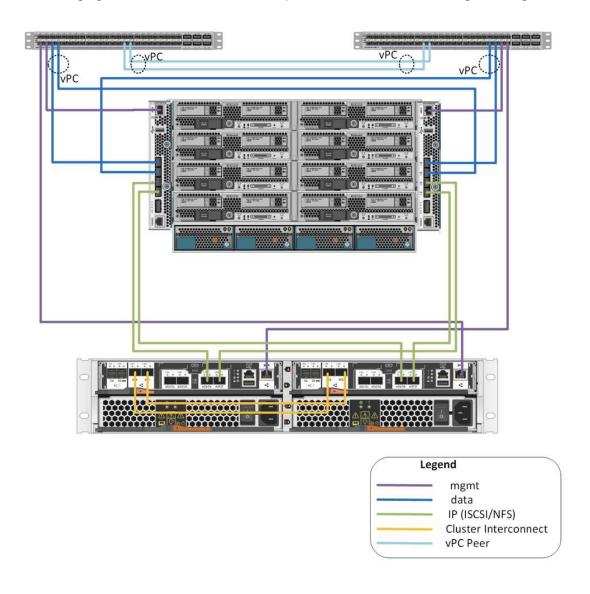

For more information about this configuration, see FlexPod Express with VMware vSphere 6.7U1 and NetApp AFF A220 with Direct - Attached IP - Based Storage.

Cisco components

Cisco is a substantial contributor to the FlexPod Express design and architecture; it contributes the compute and networking layers of the solution. This section describes the Cisco UCS and Cisco Nexus components that are available for FlexPod Express.

Cisco UCS B-Series blade server options

Cisco UCS B-Series blades currently supported in the Cisco UCS Mini platform are B200 M5 and B420 M4. Other blades will be listed in the following table as they become supported in the Cisco UCS Mini platform.

Cisco UCS B-Series server	Part number	Technical specifications
Cisco UCS B200 M5	UCSB-B200-M5	https://www.cisco.com/c/en/us/ support/servers-unified-computing/ ucs-b200-m5-blade-server/ model.html
Cisco UCS B200 M4	UCSB-B200-M4	http://www.cisco.com/c/dam/en/us/products/collateral/servers-unified-computing/ucs-b-series-blade-servers/b200m4-specsheet.pdf
Cisco UCS B420 M4	UCSB-B420-M4	http://www.cisco.com/c/dam/en/us/products/collateral/servers-unified-computing/ucs-b-series-blade-servers/b420m4-spec-sheet.pdf

Cisco UCS C-Series rack server options

Cisco UCS C-Series blades are available in one-rack and two-rack unit (RU) varieties, with various CPU, memory, and I/O options. The part numbers listed in the following table are for the base server; they do not include CPUs, memory, disk drives, PCIe cards, or the Cisco FEX. Multiple configuration options are available and supported in FlexPod.

Cisco UCS C-Series rack server	Part number	Technical specifications
Cisco UCS C220 M4	UCSC-C220-M4S	http://www.cisco.com/c/dam/en/us/ products/collateral/servers-unified- computing/ucs-c-series-rack- servers/c220m4-sff-spec-sheet.pdf
Cisco UCS C240 M4	UCSC-C240-M4S	http://www.cisco.com/c/dam/en/us/products/collateral/servers-unified-computing/ucs-c-series-rack-servers/c240m4-sff-spec-sheet.pdf
Cisco UCS C460 M4	UCSC-C460-M4	http://www.cisco.com/c/dam/en/us/products/collateral/servers-unified-computing/ucs-c-series-rack-servers/c460m4_specsheet.pdf

Cisco Nexus switches

Redundant switches are required for all FlexPod Express architectures.

The FlexPod Express with NetApp AFF or FAS architecture is built with the Cisco Nexus 31108 switch. FlexPod Express with the Cisco UCS Mini (Cisco UCS- managed) architecture is validated by using the Cisco Nexus 3524 switch. This configuration can also be deployed with a standard switch.

The FlexPod Express with E-Series can be deployed with a standard switch.

The following table lists the part numbers for the Cisco Nexus series chassis; they do not include additional SFP or add-on modules.

Cisco Nexus Series switch	Part number	Technical specifications
Cisco Nexus 3048	N3K-C3048TP-1GE	http://www.cisco.com/c/en/us/ products/collateral/switches/nexus- 3000-series-switches/ data_sheet_c78-685363.html
Cisco Nexus 31108	N3K-C31108PC-V	http://www.cisco.com/c/en/us/ products/switches/nexus-31108pc- v-switch/index.html
Cisco Nexus 9396	N9K-C9396PX	http://www.cisco.com/c/en/us/ products/collateral/switches/nexus- 9000-series-switches/datasheet- c78-729405.html
Cisco Nexus 3172	N3K-C3172	https://www.cisco.com/c/en/us/ products/collateral/switches/nexus- 3000-series-switches/ data_sheet_c78-729483.html

Cisco Support licensing options

Valid SMARTnet support contracts are required on all Cisco equipment in the FlexPod Express architecture.



The licenses required and the part numbers for those licenses should be verified by your sales representative because they can differ for different products.

The following table lists the Cisco support licensing options.

Cisco Support licensing	License guide	
	http://www.cisco.com/web/services/portfolio/product-technical-support/smartnet/index.html	

NetApp components

NetApp storage controllers provide the storage foundation in the FlexPod Express architecture for both boot and application data storage. This section lists the different NetApp options in the FlexPod Express architecture.

NetApp storage controller options

NetApp FAS

Redundant AFF C190, AFF A220, or FAS2750 series controllers are required in the FlexPod Express architecture. The controllers run ONTAP software. When ordering the storage controllers, the preferred software version can be preloaded on the controllers. For ONTAP, the cluster can be deployed either with a pair of cluster interconnect switches or in a switchless cluster configuration.

The part numbers listed in the following table are for an empty controller. Different options and configurations are available based on the storage platform selected. Consult your sales representative for details about these additional components.

Storage controller	FAS part number	Technical specifications
FAS2750	Based on individual options chosen	https://www.netapp.com/us/ products/storage-systems/hybrid- flash-array/fas2700.aspx
FAS2720	Based on individual options chosen	https://www.netapp.com/us/ products/storage-systems/hybrid- flash-array/fas2700.aspx
AFF C190	Based on individual options chosen	https://www.netapp.com/us/ products/entry-level-aff.aspx
AFF A220	Based on individual options chosen	https://www.netapp.com/us/documentation/all-flash-fas.aspx
FAS2620	Based on individual options chosen	http://www.netapp.com/us/products/ storage-systems/fas2600/fas2600- tech-specs.aspx
FAS2650	Based on individual options chosen	http://www.netapp.com/us/products/ storage-systems/fas2600/fas2600- tech-specs.aspx

E-Series storage

An HA pair of NetApp E2800 series controllers is required in the FlexPod Express architecture. The controllers run the SANtricity OS.

The part numbers listed in the following table are for an empty controller. Different options and configurations are available based on the storage platform selected. Consult your sales representative for details about these additional components.

Storage controller	Part number	Technical specifications
E2800	Based on individual options chosen	http://www.netapp.com/us/products/ storage-systems/e2800/e2800- tech-specs.aspx

NetApp Ethernet expansion modules

NetApp FAS

The following table lists the NetApp FAS10GbE adapter options.

Component	Part number	Technical specifications
NetApp X1117A	X1117A-R6	https://library.netapp.com/ecm/ ecm_download_file/ECMM1280307



The FAS2500 and 2600 series storage systems have onboard 10GbE ports.

The NetApp X1117A adapter is for FAS8020 storage systems.

E-Series storage

The following table lists the E-Series 10GbE adapter options.

Component	Part number
10GbE iSCSI/16Gb FC 4-port	X-56025-00-0E-C
10GbE iSCSI/16Gb FC 2-port	X-56024-00-0E-C



The E2824 series storage systems have onboard 10GbE ports.

The 10GbE iSCSI/16Gb FC 4-port host interface card (HIC) can be used for additional port density.

The onboard ports and the HIC can function as iSCSI adapters or FC adapters depending on the feature activated in SANtricity OS.

For more information about supported adapter options, see the Adapter section of NetApp Hardware Universe.

NetApp disk shelves and disks

NetApp FAS

A minimum of one NetApp disk shelf is required for storage controllers. The NetApp shelf type selected determines which drive types are available within that shelf.

The FAS2700 and FAS2600 series of controllers are offered as a configuration that includes dual storage controllers plus disks housed within the same chassis. This configuration is offered with SATA or SAS drives; therefore, additional external disk shelves are not needed unless performance or capacity requirements dictate more spindles.



All disk shelf part numbers are for the empty shelf with two AC PSUs. Consult your sales representative for additional part numbers.

Disk drive part numbers vary according to the size and form factor of the disk you intend to purchase. Consult your sales representative for additional part numbers.

The following table lists the NetApp disk shelf options, along with the drives supported for each shelf type, which can be found on NetApp Hardware Universe. Follow the Hardware Universe link, select the version of ONTAP you are using, then select the shelf type. Under the shelf image, click Supported Drives to see the drives supported for specific versions of ONTAP and the disk shelves.

Disk shelf	Part number	Technical specifications
DS212C	DS212C-0-12	Disk Shelves and Storage Media Technical Specifications Supported Drives on NetApp Hardware Universe
DS224C	DS224C-0-24	Disk Shelves and Storage Media Technical Specifications Supported Drives on NetApp Hardware Universe

Disk shelf	Part number	Technical specifications
DS460C	DS460C-0-60	Disk Shelves and Storage Media Technical Specifications Supported Drives on NetApp Hardware Universe
DS2246	X559A-R6	Disk Shelves and Storage Media Technical Specifications Supported Drives on NetApp Hardware Universe
DS4246	X24M-R6	Disk Shelves and Storage Media Technical Specifications Supported Drives on NetApp Hardware Universe
DS4486	DS4486-144TB-R5-C	Disk Shelves and Storage Media Technical Specifications Supported Drives on NetApp Hardware Universe

E-Series storage

A minimum of one NetApp disk shelf is required for storage controllers that do not house any drives in their chassis. The NetApp shelf type selected determines which drive types are available within that shelf.

The E2800 series of controllers are offered as a configuration that includes dual storage controllers plus disks housed within a supported disk shelf. This configuration is offered with SSD or SAS drives.



Disk drive part numbers vary according to the size and form factor of the disk you intend to purchase. Consult your sales representative for additional part numbers.

The following table lists the NetApp disk shelf options and the drives supported for each shelf type, which can be found on NetApp Hardware Universe. Follow the Hardware Universe link, select the version of ONTAP you are using, then select the shelf type. Under the shelf image, click Supported Drives to see the drives supported for specific versions of ONTAP and the disk shelves.

Disk shelf	Part number	Technical specifications
DE460C	E-X5730A-DM-0E-C	Disk Shelves Technical Specifications Supported Drives on NetApp Hardware Universe
DE224C	E-X5721A-DM-0E-C	Disk Shelves Technical Specifications Supported Drives on NetApp Hardware Universe
DE212C	E-X5723A-DM-0E-C	Disk Shelves Technical Specifications Supported Drives on NetApp Hardware Universe

NetApp software licensing options

NetApp FAS

The following table lists the NetApp FAS software licensing options.

NetApp Software Licensing	Part Number	Technical Specifications
Base cluster license	Consult your NetApp sales team for more licensing information.	

E-Series storage

The following table lists the E-Series software licensing options.

NetApp software licensing	Part number	Technical specifications
Standard features	Consult your NetApp sales team for more licensing information.	
Premium features		

NetApp Support licensing options

SupportEdge Premium licenses are required, and the part numbers for those licenses vary based on the options selected in the FlexPod Express design.

NetApp FAS

The following table lists the NetApp support licensing options for NetApp FAS.

NetApp Support licensing	Part number	Technical specifications
SupportEdge Premium4 hours onsite; months: 36	CS-02-4HR	https://www.netapp.com/pdf.html?it em=/media/19784-ds-3873.pdf

E-Series storage

The following table lists the NetApp support licensing options for E-Series storage.

NetApp Support licensing	Part number	Technical specifications
Hardware support Premium 4 hours onsite; months: 36	SVC-O2-4HR-E	https://www.netapp.com/pdf.html?it em=/media/19784-ds-3873.pdf
Software support	SW-SSP-O2-4HR-E	
Initial installation	SVC-INST-O2-4HR-E	

Power and cabling requirements

This section describes the power and minimum cabling requirements for a FlexPod Express design.

Power requirements

The power requirements are based on U.S. specifications and assume the use of AC power. Other countries might have different power requirements. Direct current (DC) power options are also available for most

components. For additional data about the maximum power required as well as other detailed power information, consult the detailed technical specifications for each hardware component.

For detailed Cisco UCS power data, see the Cisco UCS Power Calculator.

The following table lists the power ports required per device.

Cisco Nexus switches	Power cables required
Cisco Nexus 3048	2x C13/C14 power cables for each Cisco Nexus 3000 series switch
Cisco Nexus 3524	2x C13/C14 power cables for each Cisco Nexus 3000 series switch
Cisco Nexus 9396	2x C13/C14 power cables for each Cisco Nexus 9000 series switch

Cisco UCS chassis	Power cables required
Cisco UCS 5108	2 CAB-US515P-C19-US/CAB-US520-C19-US for each Cisco UCS chassis

Cisco UCS B-Series servers	Power cables required
Cisco UCS B200 M4	N/A; blade server is powered by chassis
Cisco UCS B420 M4	N/A; blade server is powered by chassis
Cisco UCS B200 M5	N/A; blade server is powered by chassis
Cisco UCS B480 M5	N/A; blade server is powered by chassis

Cisco UCS C-Series servers	Power ports required
Cisco UCS C220 M4	2 x C13/C14 power cables for each Cisco UCS server
Cisco UCS C240 M4	
Cisco UCS C460 M4 Cisco UCS C220 M5 Cisco UCS C240 M5 Cisco UCS C480 M5	

NetApp FAS controllers	Power ports required (per HA pair)
FAS2554	2 x C13/C14
FAS2552	2 x C13/C14
FAS2520	2 x C13/C14
FAS8020	2 x C13/C14

E-Series controllers	Power ports required (per HA pair)
E2824	2 x C14/C20

NetApp FAS disk shelves	Power ports required
DS212C	2 x C13/C14
DS224C	2 x C13/C14
DS460C	2 x C13/C14
DS2246	2 x C13/C14
DS4246	4 x C13/C14

E-Series disk shelves	Power ports required
DE460C	2 x C14/C20
DE224C	2 x C14/C20
DE212C	2 x C14/C20

Minimum cable requirements

This section describes the minimum cable requirements for a FlexPod Express design. Most FlexPod implementations require additional cables, but the number varies based on the deployment size and scope.

The following table lists the minimum number of cables required for each device.

Cisco Nexus 3000 Series switches	Cables required
Cisco Nexus 31108	At least two 10GbE fiber or Twinax cables per switch
Cisco Nexus 3172PQ	
Cisco Nexus 3048	
Cisco Nexus 3524	
Cisco Nexus 9396	
DS212C	
DS2246	Number of SAS cables depends on specific
DS460C	configuration of disk shelves
DS224C	
DS4246	
E2800	 At least one Gigabit Ethernet (1GbE) cable for management per controller At least two 10GbE cables per controller (for iSCSI) or two FC cables matching speed requirements
DE460C	2 x mini-SAS HD cables per disk shelf
DE224C	2 x mini-SAS HD cables per disk shelf
DE212C	2 x mini-SAS HD cables per disk shelf

Technical Specifications and References

This section describes additional important technical specifications for each of the FlexPod Express components.

Cisco UCS B-Series blade servers

The following table lists the Cisco UCS B-Series blade server options.

Component	Cisco UCS B200 M4	Cisco UCS B420 M4	Cisco UCS B200 M5
Processor support	Intel Xeon E5-2600	Intel Xeon E5-4600	Intel Xeon Scalable processors
Maximum memory capacity	24 DIMMs for a maximum of 768GB	48 DIMMs for a maximum of 3TB	24 DIMMs for a maximum of 3072GB
Memory size and speed	32GB DDR4; 2133MHz	64GB DDR4; 2400MHz	16GB, 32GB, 64GB, and 128GB DDR4; 2666MHz
SAN boot support	Yes	Yes	Yes
Mezzanine I/O adapter slots	2	3	2, front and rear, including GPU support
I/O maximum throughput	80Gbps	160Gbps	80Gbps

Cisco UCS C-Series rack servers

The following table lists Cisco UCS C-Series rack server options.

Component	Cisco UCS C220 M4	Cisco UCS C240 M4	Cisco UCS C460 M4	Cisco UCS C220 M5
Processor support	1 or 2 Intel E5-2600 series	1 or 2 Intel Xeon E5- 2600 series	2 or 4 Intel Xeon E7- 4800/8800 series	Intel Xeon Scalable processors (1 or 2)
Maximum memory capacity	1.5GB	1.5TB	6ТВ	3072GB
PCIe slots	2	6	10	2
Form factor	1RU	2RU	4RU	1 RU

The following table lists the datasheets for the Cisco UCS C-Series rack server options.

Component	Cisco UCS datasheet
Cisco UCS C220 M4	http://www.cisco.com/c/dam/en/us/products/collateral/servers-unified-computing/ucs-c-series-rack-servers/c220m4-sff-spec-sheet.pdf
Cisco UCS C240 M4	http://www.cisco.com/c/en/us/products/collateral/servers-unified-computing/ucs-c240-m4-rack-server/datasheet-c78-732455.html

Component	Cisco UCS datasheet
Cisco UCS C460 M4	http://www.cisco.com/c/en/us/products/collateral/servers-unified-computing/ucs-c460-m4-rack-server/datasheet-c78-730907.html
Cisco UCS C220 M5	https://www.cisco.com/c/dam/en/us/products/ collateral/servers-unified-computing/ucs-c-series-rack- servers/c220m5-sff-specsheet.pdf

Cisco Nexus 3000 Series switches

The following table lists the Cisco Nexus 3000 series switch options.

Component	Cisco Nexus 3048	Cisco Nexus 3524	Cisco Nexus 31108	Cisco Nexus 3172PQ
Form factor	1RU	1RU	1RU	1 RU
Maximum 1Gbps ports	48	24	48 (10/40/100Gbps)	72 1/10GbE ports, or 48 1/10GbE plus six 40GbE ports
Forwarding rate	132Mbps	360Mbps	1.2Bpps	1Bpps
Jumbo frame support	Yes	Yes	Yes	Yes

The following table lists the datasheets for the Cisco Nexus 3000 series switch options.

Component	Cisco Nexus Datasheet
Cisco Nexus 31108	http://www.cisco.com/c/en/us/products/switches/nexus-31108pc-v-switch/index.html
Cisco Nexus 3172PQ	https://www.cisco.com/c/en/us/products/switches/nexus-3172pq-switch/index.html
Cisco Nexus 3048	https://www.cisco.com/c/en/us/products/switches/nexus-3048-switch/index.html
Cisco Nexus 3172PQ-XL	https://www.cisco.com/c/en/us/products/switches/nexus-3172pq-switch/index.html
Cisco Nexus 3548 XL	https://www.cisco.com/c/en/us/products/switches/nexus-3548-x-switch/index.html
Cisco Nexus 3524 XL	https://www.cisco.com/c/en/us/products/switches/nexus-3524-x-switch/index.html
Cisco Nexus 3548	https://www.cisco.com/c/en/us/products/switches/nexus-3548-x-switch/index.html
Cisco Nexus 3524	https://www.cisco.com/c/en/us/products/switches/nexus-3524-x-switch/index.html

The following table lists the Cisco Nexus 9000 series switch options.

Component	Cisco Nexus 9396	Cisco Nexus 9372
Form factor	2RU	1RU
Maximum ports	60	54
10Gbps SFP+ uplink ports	48	48

The following table lists the Cisco Nexus 9000 series switch options datasheets.

Component	Cisco Nexus datasheet
Cisco Nexus 9396	http://www.cisco.com/c/en/us/products/collateral/switches/nexus-9000-series-switches/datasheet-c78-736967.html
Cisco Nexus 9372	http://www.cisco.com/c/en/us/products/collateral/switches/nexus-9000-series-switches/datasheet-c78-736967.html
Nexus 9396X	https://www.cisco.com/c/en/us/products/switches/nexus-9396px-switch/index.html?dtid=osscdc000283

NetApp FAS storage controllers

The following table lists the current NetApp FAS storage controller options.

Current component	FAS2620	FAS2650
Configuration	2 controllers in a 2U chassis	2 controllers in a 4U chassis
Maximum raw capacity	1440TB	1243TB
Internal drives	12	24
Maximum number of drives (internal plus external)	144	144
Maximum volume size	100TB	
Maximum aggregate size	4TB	
Maximum number of LUNs	2,048 per controller	
Storage networking supported	iSCSI, FC, FCoE, NFS, and CIFS	
Maximum number of NetApp FlexVol volumes	1,000 per controller.	
Maximum number of NetApp Snapshot copies	255,000 per controller	
Maximum NetApp Flash Pool intelligent data caching	24TB	



For details about the FAS storage controller option, see the FAS models section of the Hardware Universe. For AFF, see AFF models section.

The following table lists the characteristics of a FAS8020 controller system.

Component	FAS8020
Configuration	2 controllers in a 3U chassis
Maximum raw capacity	2880TB
Maximum number of drives	480
Maximum volume size	70TB
Maximum aggregate size	324TB
Maximum number of LUNs	8,192 per controller
Storage networking supported	iSCSI, FC, NFS, and CIFS
Maximum number of FlexVol volumes	1,000 per controller
Maximum number of Snapshot copies	255,000 per controller
Maximum NetApp Flash Cache intelligent data caching	ЗТВ
Maximum Flash Pool data caching	24TB

The following table lists the datasheets for NetApp storage controllers.

Component	Storage controller datasheet
FAS2600 series	http://www.netapp.com/us/products/storage-systems/fas2600/fas2600-tech-specs.aspx
FAS2500 series	http://www.netapp.com/us/products/storage-systems/fas2500/fas2500-tech-specs.aspx
FAS8000 series	http://www.netapp.com/us/products/storage-systems/fas8000/fas8000-tech-specs.aspx

NetApp FAS Ethernet adapters

The following table lists NetApp FAS 10GbE adapters.

Component	X1117A-R6
Port count	2
Adapter type	SFP+ with fibre

The X1117A-R6 SFP+ adapter is supported on FAS8000 series controllers.

The FAS2600 and FAS2500 series storage systems have onboard 10GbE ports. For more information, see the NetApp 10GbE adapter datasheet.



For more adapter details based on the AFF or FAS model, see the Adapter section in the Hardware Universe.

NetApp FAS disk shelves

The following table lists the current NetApp FAS disk shelf options.

Component	DS460C	DS224C	DS212C	DS2246	DS4246
Form factor	4RU	2RU	2RU	2RU	4RU
Drives per enclosure	60	24	12	24	24
Drive form factor	3.5" large form factor	2.5" small form factor	3.5" large form factor	2.5" small form factor	3.5" large form factor
Shelf I/O modules	Dual IOM12 modules	Dual IOM12 modules	Dual IOM12 modules	Dual IOM6 modules	Dual IOM6 modules

For more information, see the NetApp disk shelves datasheet.



For more information about the disk shelves, see the NetApp Hardware Universe Disk Shelves section.

NetApp FAS disk drives

The technical specifications for the NetApp disks include form factor size, disk capacity, disk RPM, supporting controllers, and Data ONTAP version requirements and are located in the Drives section on NetApp Hardware Universe.

E-Series storage controllers

The following table lists the current E-Series storage controller options.

Current Component	E2812	E2824	E2860
Configuration	2 controllers in a 2U chassis	2 controllers in a 2U chassis	2 controllers in a 4U chassis
Maximum raw capacity	1800TB	1756.8TB	1800TB
Internal drives	12	24	60
Maximum number of drives (internal plus external)	180		
Maximum SSD	120		
Maximum volume size for disk pool volume	1024TB		
Maximum disk pools	20		
Storage networking supported	iSCSI and FC		
Maximum number of volumes	512		

The following table lists the datasheets for the current E-Series storage controller.

Component	Storage controller datasheet
E2800	http://www.netapp.com/us/media/ds-3805.pdf

E-Series adapters

The following table lists the E-Series adapters.

Component	X-56023-00-0E- C	X-56025-00-0E- C	X-56027-00-0E- C	X-56024-00-0E- C	X-56026-00-0E- C
Port count	2	4	4	2	2
Adapter type	10Gb Base-T	16G FC and 10GbE iSCSI	SAS	16G FC and 10GbE iSCSI	SAS

E-Series disk shelves

The following table lists the E-Series disk shelf options.

Component	DE212C	DE224C	DE460C
Form factor	2RU	2RU	4RU
Drives per enclosure	12	24	60
Drive form factor	2.5" small form factor 3.5"	2.5"	2.5" small form factor 3.5"
Shelf I/O modules	IOM12	IOM12	IOM12

E-Series disk drives

The technical specifications for the NetApp disk drives include form factor size, disk capacity, disk RPM, supporting controllers, and SANtricity version requirements and are located in the Drives section on NetApp Hardware Universe.

Previous architectures and equipment

FlexPod is a flexible solution allowing customers to use both existing and new equipment currently for sale by Cisco and NetApp. Occasionally, certain models of equipment from both Cisco and NetApp are designated end of life.

Even though these models of equipment are no longer available, customers who bought one of these models before the end-of-sale date can use that equipment in a FlexPod configuration.

Additionally, FlexPod Express architectures are periodically refreshed to introduce the latest hardware and software from Cisco and NetApp to the FlexPod Express solution. This section lists the previous FlexPod Express architectures and hardware used within them.

Previous FlexPod Express architectures


This section describes the previous FlexPod Express architectures.

FlexPod Express small and medium configurations


The FlexPod Express small and medium configurations include the following components:

- Two Cisco Nexus 3048 switches in a redundant configuration
- At least two Cisco UCS C-Series rack mount servers
- Two FAS2200 or FAS2500 series controllers in an HA pair configuration

The following figure illustrates the FlexPod Express small configuration.

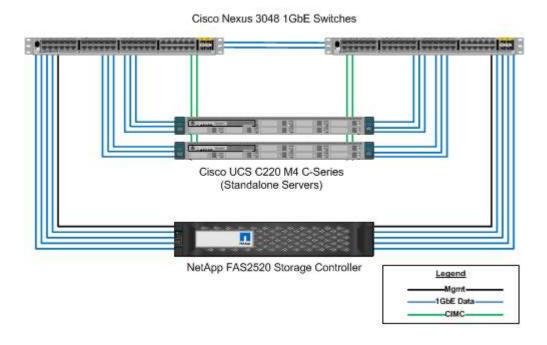

The following figure illustrates the FlexPod Express medium configuration.

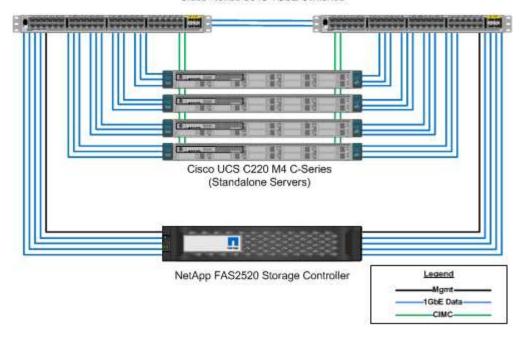


FlexPod Express large configuration

The FlexPod Express large configuration includes the following components:

- Two Cisco Nexus 3500 series or Cisco Nexus 9300 series switches in a redundant configuration
- At least two Cisco UCS C-Series rack mount servers
- Two FAS2552, FAS2554, or FAS8020 controllers in an HA pair configuration (requires two 10GbE ports per controller)
- One NetApp disk shelf with any supported disk type (when the FAS8020 is used)

The following figure illustrates the FlexPod Express large configuration.

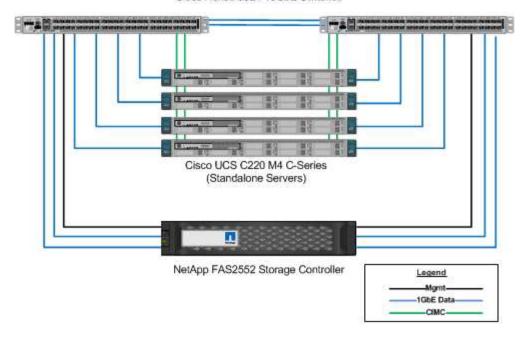

Previous FlexPod Express verified architectures

Previous FlexPod Express verified architectures are still supported. The architecture and deployment documents include:

- FlexPod Express with Cisco UCS C-Series and NetApp FAS2500 Series
- FlexPod Express with VMware vSphere 6.0: Small and Medium Configurations
- FlexPod Express with VMware vSphere 6.0: Large Configuration
- FlexPod Express with Microsoft Windows Server 2012 R2 Hyper-V: Small and Medium Configurations
- FlexPod Express with Microsoft Windows Server 2012 R2 Hyper-V: Large Configuration

Previous hardware

The following table lists the hardware used in previous FlexPod Express architectures.

Hardware used in previous architectures	Technical specifications (if available)
Cisco UCS C220 M3	http://www.cisco.com/c/en/us/products/collateral/servers-unified-computing/ucs-c220-m3-rack-server/data_sheet_c78-700626.html
Cisco UCS C24 M3	http://www.cisco.com/en/US/prod/collateral/ps10265/ps10493/data_sheet_c78-706103.html
Cisco UCS C22 M3	http://www.cisco.com/en/US/prod/collateral/ps10265/ps10493/data_sheet_c78-706101.html
Cisco UCS C240 M3	http://www.cisco.com/c/en/us/products/collateral/servers-unified-computing/ucs-c240-m3-rack-server/data_sheet_c78-700629.html
Cisco UCS C260 M2	http://www.cisco.com/en/US/prod/collateral/ps10265/ps10493/c260m2_specsheet.pdf

Hardware used in previous architectures	Technical specifications (if available)
Cisco UCS C420 M3	http://www.cisco.com/en/US/products/ps12770/index.html
Cisco UCS C460 M2	http://www.cisco.com/en/US/prod/collateral/ps10265/ps10493/ps11587/spec_sheet_c17-662220.pdf
Cisco UCS B200 M3	http://www.cisco.com/c/en/us/products/collateral/servers-unified-computing/ucs-b200-m3-blade-server/data_sheet_c78-700625.html
Cisco UCS B420 M3	N/A
Cisco UCS B22 M3	http://www.cisco.com/c/dam/en/us/products/collateral/servers-unified-computing/ucs-b-series-blade-servers/b22m3_specsheet.pdf
Cisco Nexus 3524	http://www.cisco.com/c/en/us/products/switches/nexus-3524-switch/index.html
FAS2240	
FAS2220	http://www.netapp.com/us/products/storage-systems/fas2200/fas2200-tech-specs.aspx
DS4243	N/A

Legacy equipment

The following table lists the NetApp legacy storage controller options.

Storage controller	FAS part number	Technical specifications
FAS2520	Based on individual options chosen	http://www.netapp.com/us/products/ storage-systems/fas2500/fas2500- tech-specs.aspx
FAS2552	Based on individual options chosen	http://www.netapp.com/us/products/ storage-systems/fas2500/fas2500- tech-specs.aspx
FAS2554	Based on individual options chosen	http://www.netapp.com/us/products/ storage-systems/fas2500/fas2500- tech-specs.aspx
FAS8020	Based on individual options chosen	http://www.netapp.com/us/products/ storage-systems/fas8000/fas8000- tech-specs.aspx

The following table lists the NetApp legacy disk shelf options for NetApp FAS.

Disk shelf	Part number	Technical specifications
DE1600	E-X5682A-DM-0E-R6-C	Disk Shelves Technical Specifications Supported Drives on NetApp Hardware Universe

Disk shelf	Part number	Technical specifications
DE5600	E-X4041A-12-R6	Disk Shelves Technical Specifications Supported Drives on NetApp Hardware Universe
DE6600	X-48564-00-R6	Disk Shelves Technical Specifications Supported Drives on NetApp Hardware Universe

NetApp legacy FAS controllers

The following table lists the legacy NetApp FAS controller options.

Current component	FAS2554	FAS2552	FAS2520
Configuration	2 controllers in a 4U chassis	2 controllers in a 2U chassis	2 controllers in a 2U chassis
Maximum raw capacity	576TB	509TB	336TB
Internal drives	24	24	12
Maximum number of drives (internal plus external)	144	144	84
Maximum volume size	60TB		
Maximum aggregate size	120TB		
Maximum number of LUNs	2,048 per controller		
Storage networking supported	iSCSI, FC, FCoE, NFS, and CIFS iSCSI, NFS, and CIFS		
Maximum number of NetApp FlexVol volumes	1,000 per controller		
Maximum number of NetApp Snapshot copies	255,000 per controller		



For more NetApp FAS models, see the FAS models section in the Hardware Universe.

Additional Information

To learn more about the information that is described in this document, see the following documents and websites:

• AFF and FAS System Documentation Center

https://docs.netapp.com/platstor/index.jsp

• AFF Documentation Resources page

https://www.netapp.com/us/documentation/all-flash-fas.aspx

FAS Storage Systems Documentation Resources page

https://www.netapp.com/us/documentation/fas-storage-systems.aspx

• FlexPod

https://flexpod.com/

NetApp documentation

https://docs.netapp.com

Copyright information

Copyright © 2024 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

Trademark information

NETAPP, the NETAPP logo, and the marks listed at http://www.netapp.com/TM are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.