


# Al-Assisted Safety Monitoring of Anti-Amyloid Immunotherapies for Clinical Alzheimer's Disease

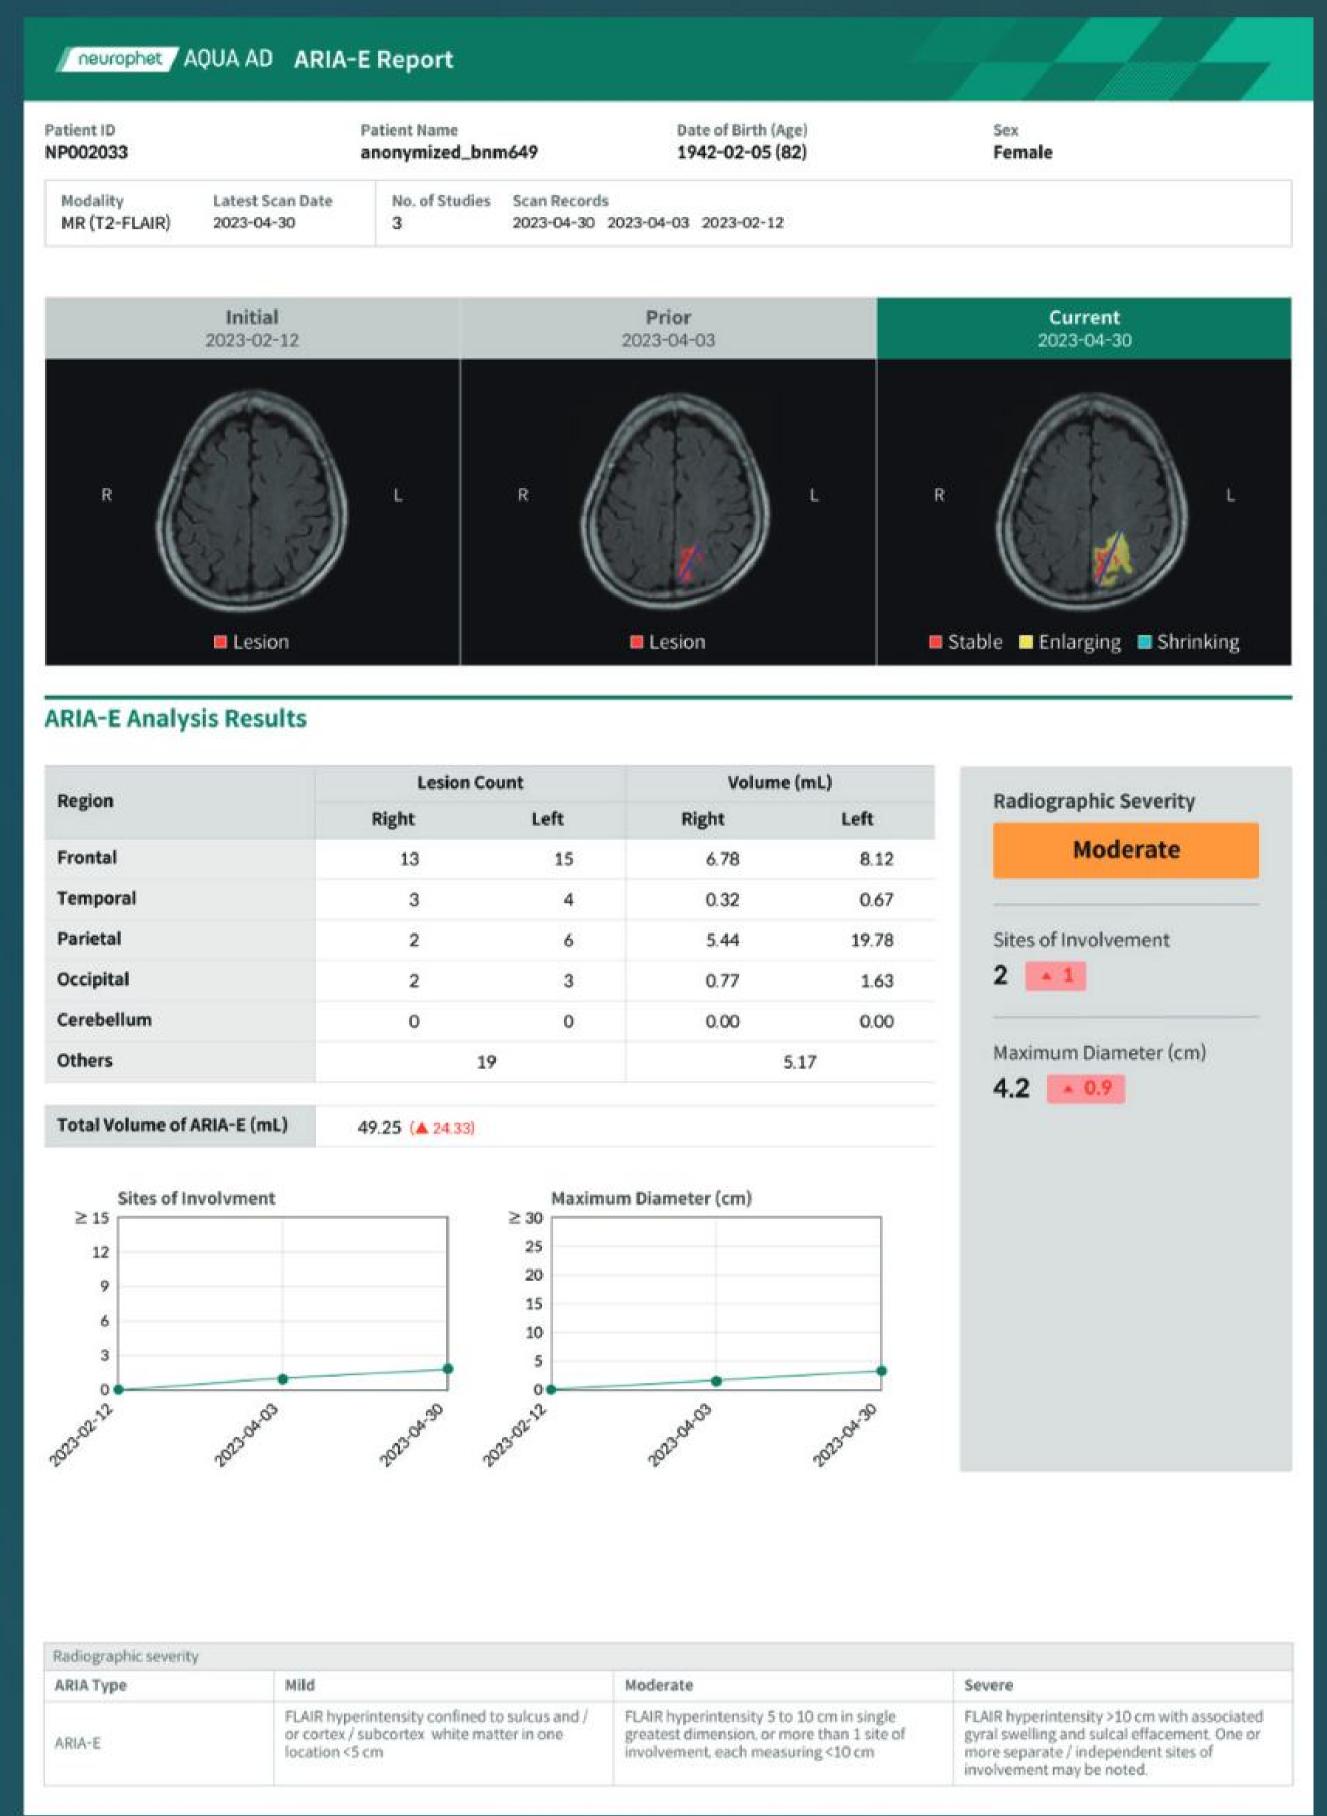

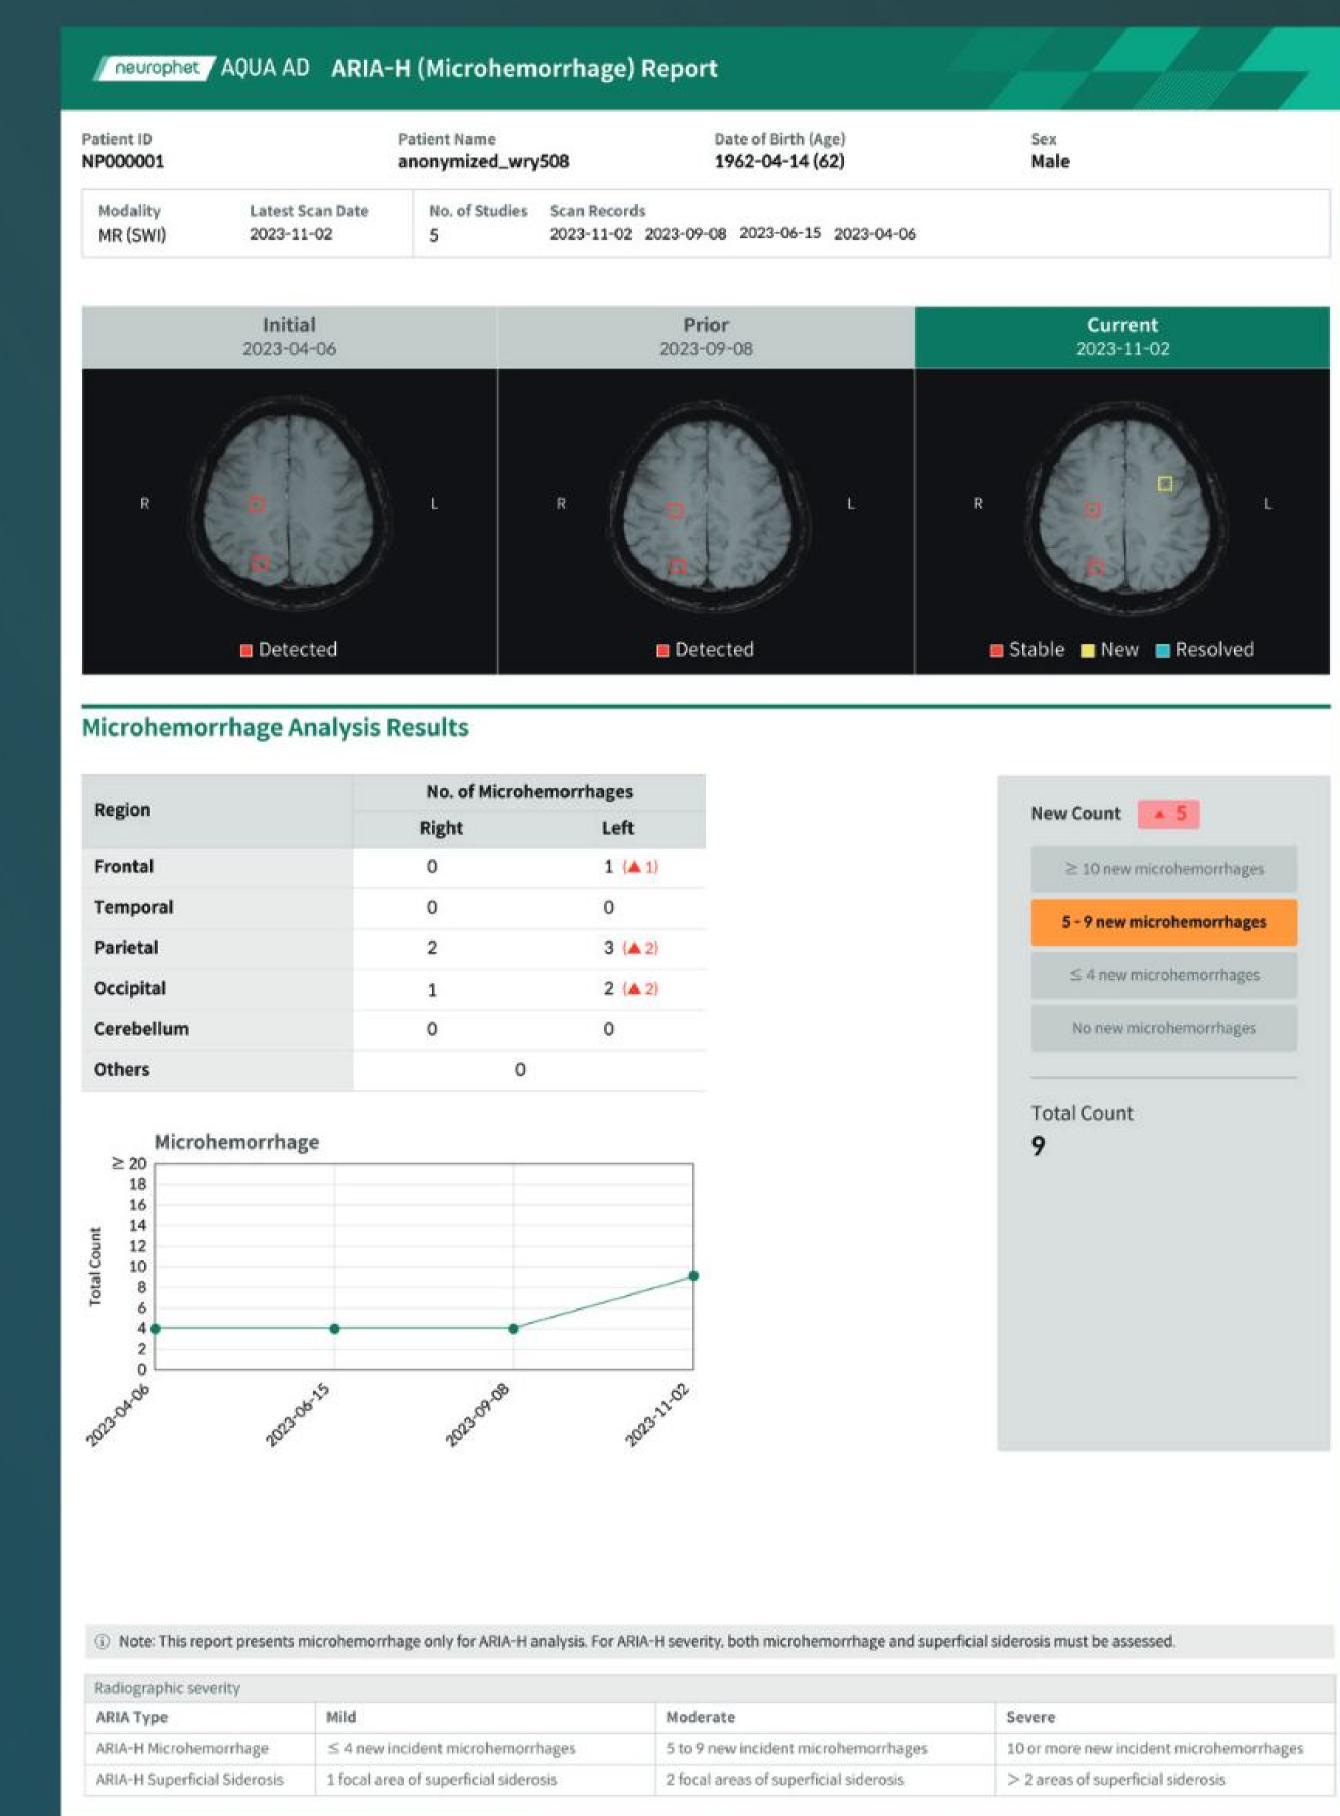

### Amyloid & Tau

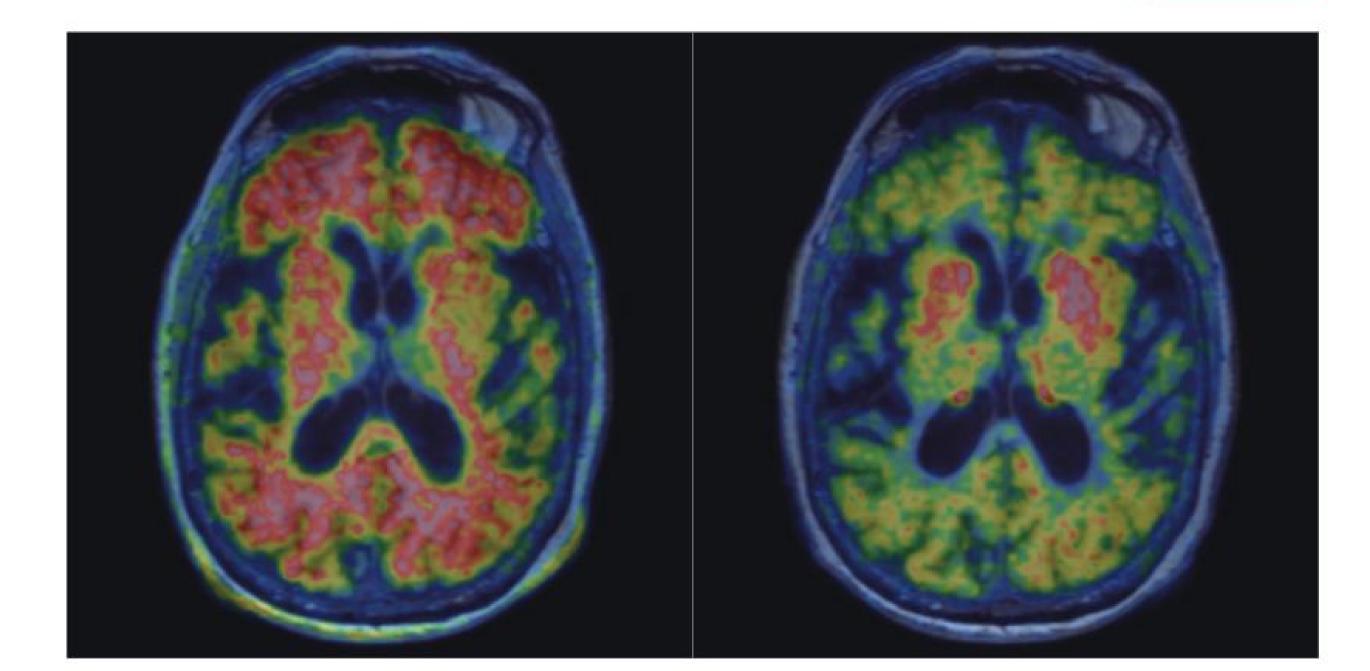




#### Automatic Longitudinal Analysis

- · Centiloid Scale and Global SUVR
- Amyloid Positivity
- · Braak Stage SUVR

## Volume Tracking





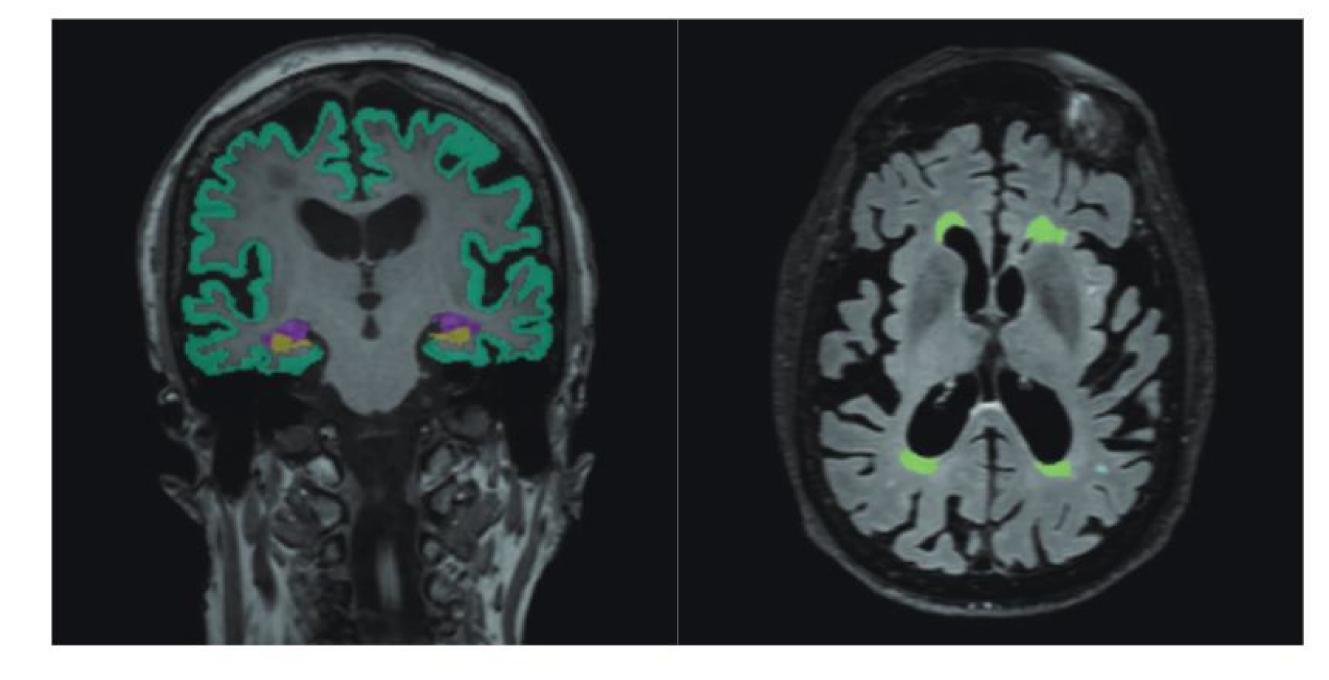

#### Volume Tracking

- Structural Volume
- White Matter Hyperintensity
- · Vascular Lesion