


FLEX1 US 11: flat length 17.079 mm = model path 15.008 + fold and foot 2.071

BOARD END OF THE RIBBON: LAND NUMBERS AND NETS

detail, 4 x the ribbon view on this sheet, same face up (land face F.Cu, it lies on J_BAND_A on the ring board)
big number = land number, small text = net

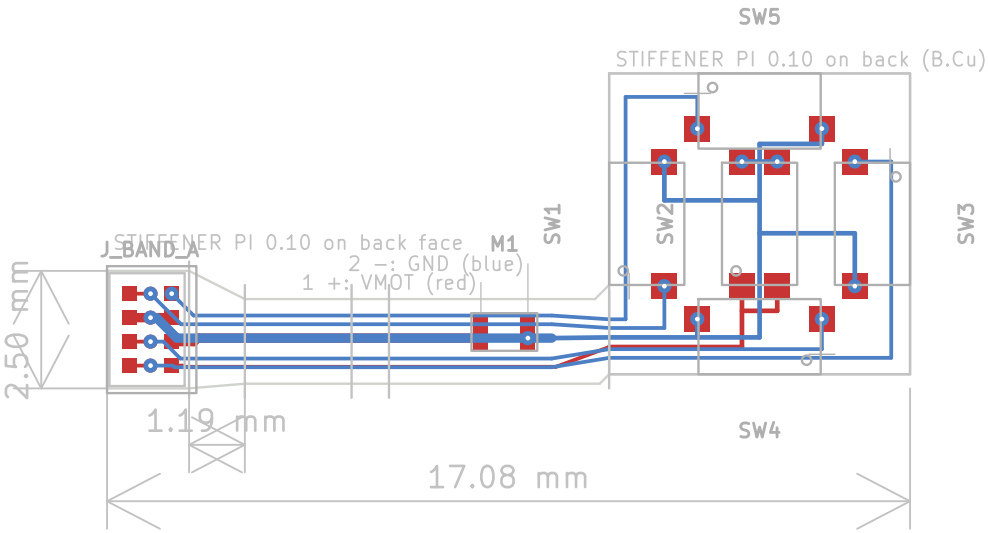

J_BAND_A lands (band−interface.md section 2):
LAND 1 = JOY_UP (UP, far row)
LAND 2 = JOY_DOWN (DOWN, far row)
LAND 3 = JOY_LEFT (LEFT, far row)
LAND 4 = JOY_RIGHT (RIGHT, near row)
LAND 5 = BTN_REC (CENTRE, near row)
LAND 6 = GND (MOT−, far row)
LAND 7 = VMOT (MOT+, near row)
LAND 8 = GND (GND, near row)

MOTOR LANDS (M1): land 1 = + (VMOT, red lead), the land nearer the slot;
land 2 = − (GND, blue lead). Marked 1 + and 2 − in the ribbon view.
PASTE: F_Paste, 12 openings 0.55 x 0.55 on the switch lands, stencil 0.08 mm.
PANEL: rails 5 mm; three 1 mm fiducials on the switch face (F),
centred 3.85 mm from the panel edges, not in a line (process.md P7).
Fab notes: fab/flex1−us11/flex1−us11−fab−notes.txt