
BOARD END OF THE RIBBON: LAND NUMBERS AND NETS

detail, 4 x the ribbon view on this sheet, same face up (land face F.Cu, it lies on J_BAND_B on the ring board)
big number = land number, small text = net

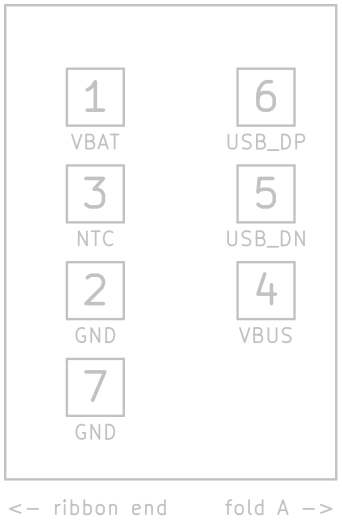

J_BAND_B lands (band-interface.md section 2):
LAND 1 = VBAT (CELL+, far row)
LAND 2 = GND (CELL-, far row)
LAND 3 = NTC (NTC, far row)
LAND 4 = VBUS (VBUS, near row)
LAND 5 = USB_DN (D-, near row)
LAND 6 = USB_DP (D+, near row)
LAND 7 = GND (GND, far row)

CELL TAB LANDS (PRT1), from the slot: P+ (VBAT, land 1 of J_BAND_B),
NTC (NTC, land 3), P- (GND, land 2). Named in the ribbon view.
PASTE: B_Paste, 4 round openings 0.58 on each disc land CP1 to CP4, stencil 0.08 mm.
PANEL: rails 5 mm; three 1 mm fiducials on the pad face (B),
centred 3.85 mm from the panel edges, not in a line (process.md P7).
Fab notes: fab/flex2-us11/flex2-us11-fab-notes.txt

FLEX2 US 11: flat length 37.033 mm = model path 34.962 + fold and foot 2.071

strip starts (flat, no fold on the pad strip)

FOLD B: 55.6 deg, r 0.755 centre line
FOLD A: 90 deg, inner radius 0.70, outer face (F.Cu) out

