

INSTALLATION MANUAL

LOP 65 – 85 -100 Fixtures



DOCUMENT FOR TECHNICAL INSTALLERS ONLY


Product: LOP 65-85-100 | **Review:** 1.0

PHASE 1 — Upper bracket installation

The first step of the installation is to anchor the upper bracket to the wall. The bracket serves as the main support point for the fixture.

Procedure

1. Locate the position of the button panel on the wall, and mark the position of the upper bracket as shown in the figure:

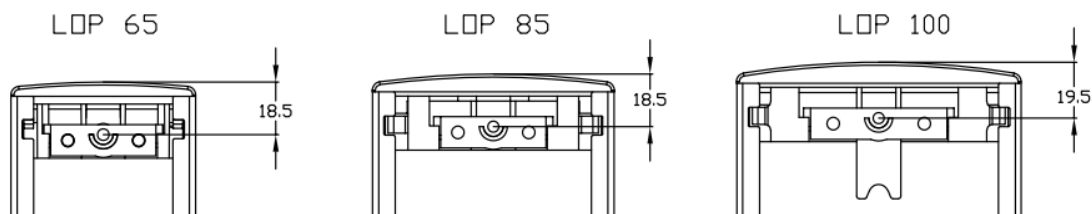

2. Take the upper bracket from the mounting kit.
3. Position it correctly: the side marked "TOP" must face upwards (Fig. 1).
4. Insert the central screw and check that the bracket is horizontally aligned using a spirit level.
5. Complete the installation by tightening the remaining screws

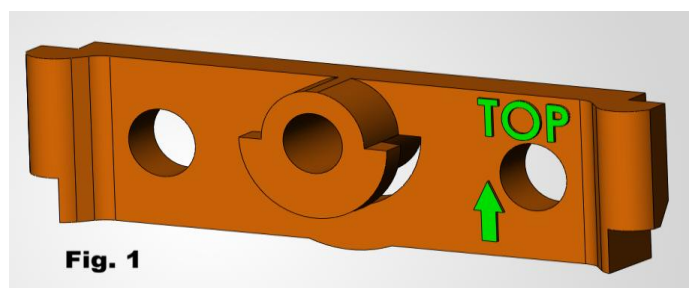


Fig. 1 — Upper bracket: note the "TOP" marking, which indicates the side that must face upwards.

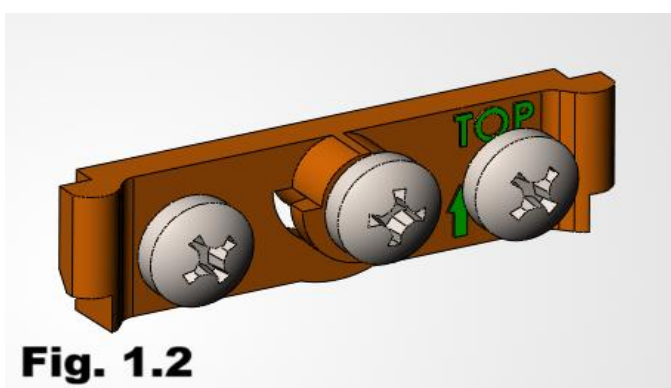
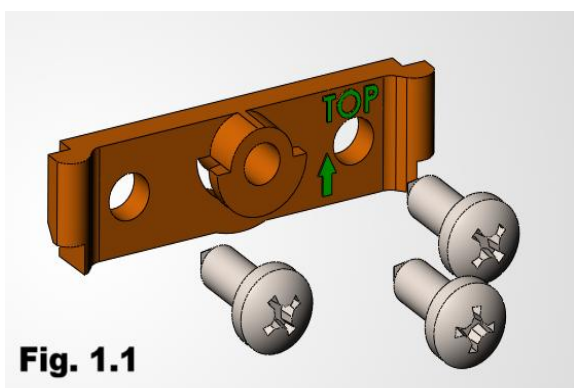


Fig. 1.1 / 1.2 — Screw fastening sequence: first the central screw, then the side screws

⚠ WARNING: Use anchoring systems suitable for the type of wall substrate (wall plugs, screws, etc.) and appropriate for the weight of the equipment.

PHASE 2 — Preparation of the Fixture and Positioning of the Lower Bracket

At this stage, the components to be mounted on the fixture (lower bracket and tailpiece) are prepared, and the position of the lower bracket on the wall is determined.

Necessary components

- Part. A — Lower bracket (Included in the mounting kit)
- Part. B — "Tailpiece" (Included in the mounting kit)

Procedure

1. Take the fixture and the lower bracket (Part. A).
2. Join the two components: insert the bracket tabs into the corresponding slots on the lower end of the fixture (Fig. 2 e 2.1).
3. Take the "Tailpiece" (Part B) and insert it into the corresponding slot on the upper end of the fixture (Fig. 2.).

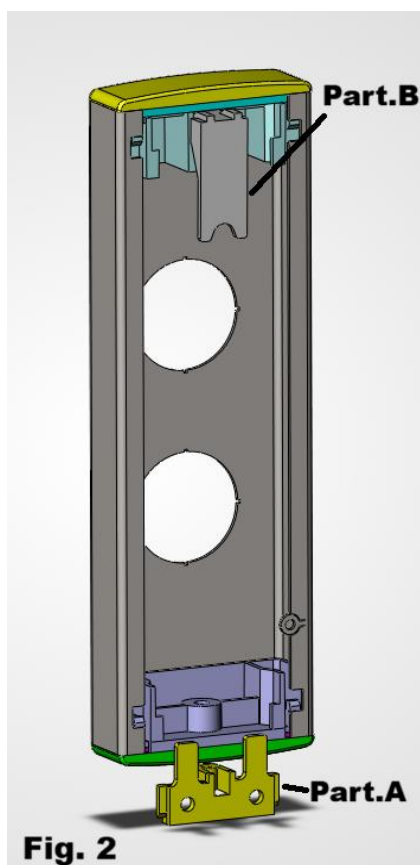


Fig. 2—Fixture with Part.A (Lower bracket) and Part.B (Tailpiece)

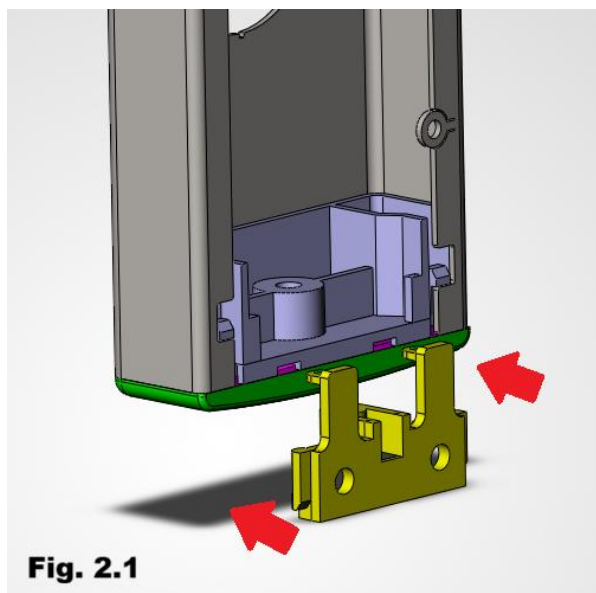


Fig. 2.1 — Insertion of the lower bracket tabs into the corresponding slots

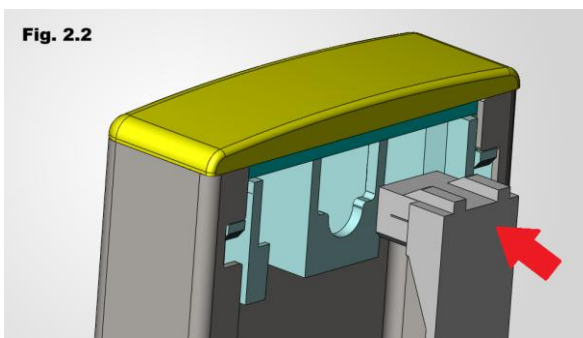


Fig. 2—Insertion of the tailpiece (Part.B) into the upper end

PHASE 3 — Join with the Upper Bracket and Fastening of the Lower Bracket

With the fixture prepared (lower bracket and tailpiece installed), temporarily attach it to the upper bracket already mounted on the wall, then permanently secure the lower bracket.

Procedure:

1. Move the fixture closer to the upper bracket fixed to the wall.
2. Insert the tailpiece into the corresponding engagement slot on the upper bracket (Fig. 3).
3. Check that the connection is secure: the fixture must remain supported without any external support (Fig. 3.1).
4. With the fixture in position, check that it is vertically aligned using a spirit level (Fig. 3.2).
5. Secure the lower bracket (Part. A) to the wall using suitable anchoring systems (Fig. 3.2).

⚠ WARNING: Always make sure that the fixture is perfectly vertical before proceeding with the fastening of the lower bracket. A spirit level must be used.

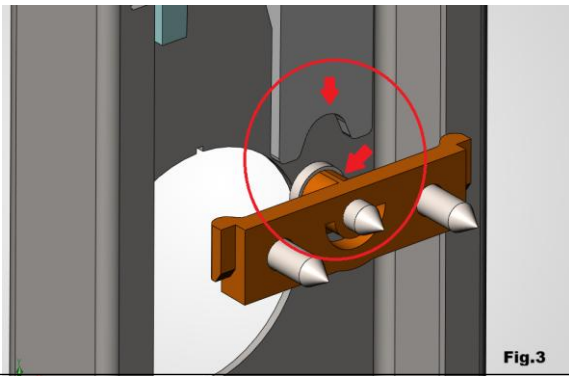


Fig. 3 — Insertion of the tailpiece into the upper bracket

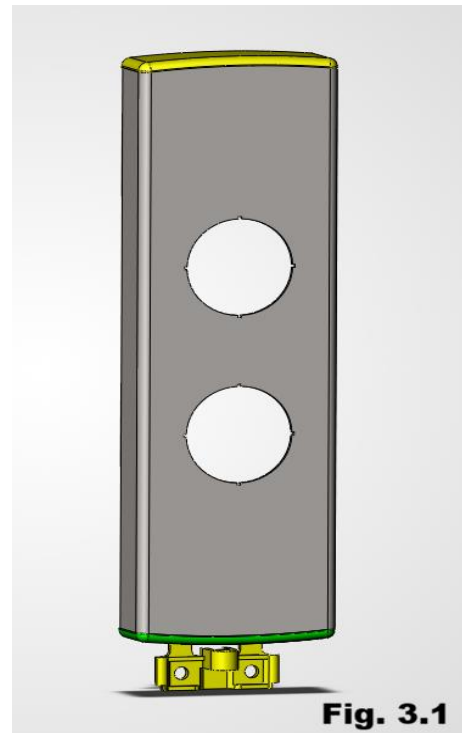


Fig. 3.1 — Fixture temporarily supported in position

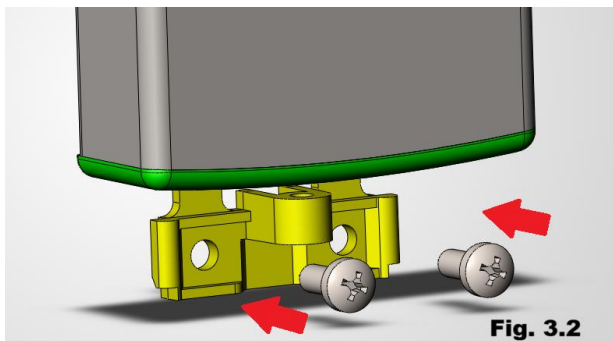


Fig. 3.2 — Fastening of the lower bracket to the wall (check vertical alignment using a spirit level)

PHASE 4 — Final Securing of the fixture to the Brackets

Final step: remove the auxiliary tailpiece, permanently attach the fixture to both brackets, and tighten the locking screw.

Procedure

1. Detach the fixture from the brackets and remove the tailpiece (Part B) from the upper end (Fig. 4).
2. Reattach the fixture to the upper bracket using the corresponding slot on the upper end (Fig. 4.1).
3. Gently push the fixture upwards and press it against the wall until the lower bracket correctly engages with the corresponding slot on the lower end. (Fig. 4.2).
4. Using a phillips screwdriver, tighten the locking screw located in the lower area of the lower end until it is fully tightened. (Fig. 4.3 e 4.3.1).
5. Check that the fixture is securely fixed, with no play or disagreeable movement.

⚠ WARNING: Do not omit tightening the locking screw (Fig. 4.3). A fixture that is not properly secured may detach from the wall and cause damage or injury.

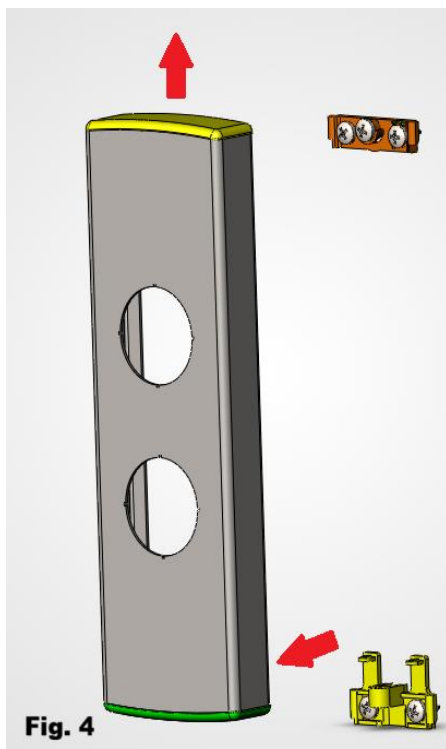


Fig. 4 — Removal of the tailpiece and detachment of the fixture

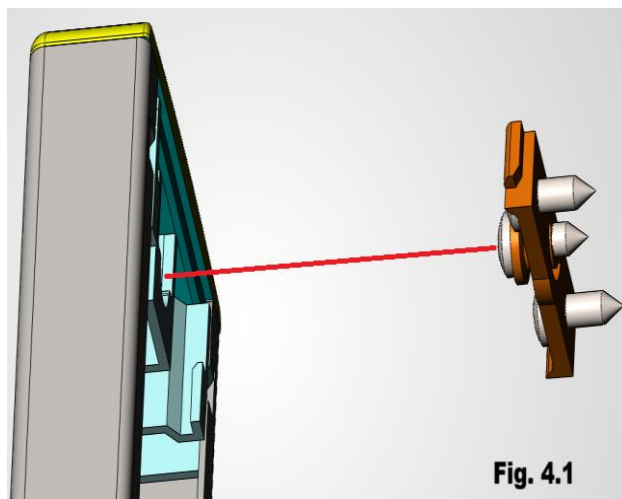


Fig. 4.1 — Reattachment to the upper bracket

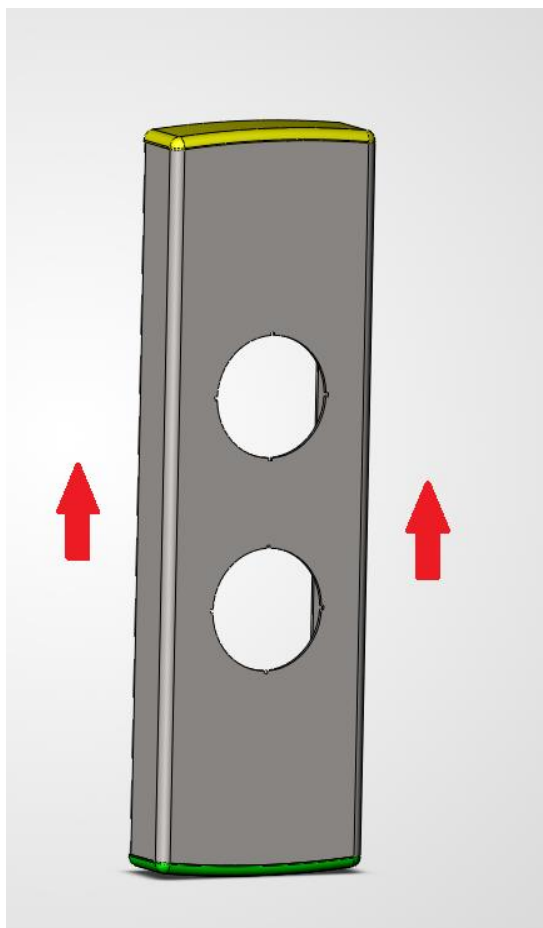


Fig. 4.2 — Push upwards to engage the lower bracket

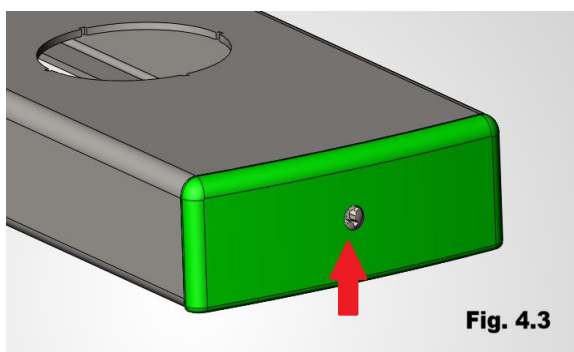


Fig. 4.3

Fig. 4.3 — Lower locking screw (tighten with a Phillips screwdriver)

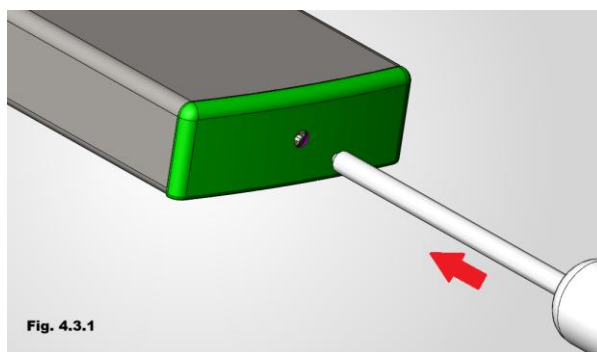


Fig. 4.3.1

Fig. 4.3.1 — Locking screw tightening detail