


NEXUSLifts

MANUAL INSTALLATION

[DISPLAY]

Parallel LCD-L Display

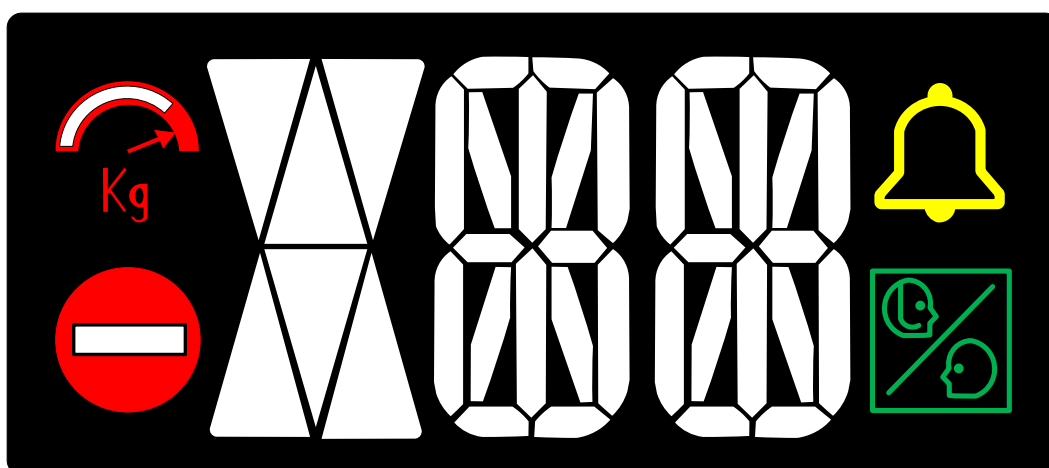

Item Number
LCD_L_PAR

Document Revision
Rev. 1.0


Language
ENGLISH

Date
30/08/2026

TECHNICAL DATA

Viewable area	127.3x60.3 mm
Graphics	LCD, black background, white digits
Operating Temperature	0°C ÷ 60°C
Alarms	Out of service, overload, alarm in progress, alarm received
Power supply	12÷24 VDC ±10%
Consumption	Max 120mA
Inputs	16 digital inputs (dedicated common) 2 arrow inputs (dedicated common) 2 optoisolated inputs, alarm-in-progress and received
Operating modes	1 wire per floor (13 floors) Binary (64 floors) Binary Negated (64 floors) Gray (64 floors) 7 segments (-9÷29) Autonomous NO (64 floors) Autonomous NC (64 floors)

PINOUT

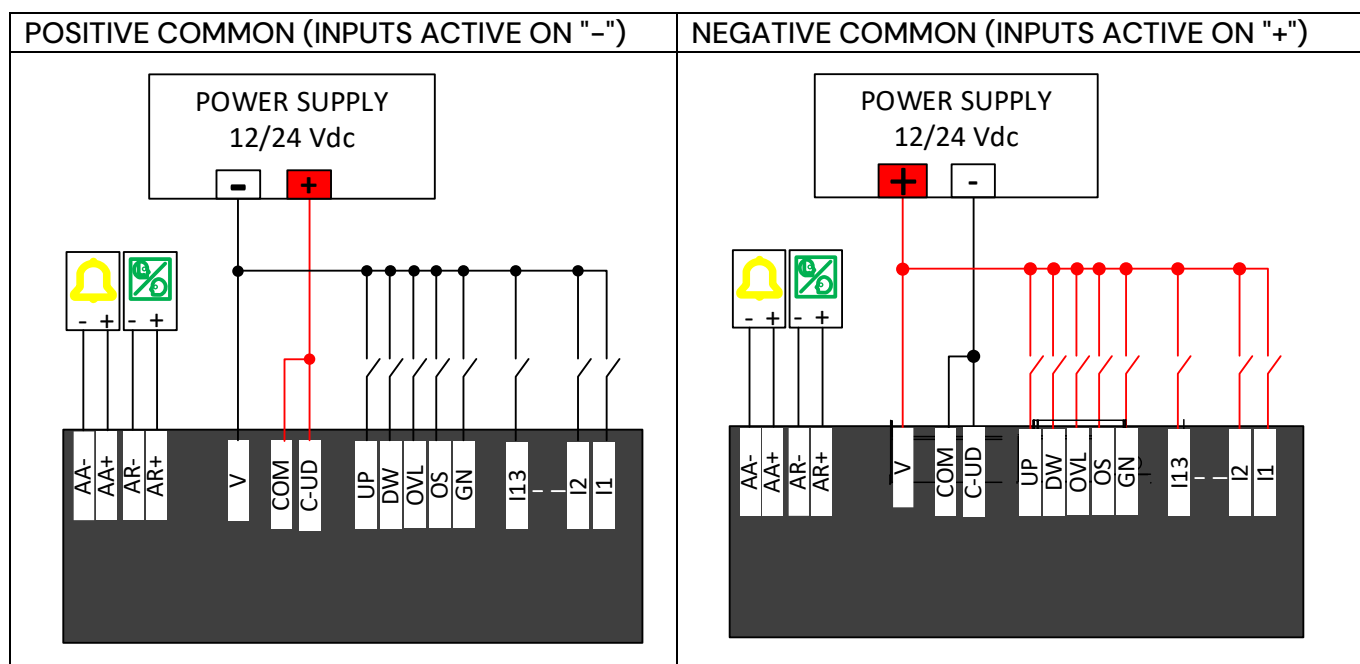

ONE POLE PER FLOOR (MENU MO=1W)

INPUT	I1	I2	I3	I4	I5	I6	I7	I8	I9	I10	I11	I12	I13
FLOOR	0	1	2	3	4	5	6	7	8	9	10	11	12

You can change the starting floor in the "OF" menu.

BINARY/ BINARY NEGATED/ GRAY

(MENU MO=B/BN/GR)

INPUT	I1	I2	I3	I4	I5	I6
BITS	A	B	C	D	E	F


You can change the starting floor in the "OF" menu.

7 SEGMENTS (MENU MO=7S)

INPUT	I1	I2	I3	I4	I5	I6	I7	I8	I9	I10
SEGMENT	A	B	C	D	E	F	G	" - "	1X	2X

AUTONOMOUS NO/NC (MENU MO=AO/AC)

INPUT	I1	I2
SENSOR	TOP	LOWER

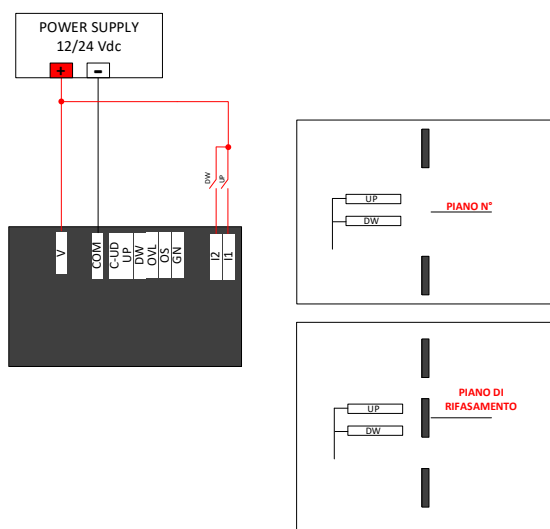

MENU


Programming buttons:

OK: To enter the menu (press >0.5 s)


▲: change menu/value

Menu	Description	Range	Default
FL	Floor address for the management of arrows of the next direction 0=lowest floor; 1= second floor... (arrows only to the programmed floor) 56=car (arrows on all floors)	0÷56	56
MO	Set the working mode: 1W=One pole per floor B=Binary BN=Binary Negated Gr= gray 7S= 7 segments AO= autonomous NO AC= Autonomous NC DE=Demo	1W-B- BN-GR- 7S-AO- AC-DE	1W
OF	Set up starting floor. For AO/AC mode, set the sync floor.	-9÷20	0
SY	Floor Symbols: Select the floor to which you want to change the symbol. Select the left symbol and then the right symbol.	0÷9...A÷Z	-9÷64
DB	Input Debounce :1= 100 ms, 2= 200ms.....10=1 s.	1÷10	1
SB	Stand by. The backlight turns off after the programmed time: 0= Standby Off, Always On 1= 1 minute, 2= 2 minutes ...	0÷60	30
VO	Buzzer volume. 0= off...10= max	0÷10	10
GO	Gong on Turning Arrows 0= Off (Arrow Animation Only) 1= active (up arrow + 1 tone, down arrow + 2 tones)	0÷1	0


DISPLAY SIZE

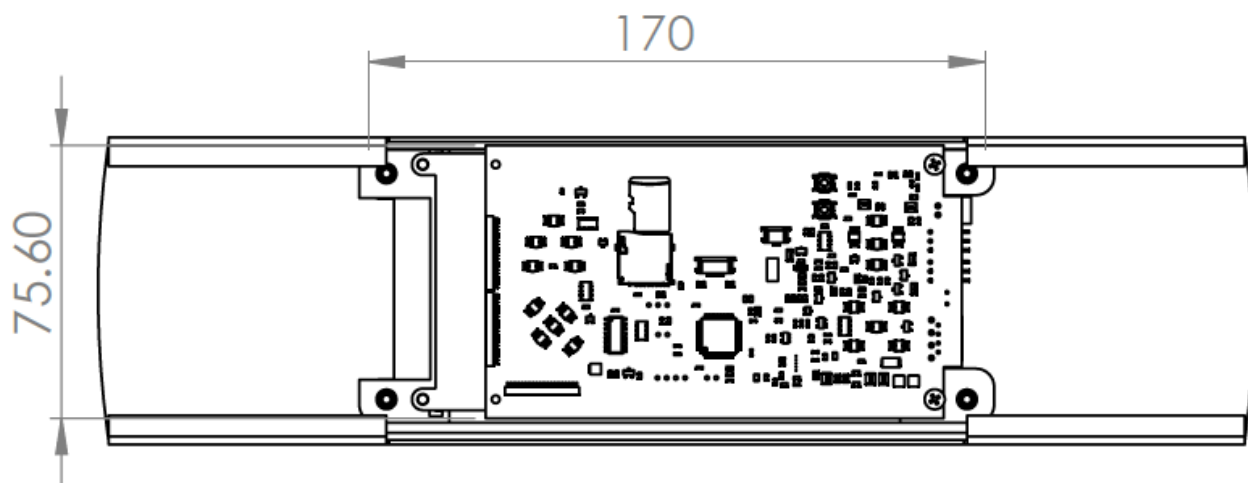

Cutout

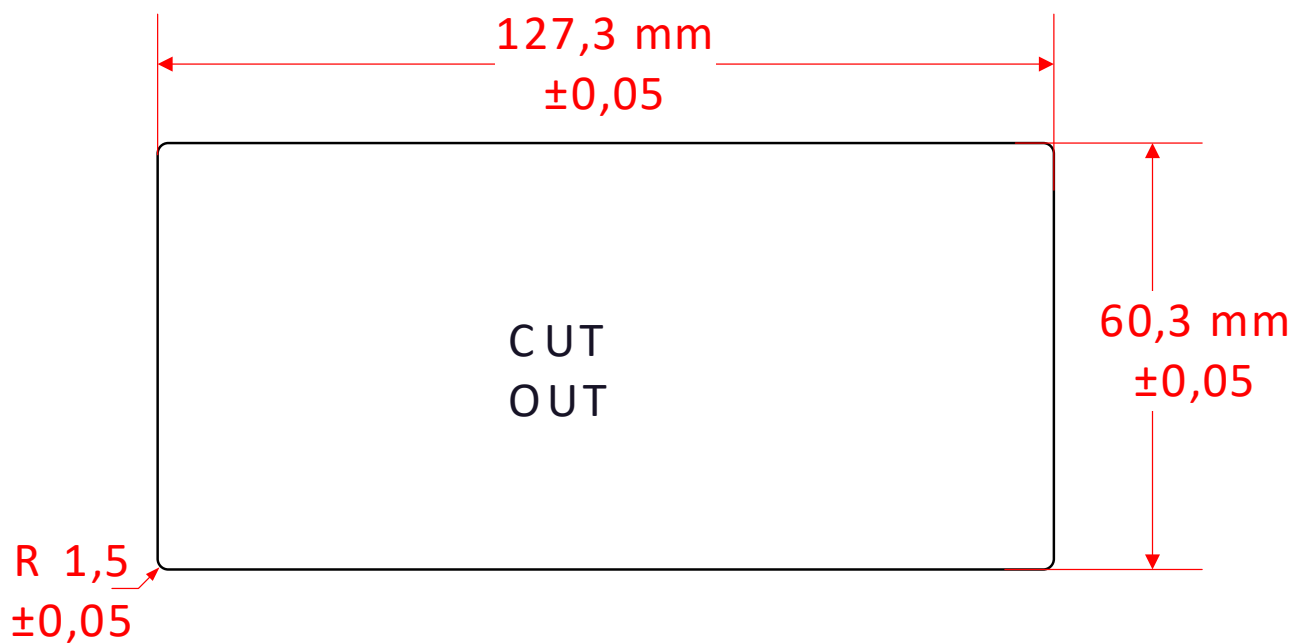


2mm PLATE MOUNTING

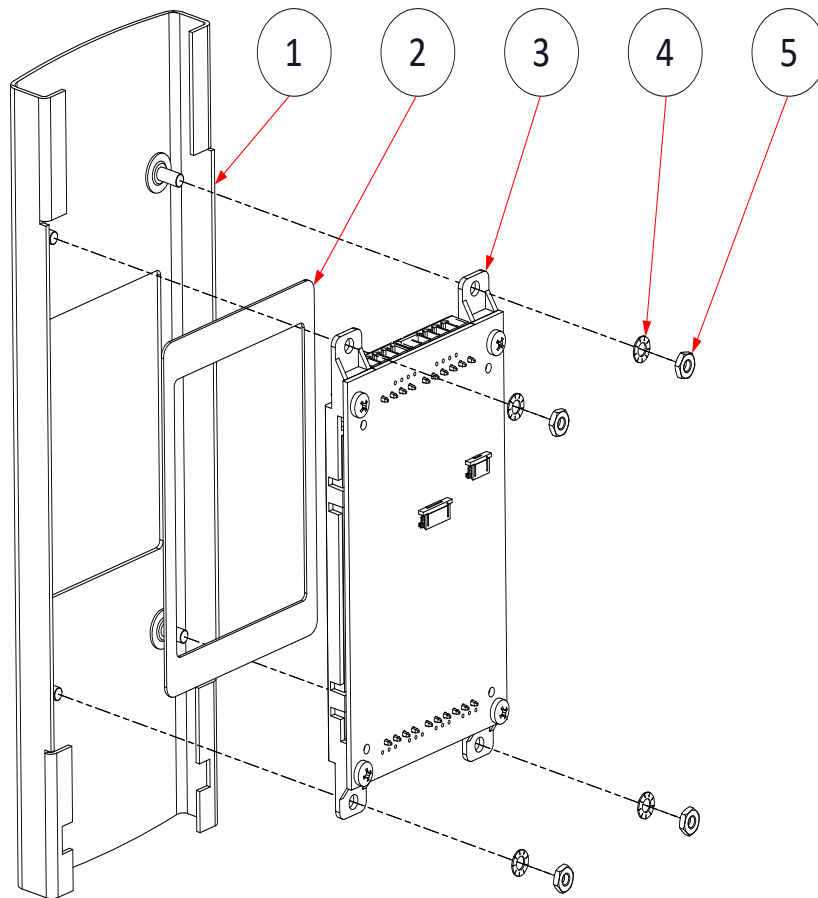


- Insert the spacer (2) onto the display (3);
- Insert the display (3+2) onto the plate (1);
- Insert the washers (4) and secure it with the 4 nuts (5).

PEM POSITION

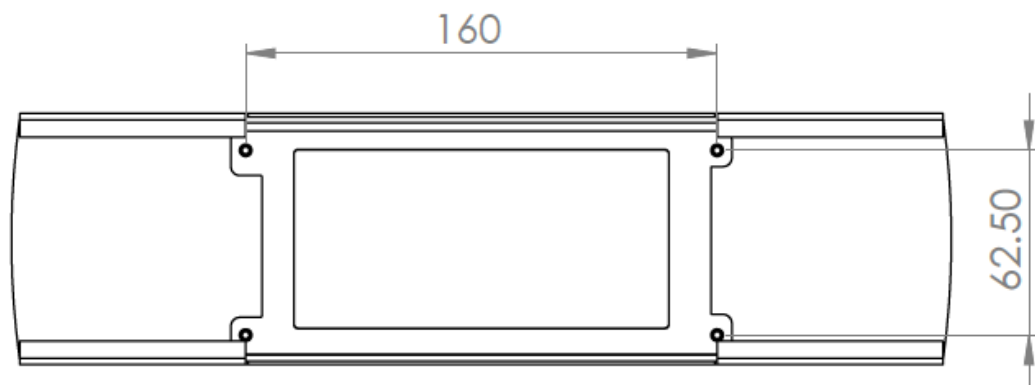

1.2mm PLATE MOUNTING

Bracket with double-sided adhesive (0.8 mm)

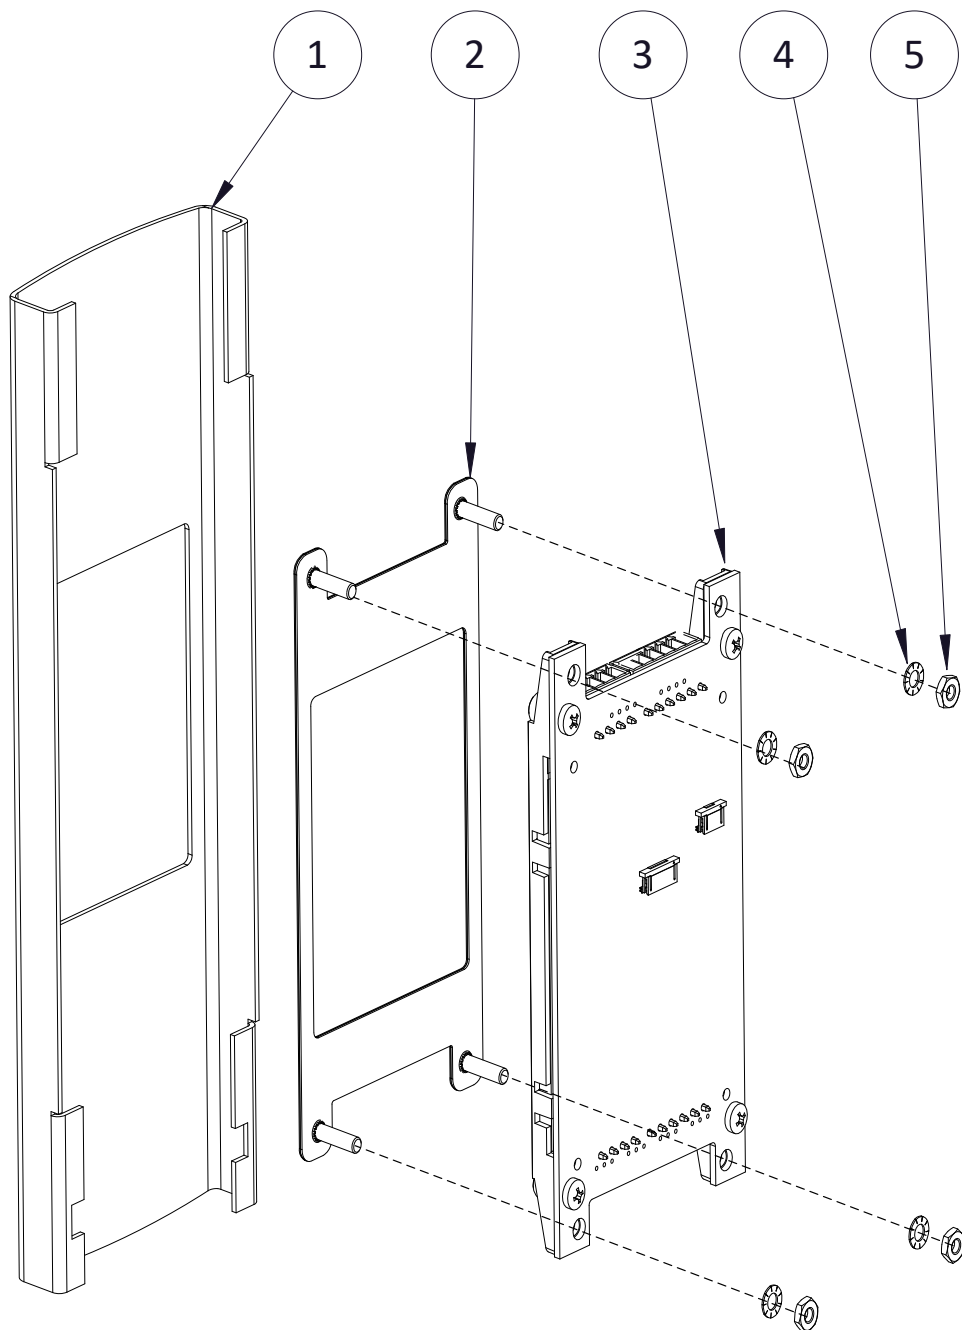

Fix the fixing bracket (2) on the plate (1) using the double-sided adhesive.
Insert the display (3) onto the bracket (2), insert the washers (4) and secure it with the 4 nuts (5)

NEXUSLifts

via Breda, 52 Civitanova Marche (MC)

Italy

info@nexus-lifts.com

p.IVA 02178670432

nexus-lifts.com