

INSTALLATION MANUAL

COP 200 Car Operating Panel



DOCUMENT FOR TECHNICAL INSTALLERS ONLY


Product: COP 200 | **Review:** 1.0

PHASE 1 — Upper bracket installation

The first step of the installation is to anchor the upper bracket to the wall. The bracket serves as the main support point for the COP.

Procedure

Locate the position of the COP on the wall, and mark the position of the upper bracket as shown in the figure:

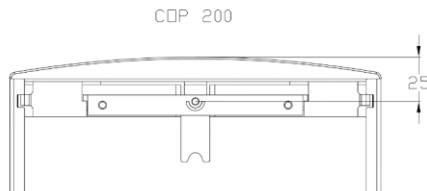

2. Take the upper bracket from the mounting kit.
3. Position it correctly: the side marked "TOP" must face upwards (Fig. 1).
4. Insert the central screw and check that the bracket is horizontally aligned using a spirit level.
5. Complete the installation by tightening the remaining screws

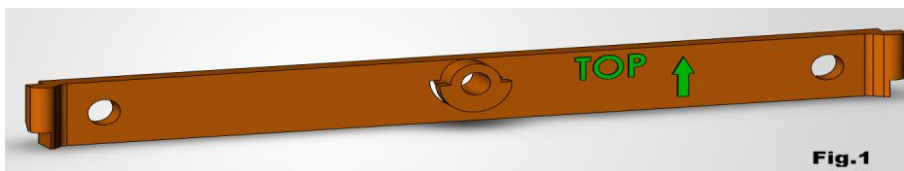


Fig. 1 — Upper bracket: note the "TOP" marking, which indicates the side that must face upwards.


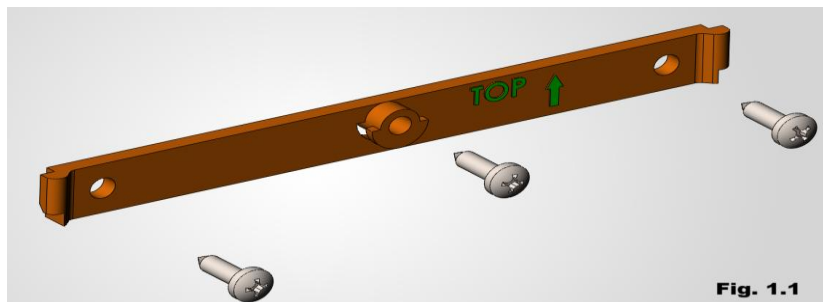


Fig. 1.1 / 1.2 — Screw fastening sequence: first the central screw, then the side screws

⚠ WARNING: Use anchoring systems suitable for the type of wall substrate (wall plugs, screws, etc.) and appropriate for the weight of the equipment

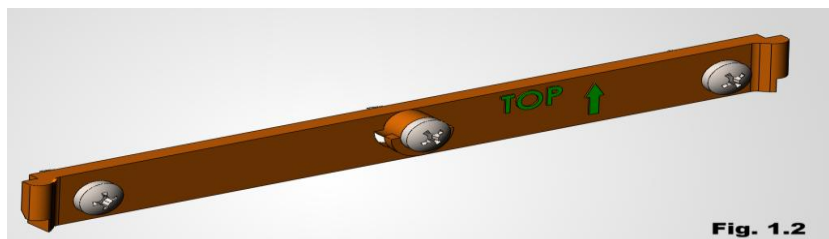

PHASE 2 — Preparation of the COP and Positioning of the Lower Bracket

At this stage, the components to be mounted on the COP (lower bracket and tailpiece) are prepared, and the position of the lower bracket on the wall is determined.

Necessary components

- Part. A — Lower bracket (Included in the mounting kit)
- Part. B — "Tailpiece" (included in the upper end of the 200 version)

Procedure

1. Take the COP and the lower bracket (Part. A).
2. Join the two components: insert the bracket tabs into the corresponding slots on the lower end of the COP (Fig. 2 e 2.1).

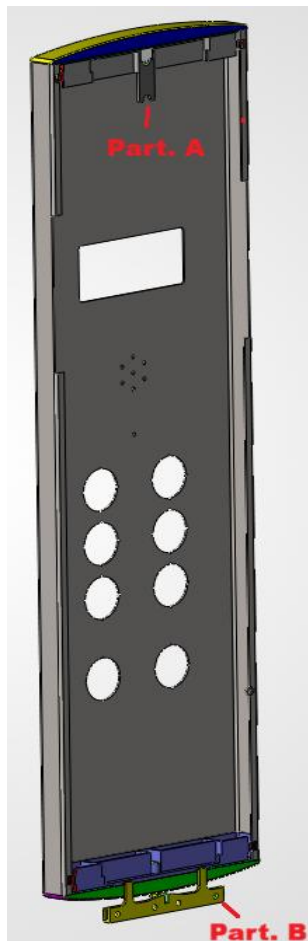


Fig. 2—COP with Part.A (Lower bracket) and Part.B (Tailpiece)

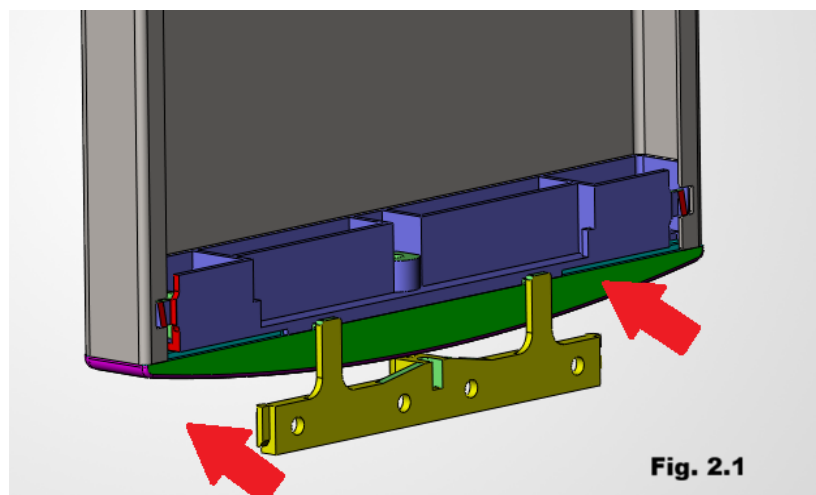


Fig. 2.1 — Insertion of the lower bracket tabs into the corresponding slots

PHASE 3 — Join with the Upper Bracket and Fastening of the Lower Bracket

With the COP prepared (lower bracket and tailpiece installed), temporarily attach it to the upper bracket already mounted on the wall, then permanently secure the lower bracket.

Procedure:

1. Move the COP closer to the upper bracket fixed to the wall.
2. Insert the tailpiece into the corresponding engagement slot on the upper bracket (Fig. 3).
3. Check that the connection is secure: the COP must remain supported without any external support (Fig. 3.1).
4. With the COP in position, check that it is vertically aligned using a spirit level (Fig. 3.2).
5. Secure the lower bracket (Part. A) to the wall using suitable anchoring systems (Fig. 3.2).

⚠ WARNING: Always make sure that the COP is perfectly vertical before proceeding with the fastening of the lower bracket. A spirit level must be used.

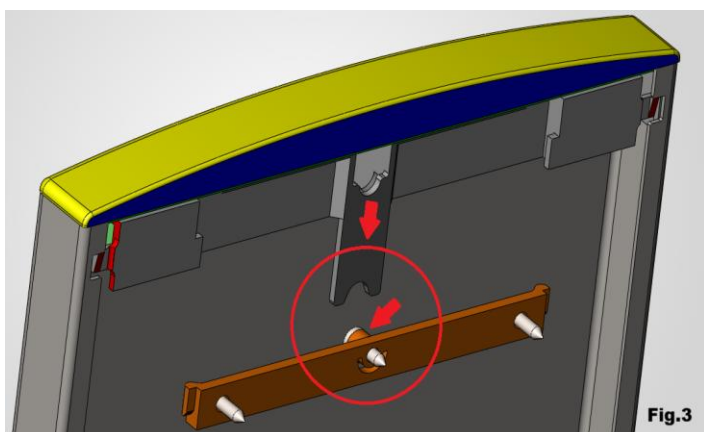


Fig. 3 — Insertion of the tailpiece into the upper bracket

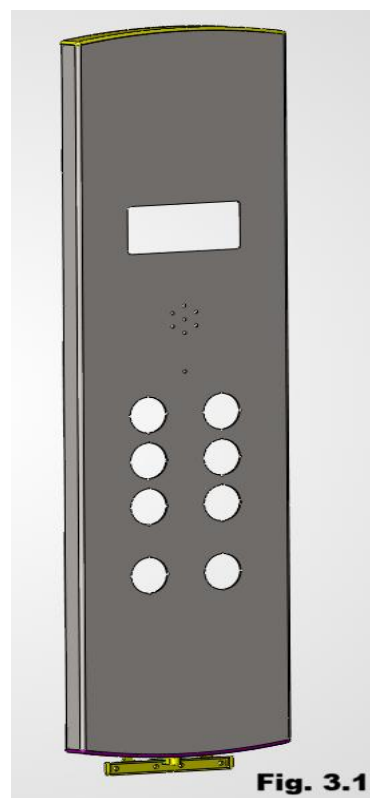


Fig. 3.1 — COP temporarily supported in position

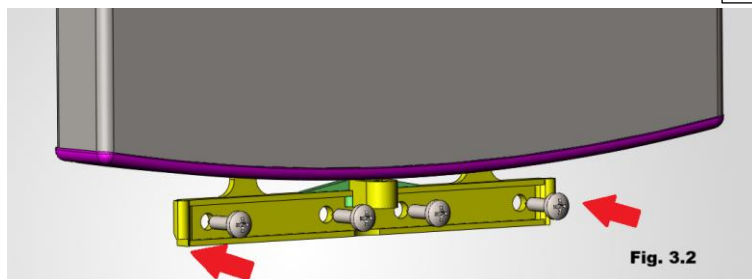


Fig. 3.2 — Fastening of the lower bracket to the wall (check vertical alignment using a spirit level)

PHASE 4 —Final Securing of the COP to the Brackets

Final step: remove the auxiliary tailpiece, permanently attach the COP to both brackets, and tighten the locking screw.

Procedure

1. Detach the COP from the brackets and remove the inferior part of the tailpiece (Part B) from the upper end (Fig. 4).
2. Reattach the COP to the upper bracket using the corresponding slot on the upper end (Fig. 4.1).
3. Gently push the COP upwards and press it against the wall until the lower bracket correctly engages with the corresponding slot on the lower end (Fig. 4.2).
4. Using a phillips screwdriver, tighten the locking screw located in the lower area of the lower end until it is fully tightened (Fig. 4.3 e 4.3.1).
5. Check that the COP is securely fixed, with no pay or disagreeable movement.

⚠ WARNING: Do not omit tightening the locking screw (Fig. 4.3). A COP that is not properly secured may detach from the wall and cause damage or injury.

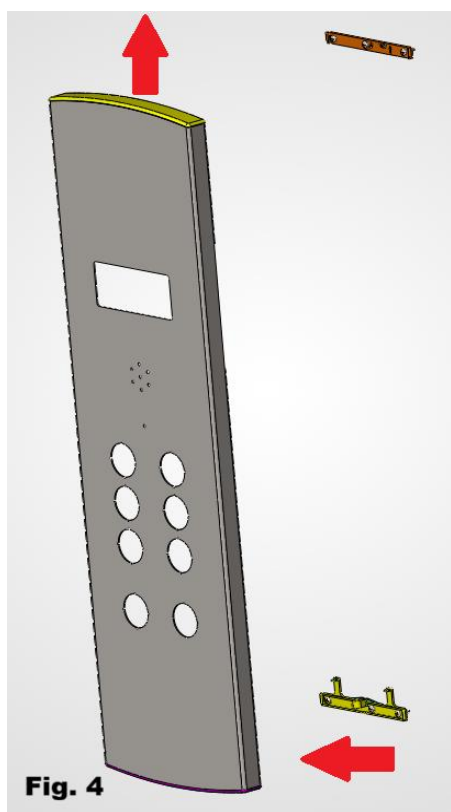


Fig. 4 — Removal of the tailpiece and detachment of the COP

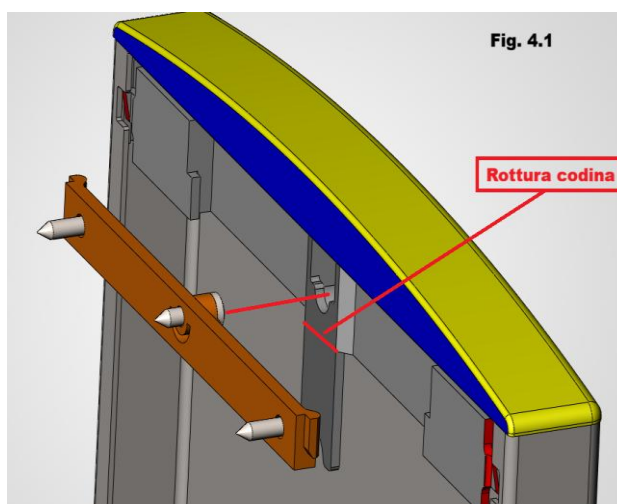


Fig. 4.1 — Reattachment to the upper bracket

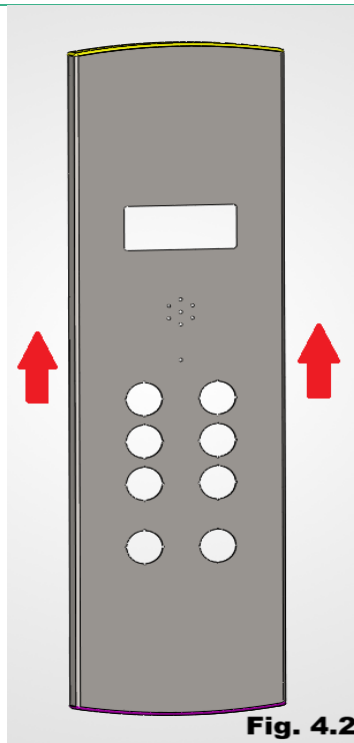


Fig. 4.2

Fig. 4.2 — Push upwards to engage the lower bracket

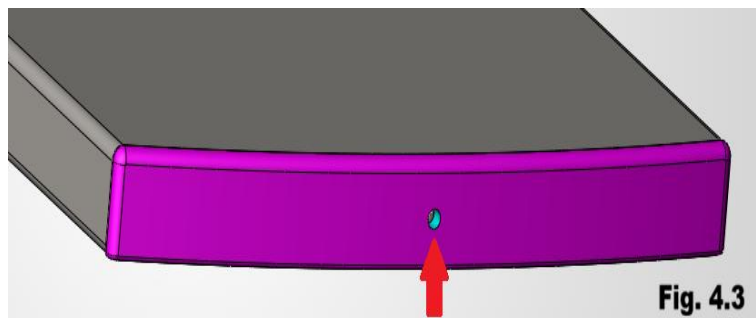


Fig. 4.3

Fig. 4.3 — Lower locking screw (tighten with a Phillips screwdriver)

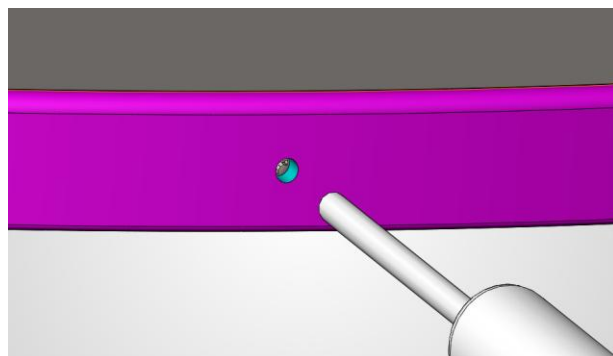


Fig. 4.3.1 - Locking screw tightening detail