

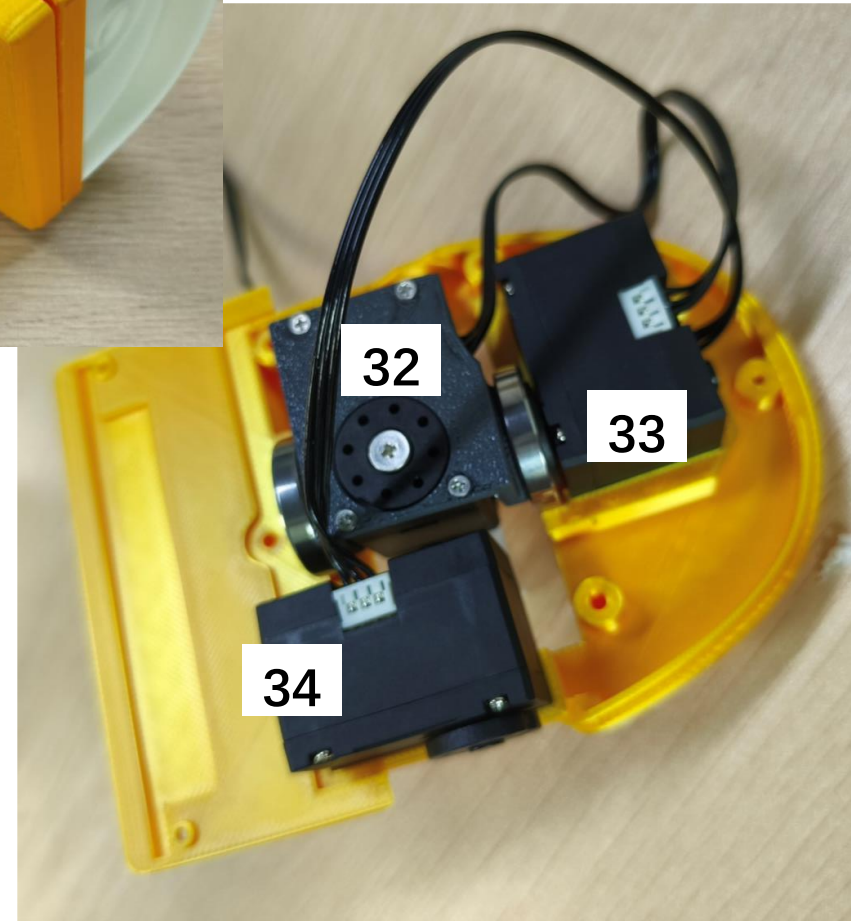
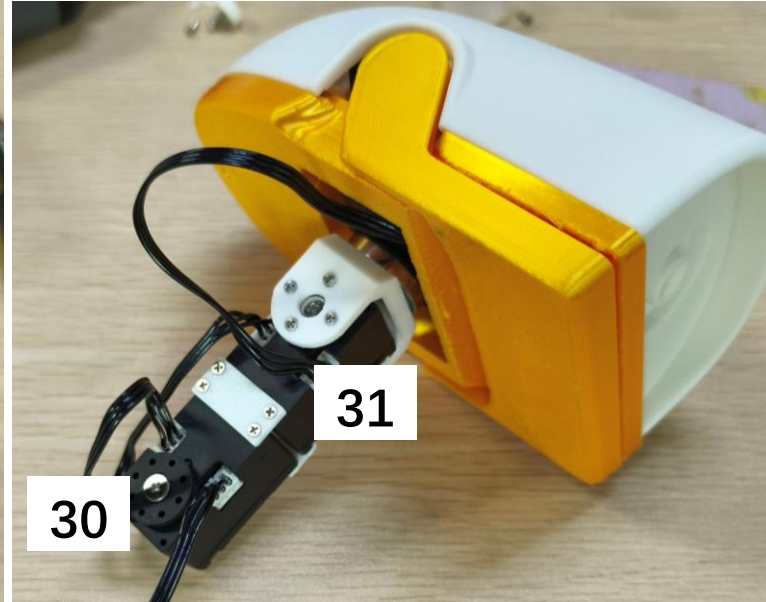
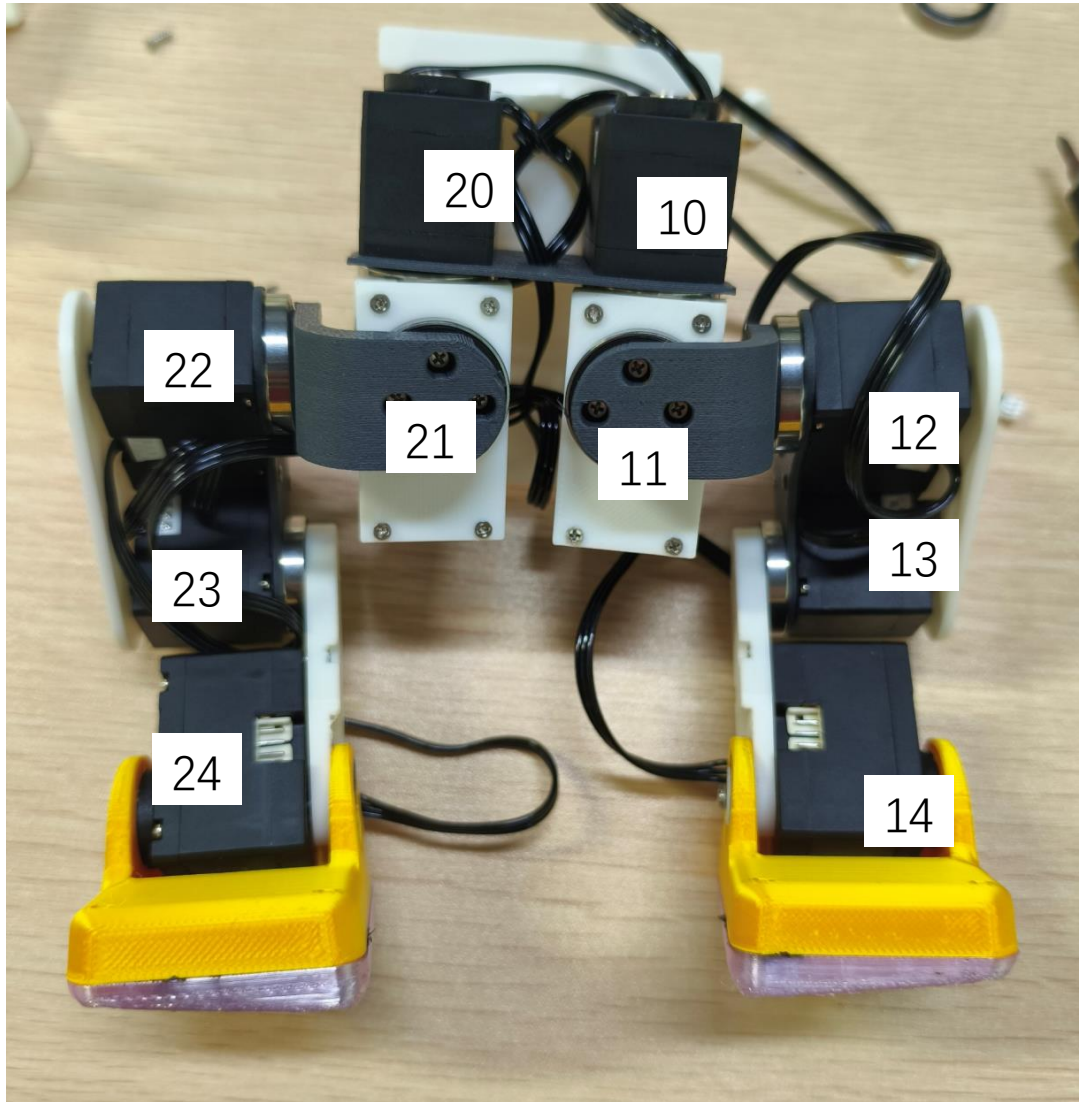




Change Servo ID



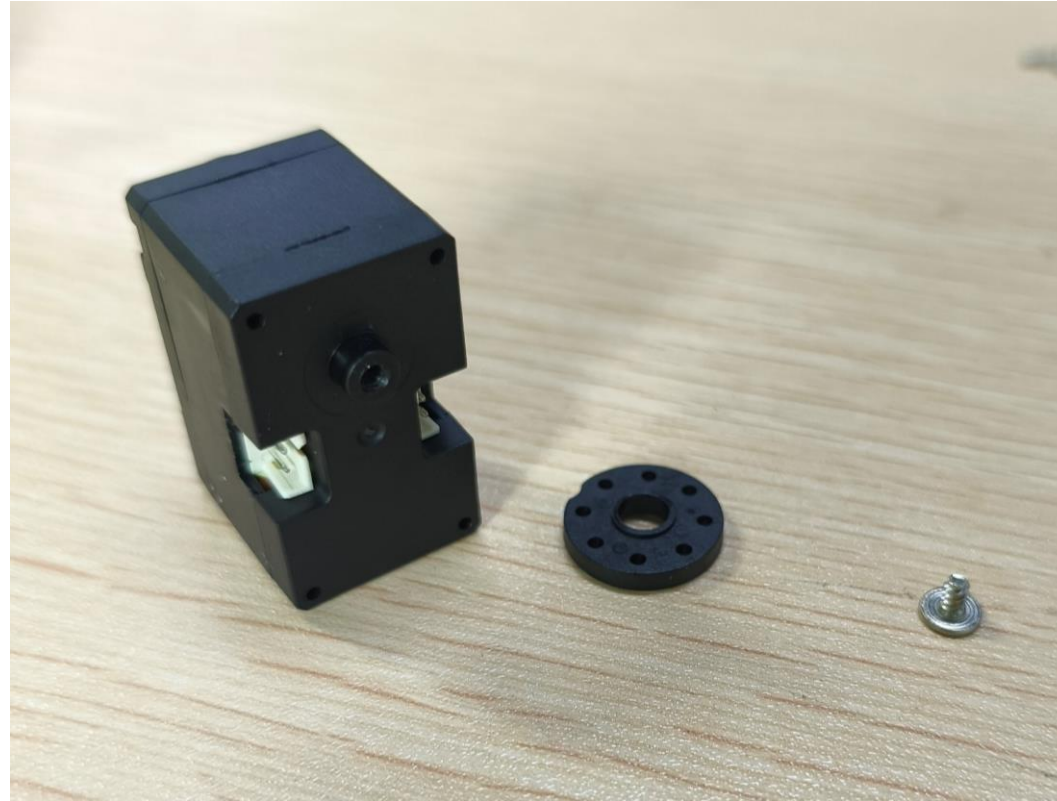




Remove the secondary shafts from all servos except **ID30** and **ID31**.
Not the output shaft!

Servos ID10, ID20, and ID32 can be removed optionally.


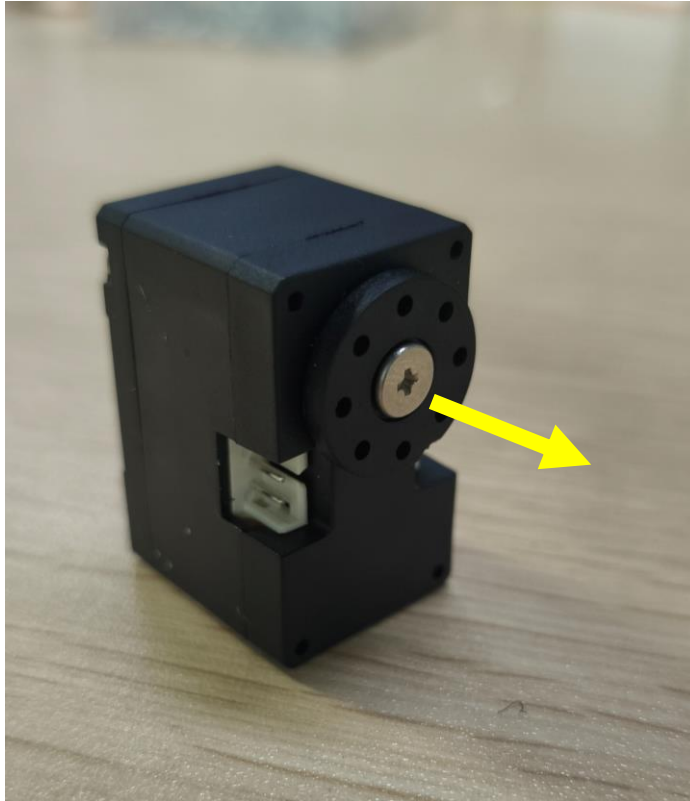


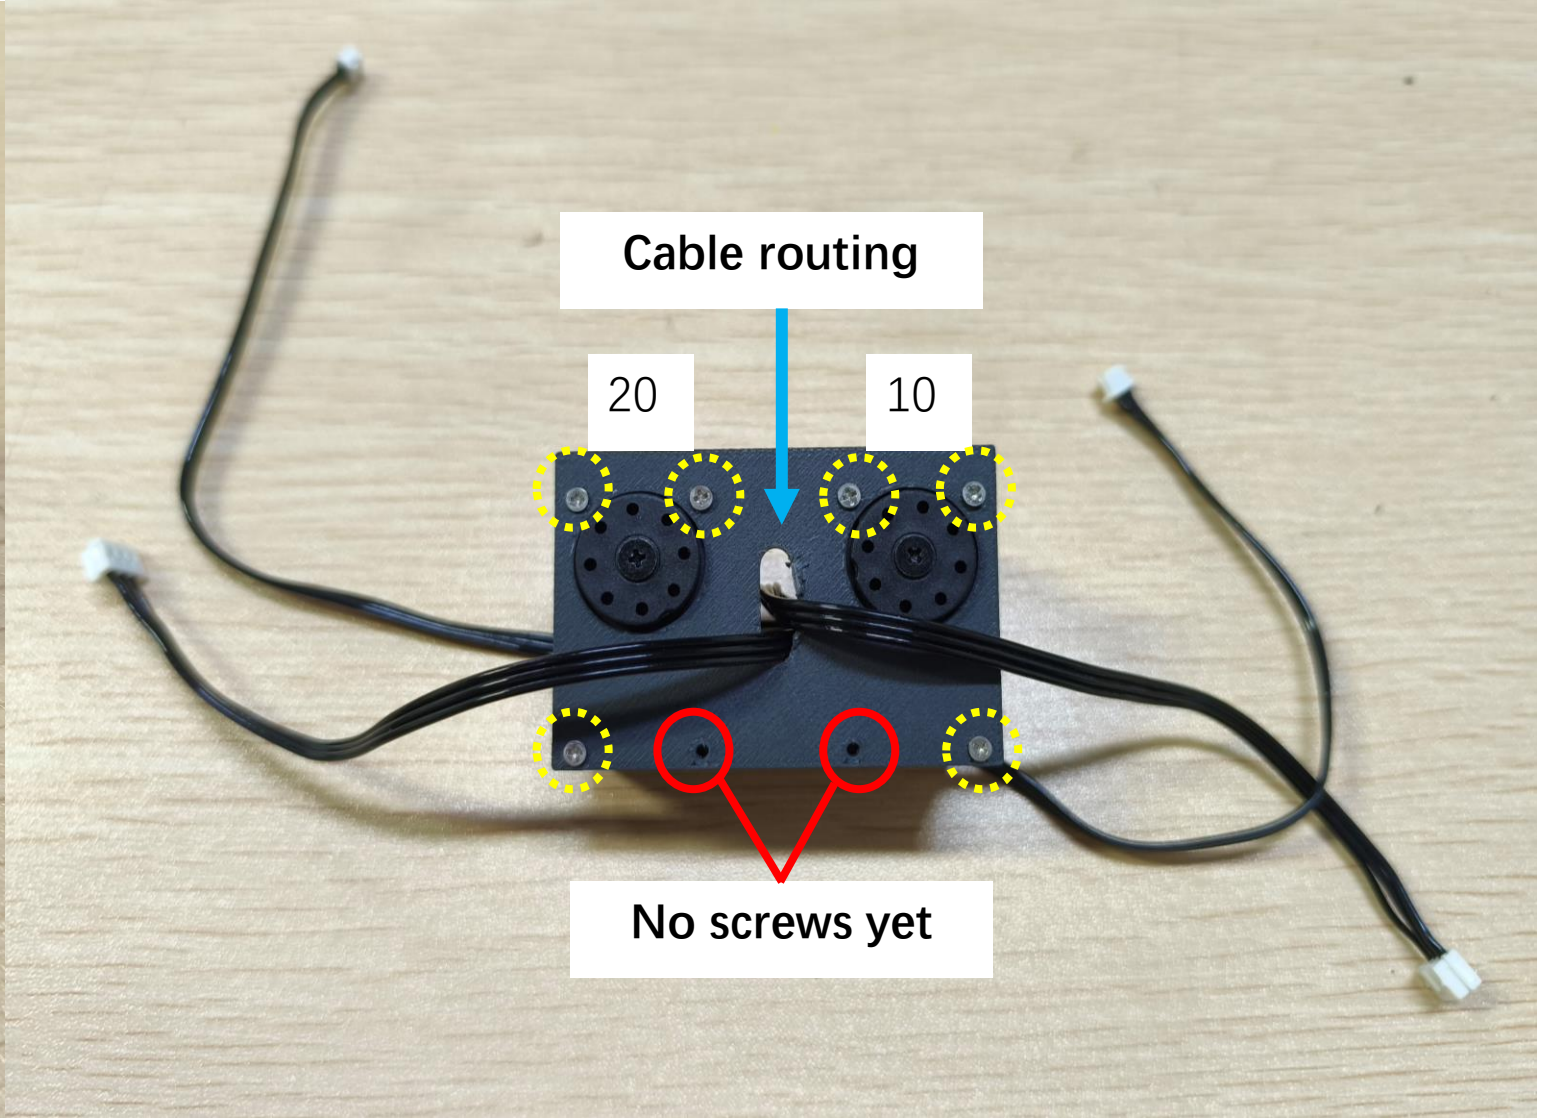
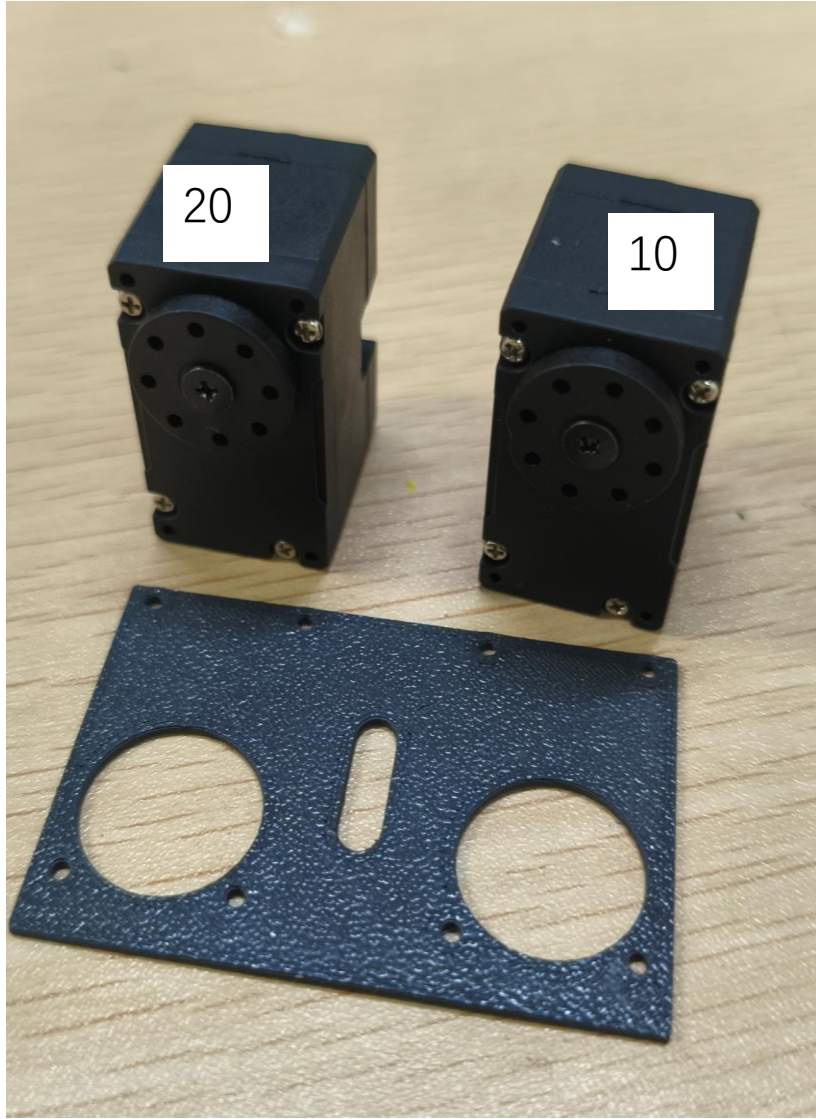


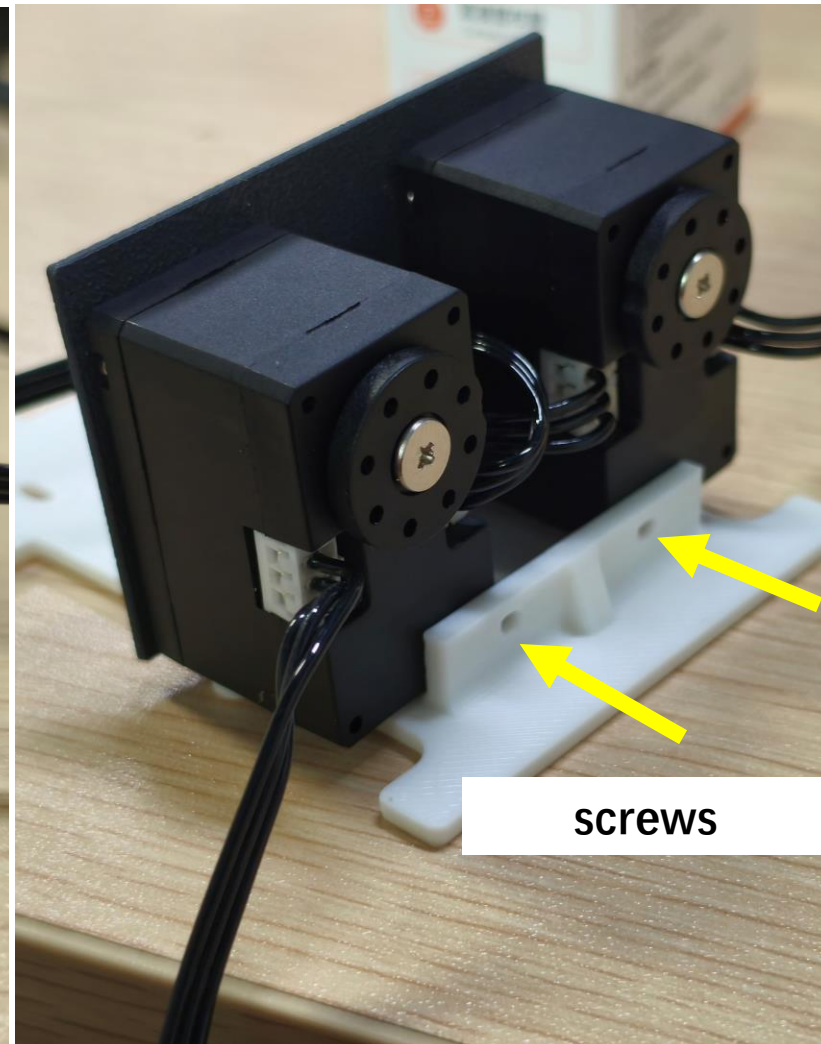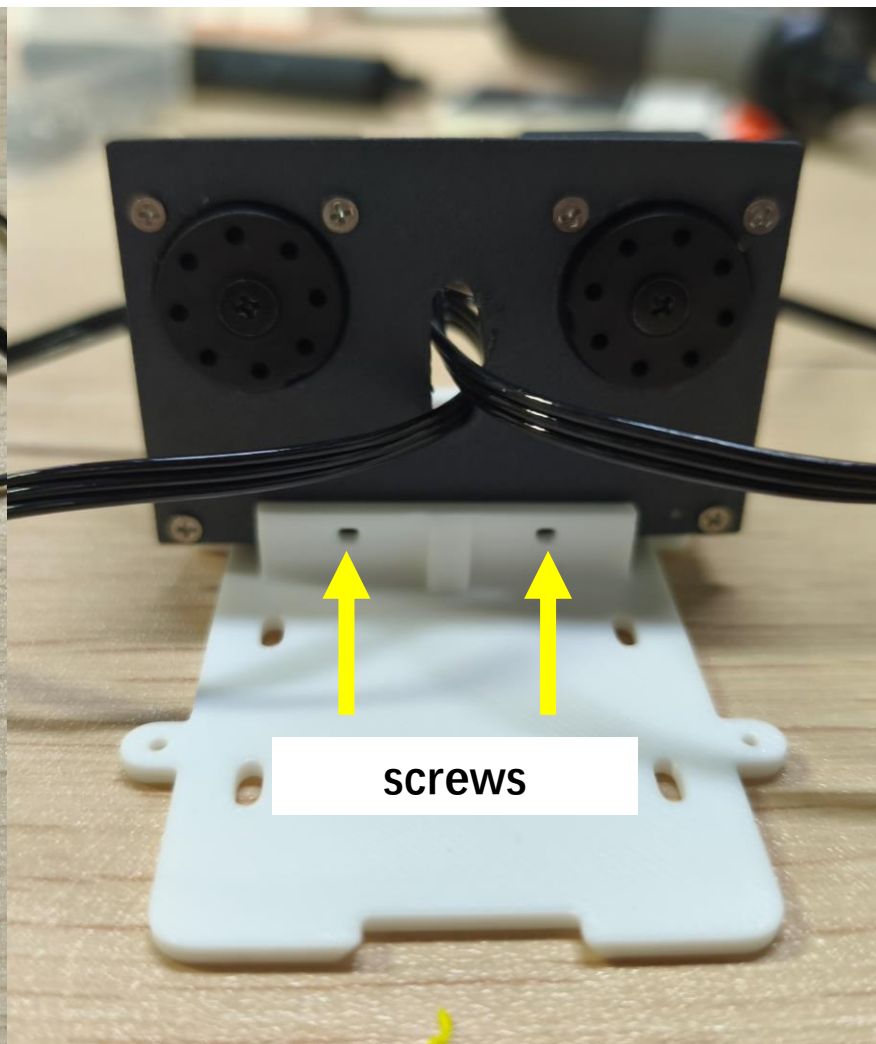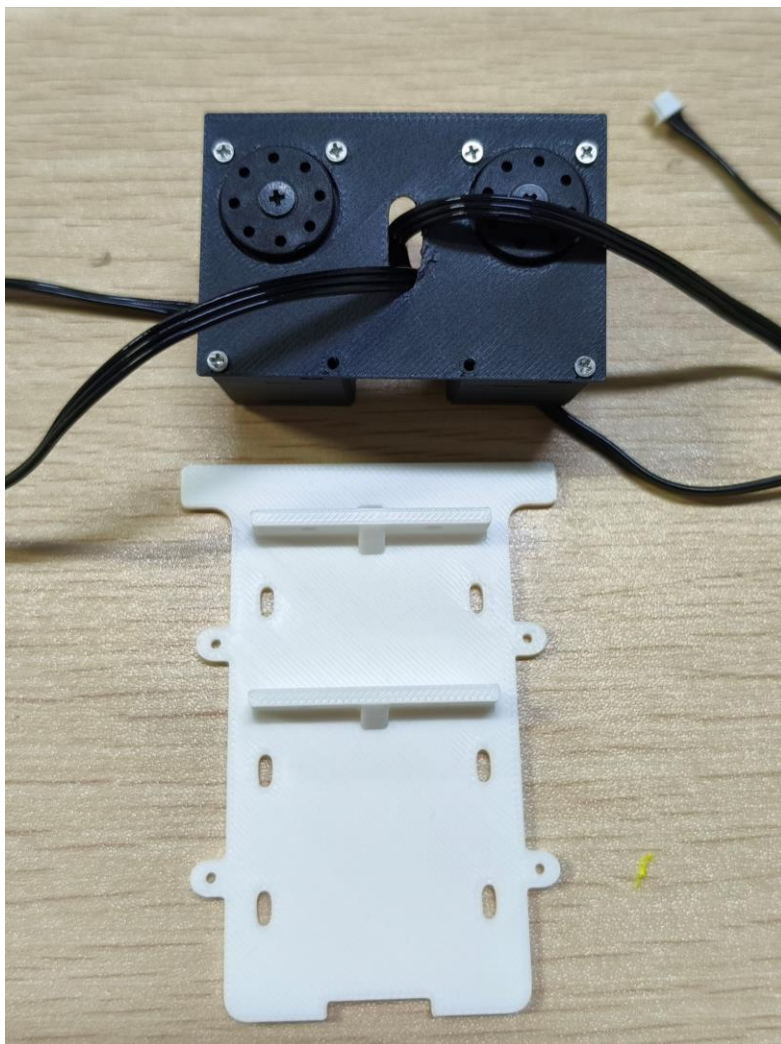

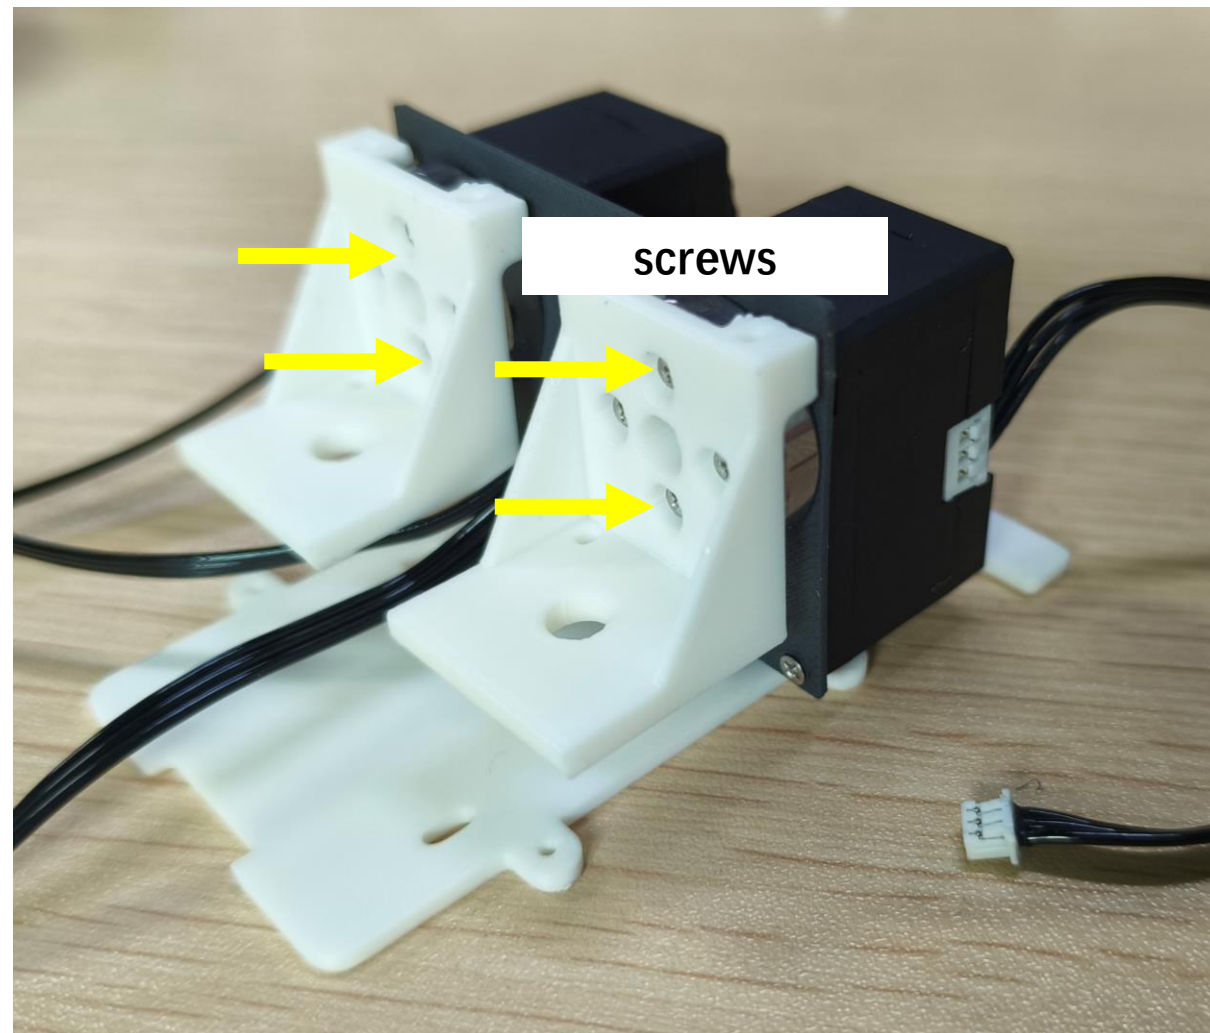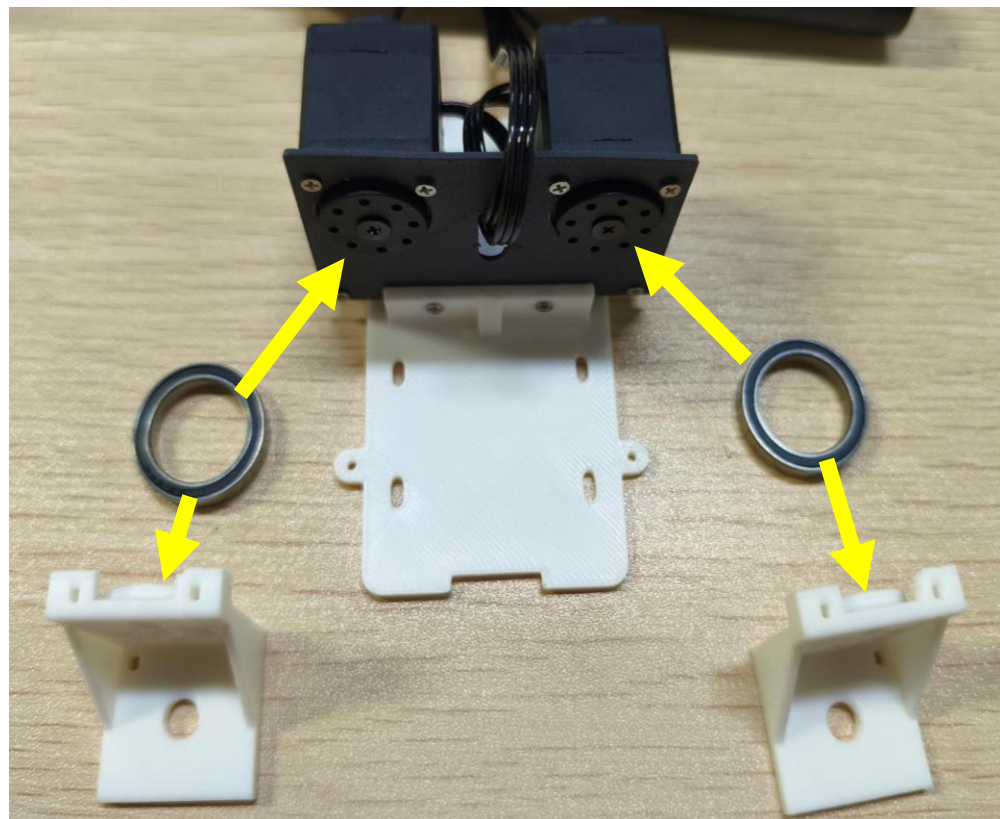




Connect cables first!
Connect cables first!
Connect cables first!

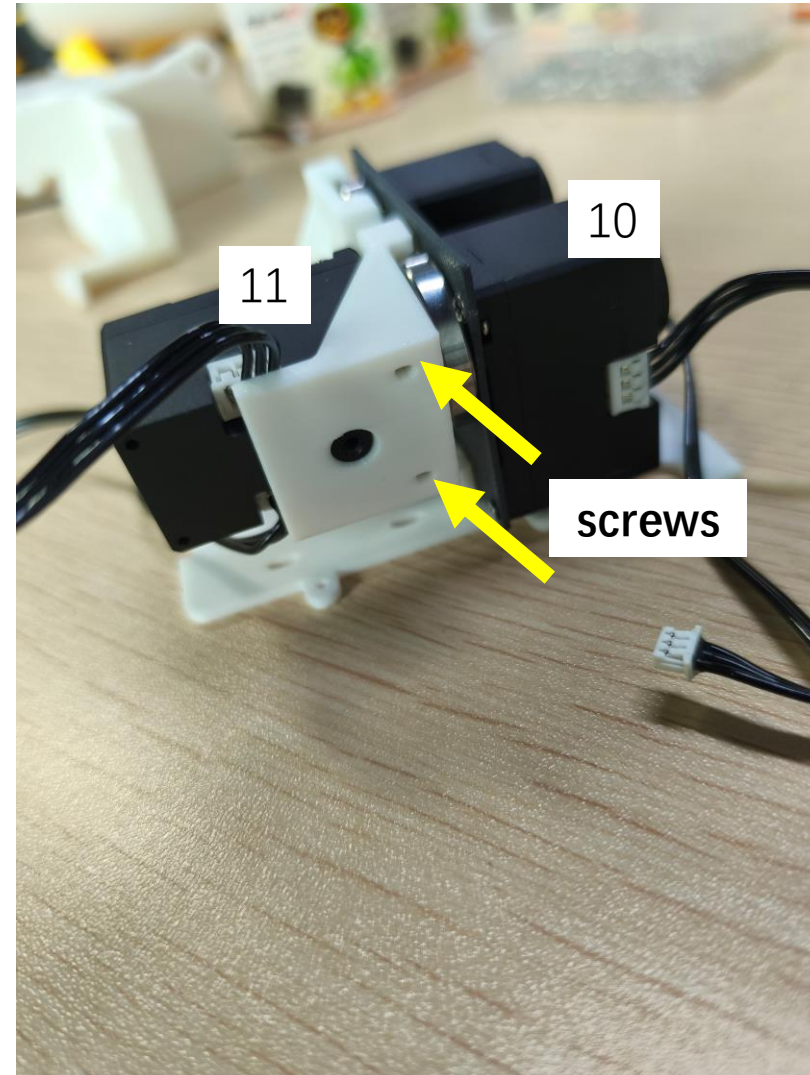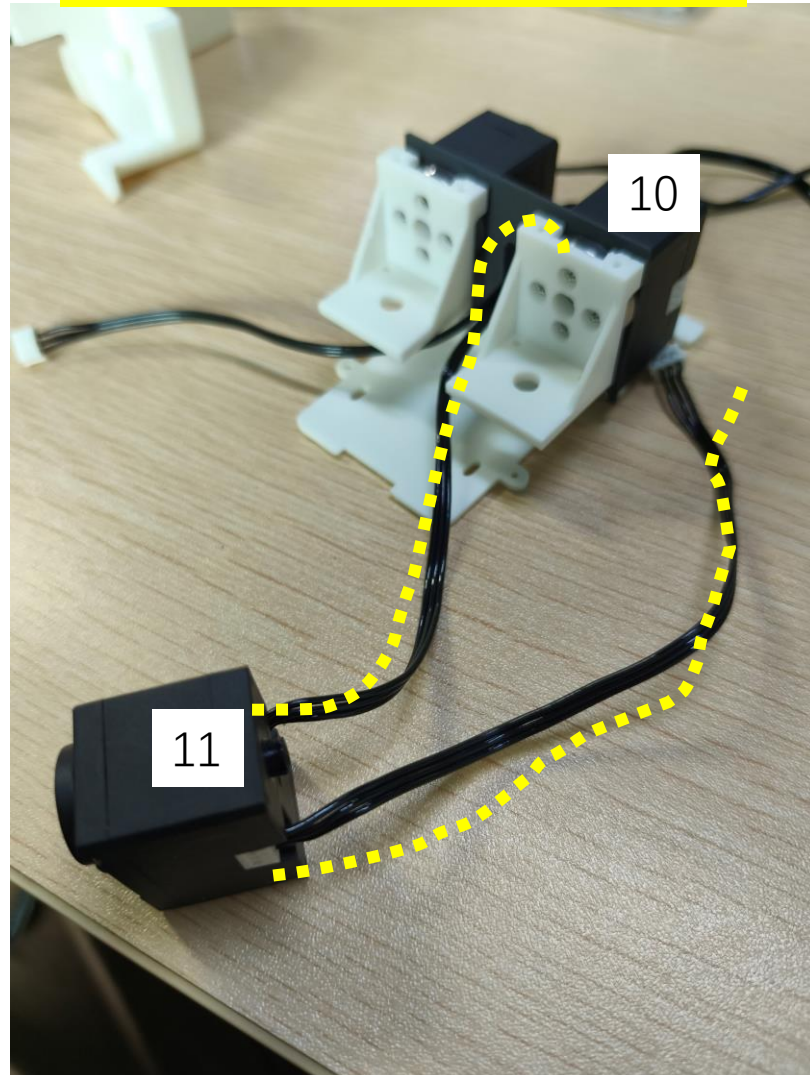

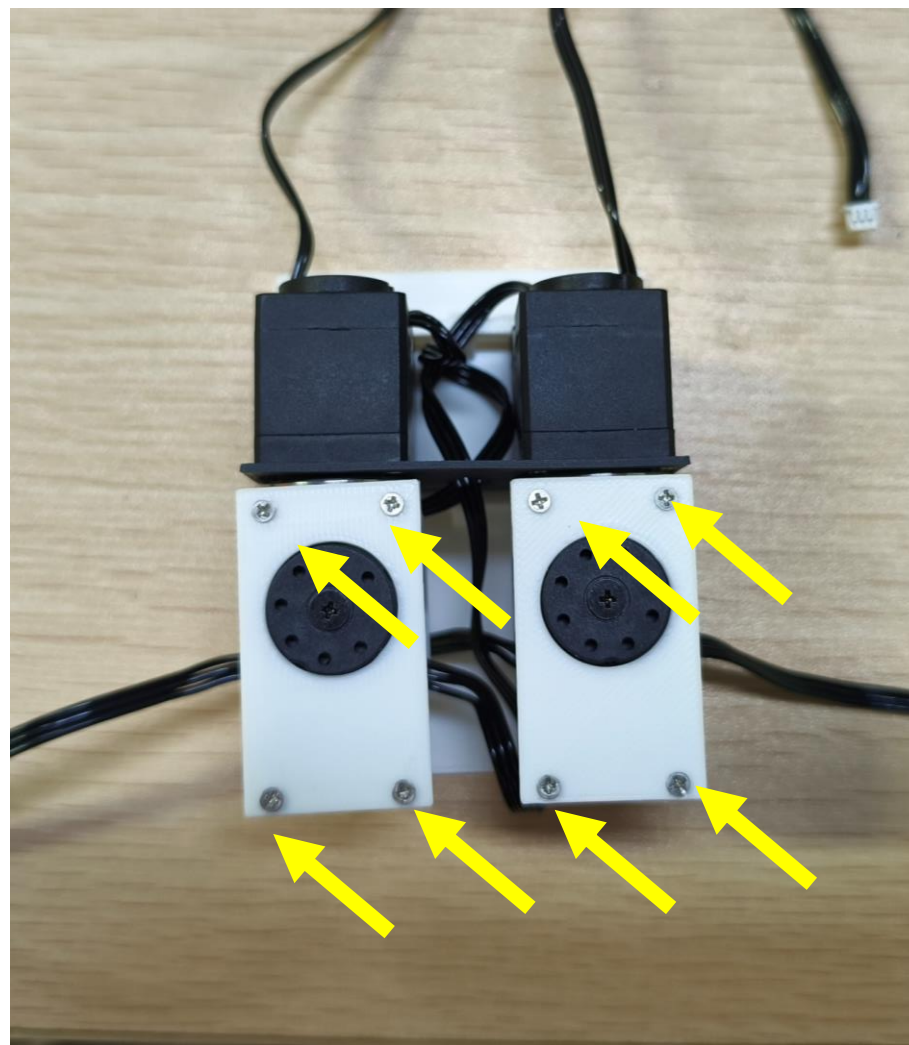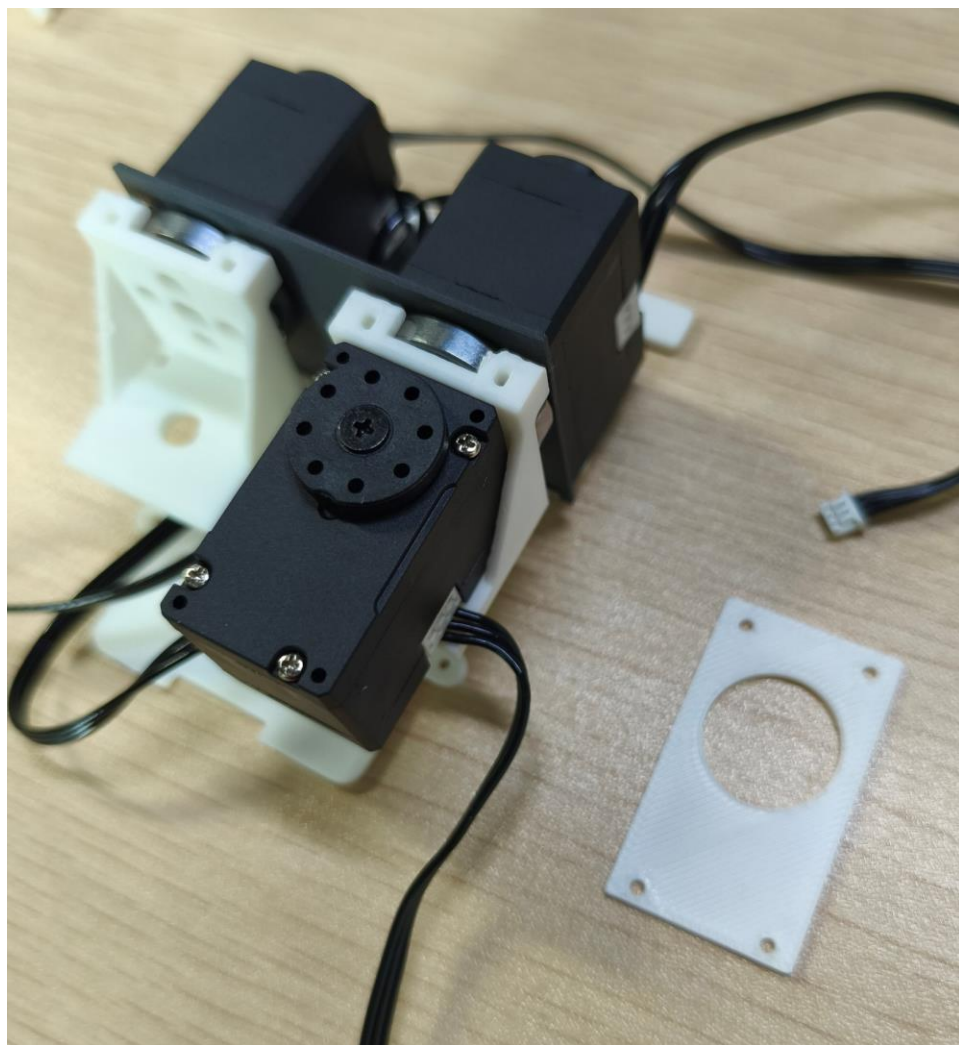


Left and right orientations differ!

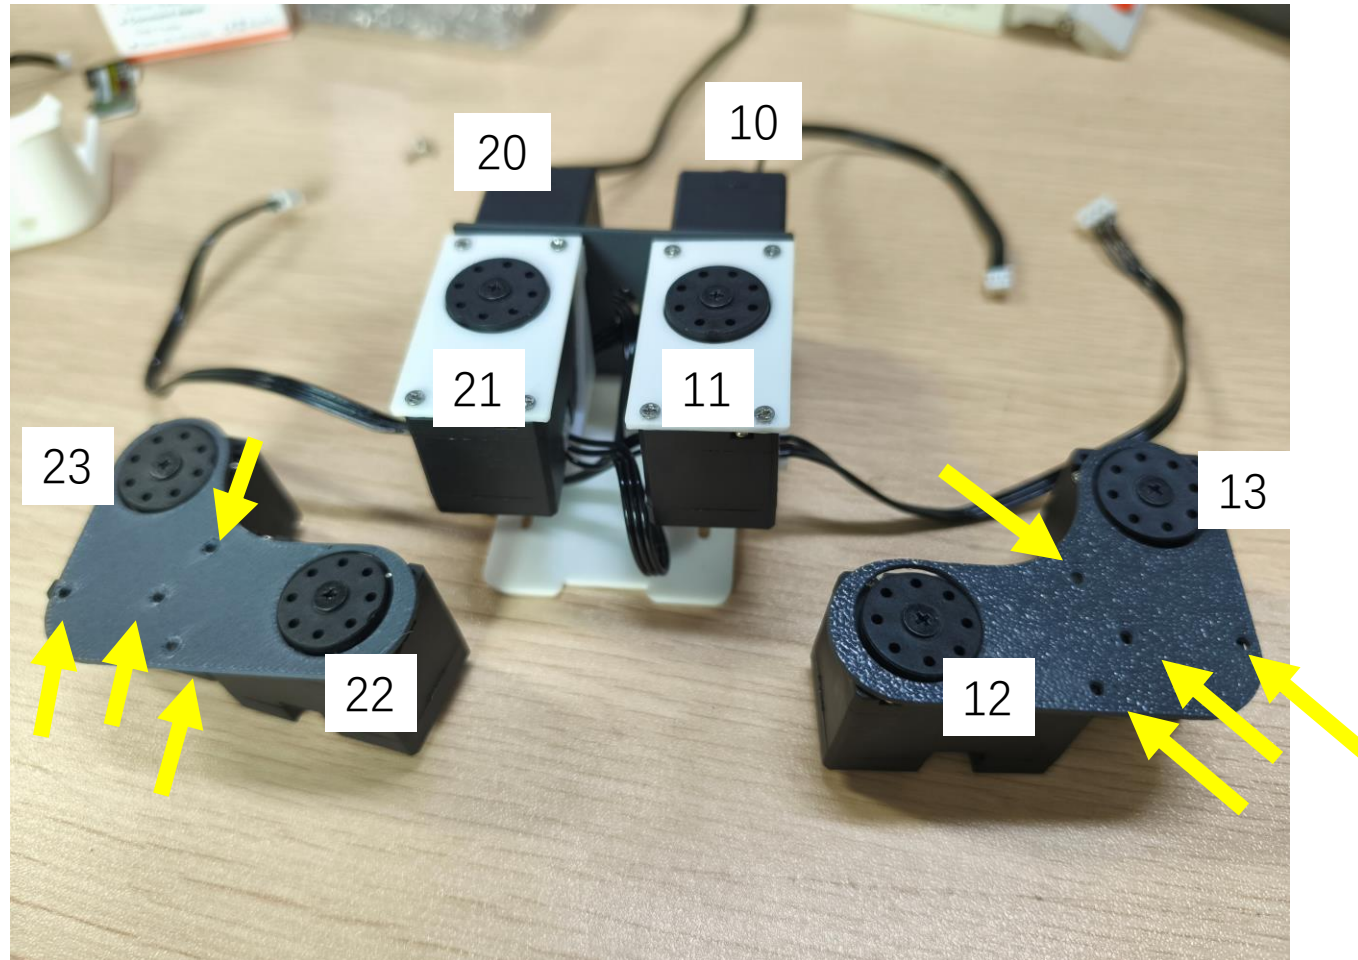

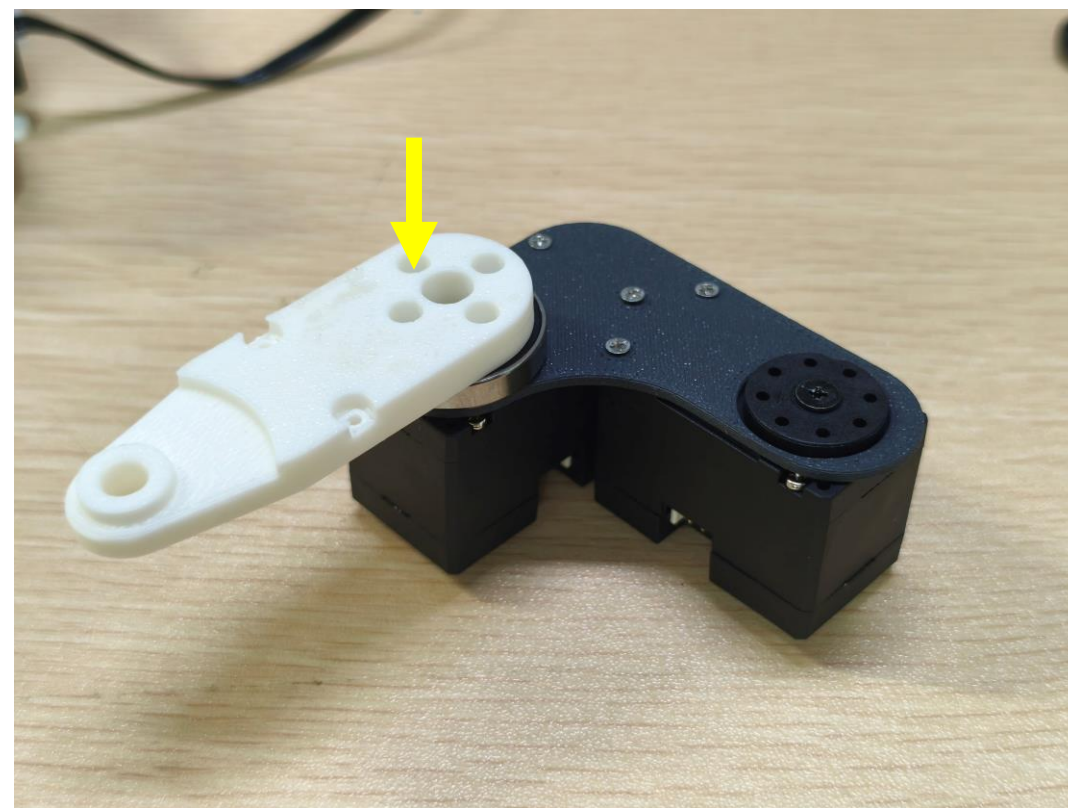
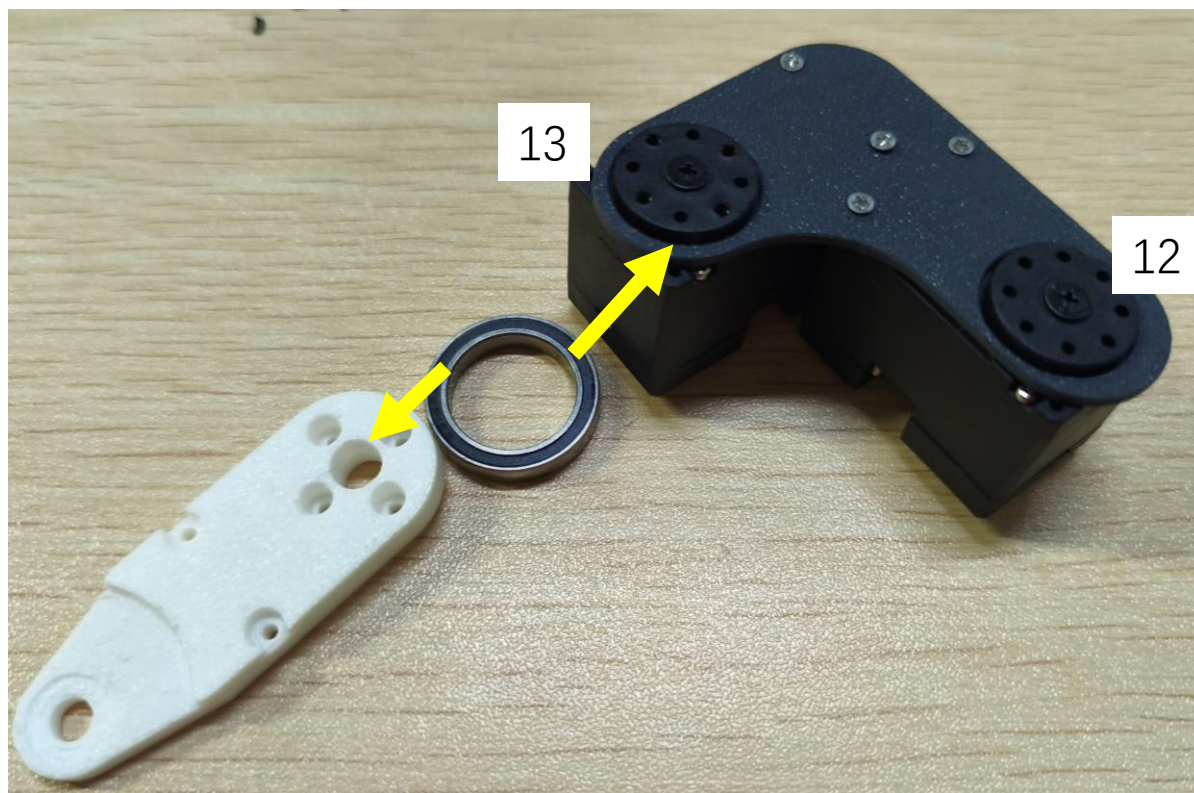



Connect cables first!

13 to 14


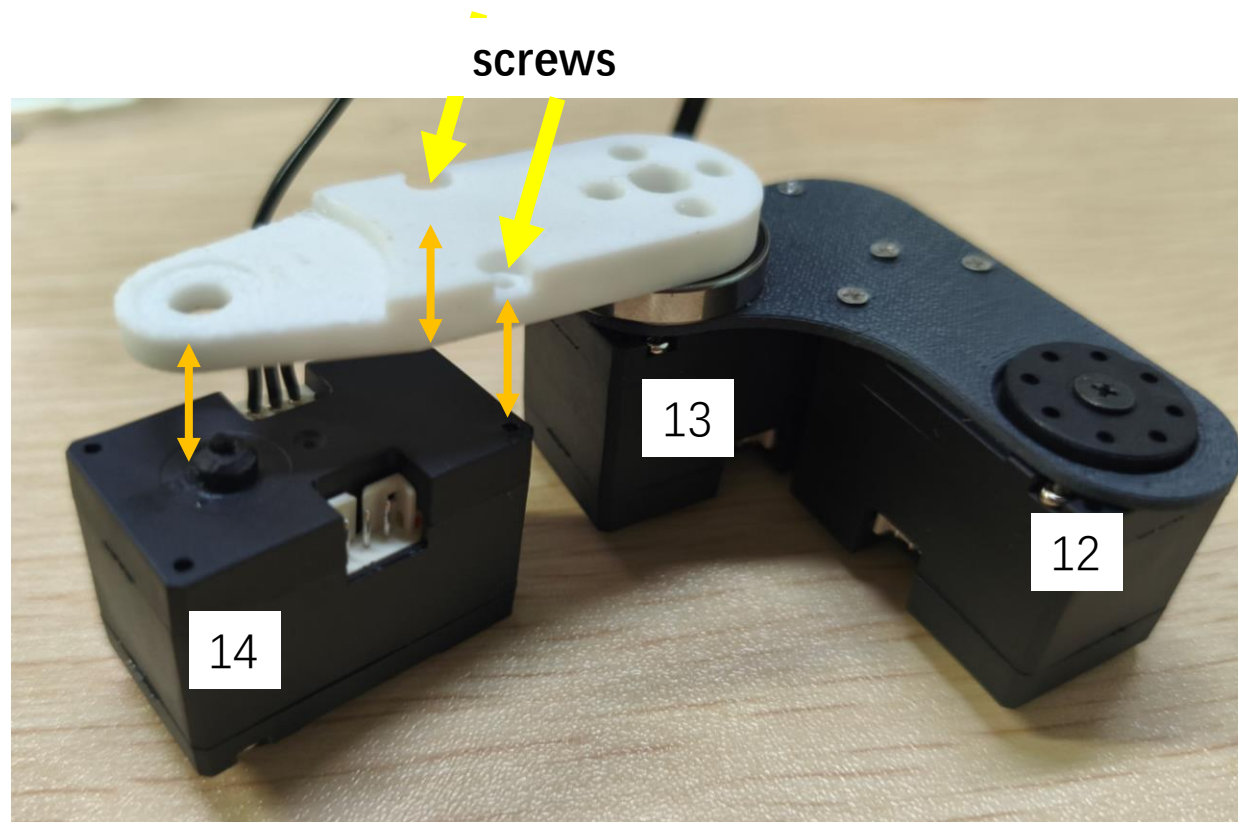



Distinguish the left and right feet.

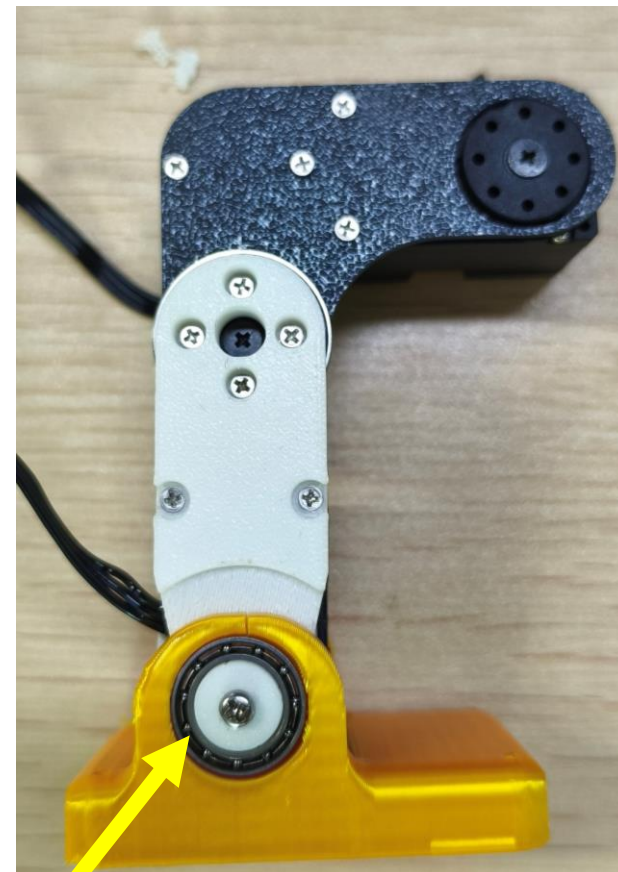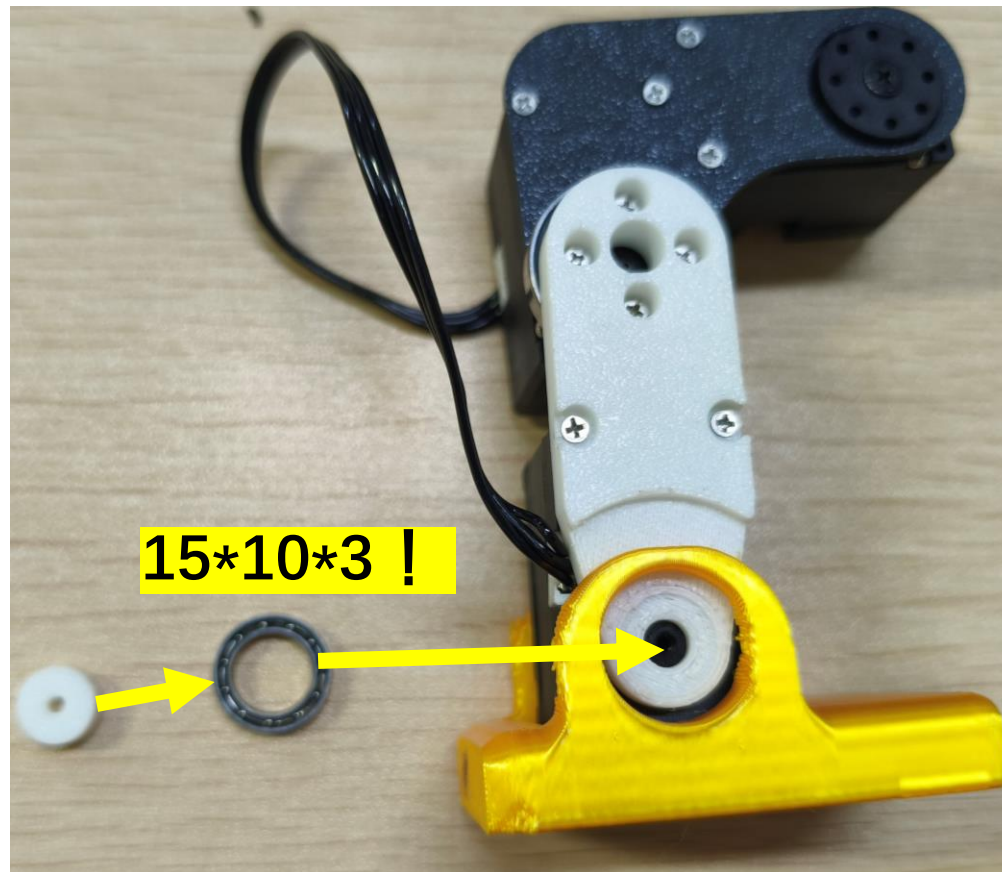


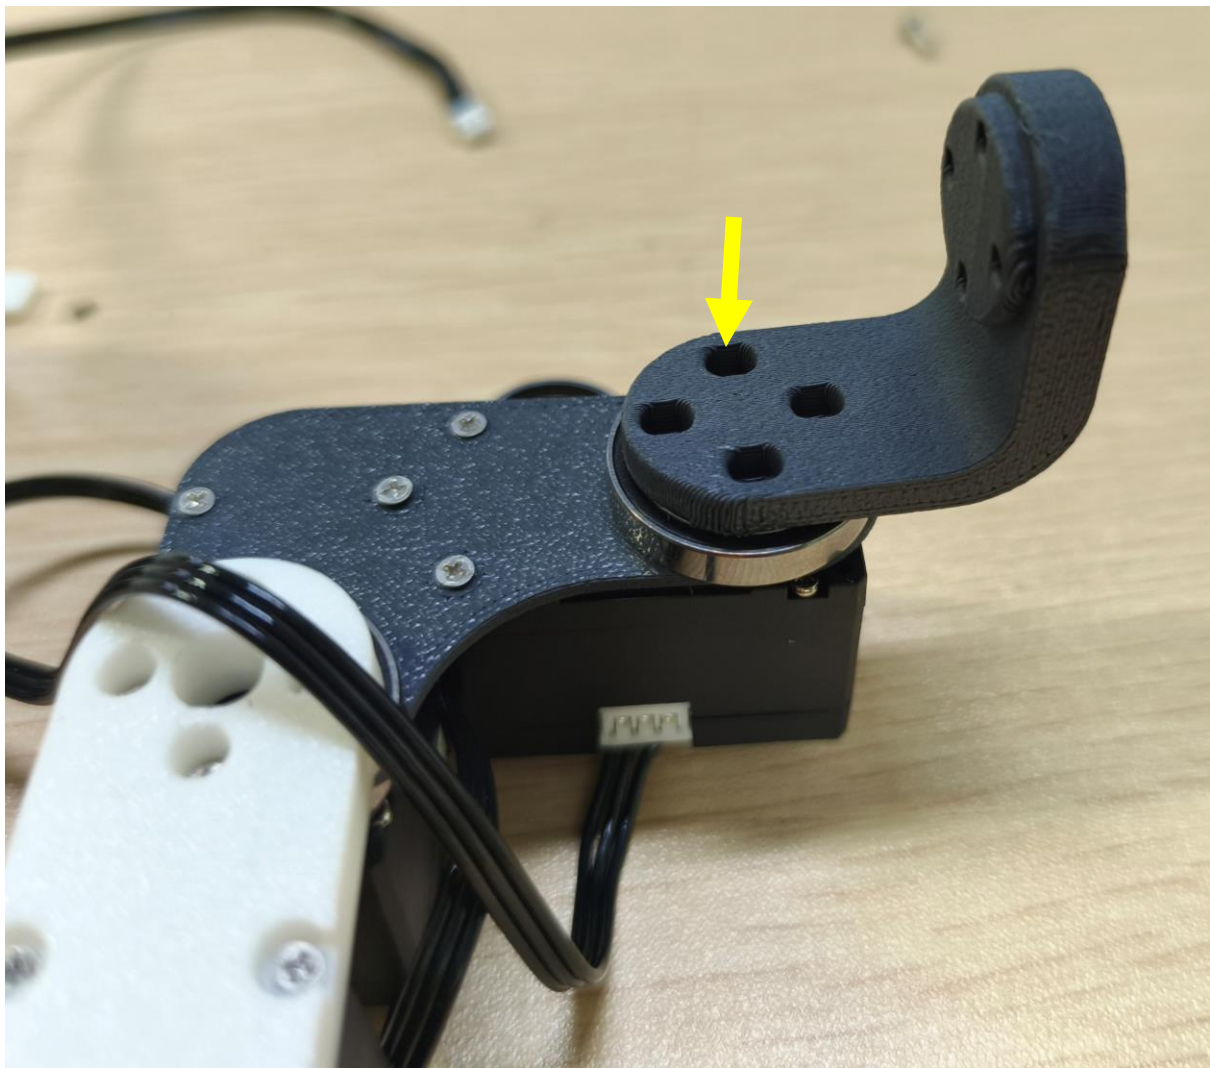

Connect cables first!

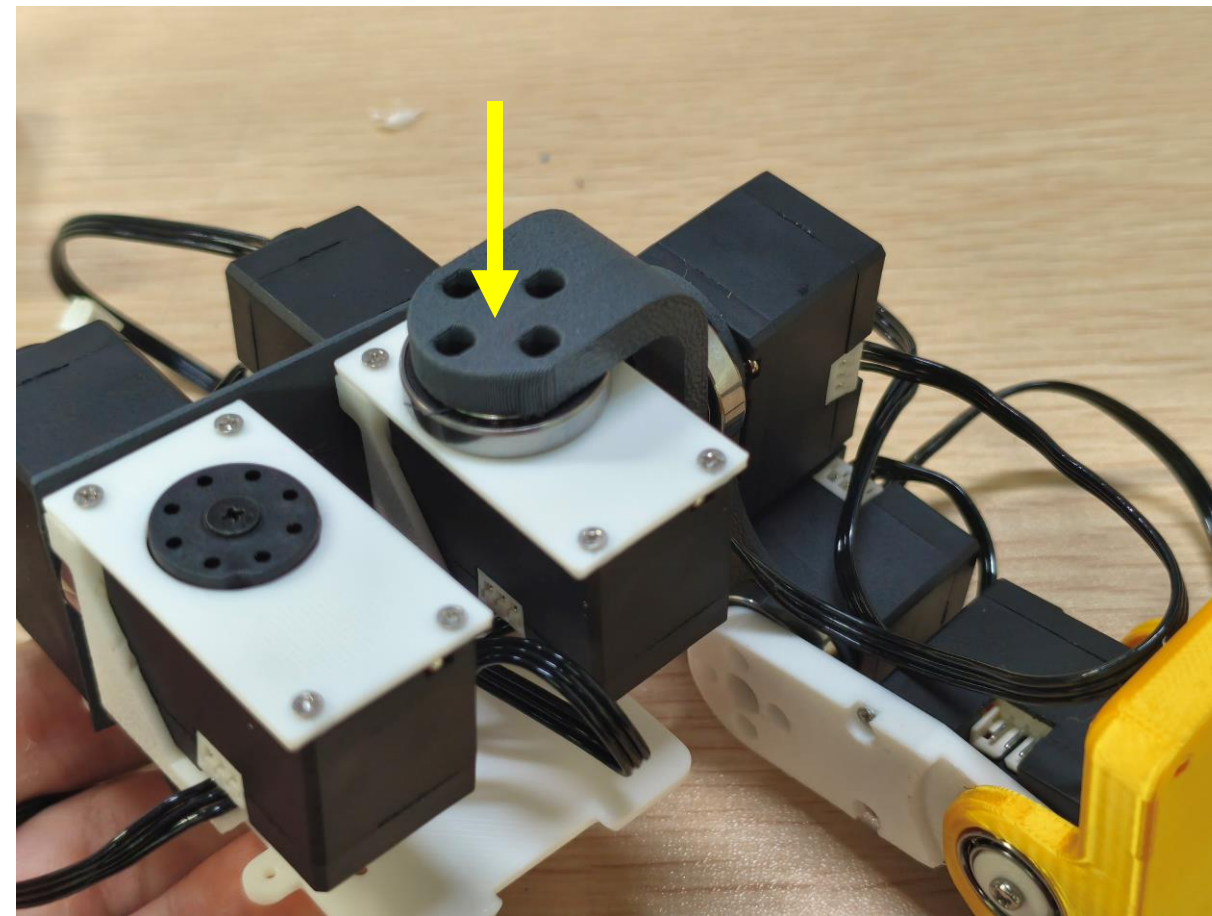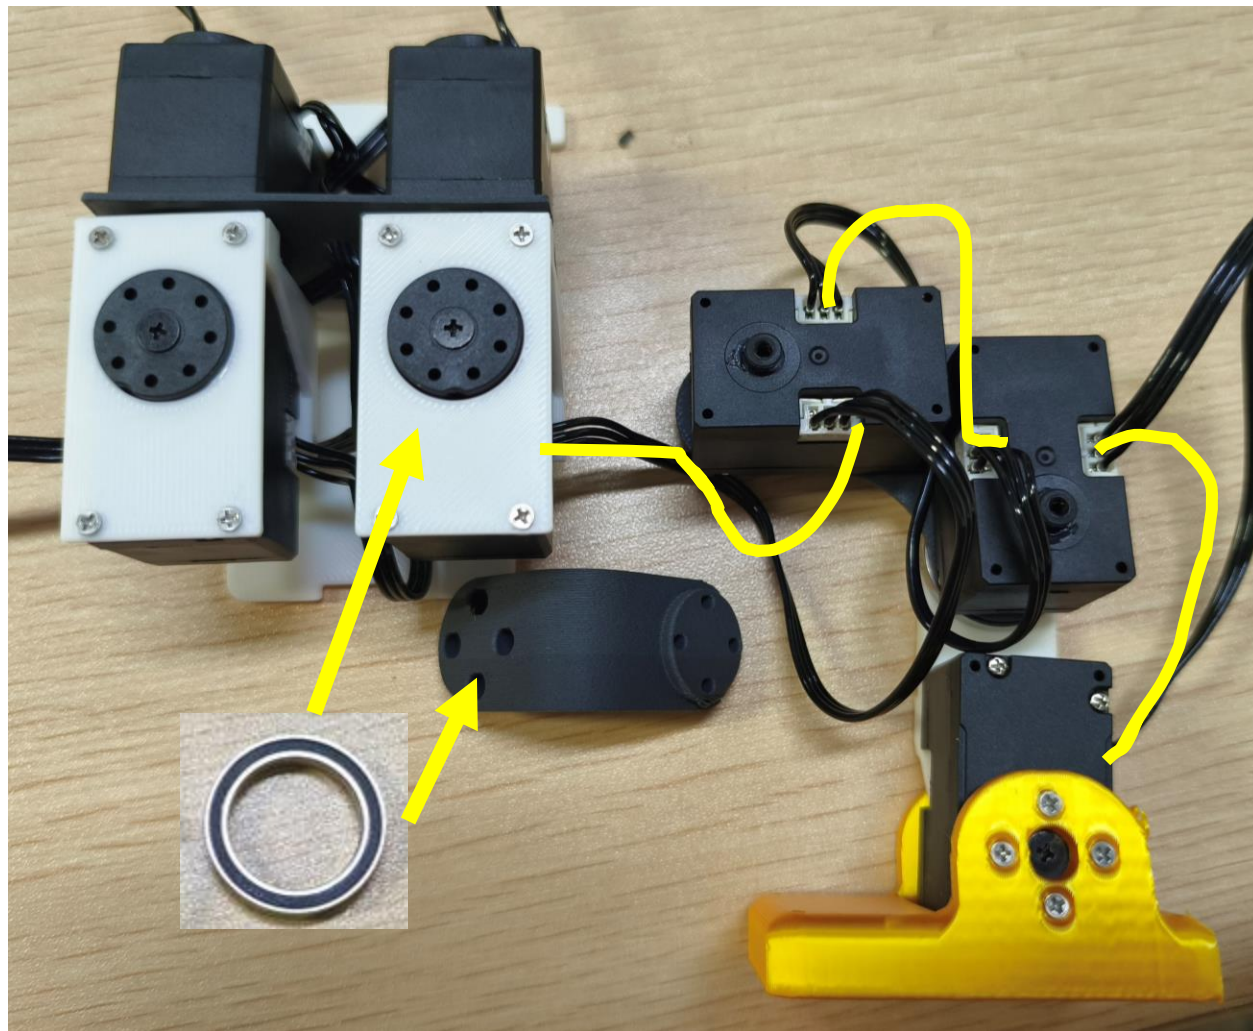


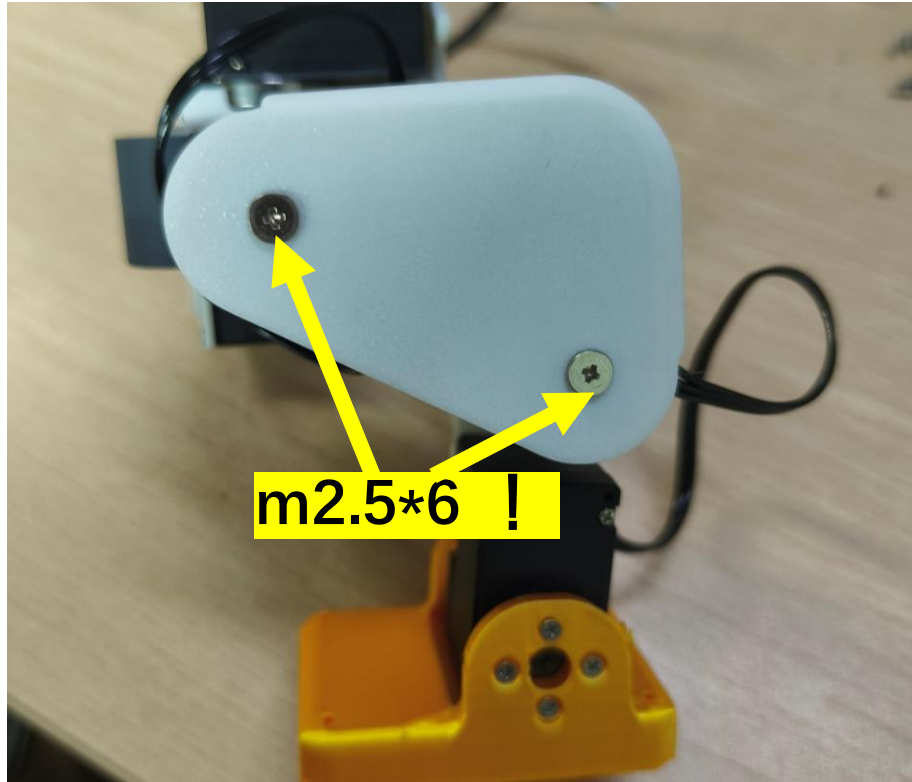


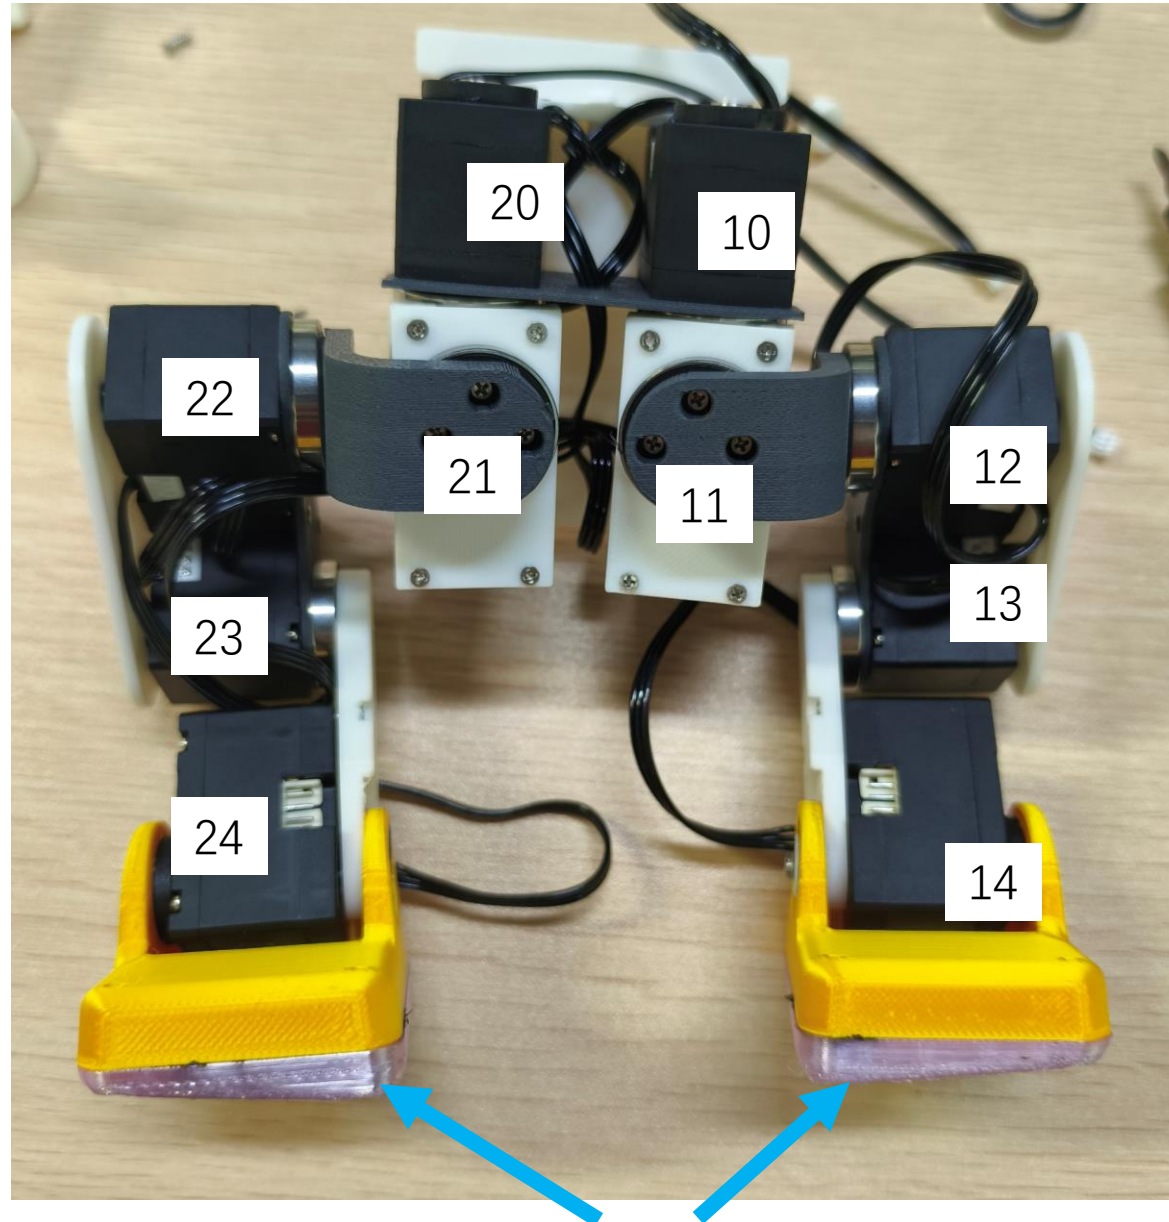




Install the TPU foot pad in the correct orientation!



Connect cables first!

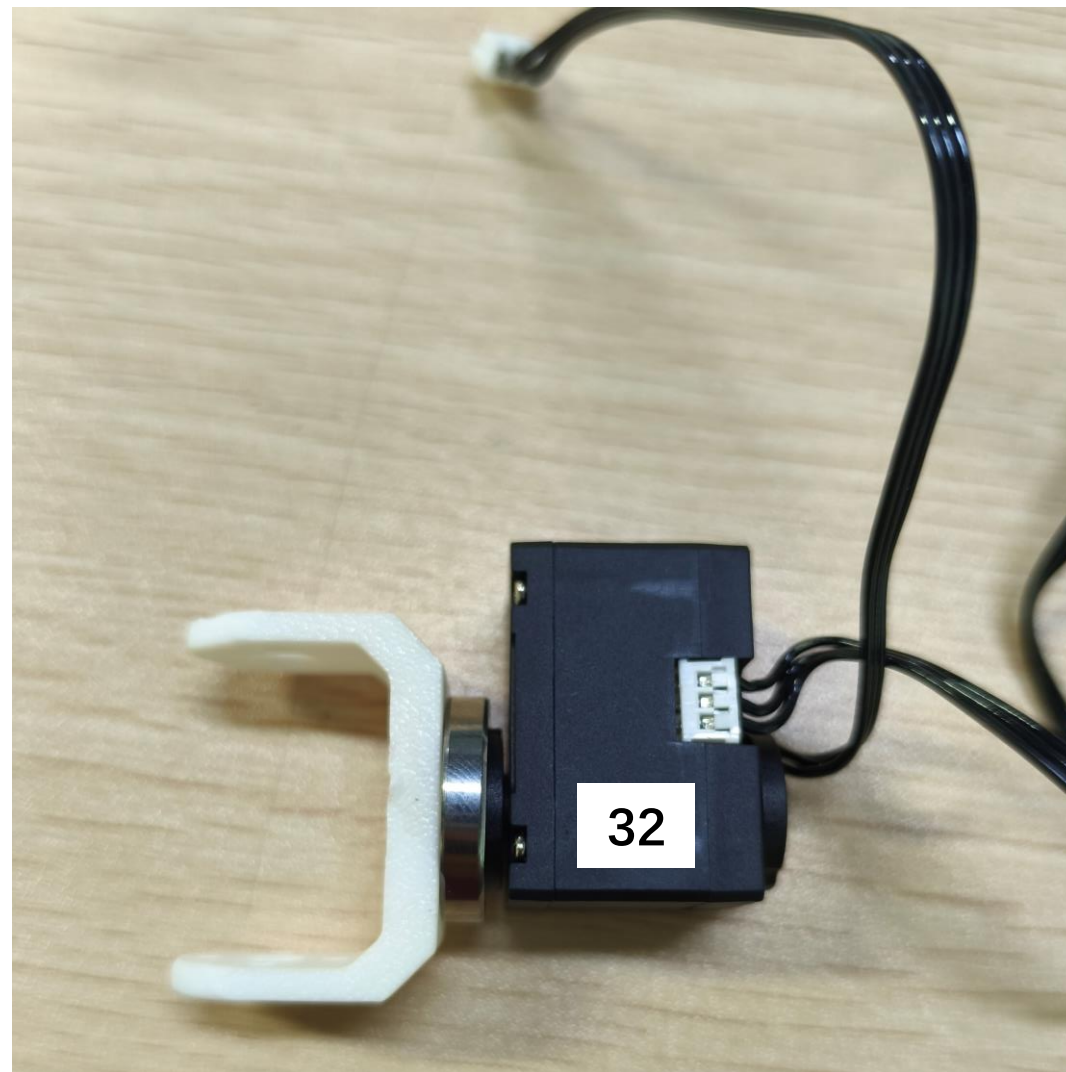



Connect bottom cables first!

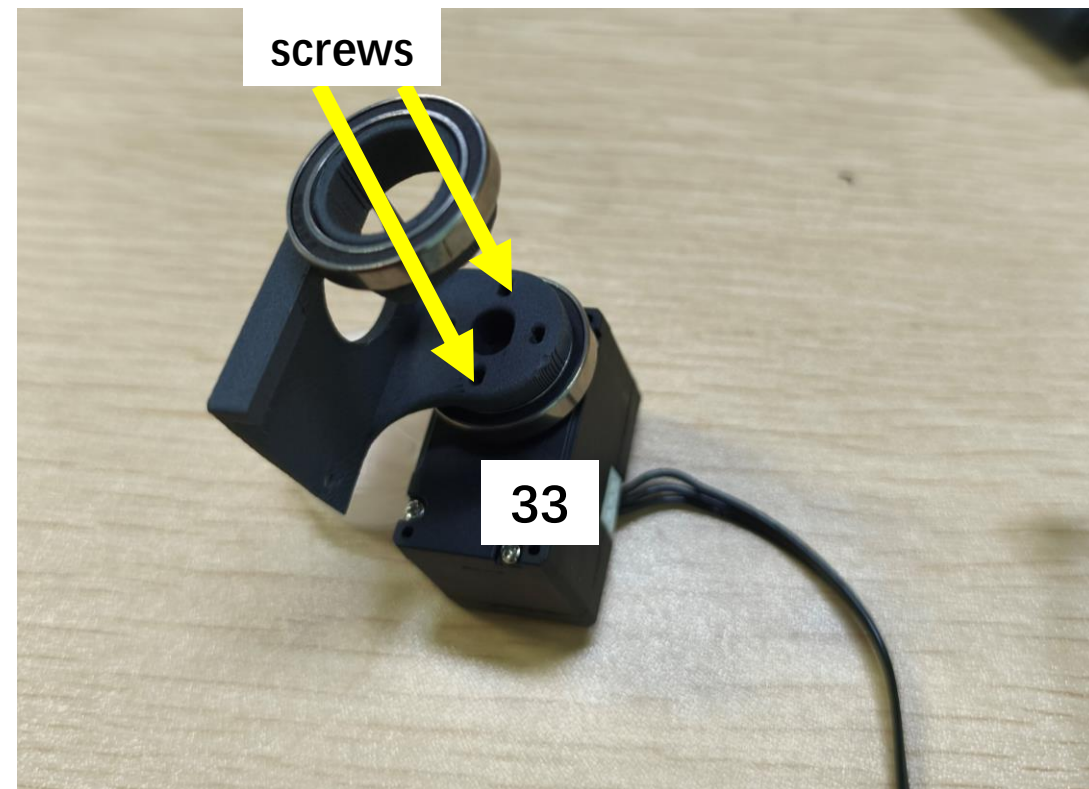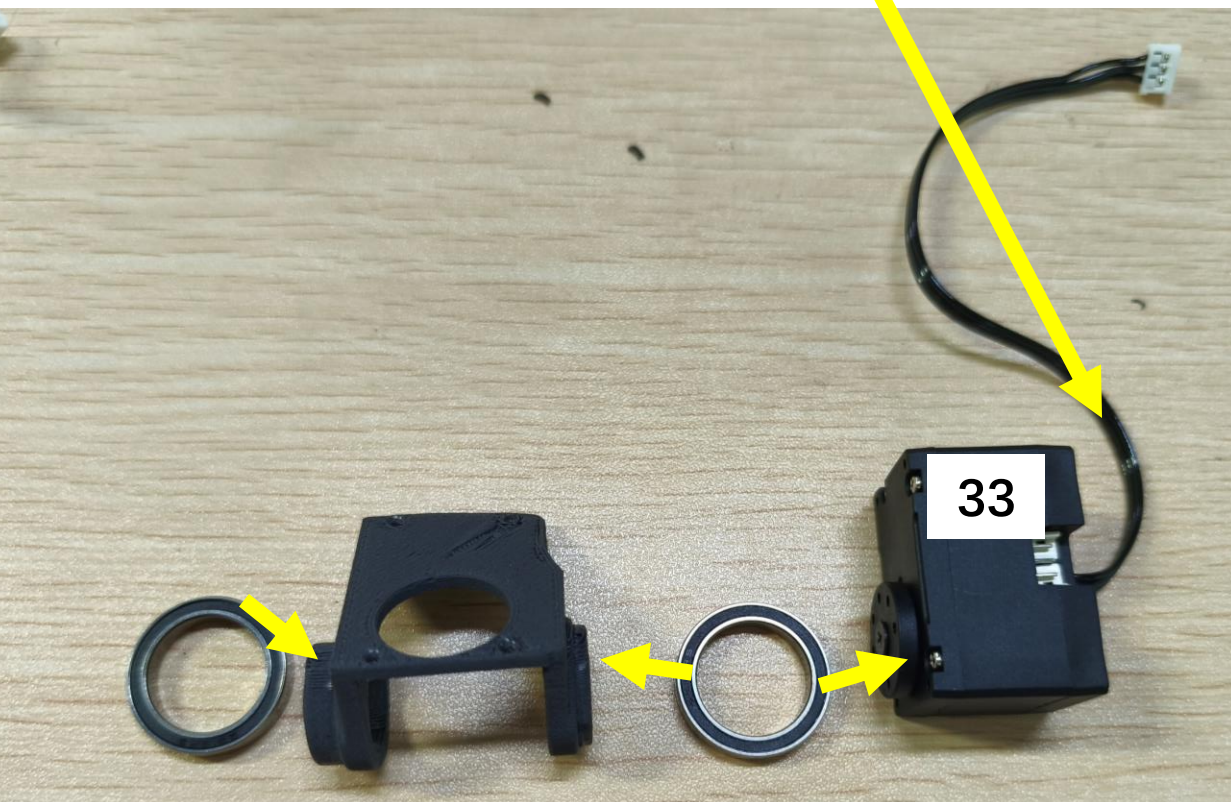

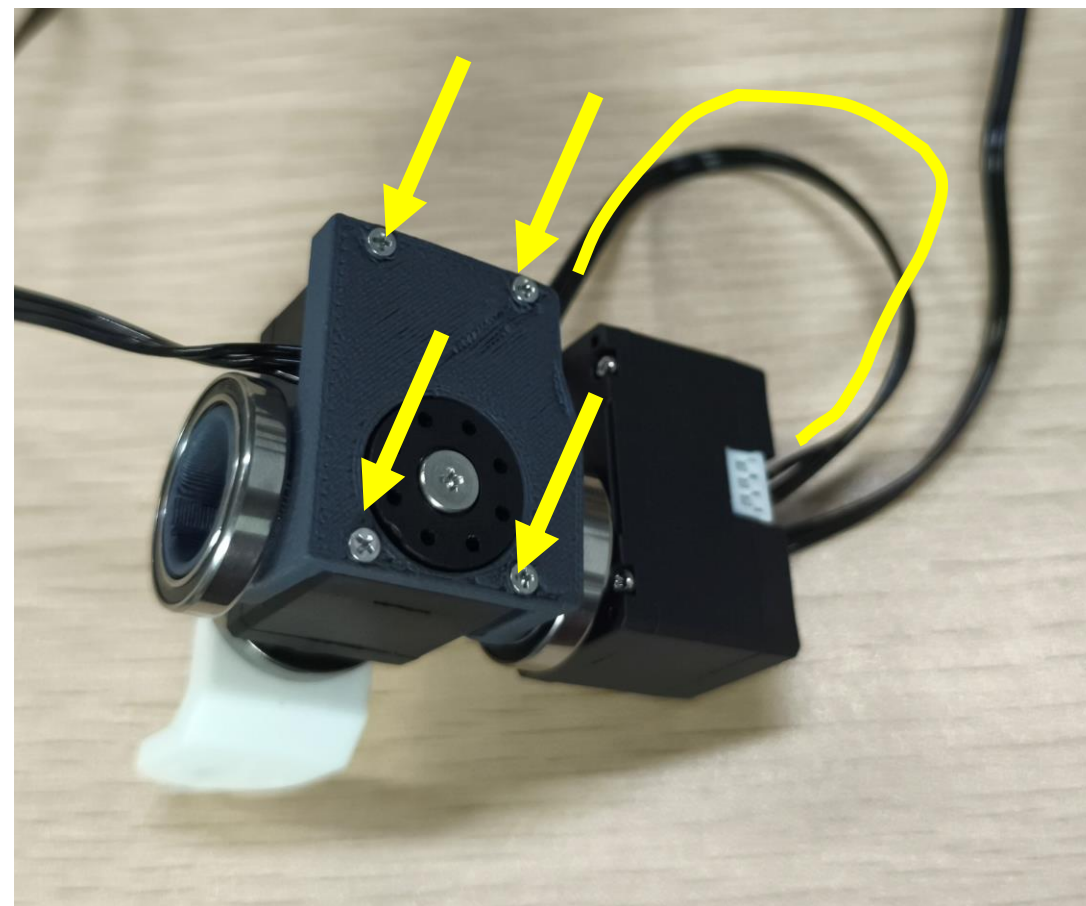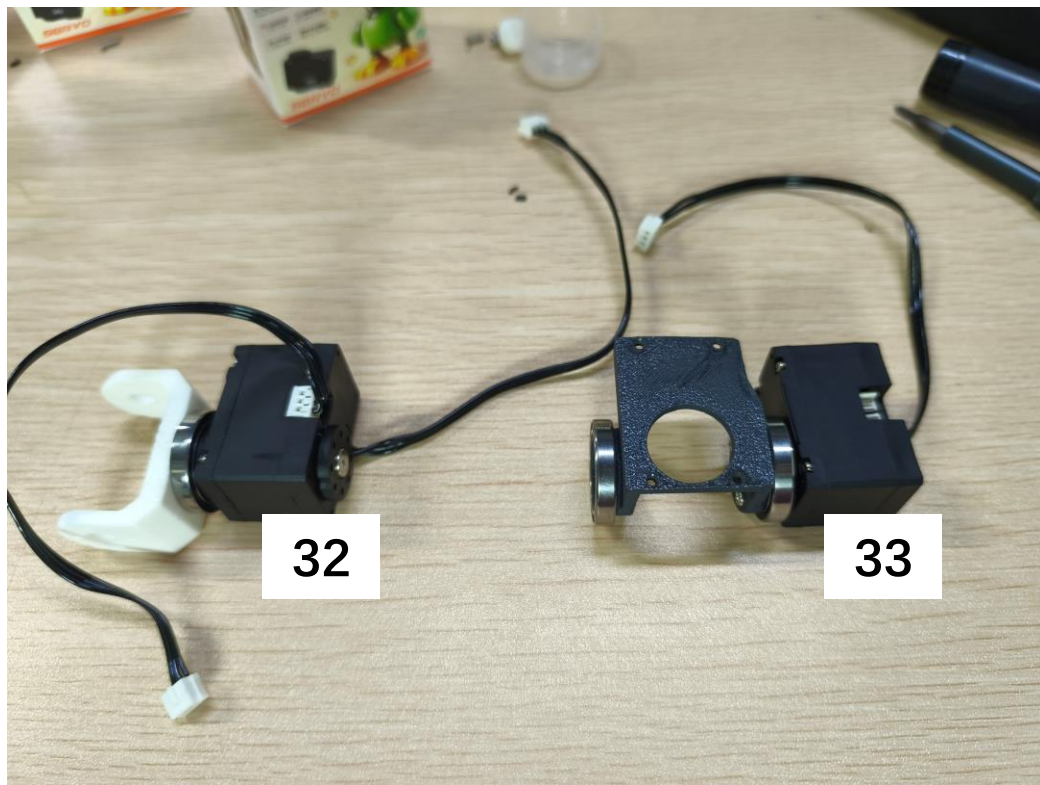

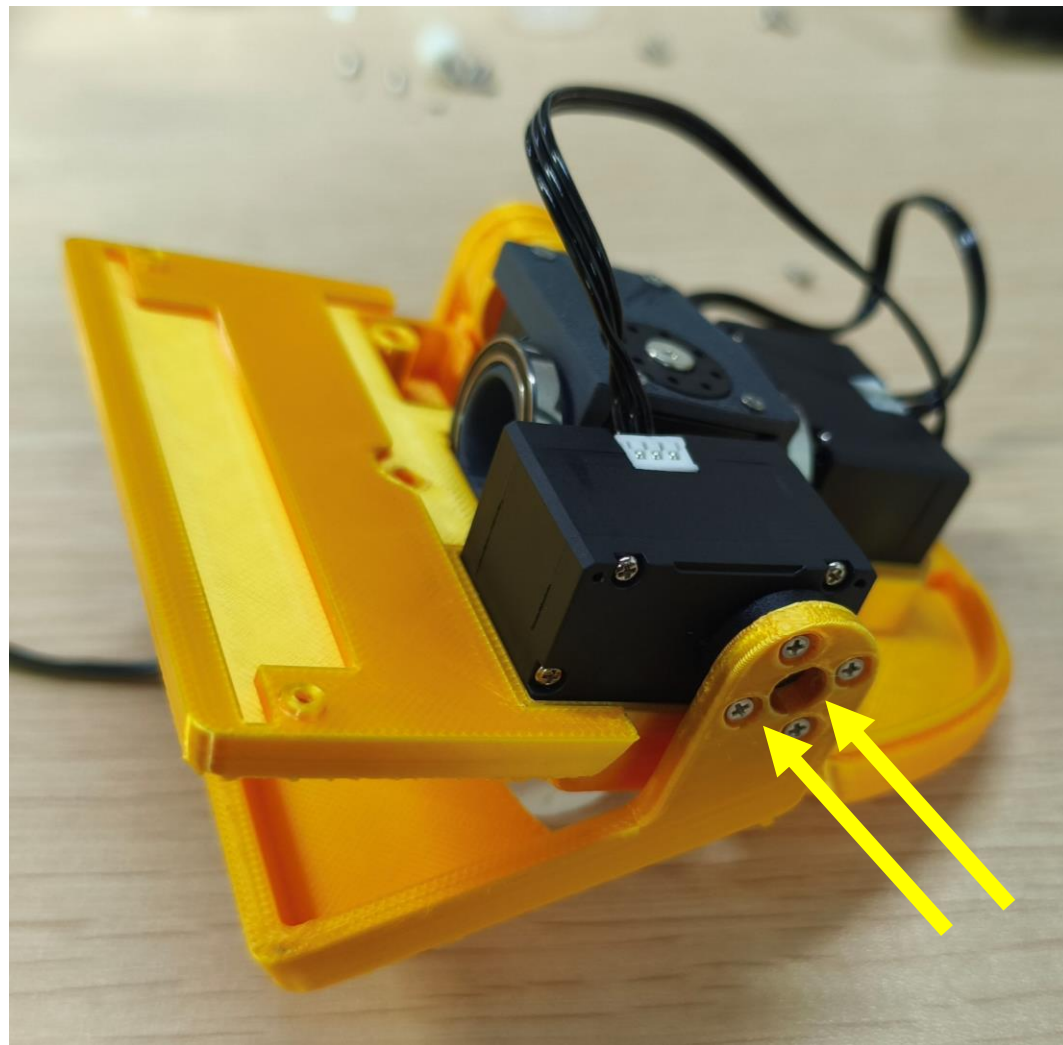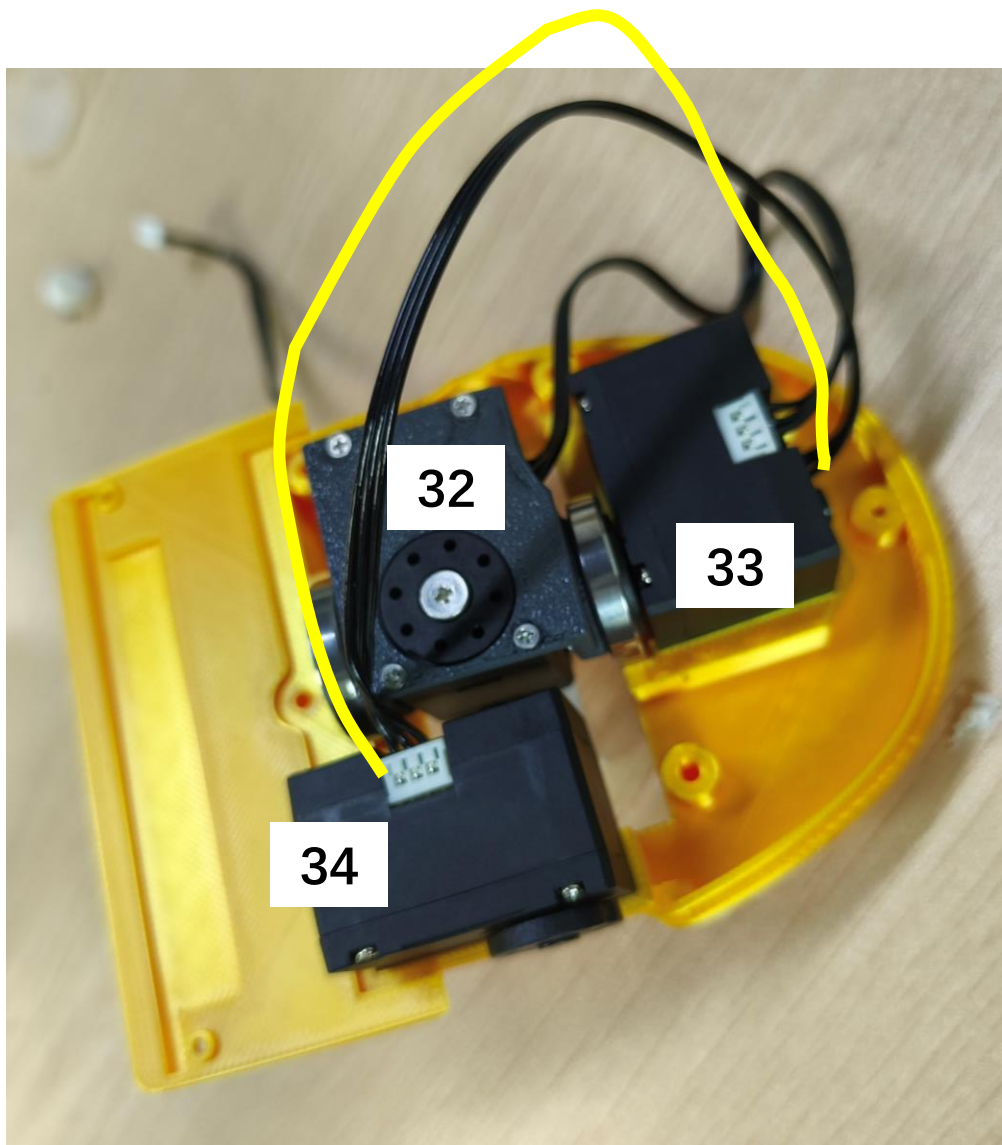

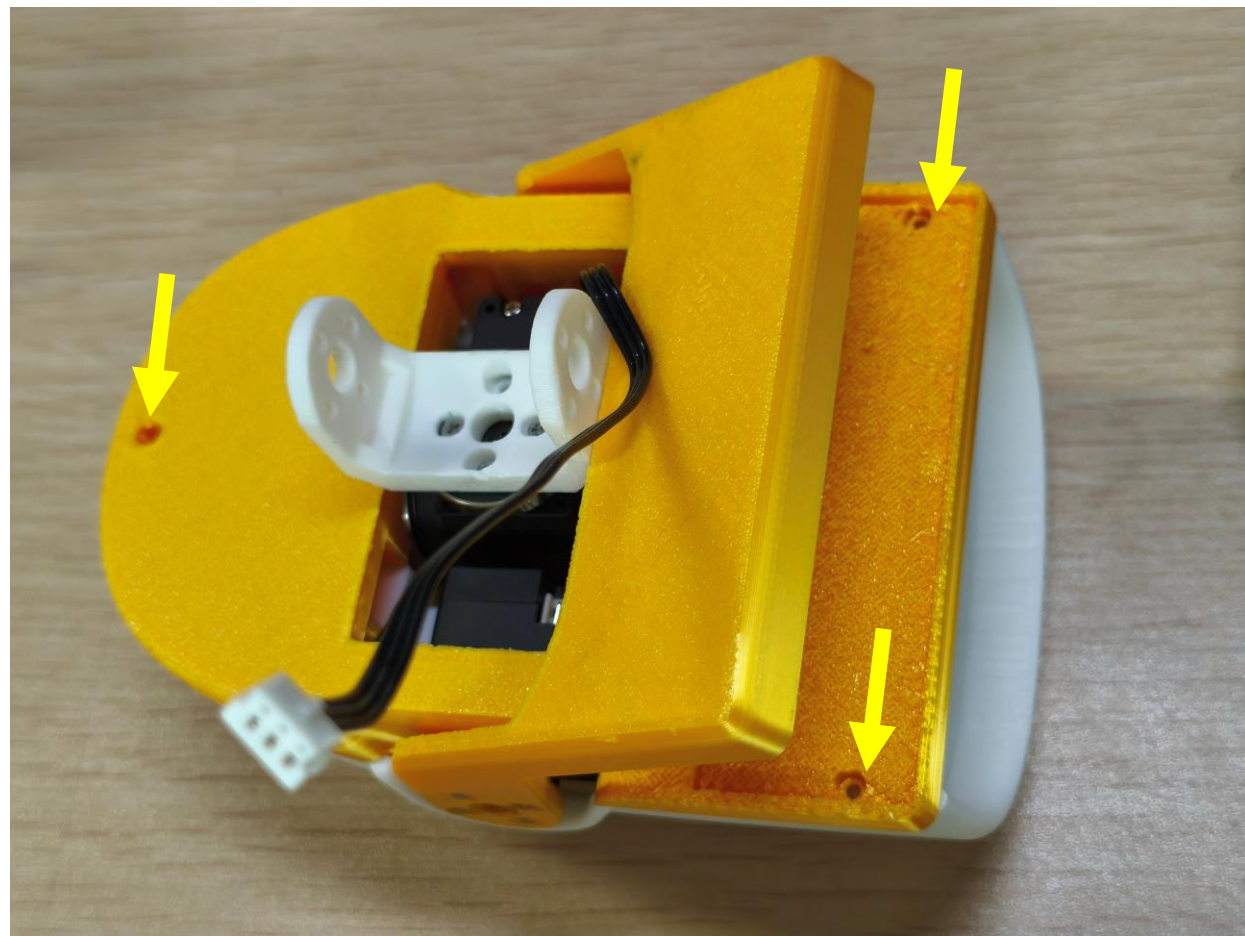

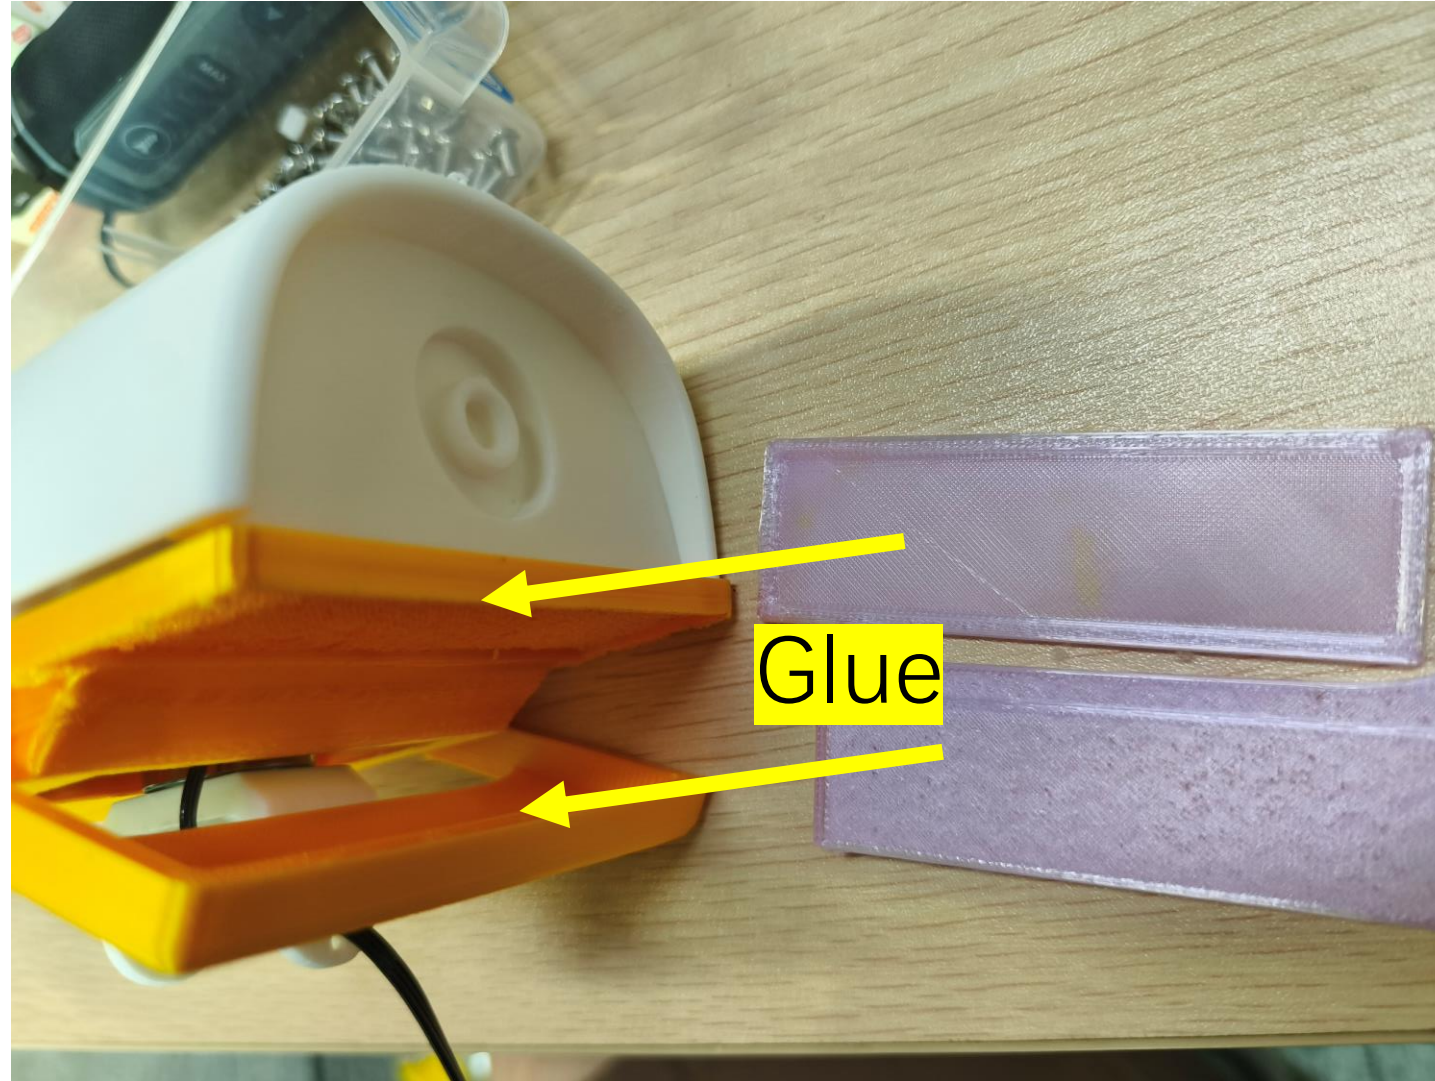

Glue

