Step 1: Open program interface

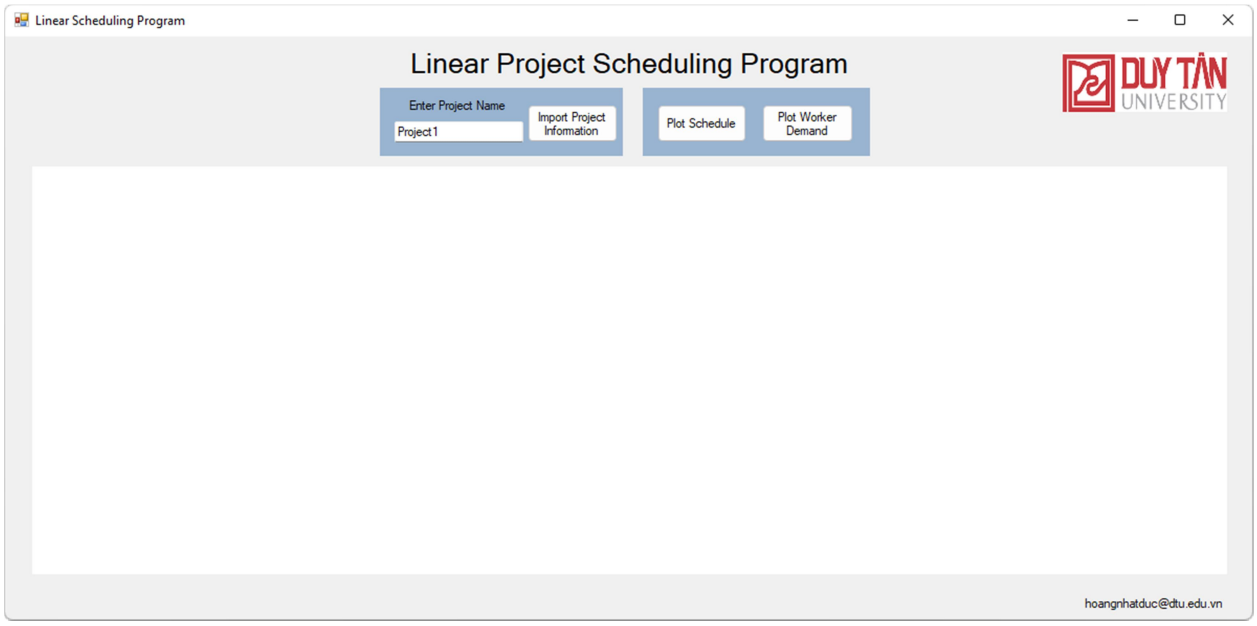

Step 2: Import Project Information

	A	B	C	D	E	F
1	Activity Name	Total Required Work (Man-hour)	Crewsize (Man)	Minimum Buffer Time (Day)	Total Working Unit	Working time per day (hour)
2	Formwork installation	800	20	0	5	8
3	Rebar placing	960	30	1	5	8
4	Concrete pouring	1200	40	1	5	8
5	Formwork removal	800	20	2	5	8
6						

Step 3: Plot schedule and worker demand

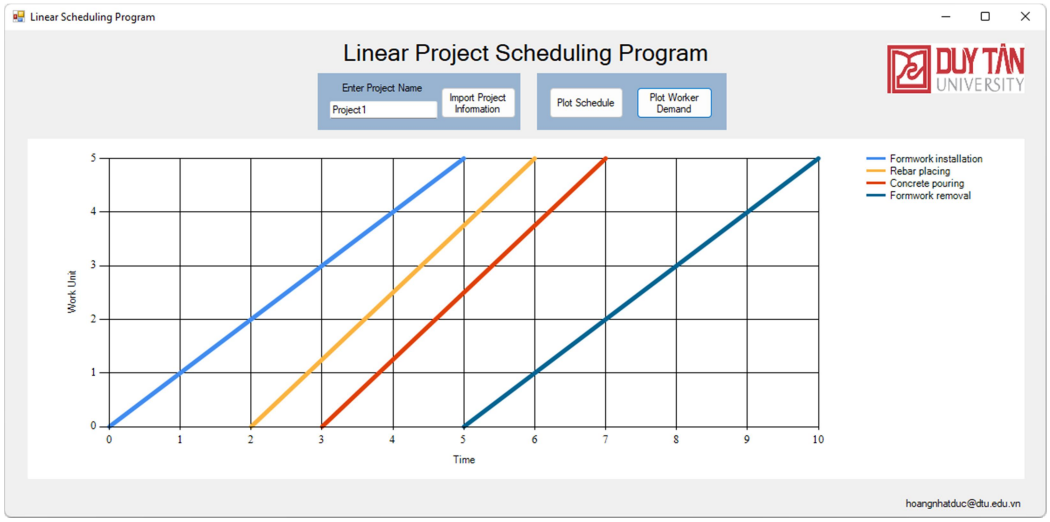

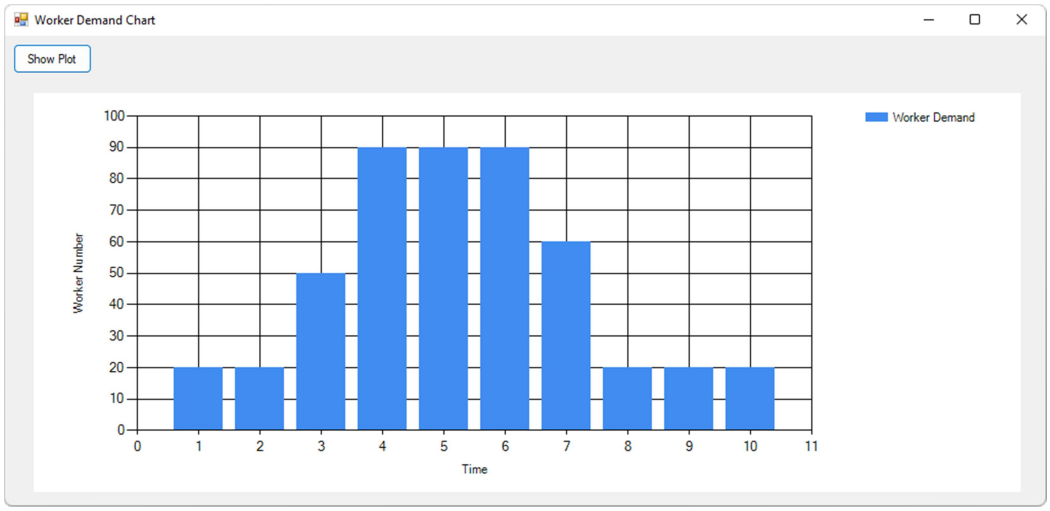
Worker Demand Chart
Show Plot
Worker Demand
Worker Number
Time
0
10
20
30
40
50
60
70
80
90
100
0
1
2
3
4
5
6
7
8
9
10
11