




CLOCK (8 MHZ HSE)

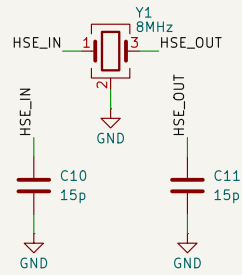


RESET / BOOT

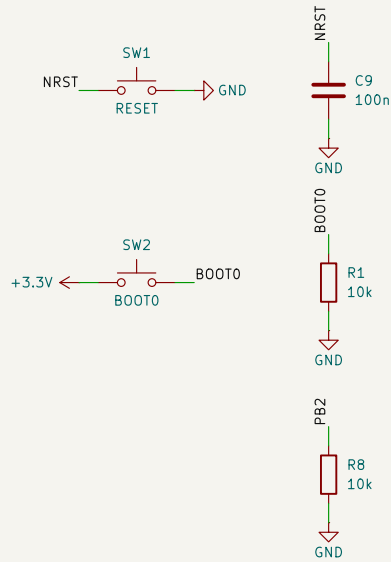

USB-C + ESD

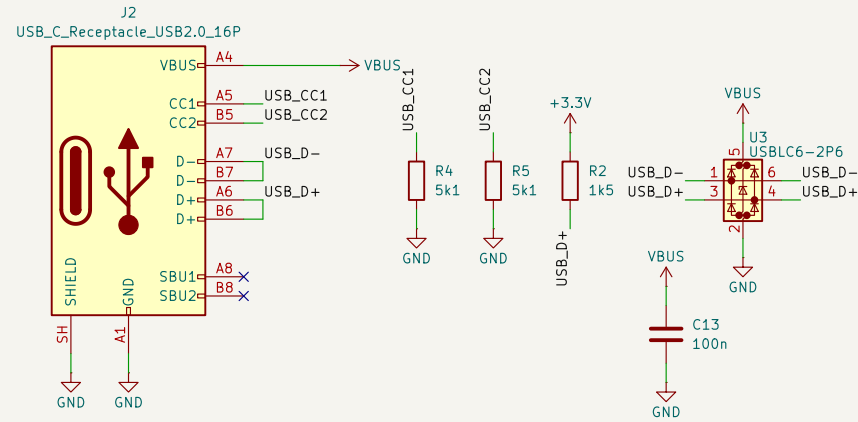


POWER

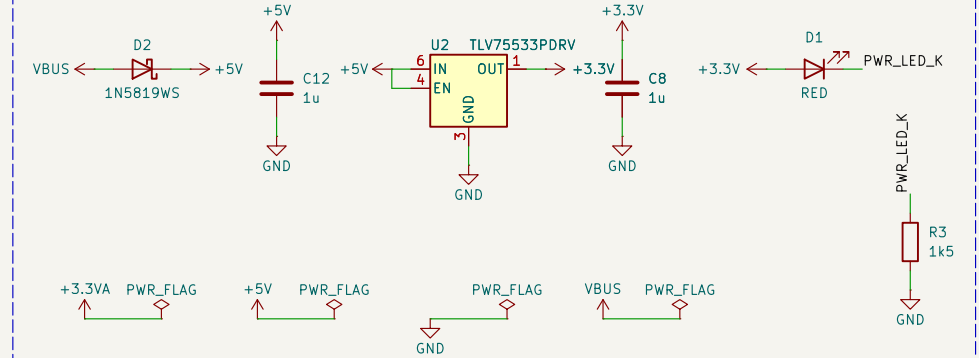


USER LED



HEADERS J1 / J3

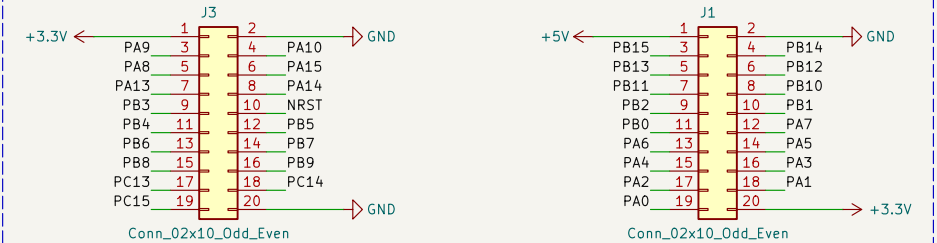

IMU (I2C1 0X6A, INT1 -> PA0)

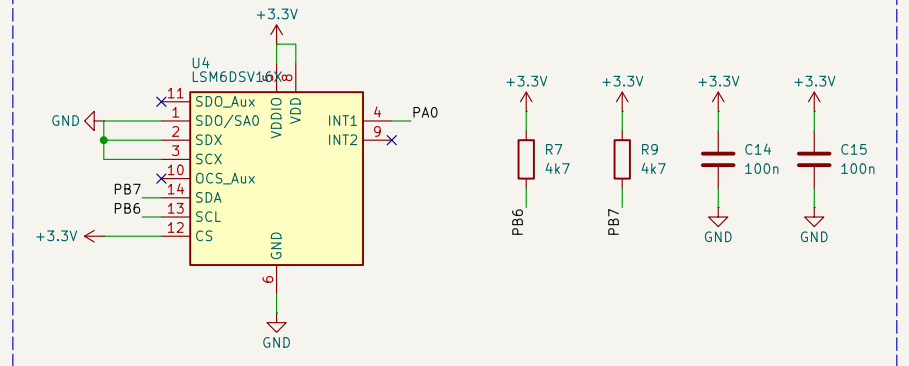

NOTES

- Every header pin is labelled beside it on the front silkscreen (A9 = PA9); the back has a function cheat sheet.
- CAN (PB8 RX / PB9 TX, remapped) is logic level only; it needs an external CAN transceiver.
- USB and CAN cannot run at the same time on the STM32F103 (they share the packet RAM).
- The 3V3 header pins are outputs of the on-board LDO (U2); do not back-drive them from another supply.
- The 5V header pin is USB VBUS after the Schottky D2; it can also be used as a 5 V input (max 5.5 V).

Sheet: /
File: nicklink.kicad_sch

Title: NickLink

Size: A3 Date: 2026-10-01

KiCad E.D.A. 10.0.6

Rev: 1.3

Id: 1/1