AEGIS GRID

We don't just watch the grid — we keep it current.

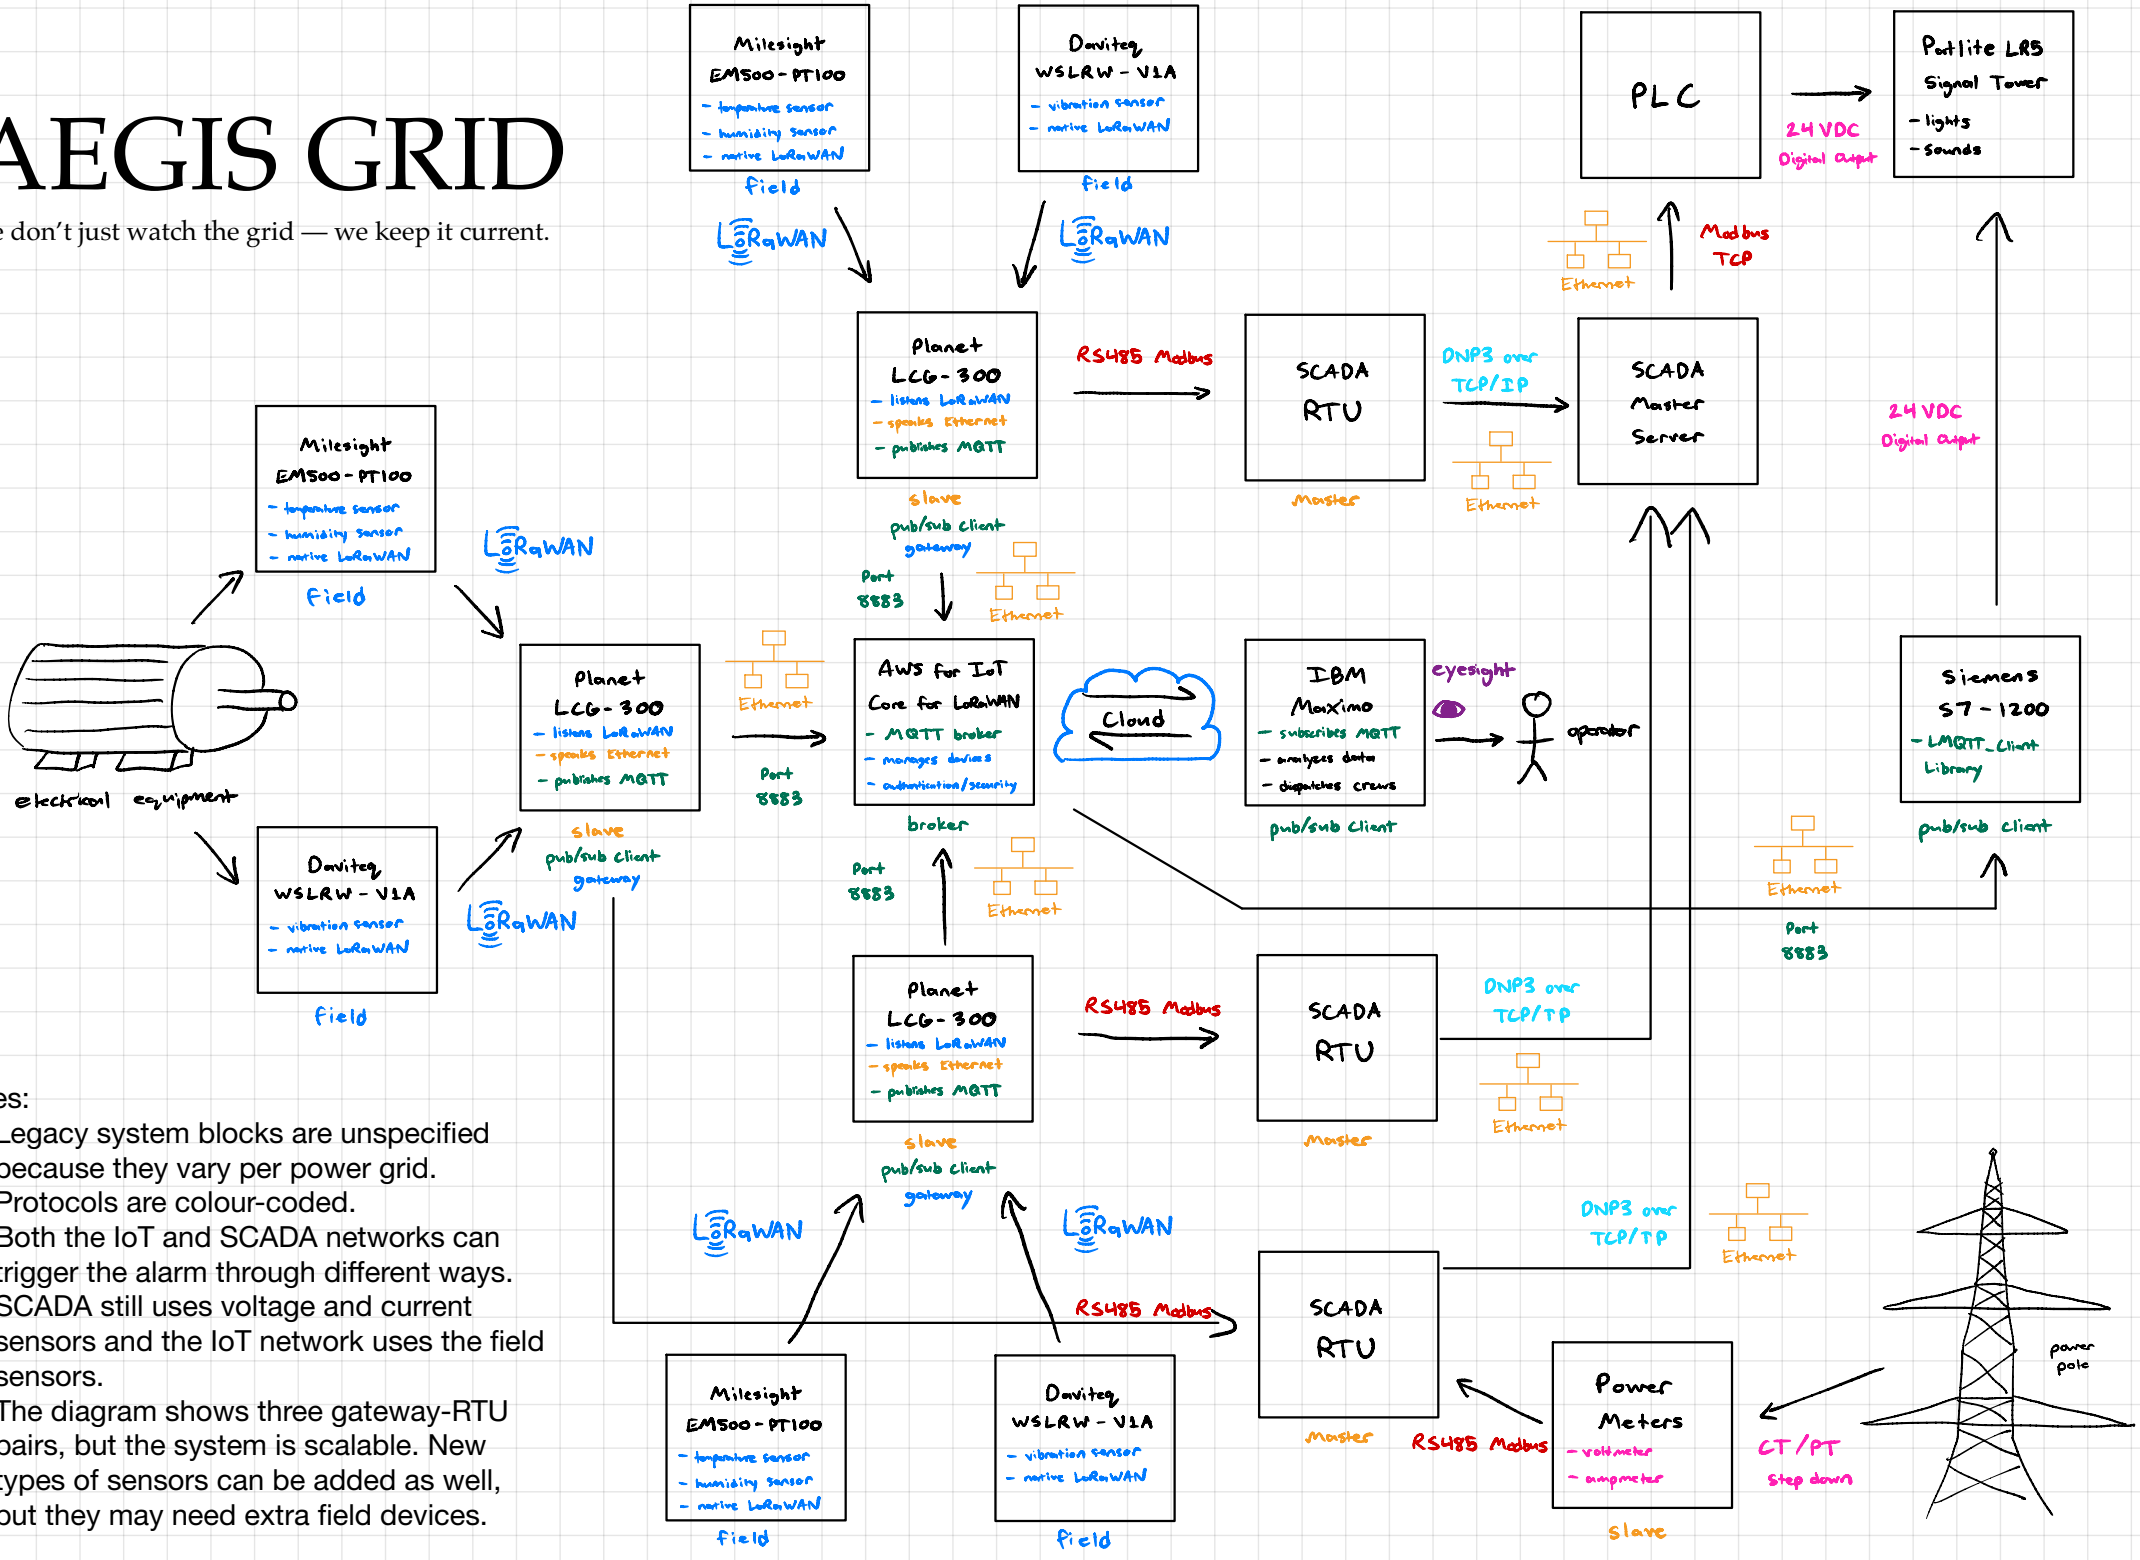

Notes:

1. Legacy system blocks are unspecified because they vary per power grid.
2. Protocols are colour-coded.
3. Both the IoT and SCADA networks can trigger the alarm through different ways. SCADA still uses voltage and current sensors and the IoT network uses the field sensors.
4. The diagram shows three gateway-RTU pairs, but the system is scalable. New types of sensors can be added as well, but they may need extra field devices.