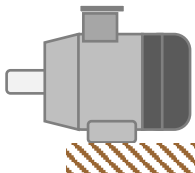
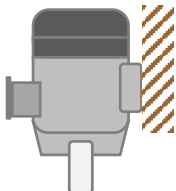


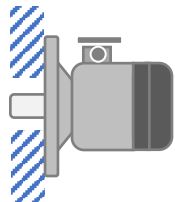
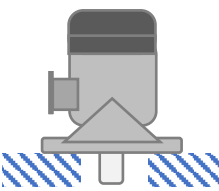
3-3 Installation Method

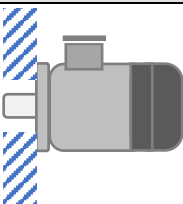
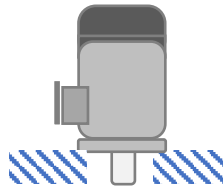
3-3-1 Installation Method

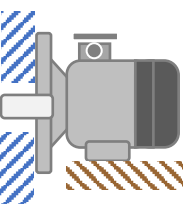
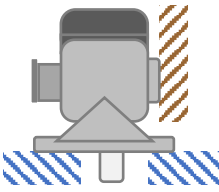
NOTE: The color markings in the following diagrams represent:

-  Blue zone represents the flange installation surface.
-  Brown zone represents the foot pads installation surface, note that the foot pads should be kept horizontal and cannot be warped.

IM B3	IM V5	Installation Method	Cooling Method
		No flange, foot pads installation	IC411*

IM B5	IM V1	Installation Method	Cooling Method
		Large flange installation	IC411*

IM B14	IM V18	Installation Method	Cooling Method
		Small flange installation	IC411*

IM B35	IM V15	Installation Method	Cooling Method
		Large flange and foot pads installation	IC411*

NOTE: *IC411: Totally-enclosed fan-cooled (TEFC)