


4

■ Cylinder

Refer to the following figure. Create a cylindrical workspace by clicking the **Teach** button in the Point operation areas to input the positions of X, Y, and Z and then manually input the Radius (R) and Height (H). Set the workspace as a **Working Area** or **Restricted Area** in the **Work Space** tab, and then click **Set** to write the settings to the controller.

Important: setting the height of the cylinder to a positive value indicates downward direction; a negative value indicates upward direction.


Cylinder					
	X (mm)	Y (mm)	Z (mm)	Radius (mm)	Height (mm)
► Center	340	-18	-12	100	100

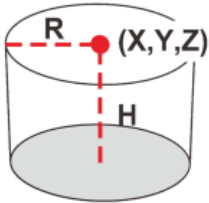

Reset

Get

Set

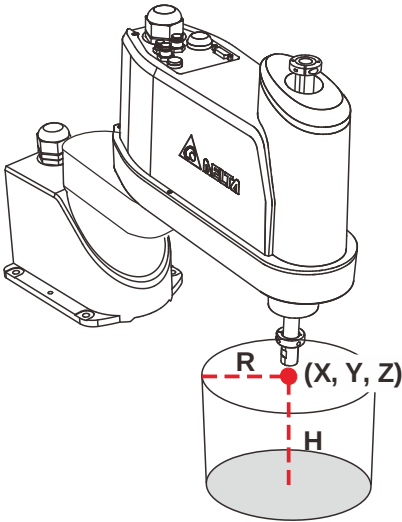

Teaching a cylindrical workspace