



6

Steps for mapping memory addresses:


1. You need to create a mapping table before using MonitorAddress for the first time. To edit the content, double-click the Fields for address mapping. The mapping example is shown as follows.

No.	Source Buffer	Dest Buffer	Note
1	1000	1001	0x1000 >> 0x1001
2	1002	02FE	0x1002 >> 0x2FE (DO)

2. When you have finished editing, click **Set**. If the writing is successful, the system shows the following dialog boxes in sequence.

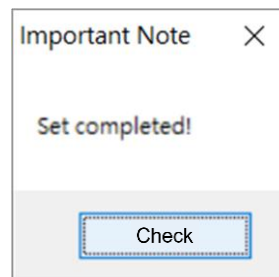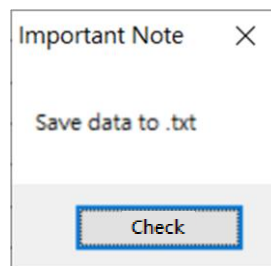

If the written address is out of range, the system shows one of the following dialog boxes. You need to input the correct address to continue.

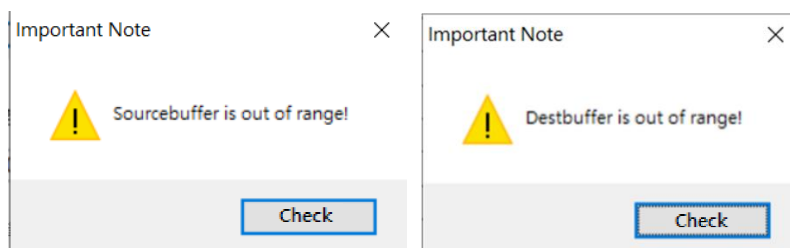

3. Select the **Enable** check box to enable the MonitorAddress function, and then set the scan time to 10 (ms).

