


8.3 Lead & Collision

In the **Lead & Collision** tab, you can set the parameters for collision protection to reduce damage to the robot when there is a collision.

8.3.1 Collision Setting

When detecting a collision, the collision protection brakes the motor and reverses the robot moving direction to prevent the robot from continuously moving to the target position, or it may cause more serious damage.

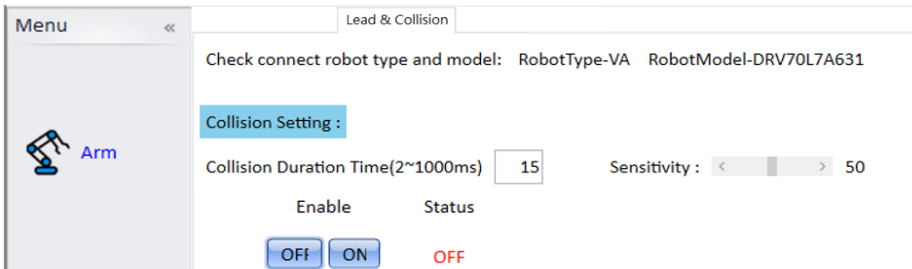

Item	Description																				
Collision Duration Time	Set the delay time of triggering the collision protection after a collision occurs. Setting range: 2 to 1000; unit: ms.																				
Sensitivity	Set the detection sensitivity in the range of 1 to 100. The greater the setting value, the higher the sensitivity; in that case, a minor bump or slight contact triggers the collision protection. Conversely, only a major collision triggers the collision protection. Adjust the sensitivity as required.																				
Enable	OFF : switch off the collision protection. ON : switch on the collision protection. When the Mass setting in the Payload tab does not match the actual weight, it affects the collision detection. Thus, make sure you have properly set the Mass before switching on the collision protection.																				
Status	Shows whether the collision protection is ON. You can also go to the Status subpage and click Update to check the status for "Collision Detect". Status Update <table><tr><th>Status</th><th>Content</th></tr><tr><td>ON</td><td>Gravity Compensation Deformation</td></tr><tr><td>ON</td><td>Gravity Compensation Torque</td></tr><tr><td>OFF</td><td>Thermal Compensation</td></tr><tr><td>OFF</td><td>FigureAngle Compensation(SCARA)</td></tr><tr><td>OFF</td><td>System Reservation</td></tr><tr><td>OFF</td><td>System Reservation</td></tr><tr><td>OFF</td><td>System Reservation</td></tr><tr><td>OFF</td><td>FigureLength Compensation(SCARA)</td></tr><tr><td>OFF</td><td>Collision Detect</td></tr></table>	Status	Content	ON	Gravity Compensation Deformation	ON	Gravity Compensation Torque	OFF	Thermal Compensation	OFF	FigureAngle Compensation(SCARA)	OFF	System Reservation	OFF	System Reservation	OFF	System Reservation	OFF	FigureLength Compensation(SCARA)	OFF	Collision Detect
Status	Content																				
ON	Gravity Compensation Deformation																				
ON	Gravity Compensation Torque																				
OFF	Thermal Compensation																				
OFF	FigureAngle Compensation(SCARA)																				
OFF	System Reservation																				
OFF	System Reservation																				
OFF	System Reservation																				
OFF	FigureLength Compensation(SCARA)																				
OFF	Collision Detect																				