


■ Mode 3: Select Near Path & Avoid Joint Limit


When the joint motion instructions such as MovP, MovPR, MArchP, and RelToolP are executed, the rotation axis moves the shortest distance to the target position without exceeding the limit. When the target position exceeds the angle limit of the rotation axis, the axis rotates in the reverse direction to the target position. When you select Mode 3, make sure the placement of the wiring and the end effector does not interfere with the rotation.

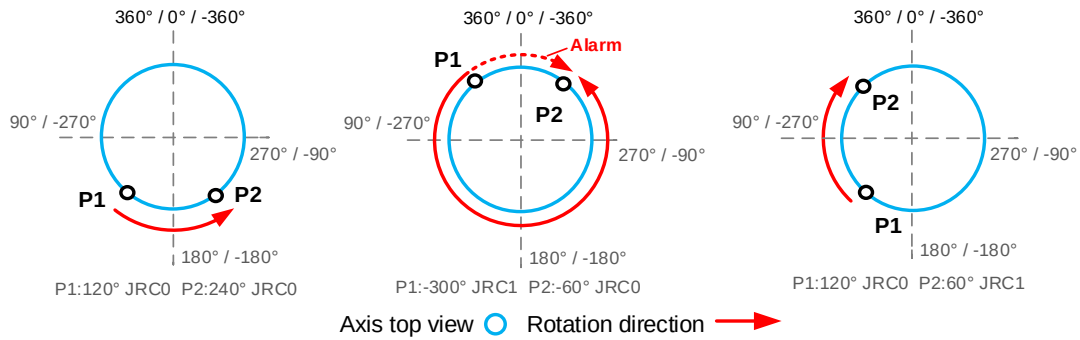

When the linear motion instructions such as MovL, MovLR, MArchL, and RelToolL are executed, the movement of the 4-axis SCARA robots is different from that of the VA robots and the J4 axis of 5-axis SCARA robots. Refer to the descriptions as follows.

4-axis SCARA robots

The rotation axis refers to the angle and moves to the target position.

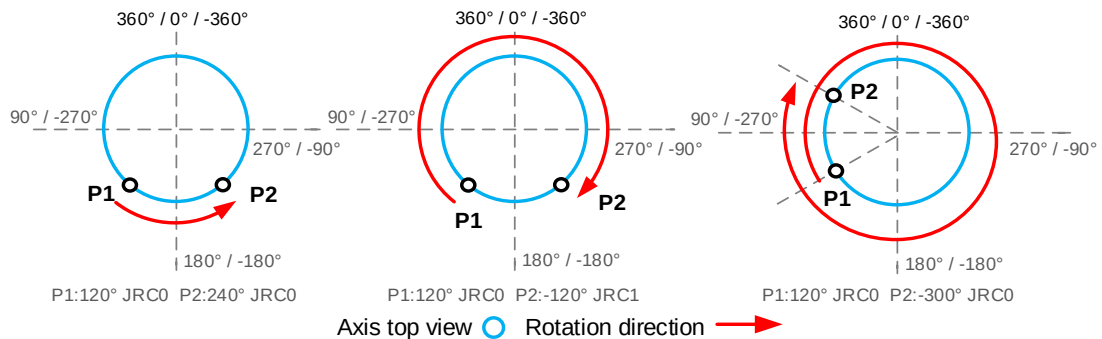

VA robots and the J4 axis of 5-axis SCARA robots

The rotation axis moves the shortest distance to the target position. However, when the target position exceeds the angle limit of the rotation axis, the system displays an alarm and stops the robot.

