


Step 3 Take out the Mini SNMP and plug in the flat wire (see *Figure 3-c*).

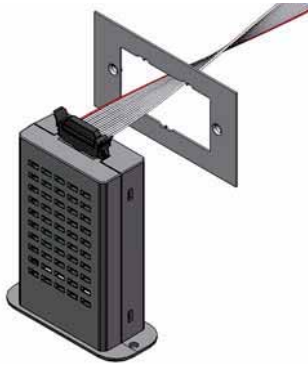

(Figure 3-c)

Step 4 Install the Mini SNMP into the UPS's Mini slot (see *Figure 3-d*).



(Figure 3-d)

Step 5 Secure the Mini SNMP with two screws provided in the package (see *Figure 3-e*).



(Figure 3-e)