


3.4 SVG Cabinet Wiring

1. Before starting SVG cabinet wiring, please make sure that power is cut off to avoid accidents.
2. Appropriate cable glands shall be used for all SVG cable entries. Where possible use the gland plates provided with the cabinet for cable entries. Remove the gland plates prior to slotting or cutting for cable entries to avoid ingress of swarf & other debris. If using large single core cables use nonferrous gland plates to reduce chance of eddy currents.
3. Selection of the cable glands must not compromise the enclosure required IP rating. Follow the cable gland installation instructions of manufacturers to ensure correct installation.
4. The SVG must be grounded properly for safety concerns.
5. Check the diameter markings on the SVG cabinet's input wires, and verify that the wire diameter and phase sequence are correct. Please follow **Figure 3-6** to perform wiring and refer to **Table 3-1** for power line specifications.

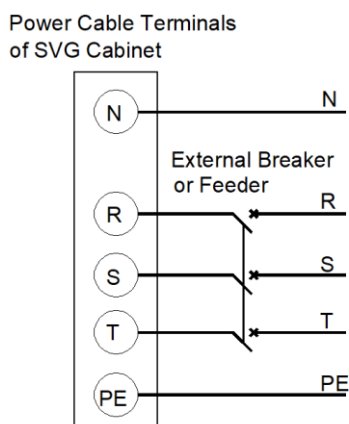

(Figure 3-6: Connection diagram of the main power wires to SVG cabinet)

Table 3-1: SVG Cabinet's Main Power Wires and Breaker Selection

SVG Rated Capacity (kvar)	Breaker Size (A)	R/S/T Wire Diameter	N Wire Diameter (3P4W)	N Wire Diameter (3P3W)	PE Wire Diameter
50 kvar	100A	35 mm ²	35 mm ²	1.5 mm ²	16 mm ²
100 kvar	200A	70 mm ²	70 mm ²	1.5 mm ²	35 mm ²
150 kvar	300A	120 mm ²	120 mm ²	1.5 mm ²	70 mm ²
200 kvar	400A	185 mm ²	185 mm ²	1.5 mm ²	95 mm ²
250 kvar	500A	240 mm ²	240 mm ²	1.5 mm ²	120 mm ²
300 kvar	630A	2×150 mm ²	2×150 mm ²	1.5 mm ²	150 mm ²