

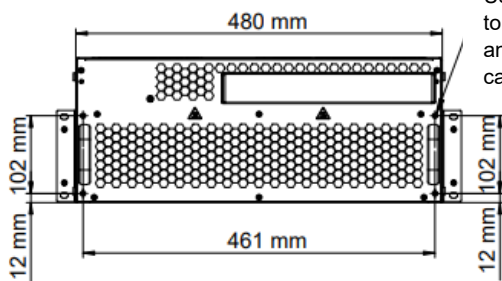


Use four M4 screws to fix the module and the customized cabinet.


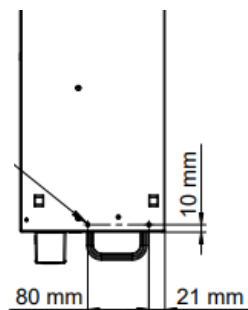


Use four M6 screws to fix the module and the customized cabinet.

(100kvar Modules)

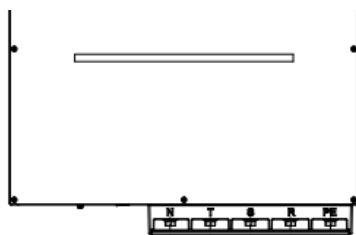

Use four M4 screws to fix the module and the customized cabinet.

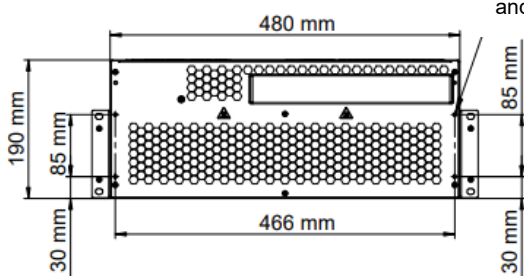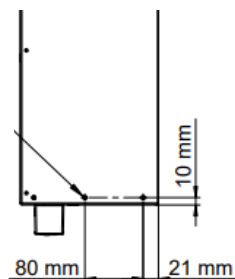

Use four M6 screws to fix the module and the customized cabinet.

(50kvar Modules)

(Figure 3-26: Module End and Installation Holes on the Side)