


4.8.1 How to teach a rectangular workspace

The following example is for setting a restricted area.

- 1. Go to the **JOG** subpage and select the TF (Tool Frame ID) for which you want to teach the workspace.

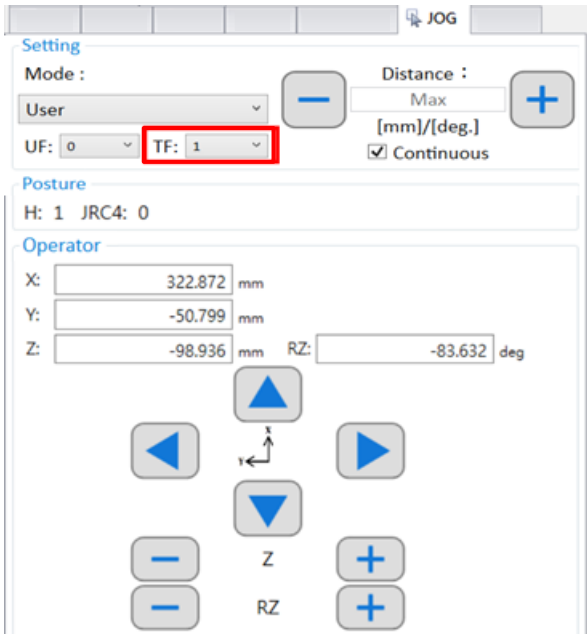

- 2. In the **Work Space** tab of the Point management page, select a Work Space ID and set the workspace as a **Restricted Area**.

ID1

TypeRectangle

StatusDisable

☒ Show Alarm

Area

Restricted Area

Work Space is Closed

Restricted Area DO

Disable

DO1

ON

Rectangle

	X (mm)	Y (mm)	Z (mm)
PO	467	-85	-12
PX	475	-85	-12
PY	467	-60	-60

PO

PY

PX

Reset

Get

Set

