

A.2 Functional pause in RL

Two instructions are provided in Delta's RL for the functional pause operations.

A.2.1 SafetyMode (Set the status of functional pause)

This instruction is for switching the functional pause modes. After the functional pause is triggered, the robot decelerates to a pause. To resume the robot operation, you need to set the system DI3 (functional pause reset) to OFF, ON, and then OFF.


(1) Syntax

SafetyMode(Mode)

■ *Mode*

There are five functional pause modes with the setting value ranging from 1 to 5; the default mode is 1. The definitions of each mode are as follows.

1: when the functional pause is triggered, the robot pauses after completing the current motion. The DI/O statuses remain unchanged.

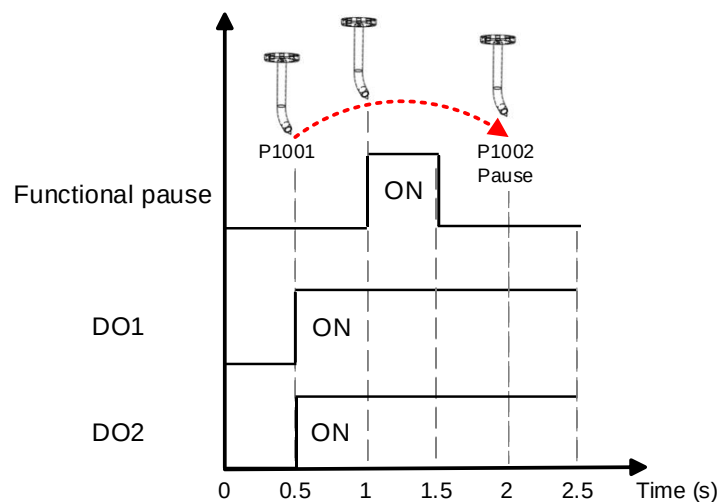

2: when the functional pause is triggered, the robot pauses after completing the current motion. The DI/Os are switched to OFF.

