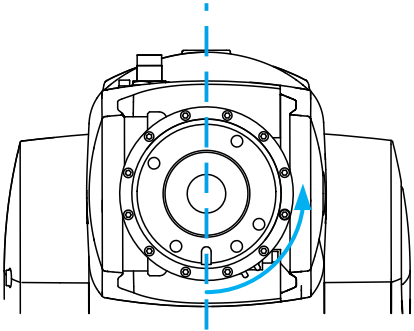
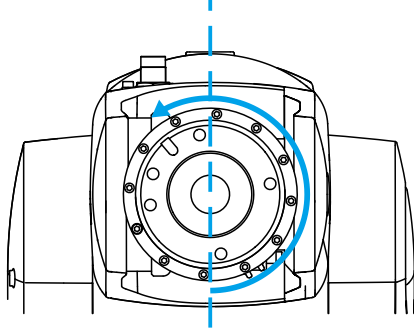


- JRC4 indicates the JRC (Joint Rotation Count) of the J4 axis.  
When  $-180^{\circ} \leq \text{rotation angle} < +180^{\circ}$ , the JRC4 shows 0.  
When  $180^{\circ} \leq \text{rotation angle} < 360^{\circ}$  or  $-360^{\circ} \leq \text{rotation angle} < -180^{\circ}$ , the JRC4 shows 1.
- JRC6 indicates the JRC (Joint Rotation Count) of the J6 axis.  
When  $-180^{\circ} \leq \text{rotation angle} < +180^{\circ}$ , the JRC6 shows 0.  
When  $180^{\circ} \leq \text{rotation angle} < 360^{\circ}$  or  $-360^{\circ} \leq \text{rotation angle} < -180^{\circ}$ , the JRC6 shows 1.

| JRC6: 0<br>$-180^{\circ} \leq \text{J6 rotation angle} < +180^{\circ}$            | JRC6: 1<br>$180^{\circ} \leq \text{J6 rotation angle} < 360^{\circ}$<br>or $-360^{\circ} \leq \text{J6 rotation angle} < -180^{\circ}$ |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
|  |                                                      |