


Power Cable Terminals
of APF Cabinet

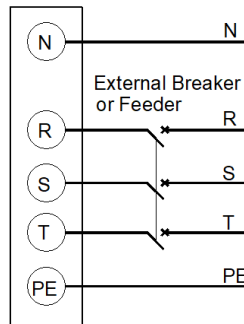

(Figure 3-6: Connection diagram of the main power wires to APF cabinet)

Table 3-1: APF Cabinet's Main Power Wires and Breaker Selection

APF Rated Current (A)	Breaker Size (A)	R/S/T Wire Diameter	N Wire Diameter (3P4W)	N Wire Diameter (3P3W)	PE Wire Diameter
30A	50A	16 mm ²	16 mm ²	1.5 mm ²	16 mm ²
50A	80A	35 mm ²	35 mm ²	1.5 mm ²	16 mm ²
75A	125A	50 mm ²	50 mm ²	1.5 mm ²	25 mm ²
100A	160A	70 mm ²	70 mm ²	1.5 mm ²	35 mm ²
150A	250A	95 mm ²	95 mm ²	1.5 mm ²	50 mm ²
200A	315A	150 mm ²	150 mm ²	1.5 mm ²	70 mm ²
300A	500A	2×120 mm ²	2×120 mm ²	1.5 mm ²	120 mm ²
350A	550A	2×120 mm ²	2×120 mm ²	1.5 mm ²	120 mm ²
400A	630A	2×150 mm ²	2×150 mm ²	1.5 mm ²	150 mm ²
450A	700A	2×185 mm ²	2×185 mm ²	1.5 mm ²	185 mm ²
500A	800A	2×240 mm ²	2×240 mm ²	1.5 mm ²	240 mm ²
600A	(500A+500A) or 1000A	2×300 mm ²	2×300 mm ²	1.5 mm ²	240 mm ²
700A	(500A+630A) or 1150A	2×300 mm ²	2×300 mm ²	1.5 mm ²	240 mm ²
750A	(500A+700A) or 1250A	2×400 mm ²	2×400 mm ²	1.5 mm ²	240 mm ²