

Uenfuri Maka


Build Guide




This work is licensed under the Creative Commons Attribution-NonCommercial 4.0 International License. To view a copy of this license, visit <http://creativecommons.org/licenses/by-nc/4.0/>

Northeast Designs - PG. 1

Step One: Install all brass threaded inserts using a soldering iron. Note that some are M3 and some are M4, Pay attention to the notation.

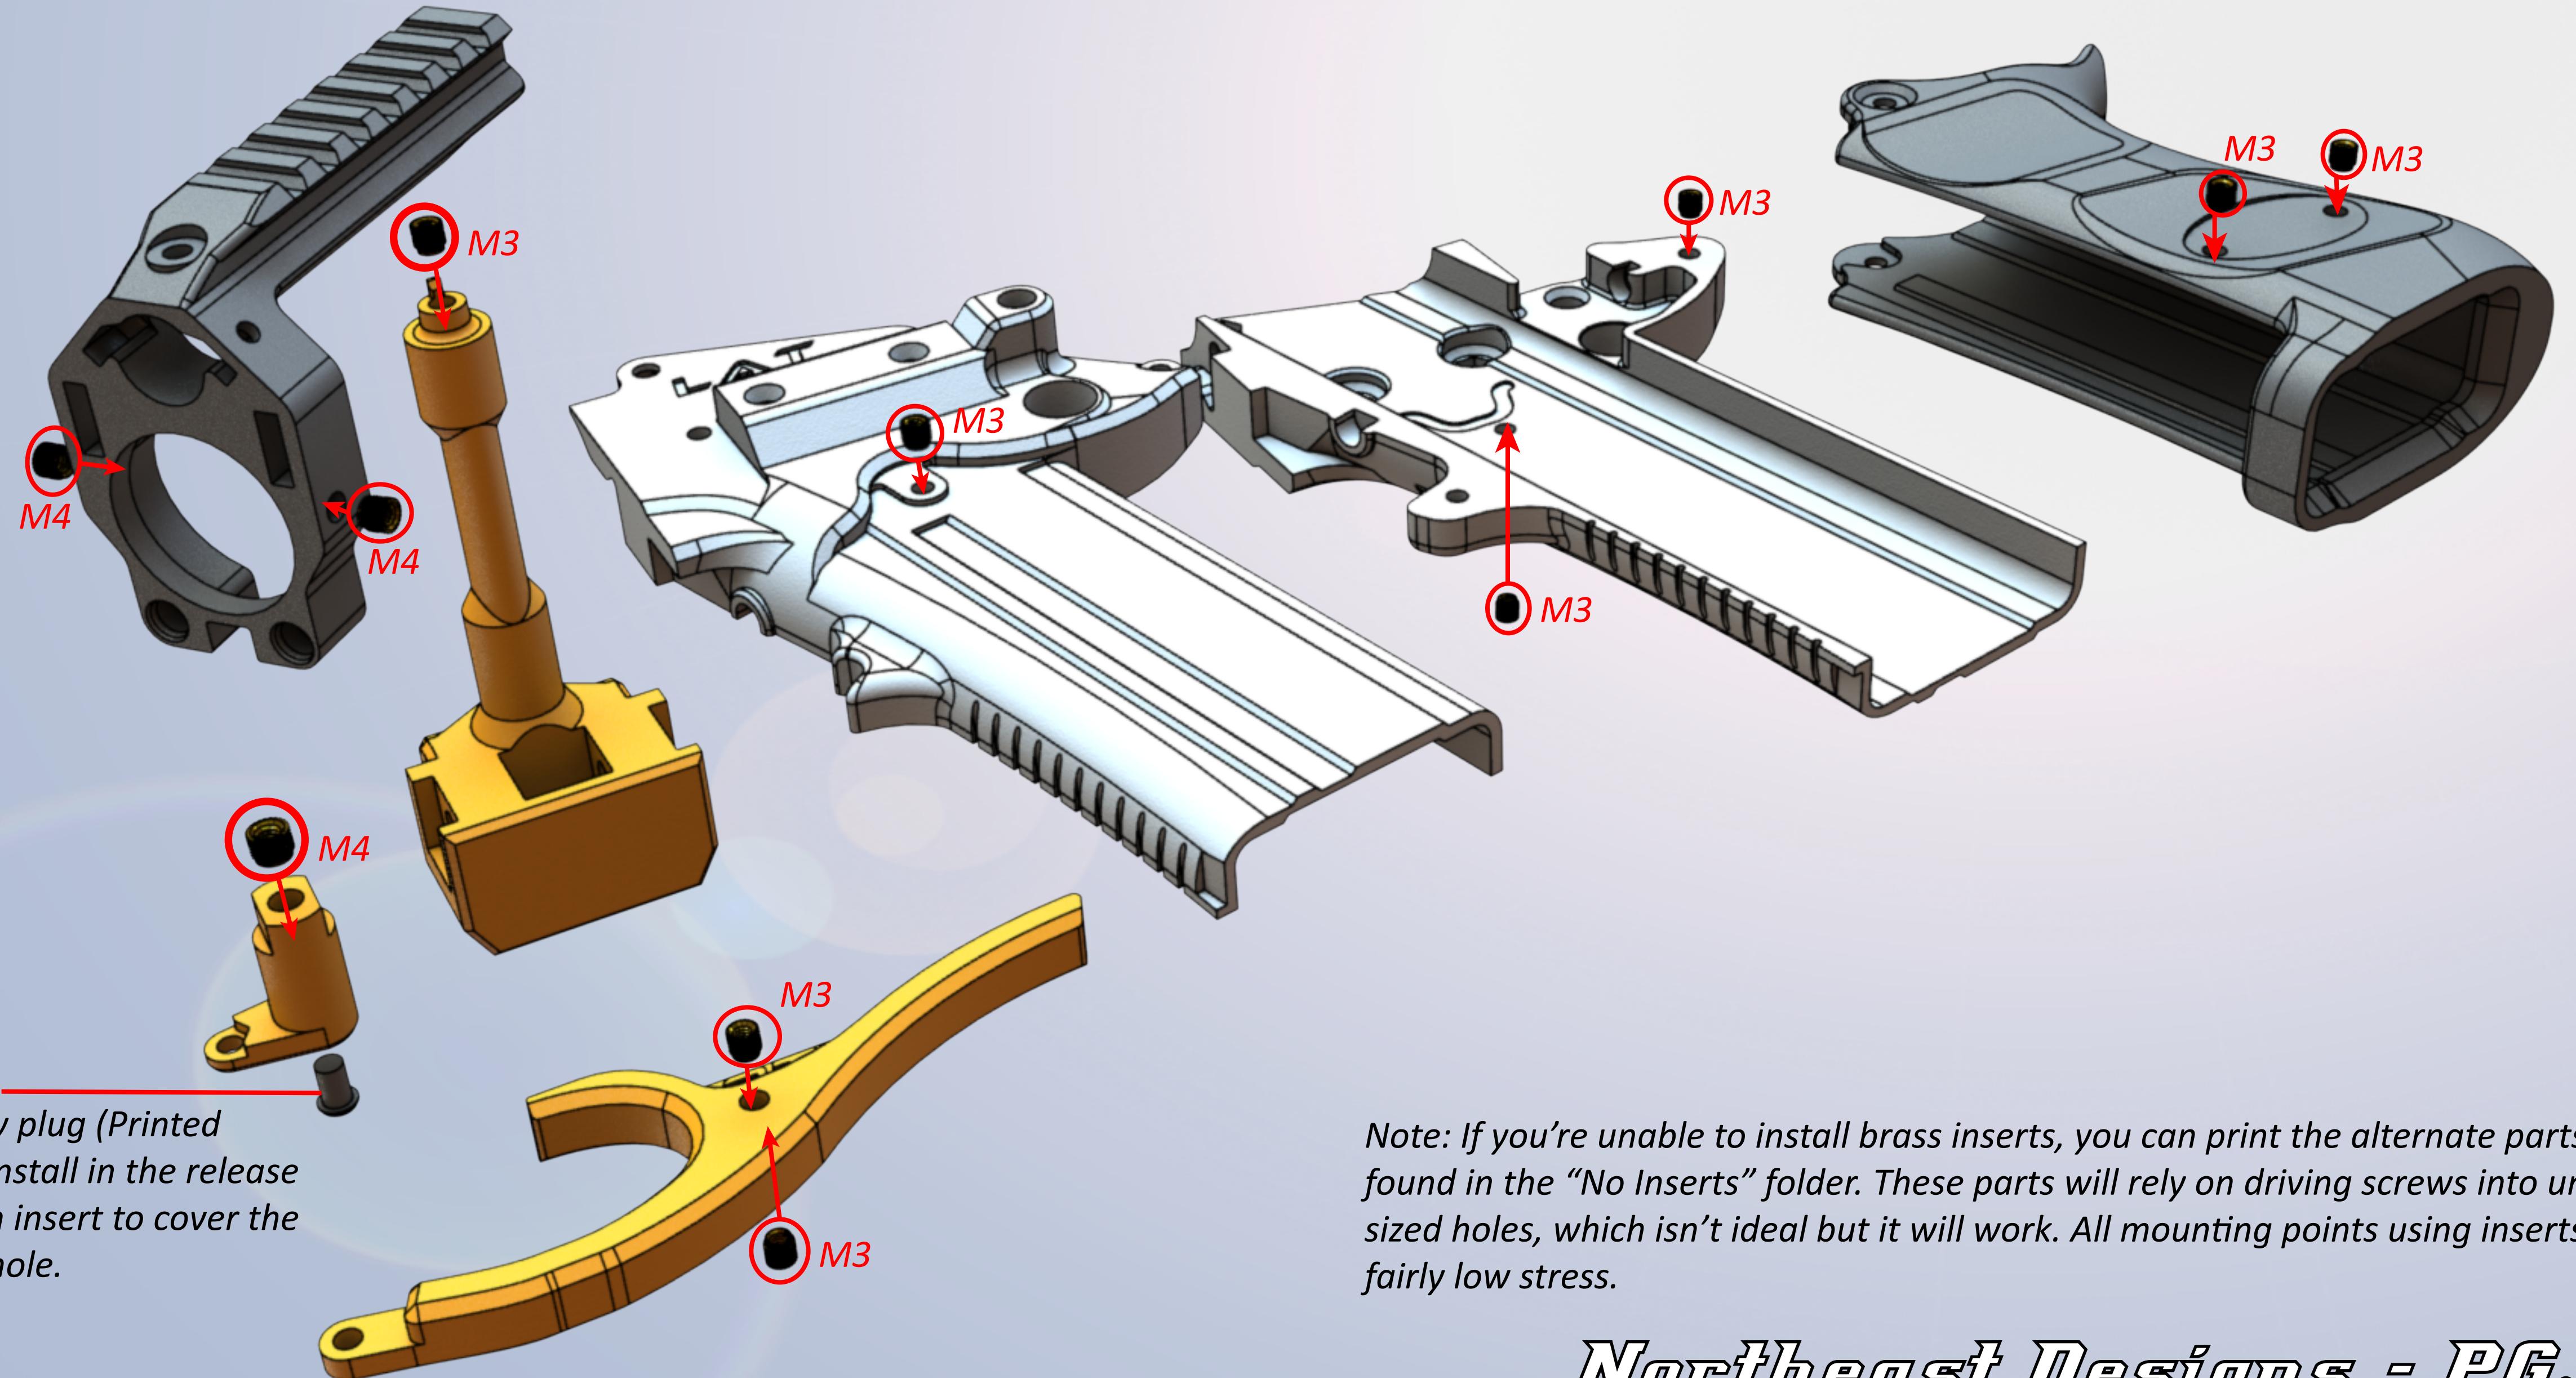



Step Two: Draw in four (4) M4 hex nuts into the cutouts on the inside of the handle, using a M4 screw to pull them into place. Do the same with an M3 nut on the trigger gaurd mounting point. Remove all screws after the nuts are installed.

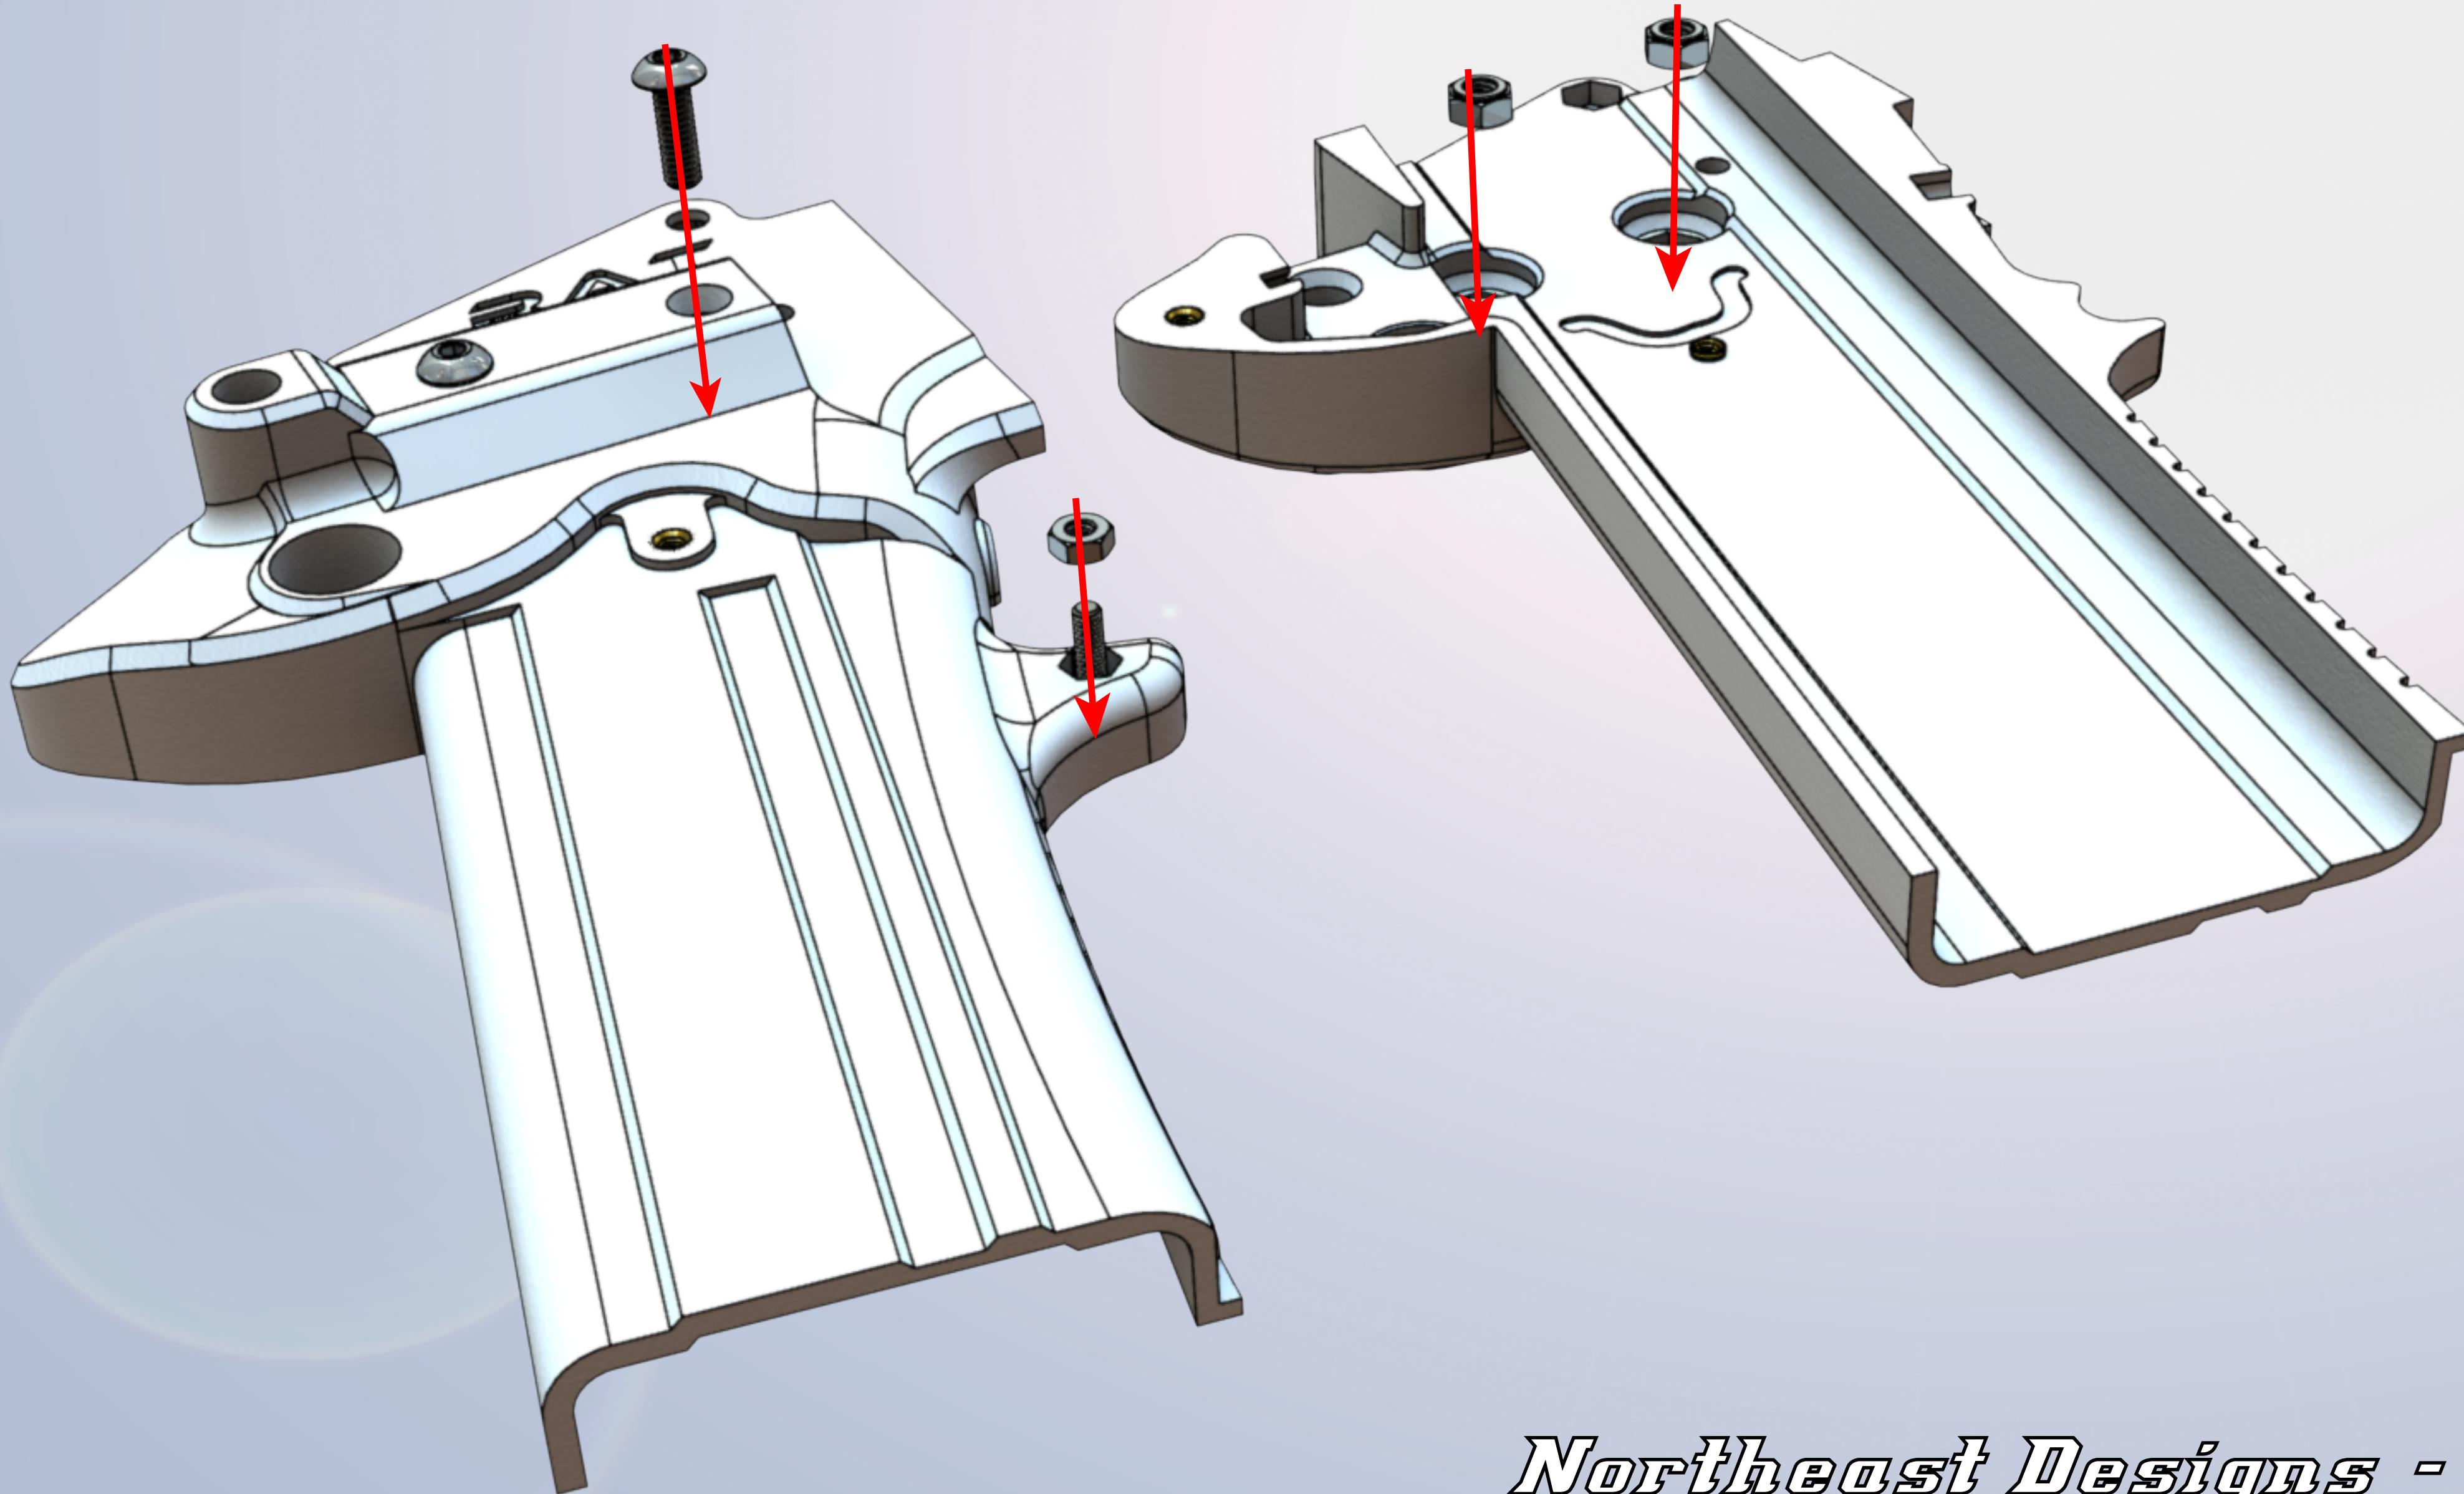


Step Three: Handle Assembly

Release with Insert & Dummy cap underneath, with lever pointing forward.

Small spring here,
hard to see.

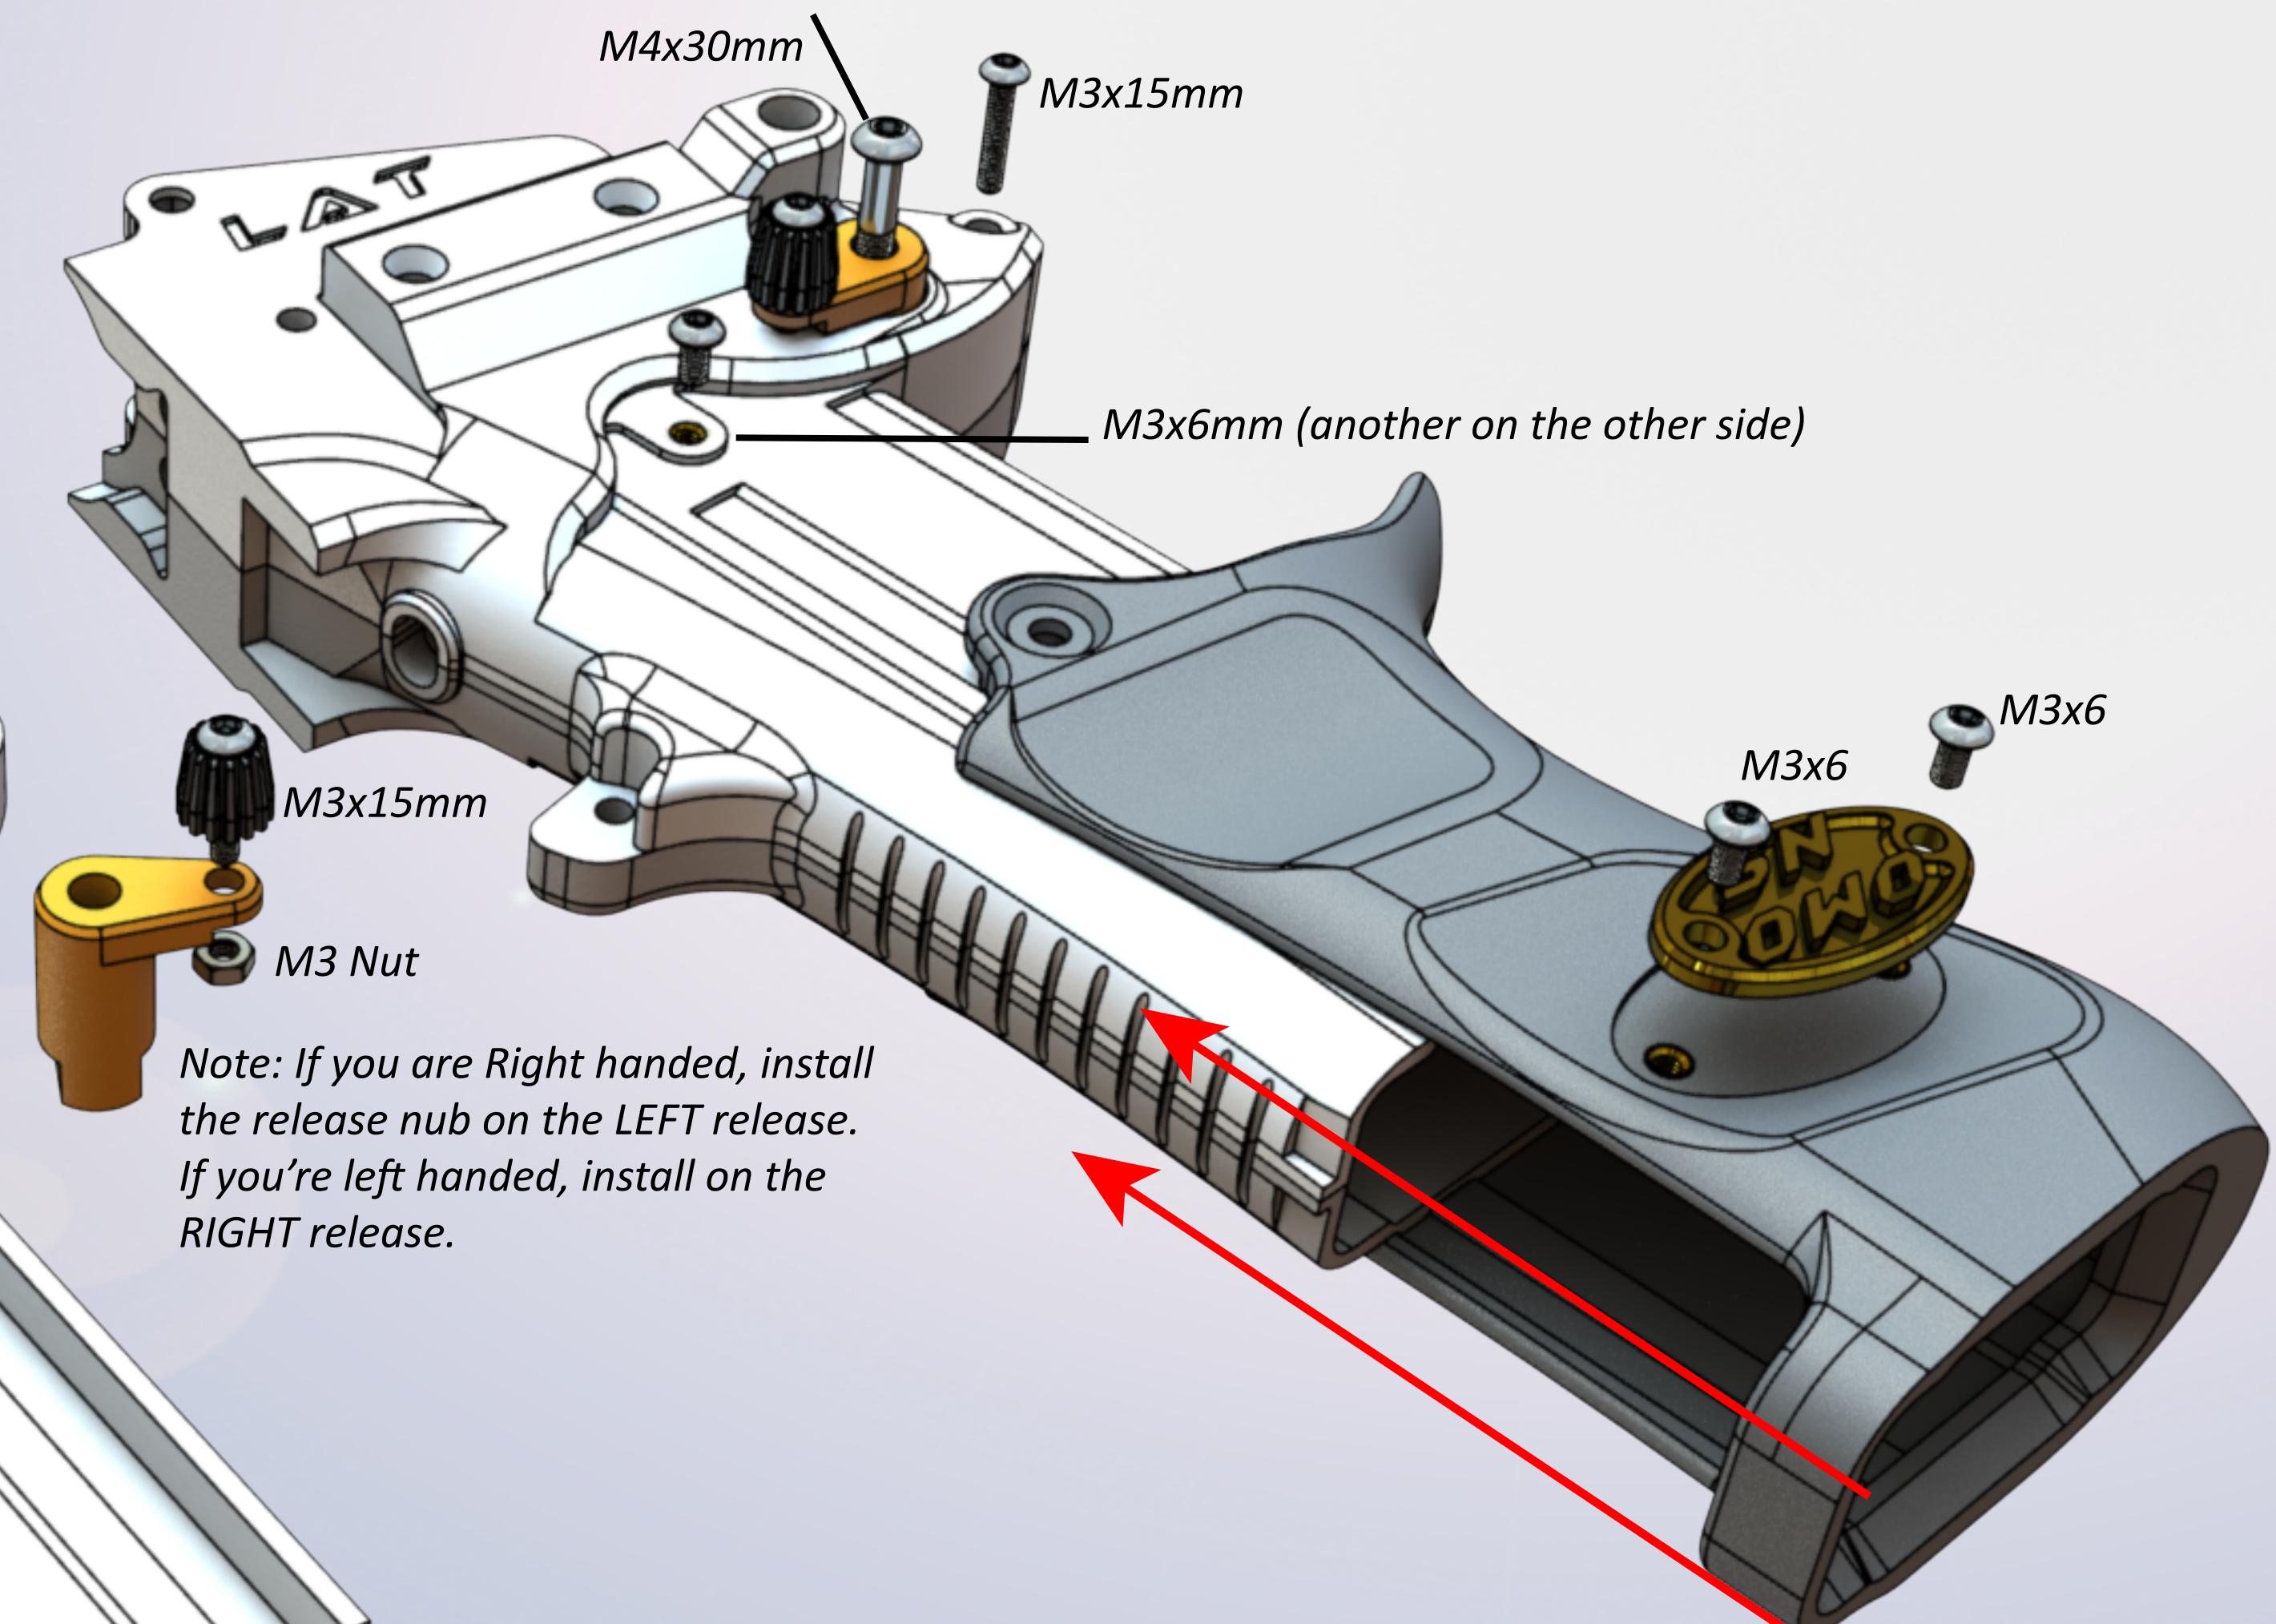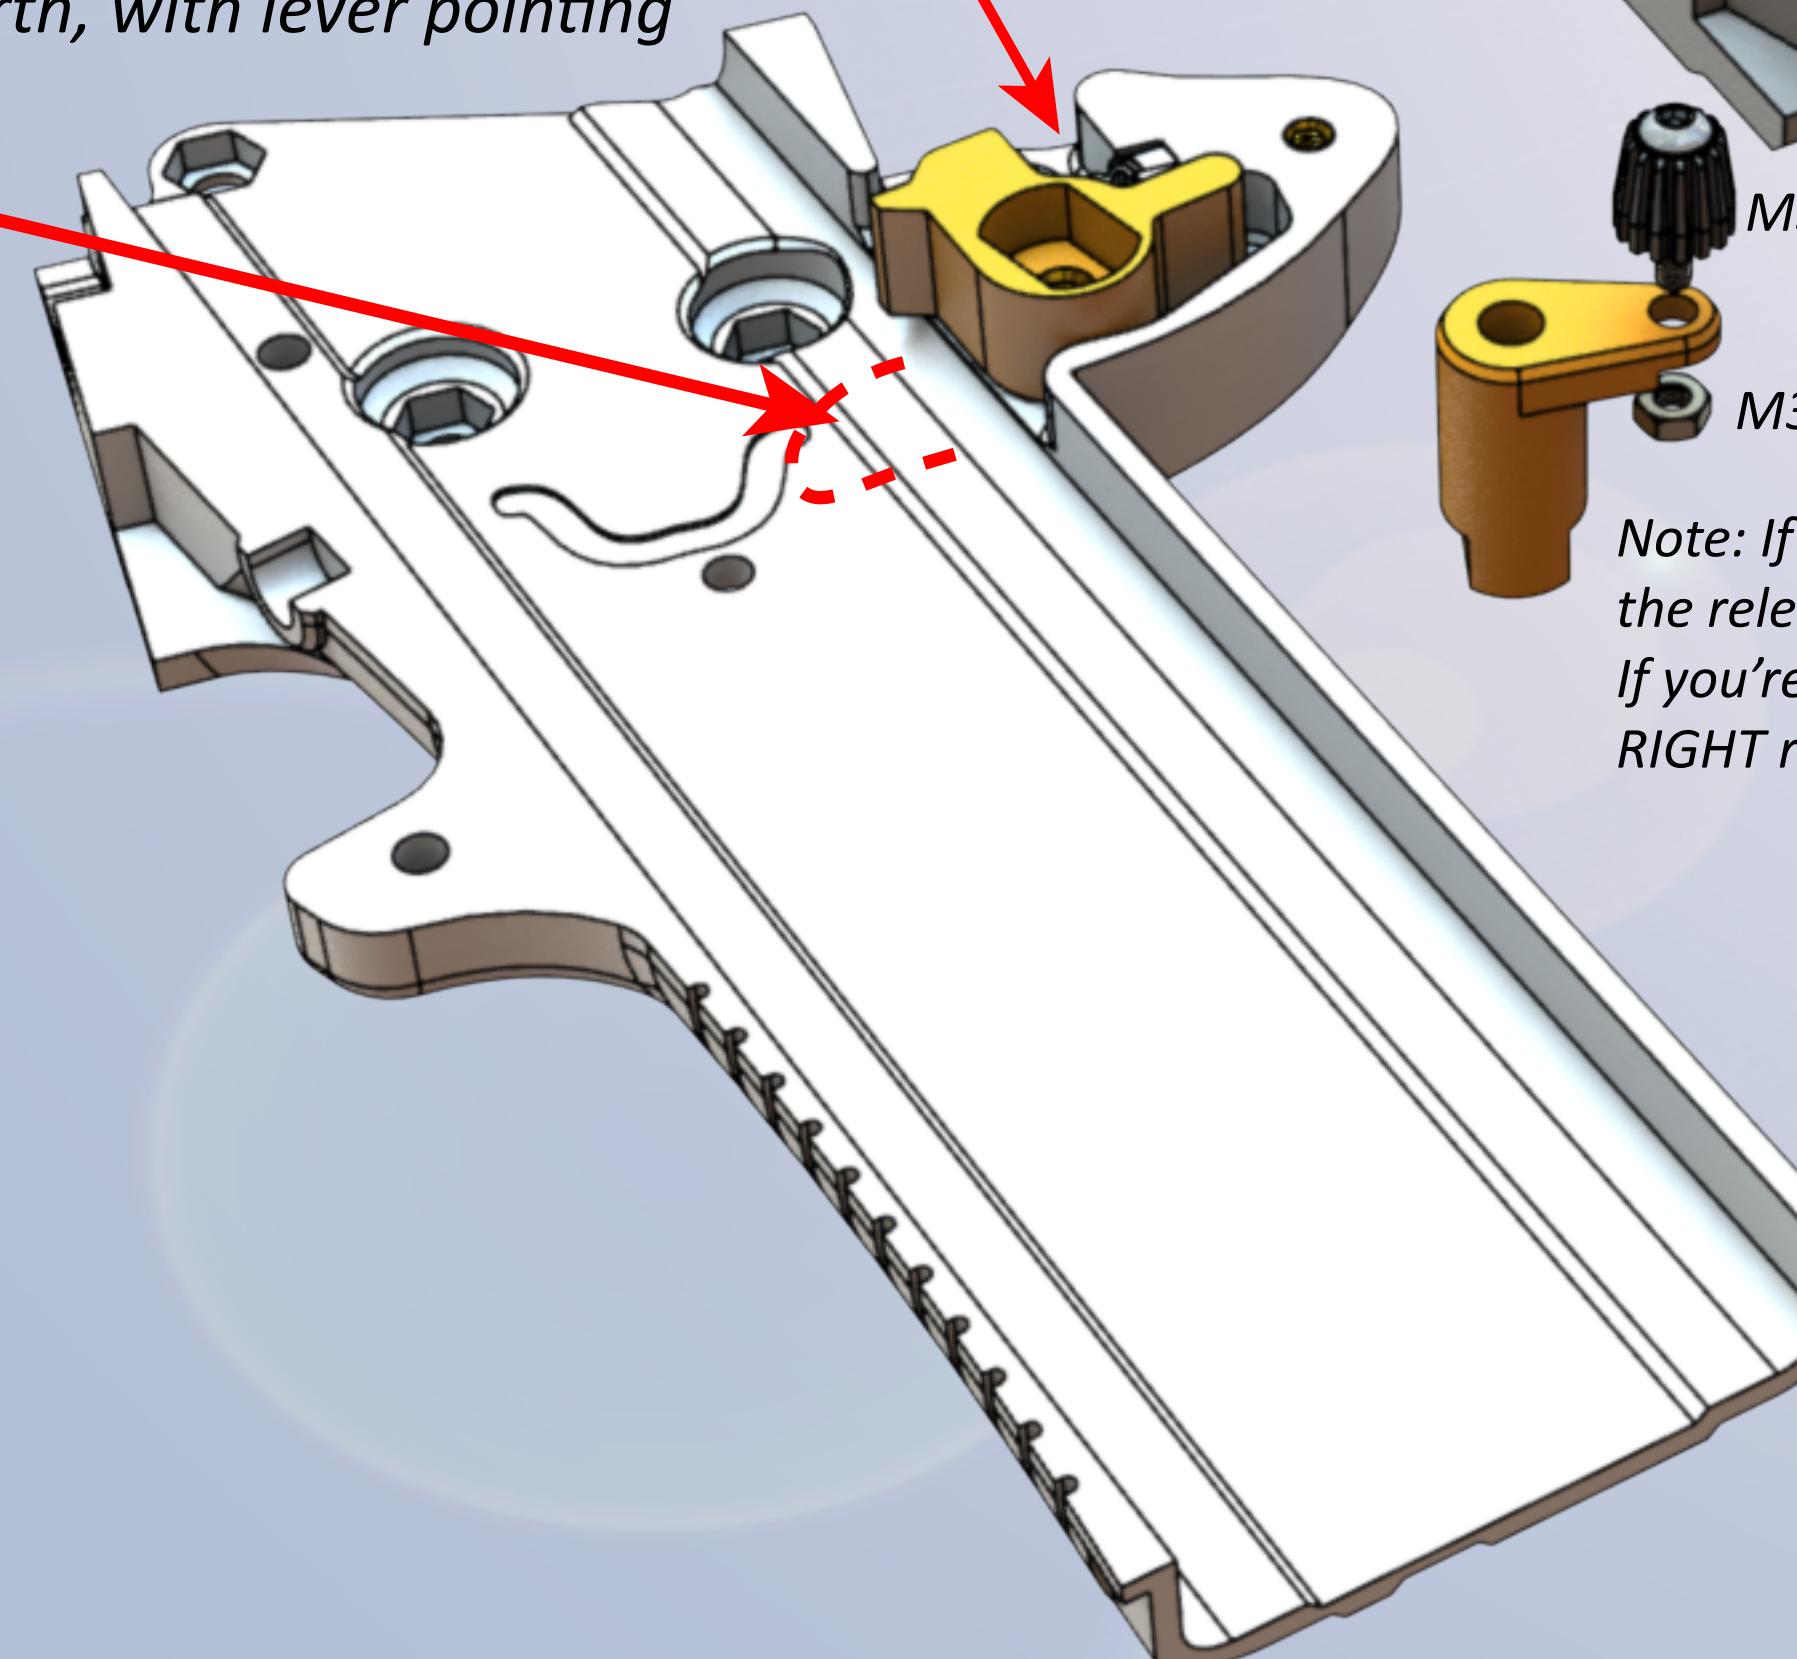


Step Four: Plunger and Pusher Assembly

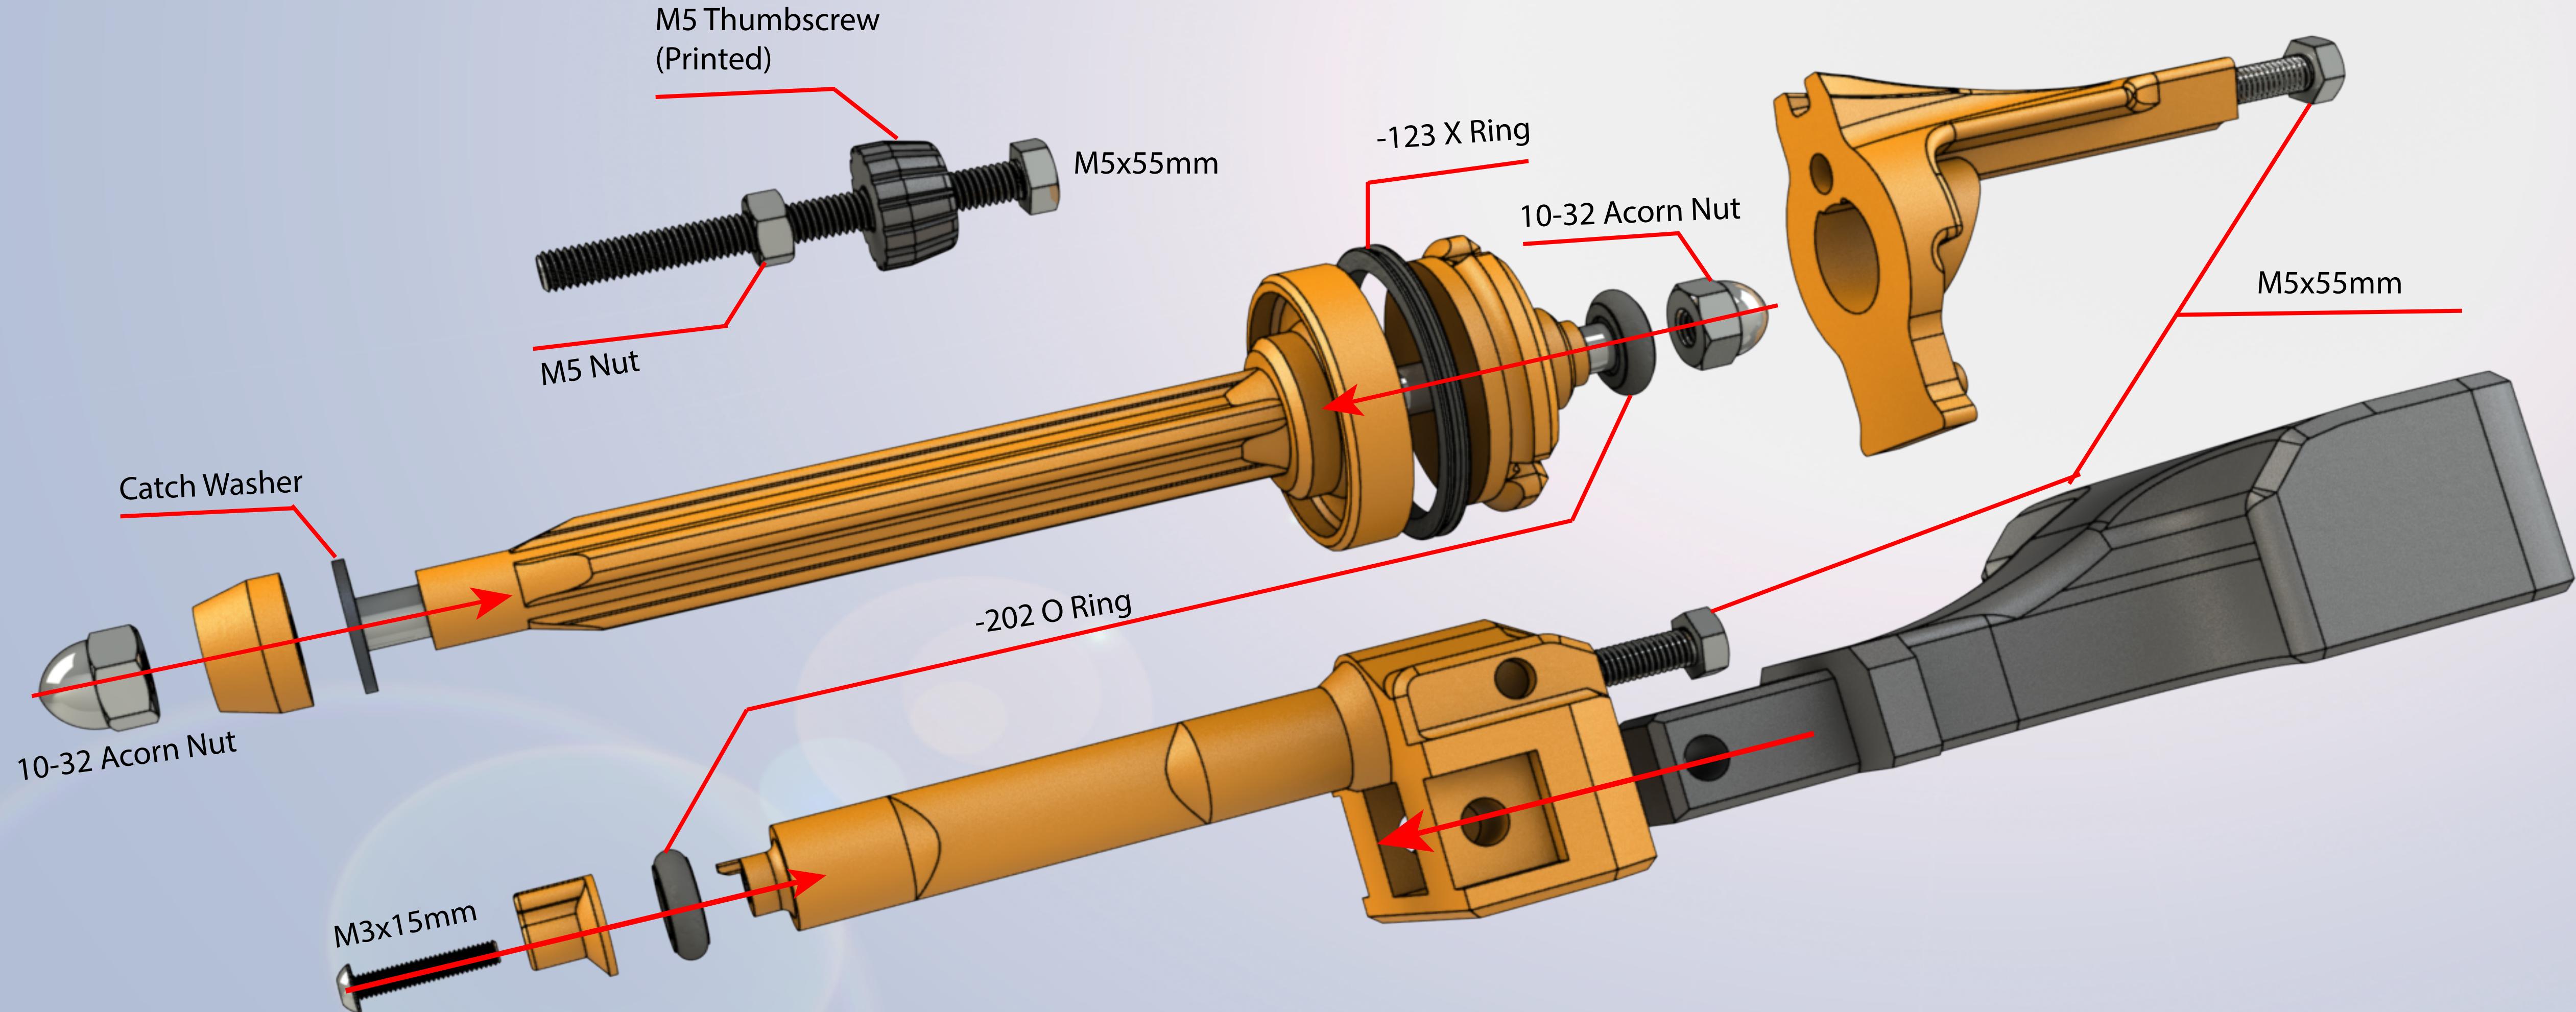


Recommended: Apply a dab of blue loctite to the threaded rod on both ends to make sure the Acorn Nuts stay tight.

Step Five: Catch House Assembly

Printed Parts: 1x Catch House, 1x Catch Roof.
Hardware: 1x Catch Plate, 1x Small Spring, 4x M4 Nut, 4x M4x12mm Screws.

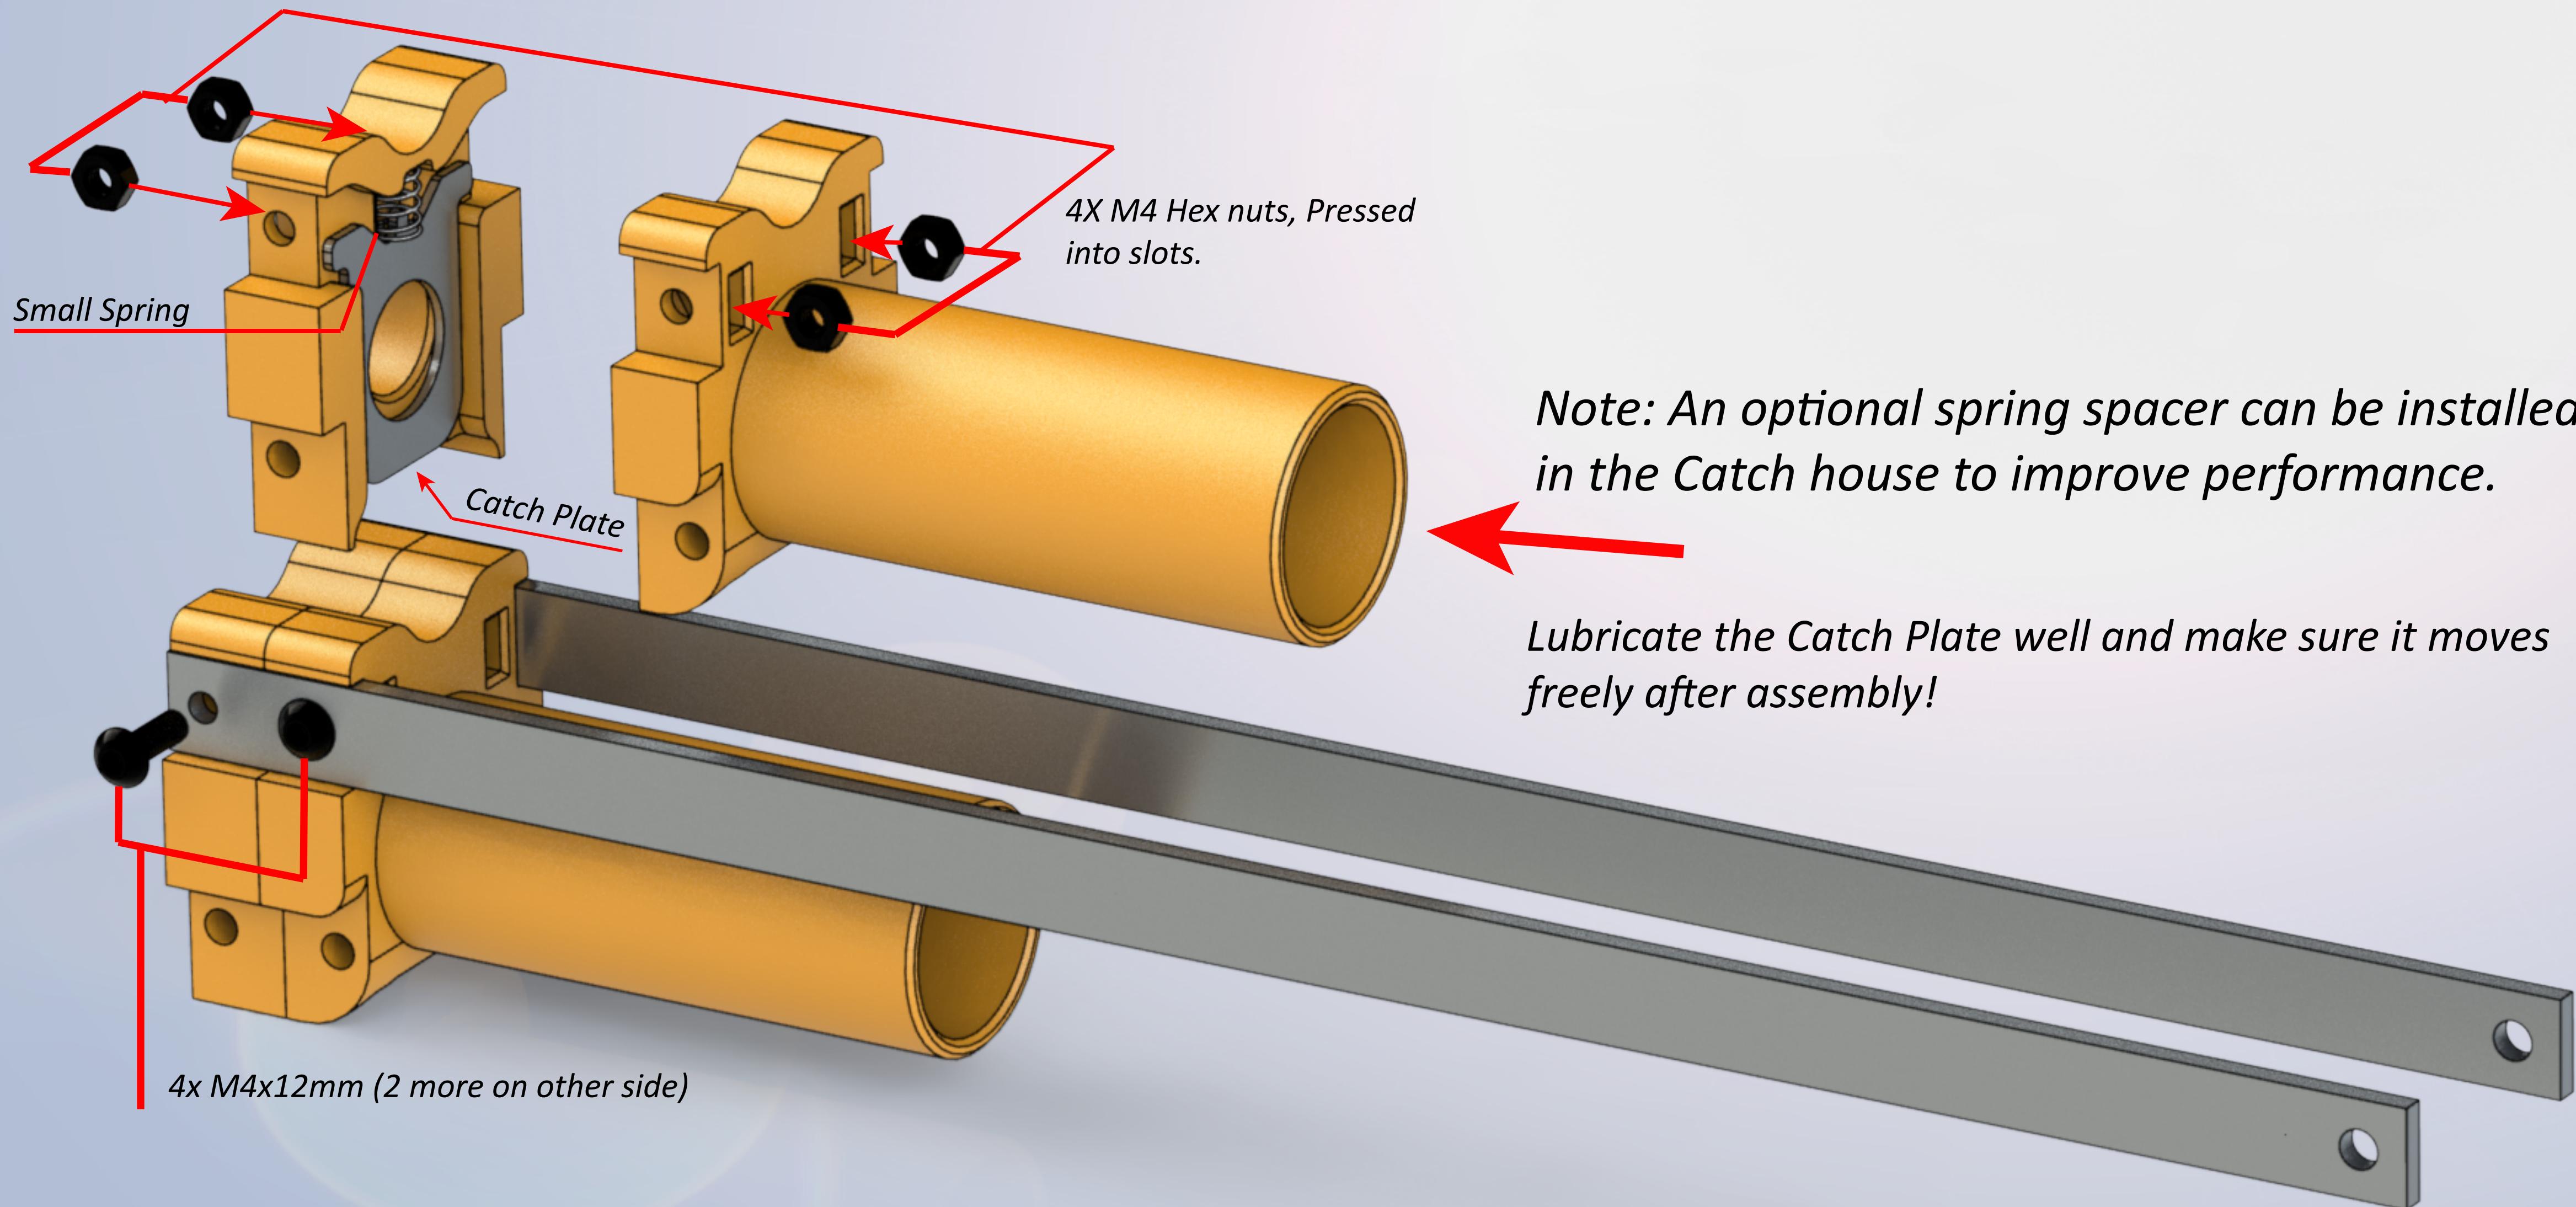


Step 6: Muzzle Assembly

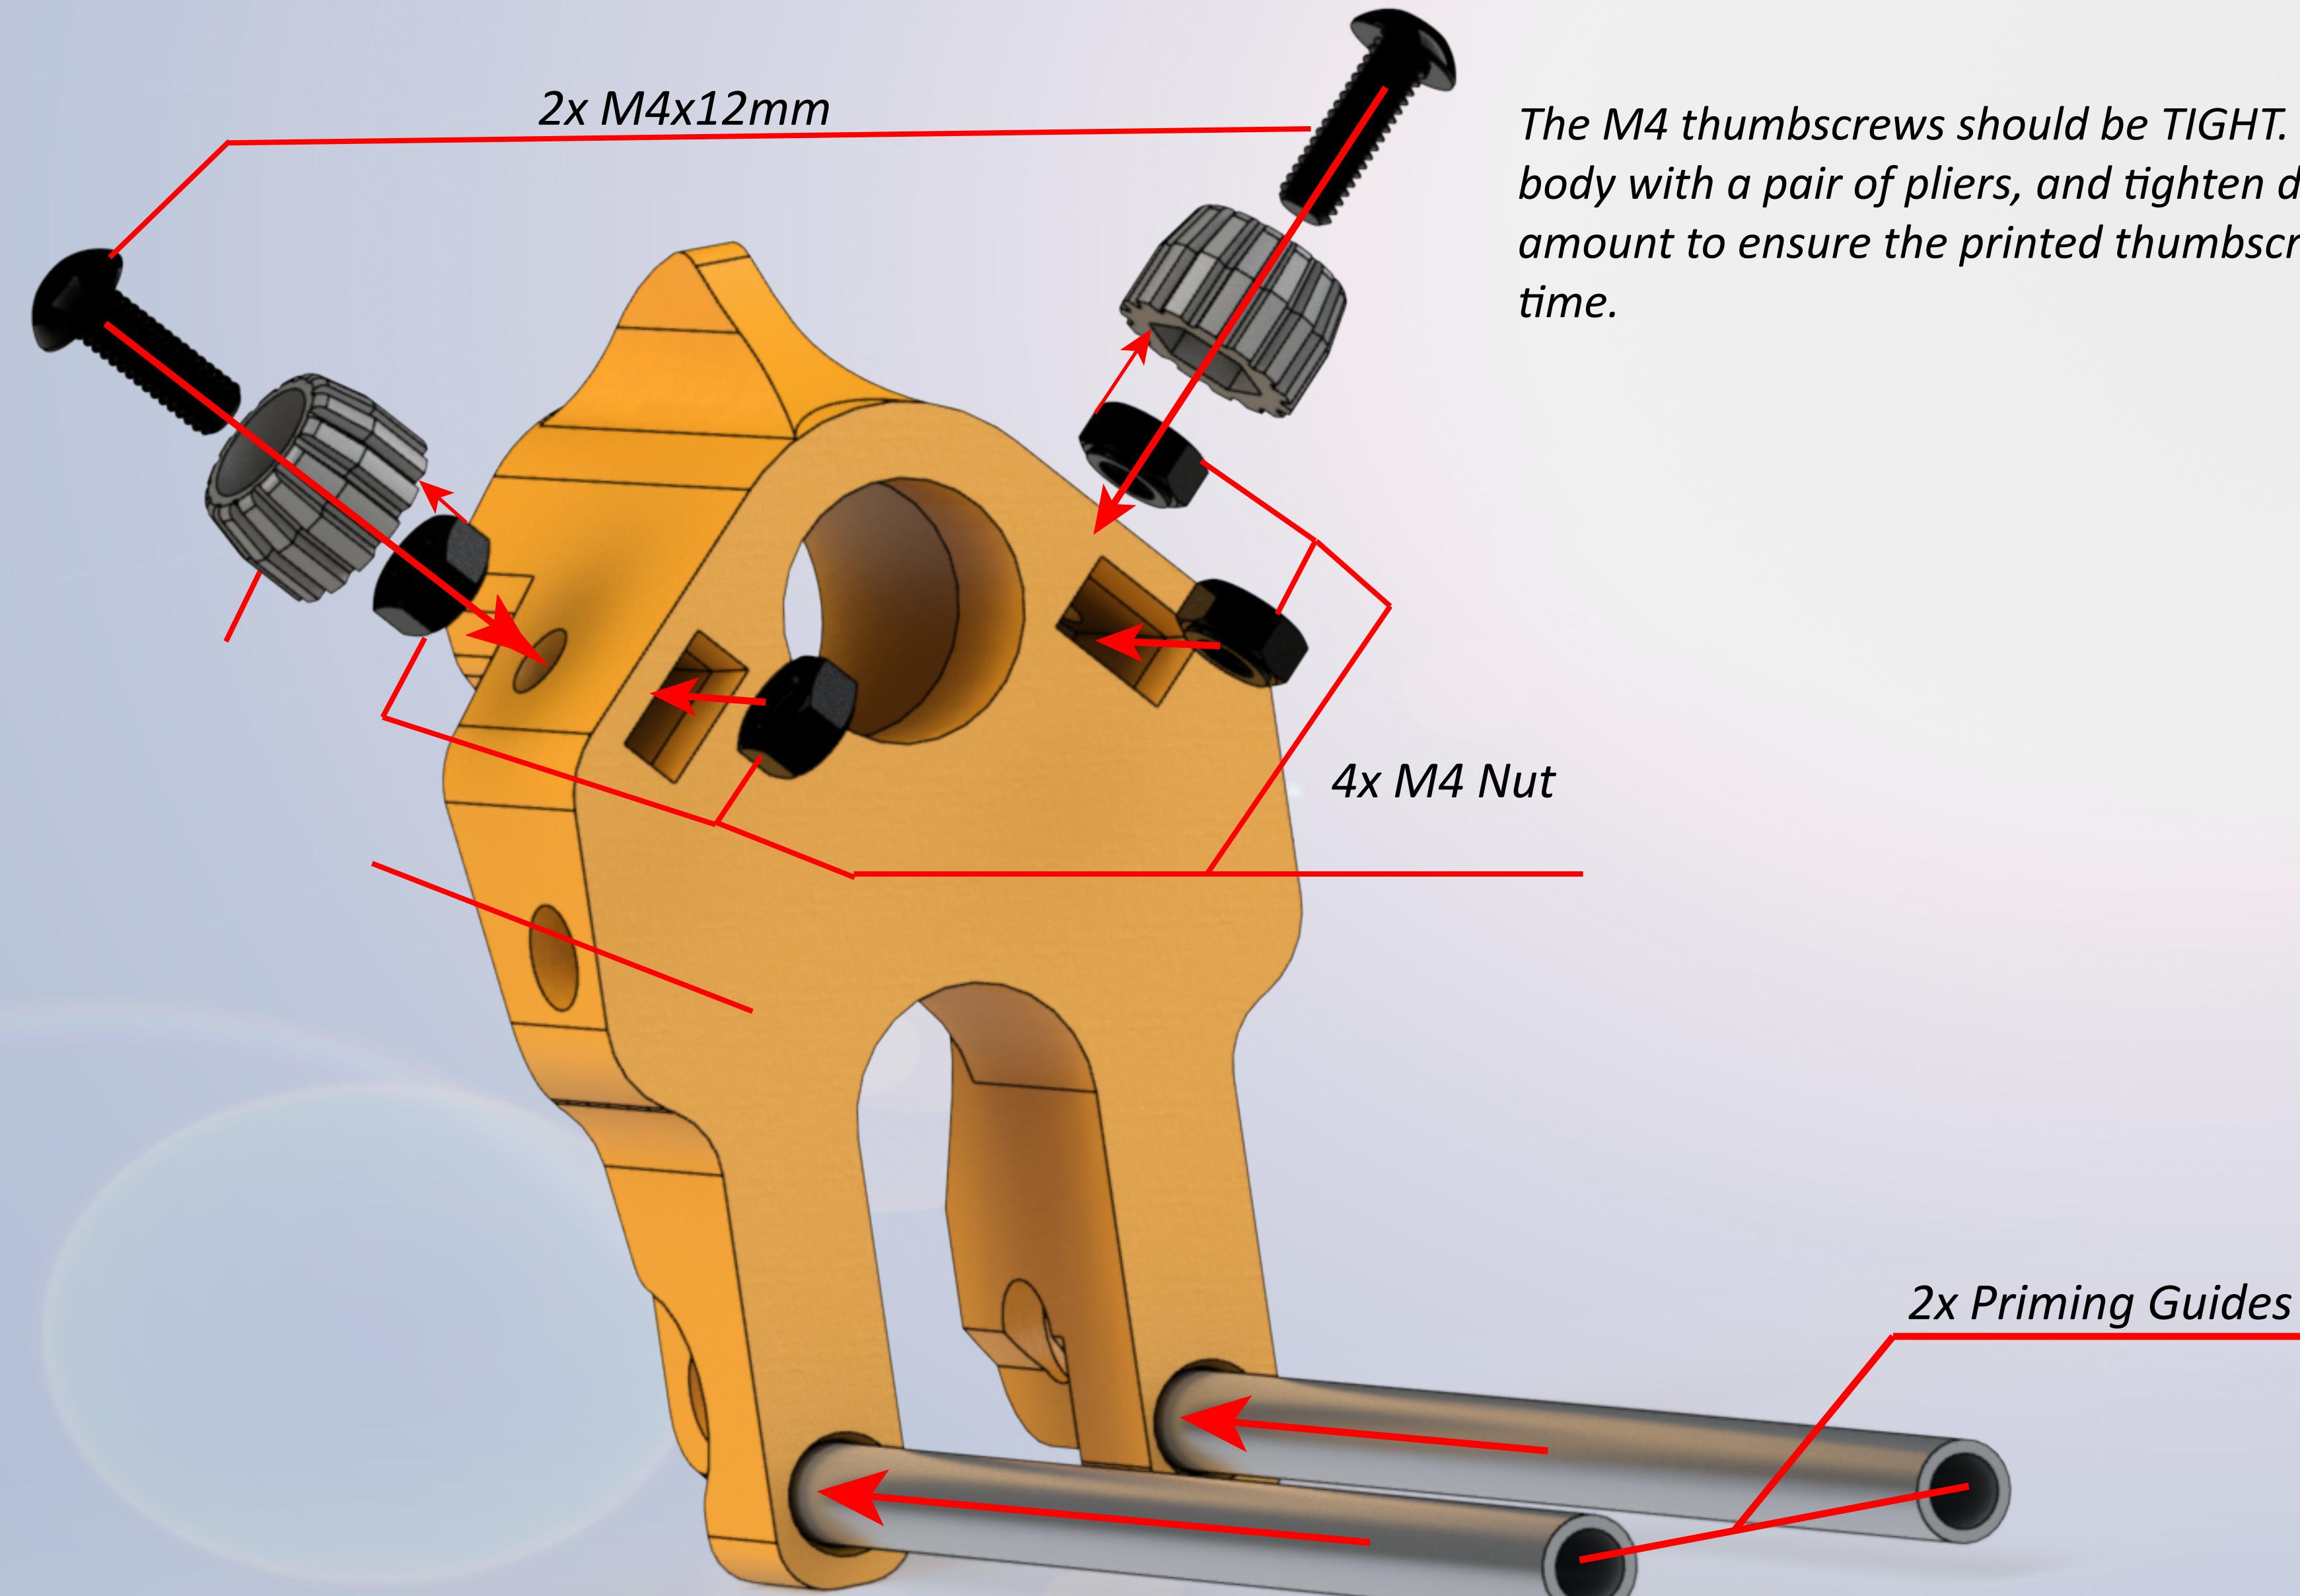


Press the two aluminum Priming Guides into the front plate as shown. They will be tight, you may have to sand / shave the muzzle a bit. TIP: Secure the guides with a tiny dab of CA glue, to ensure they always come out with the muzzle when you take apart the blaster.

Step 7: Trigger Linkage

Ensure the Actuator is oriented correctly as shown. Make sure both the Trigger and the Actuator pivot freely after tightening, and apply a small amount of lube to the surfaces they rub against.

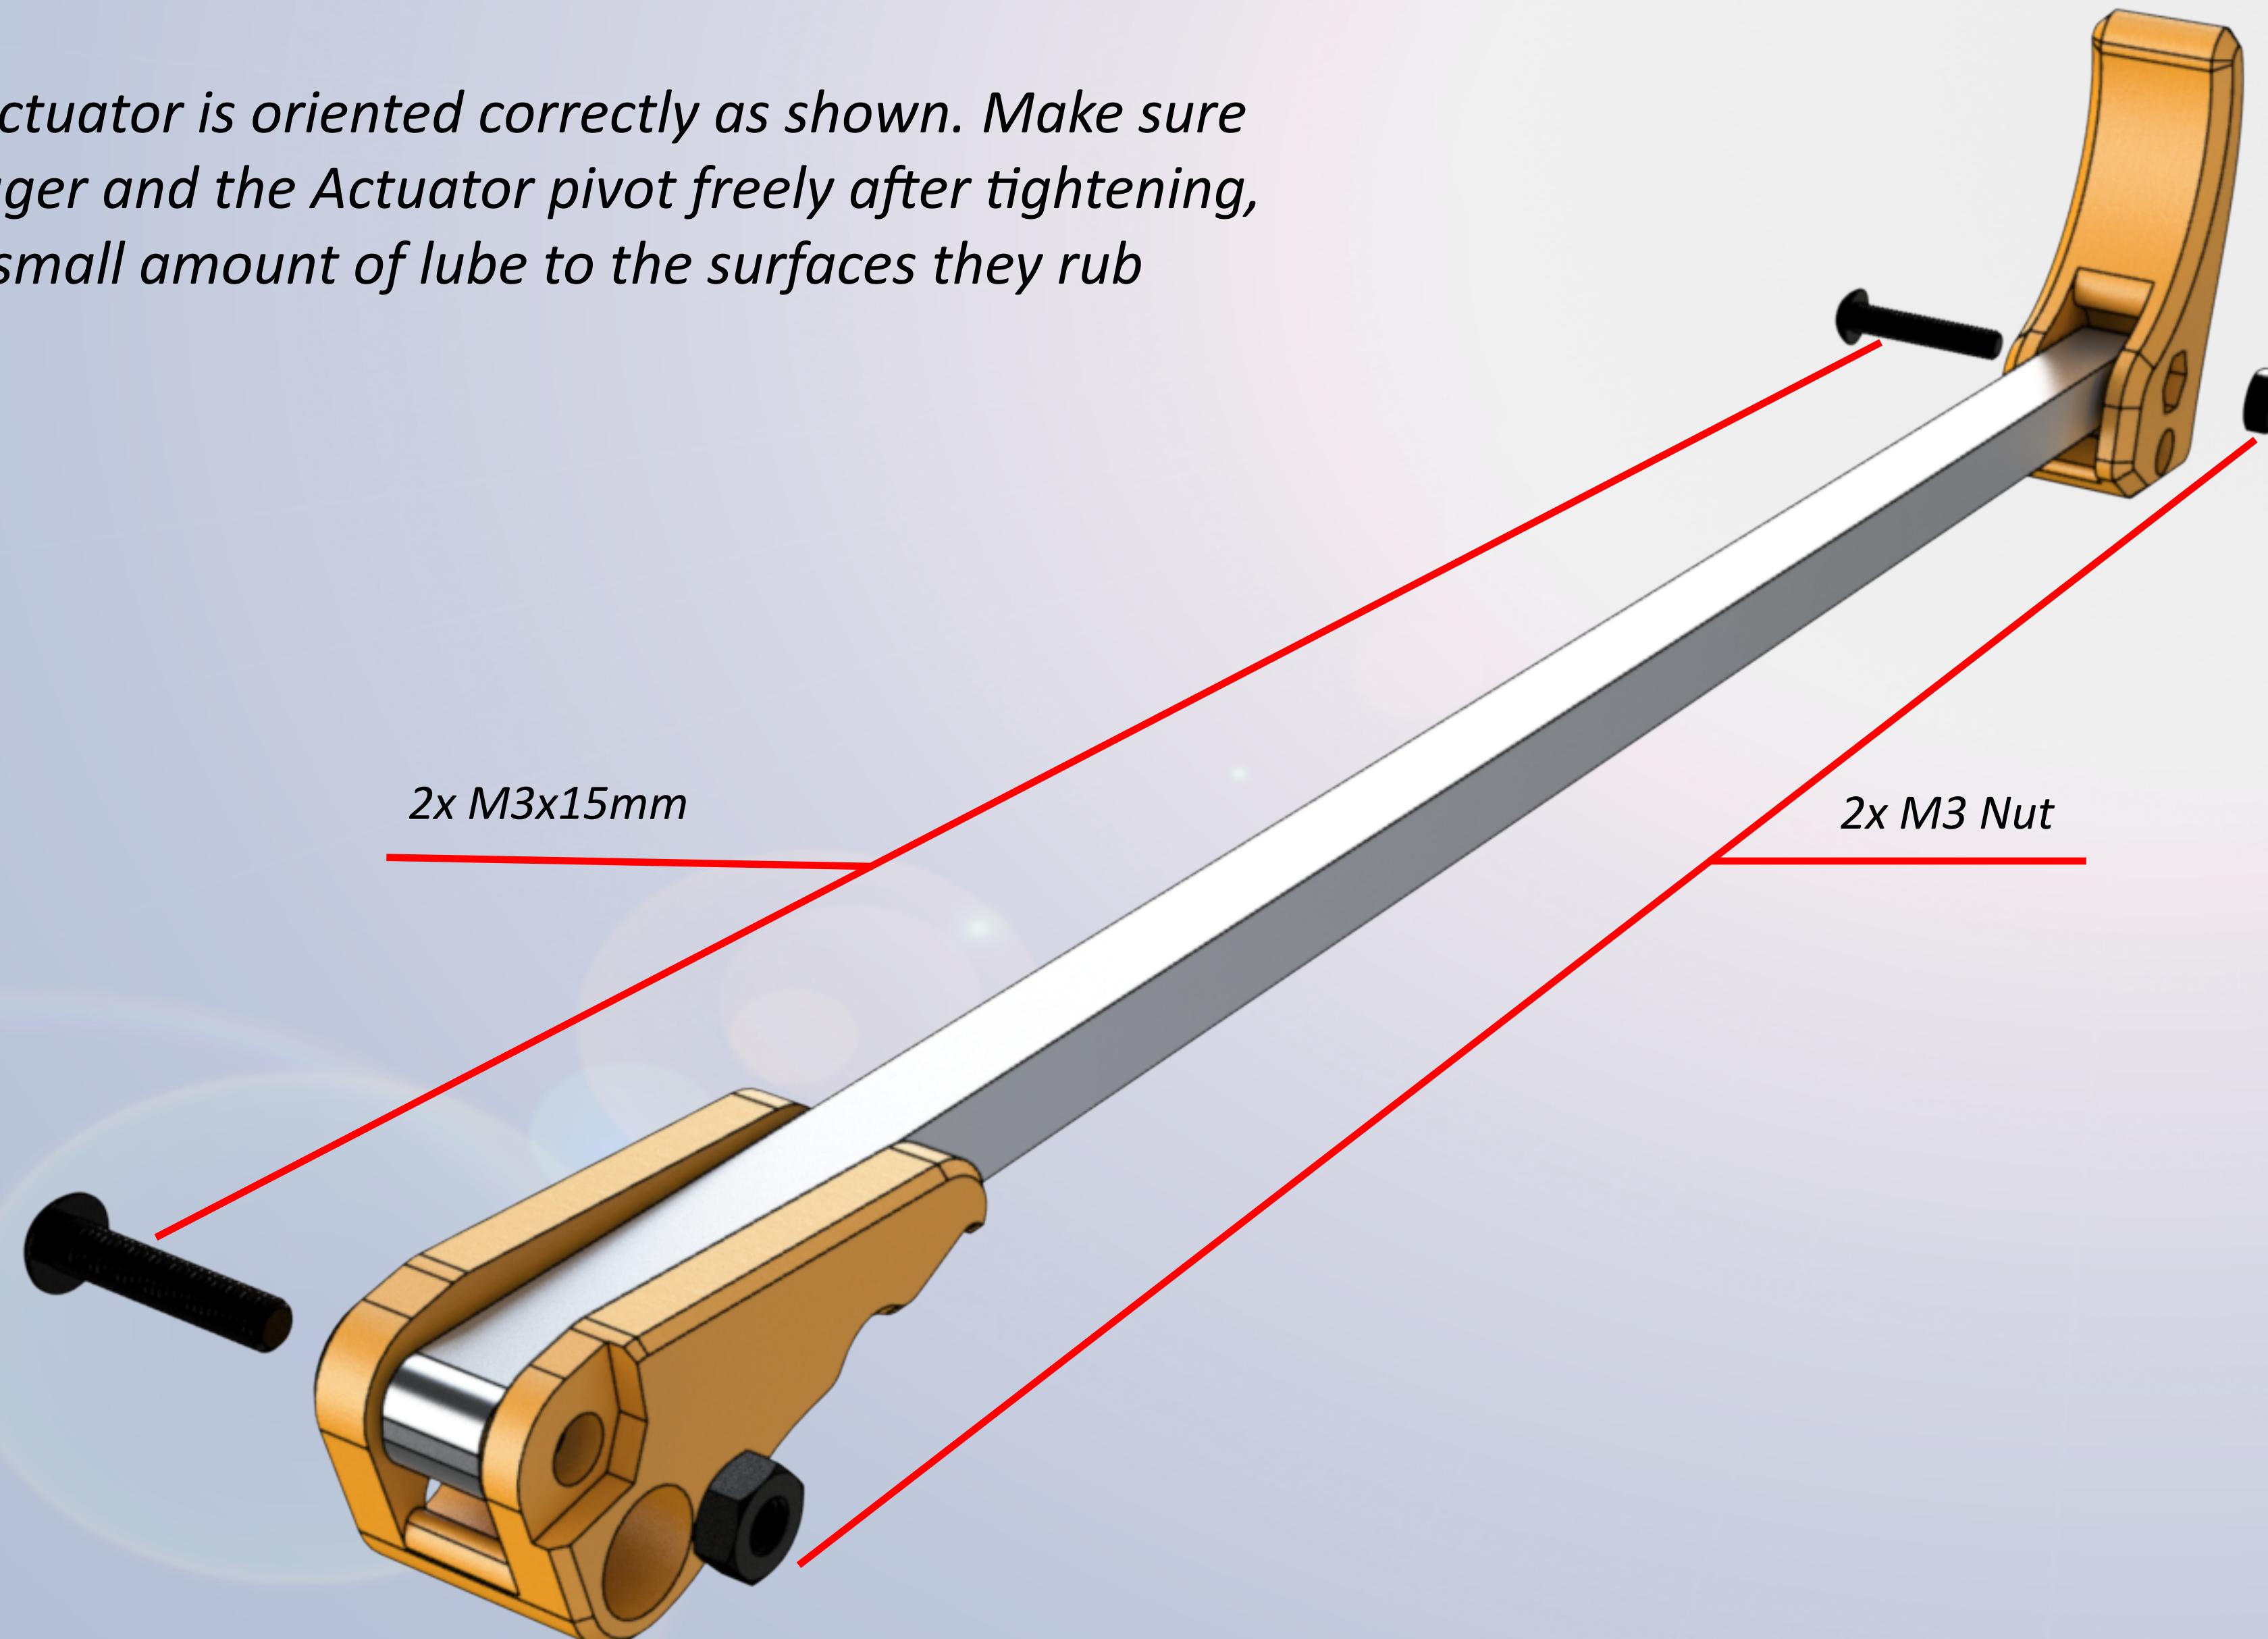

Step 8: Attach Right Side Panel

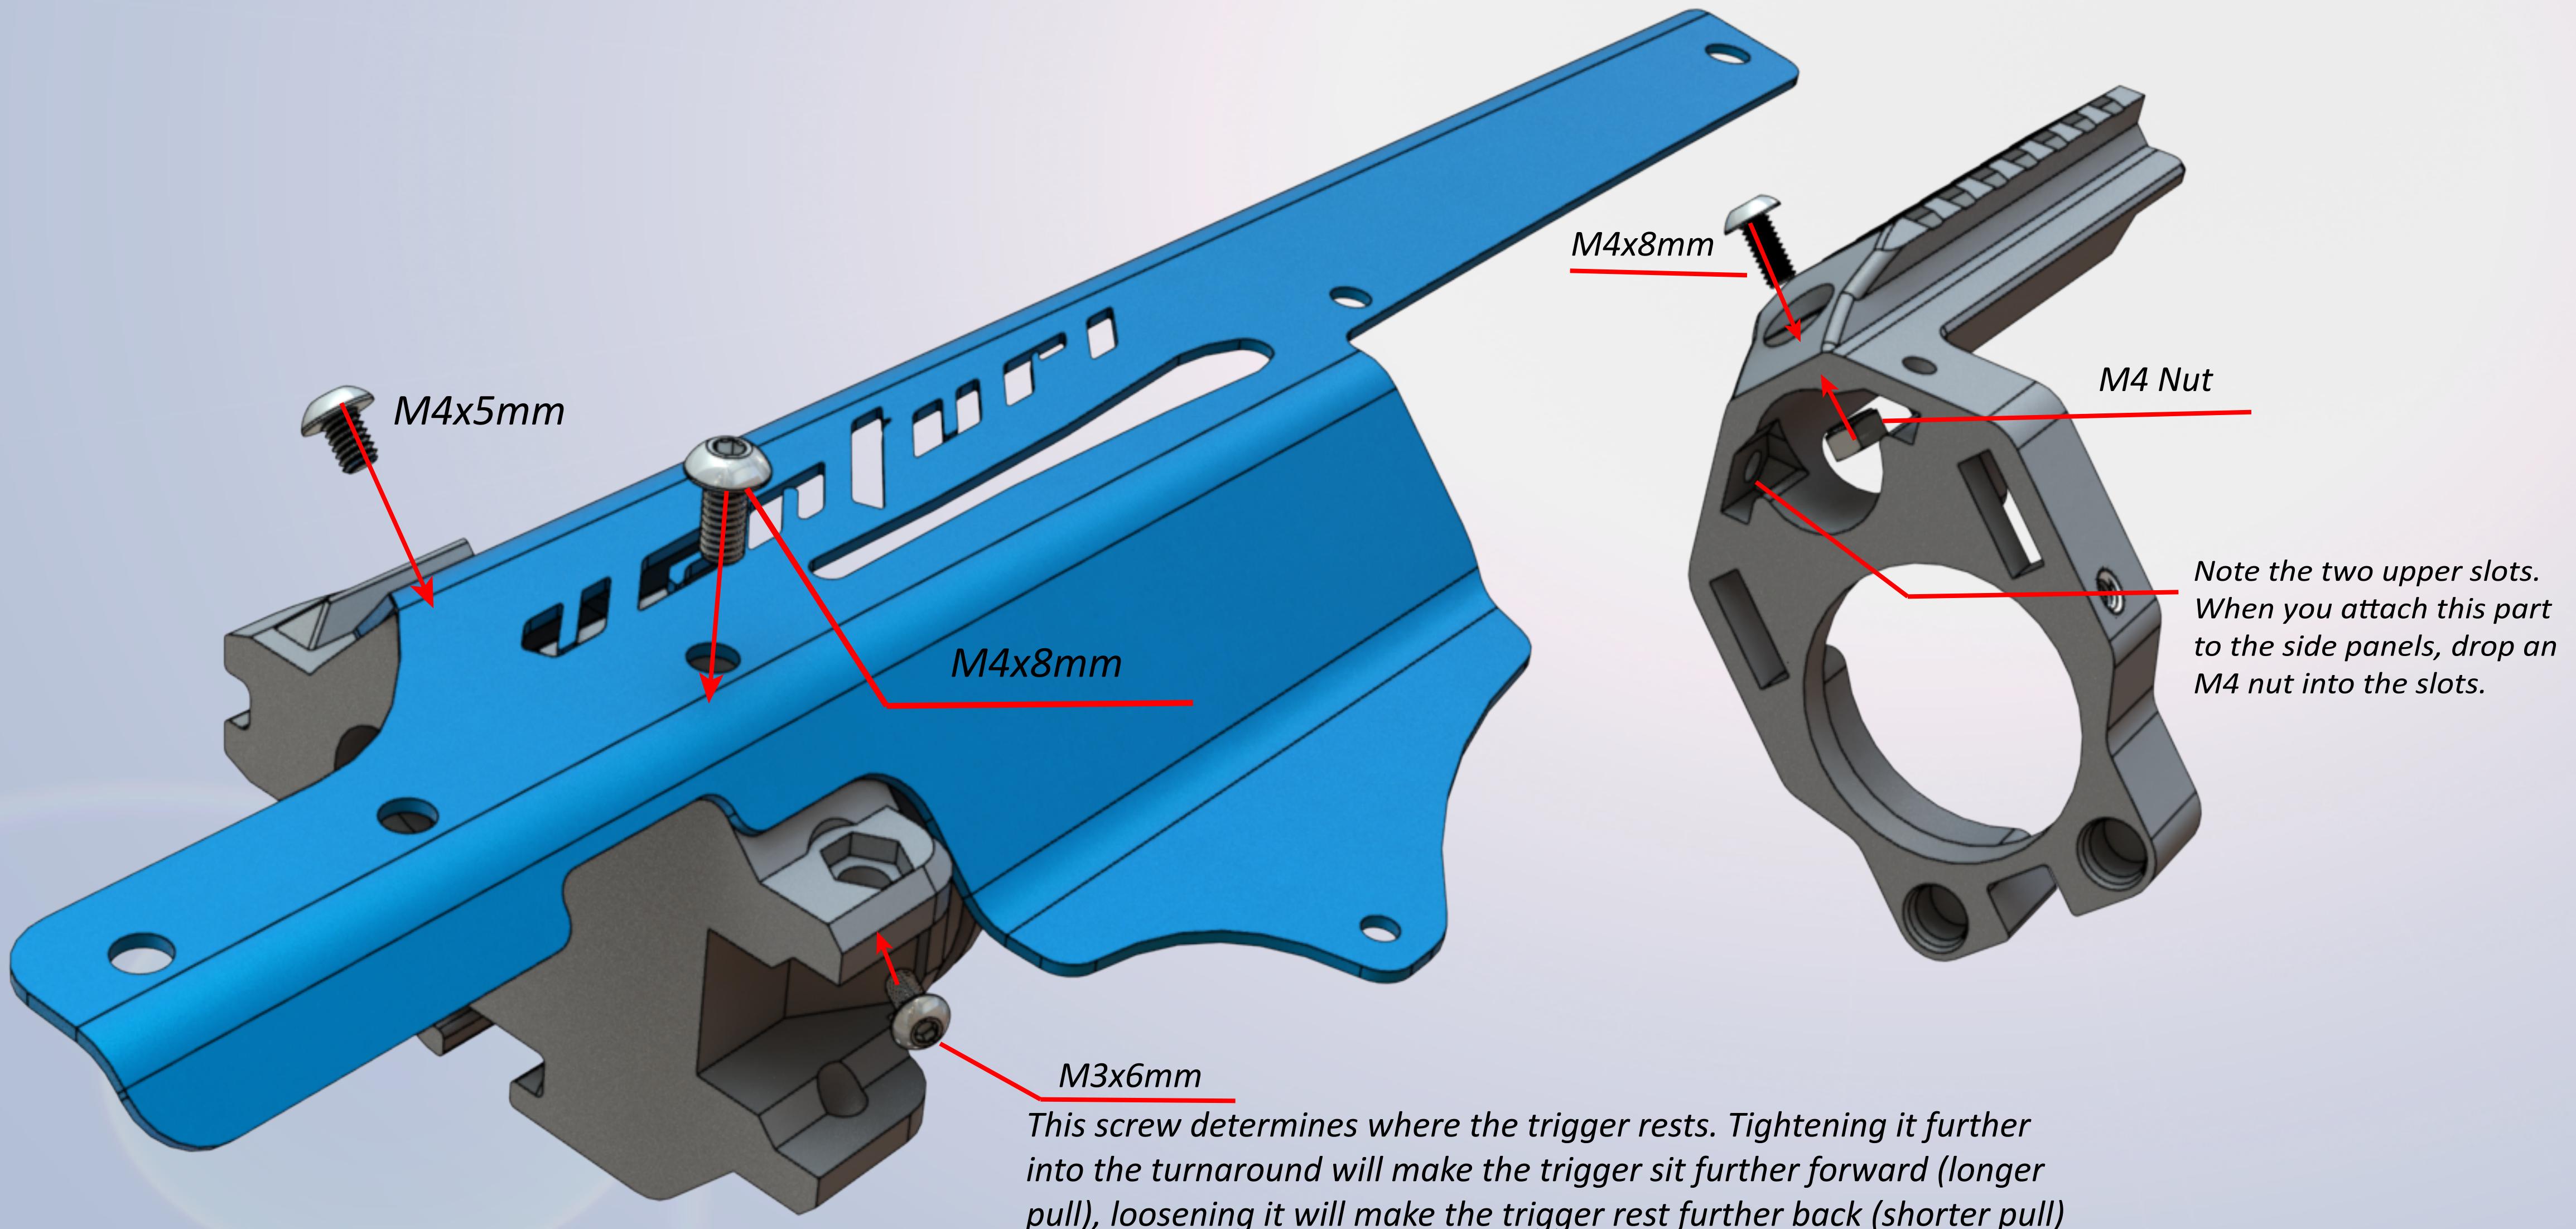

Step 10: Attach Handle




Step 11: Attach Left Side Panel




Step 12: Attach Trigger Linkage


*Small spring installed behind trigger, in the two round mounting bosses.
Make sure the spring is able to return the trigger reliably, loosening the
joints and / or applying lube if needed.*

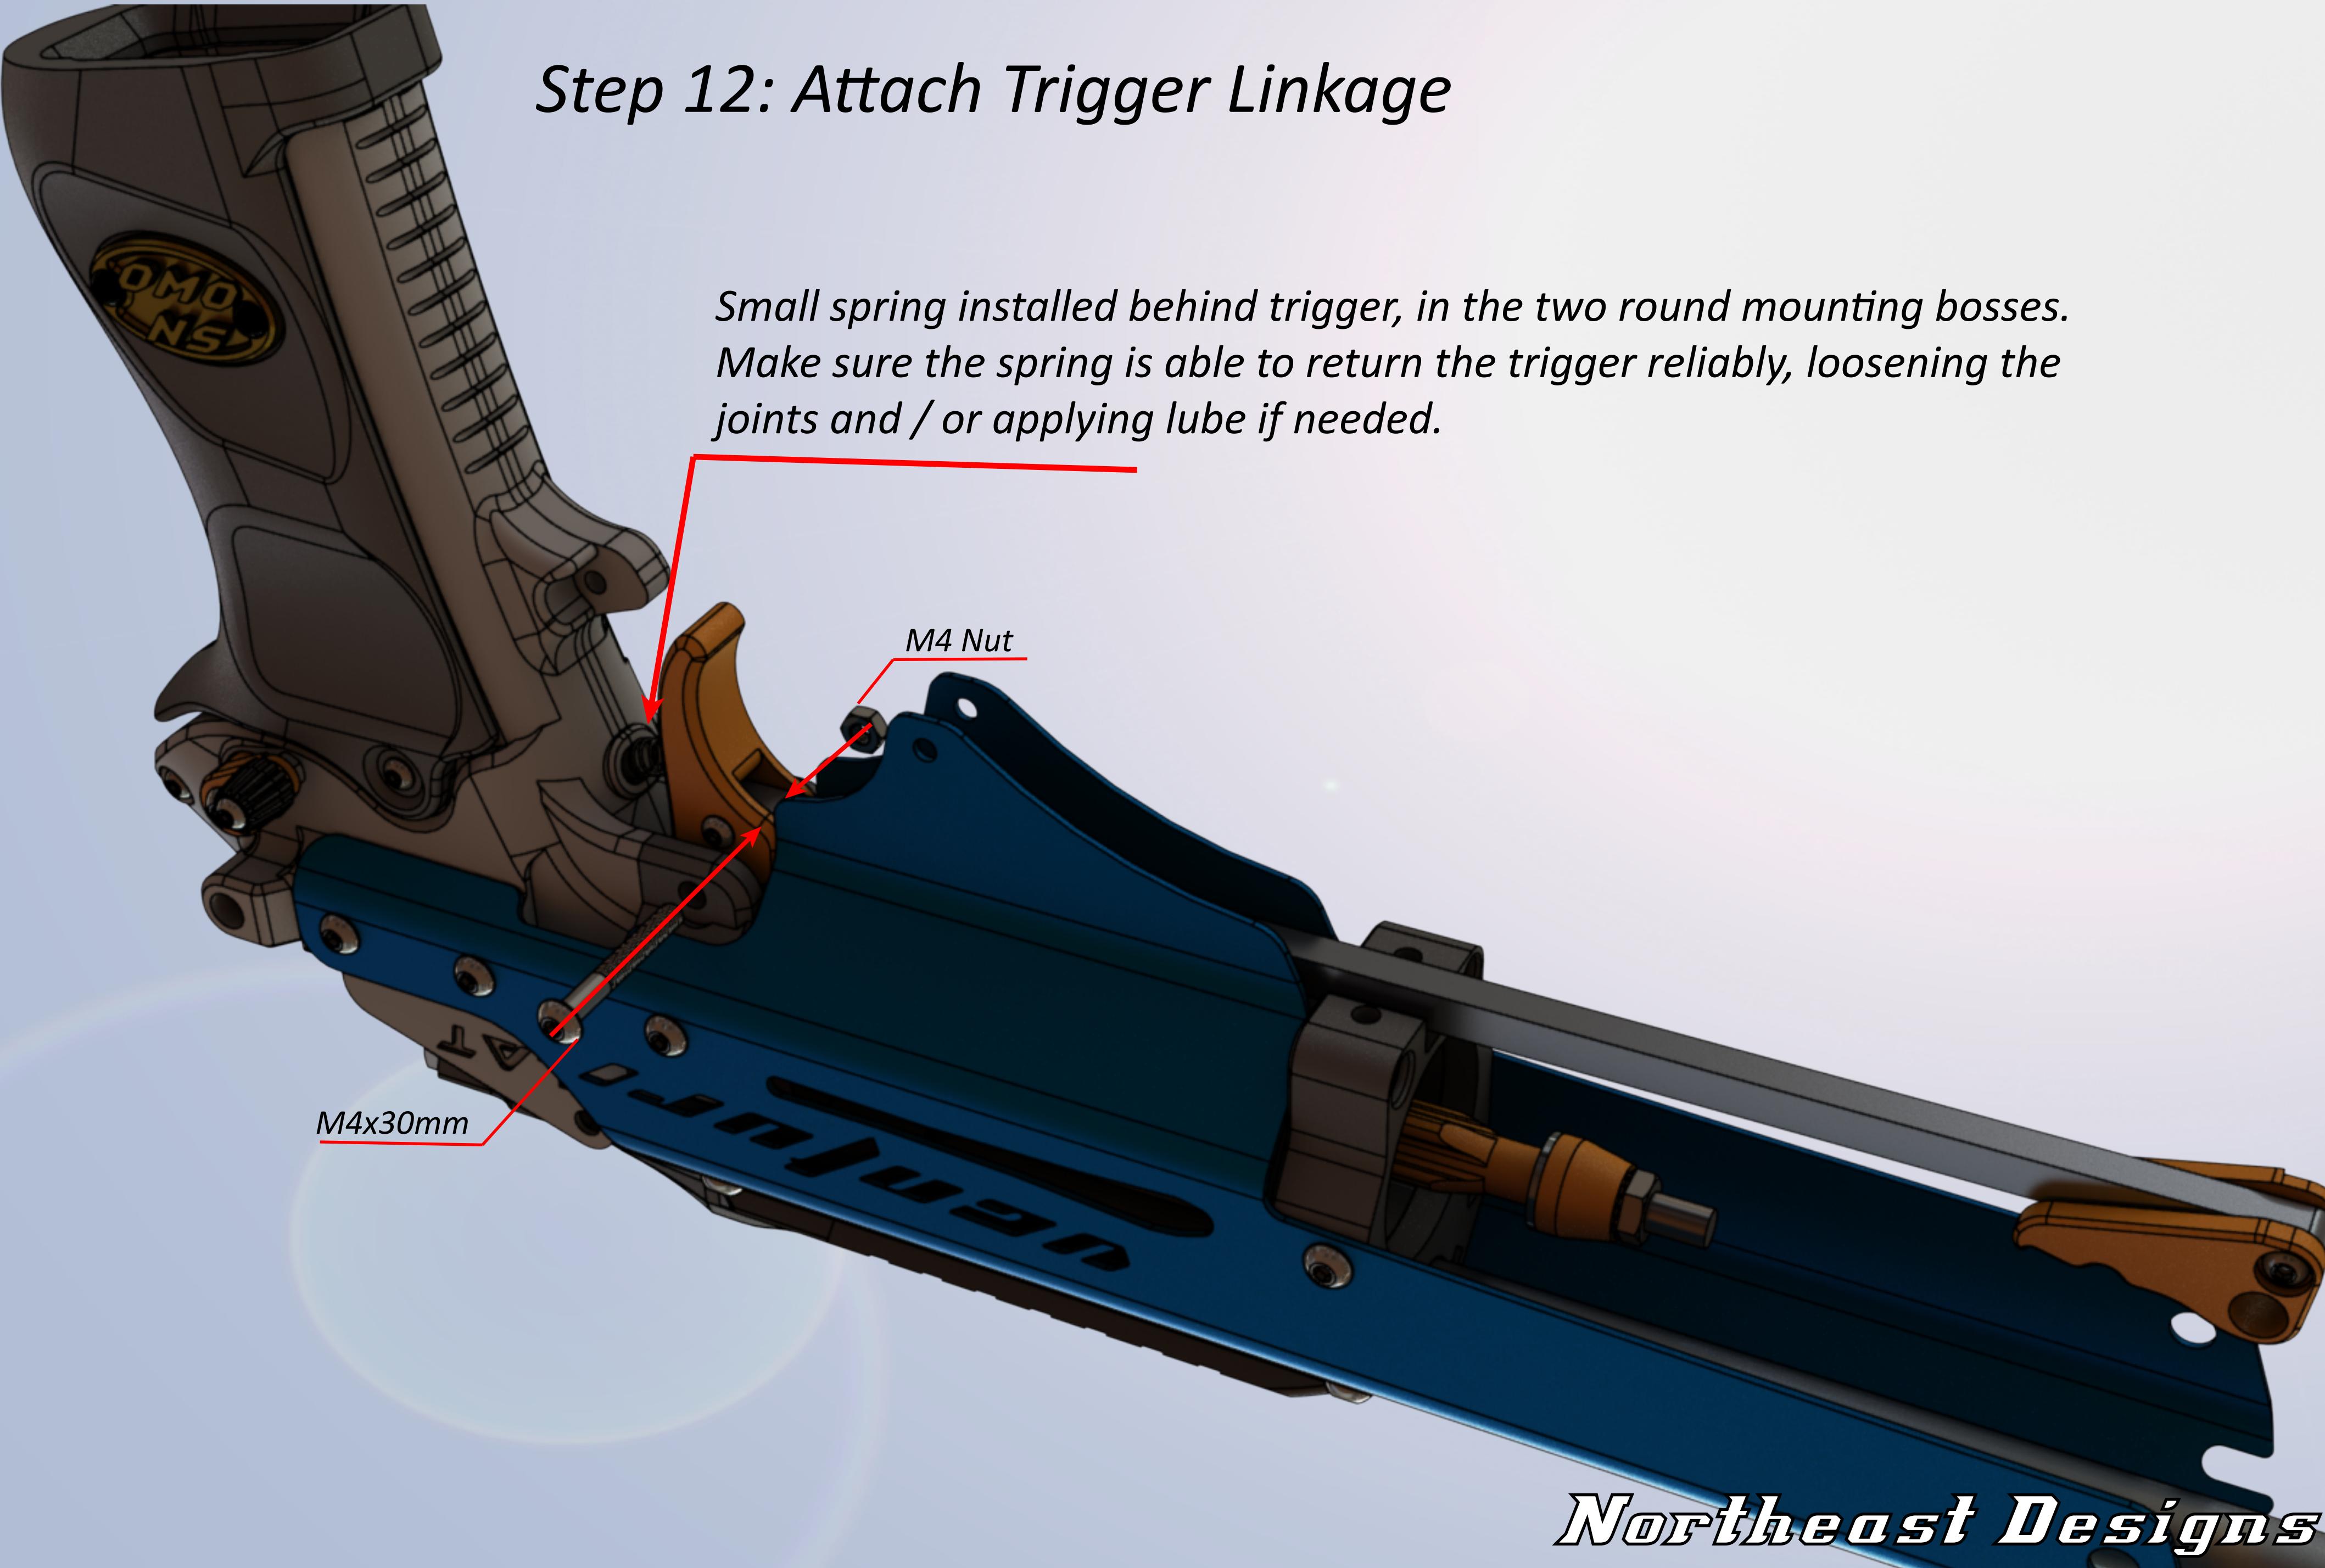


Step 13: Install T Gaurd

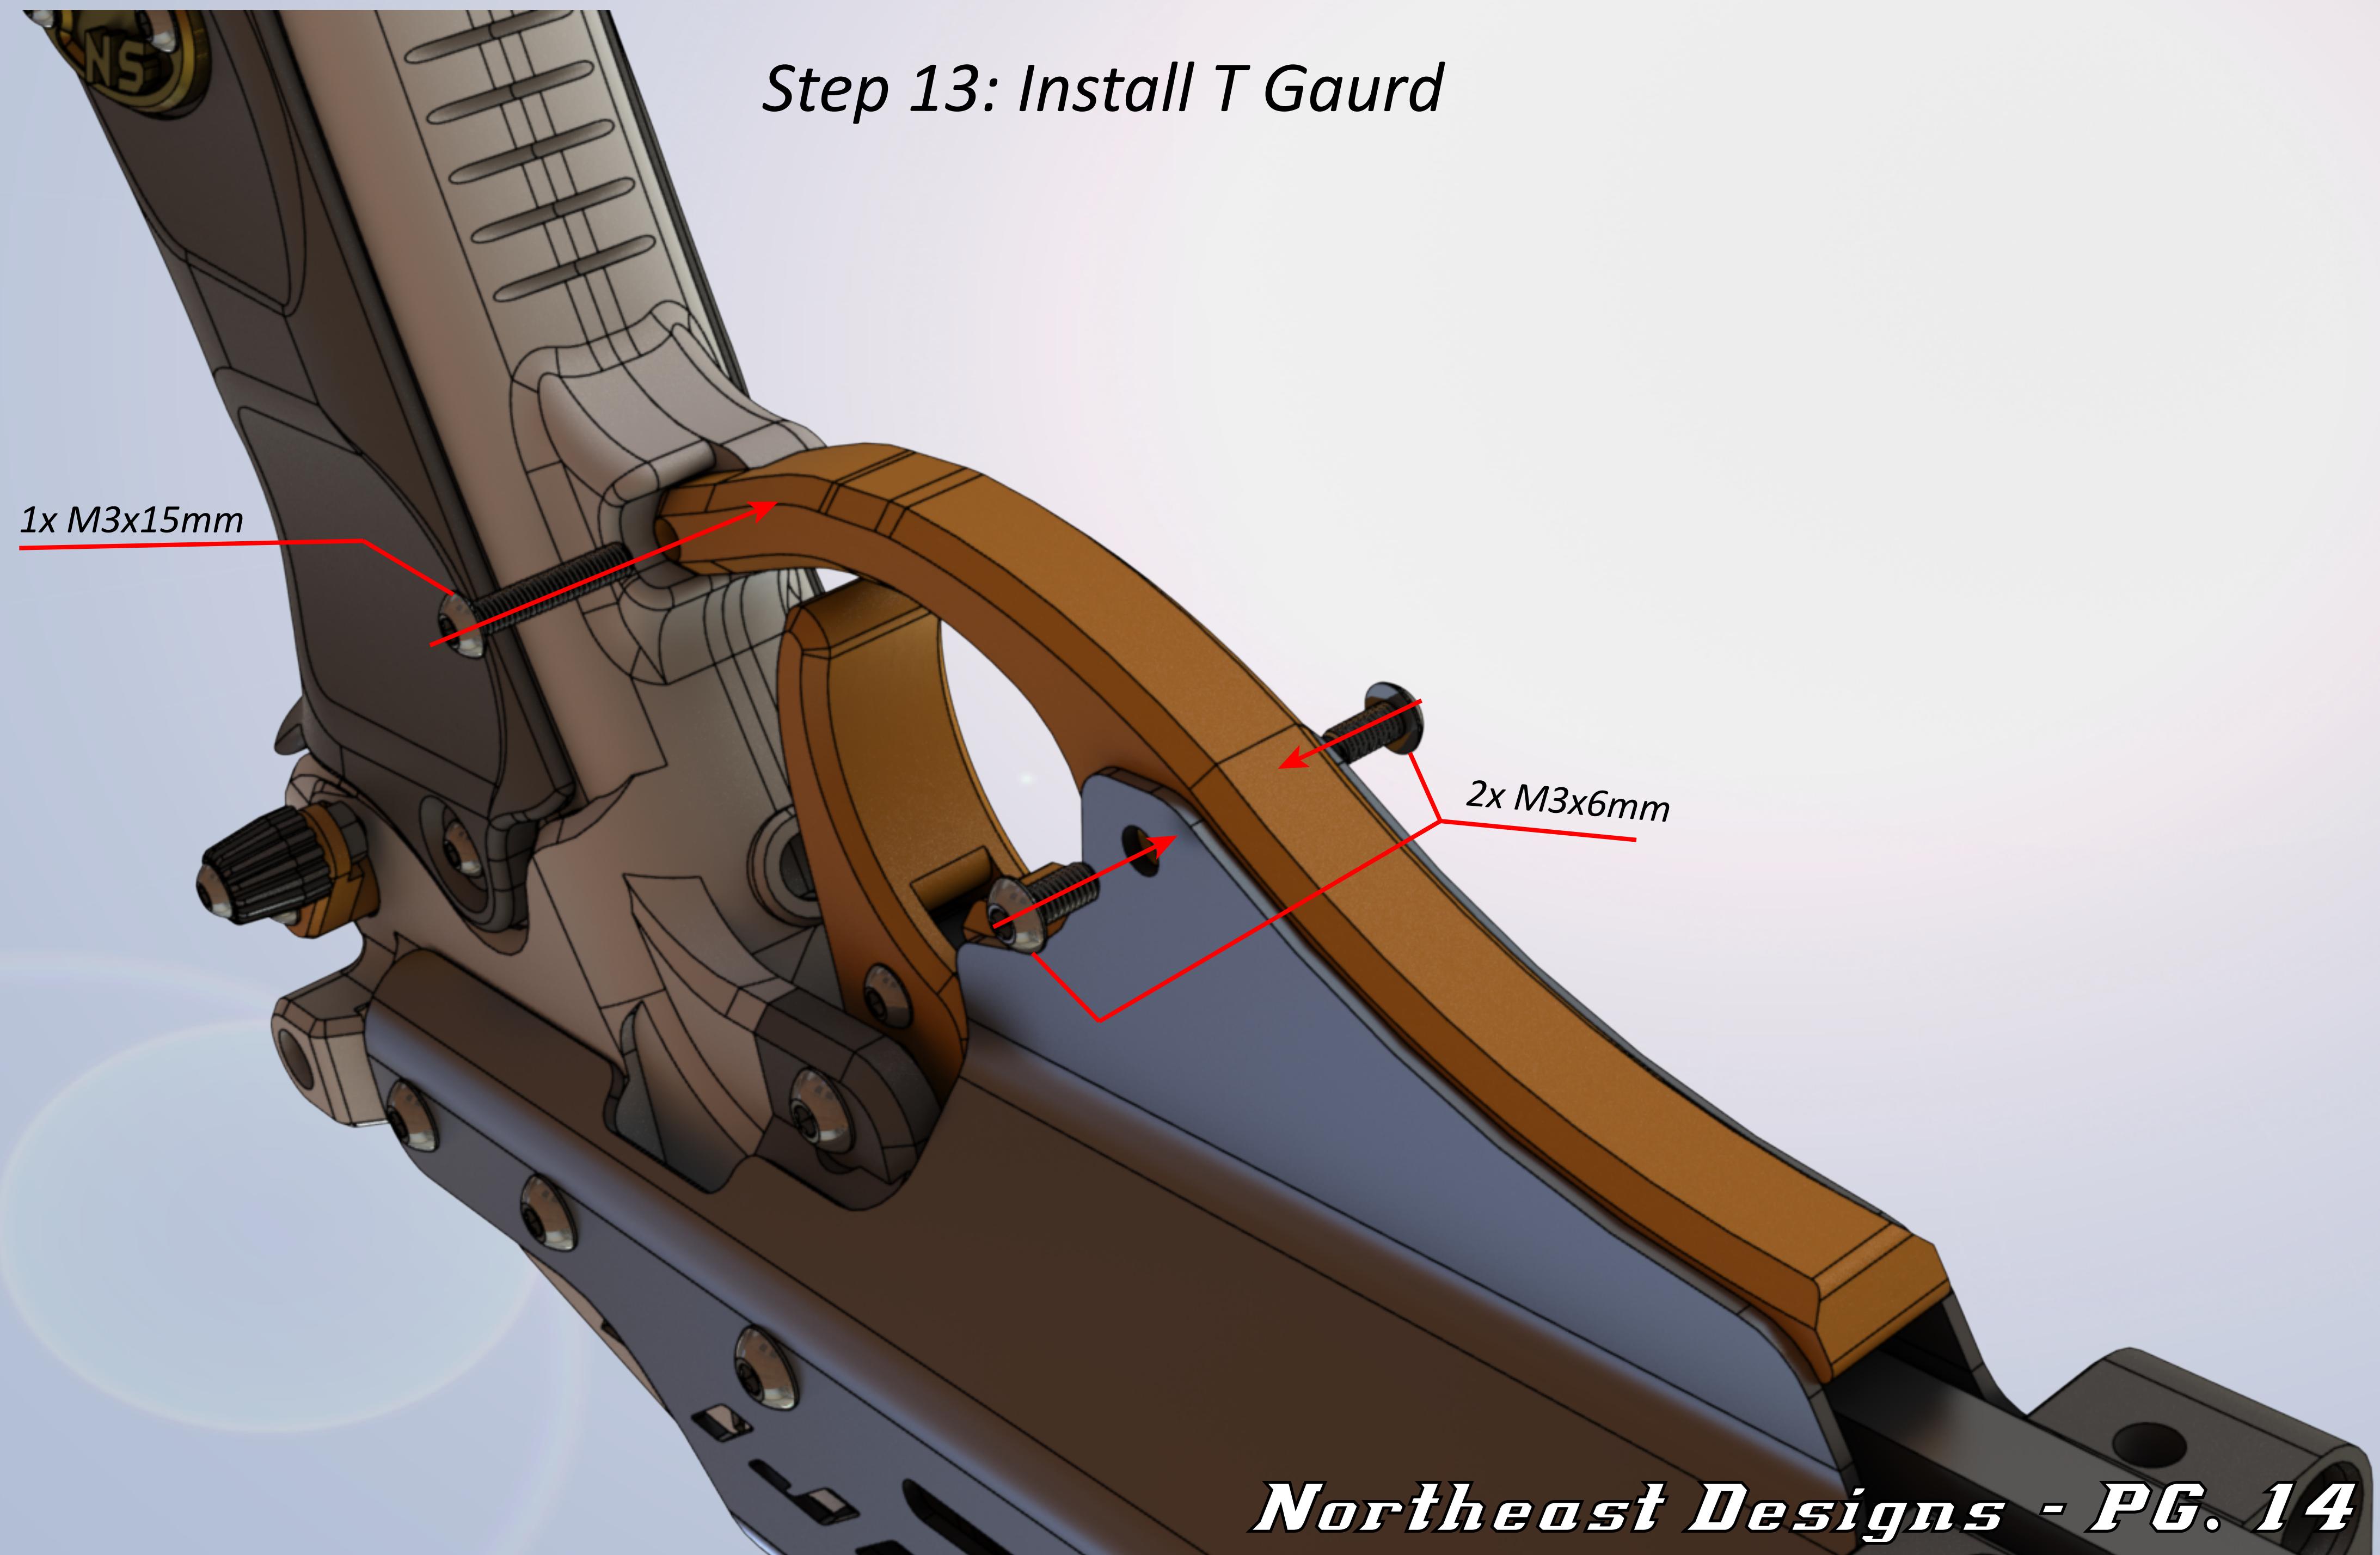

Step 14: Install Main Spring & Catch House

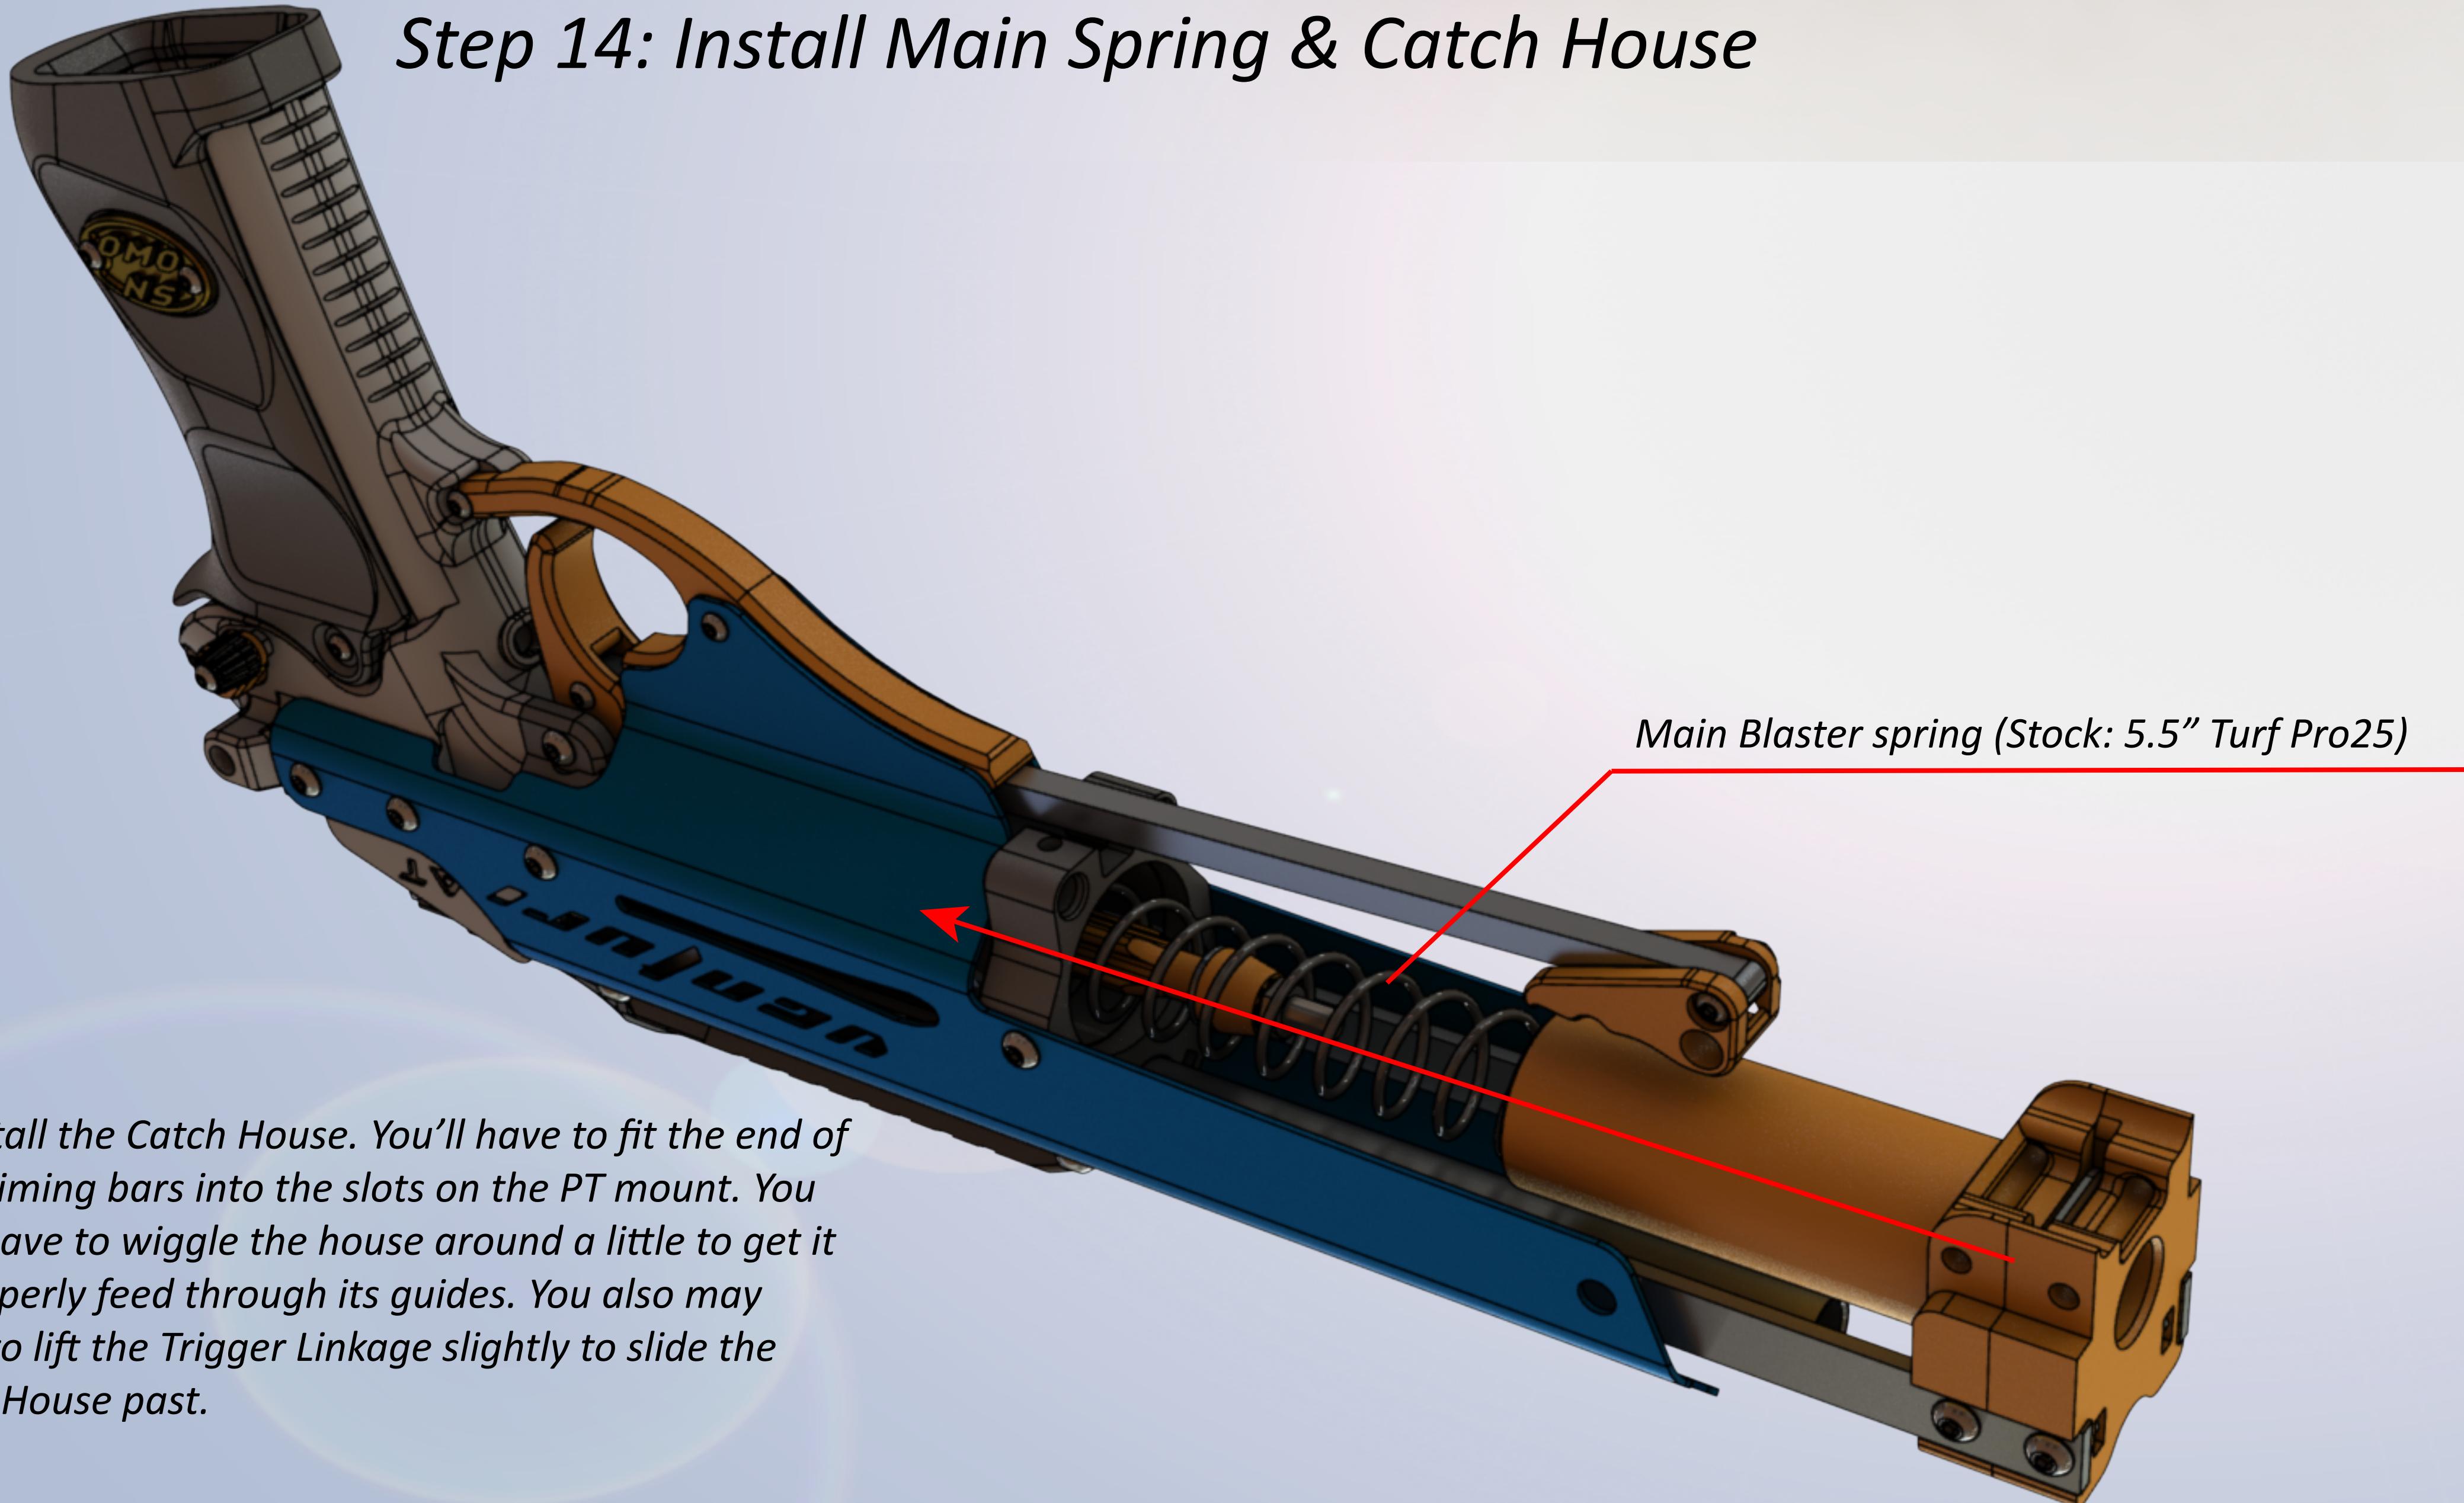

Step 15: Install Pusher & Slide Panels

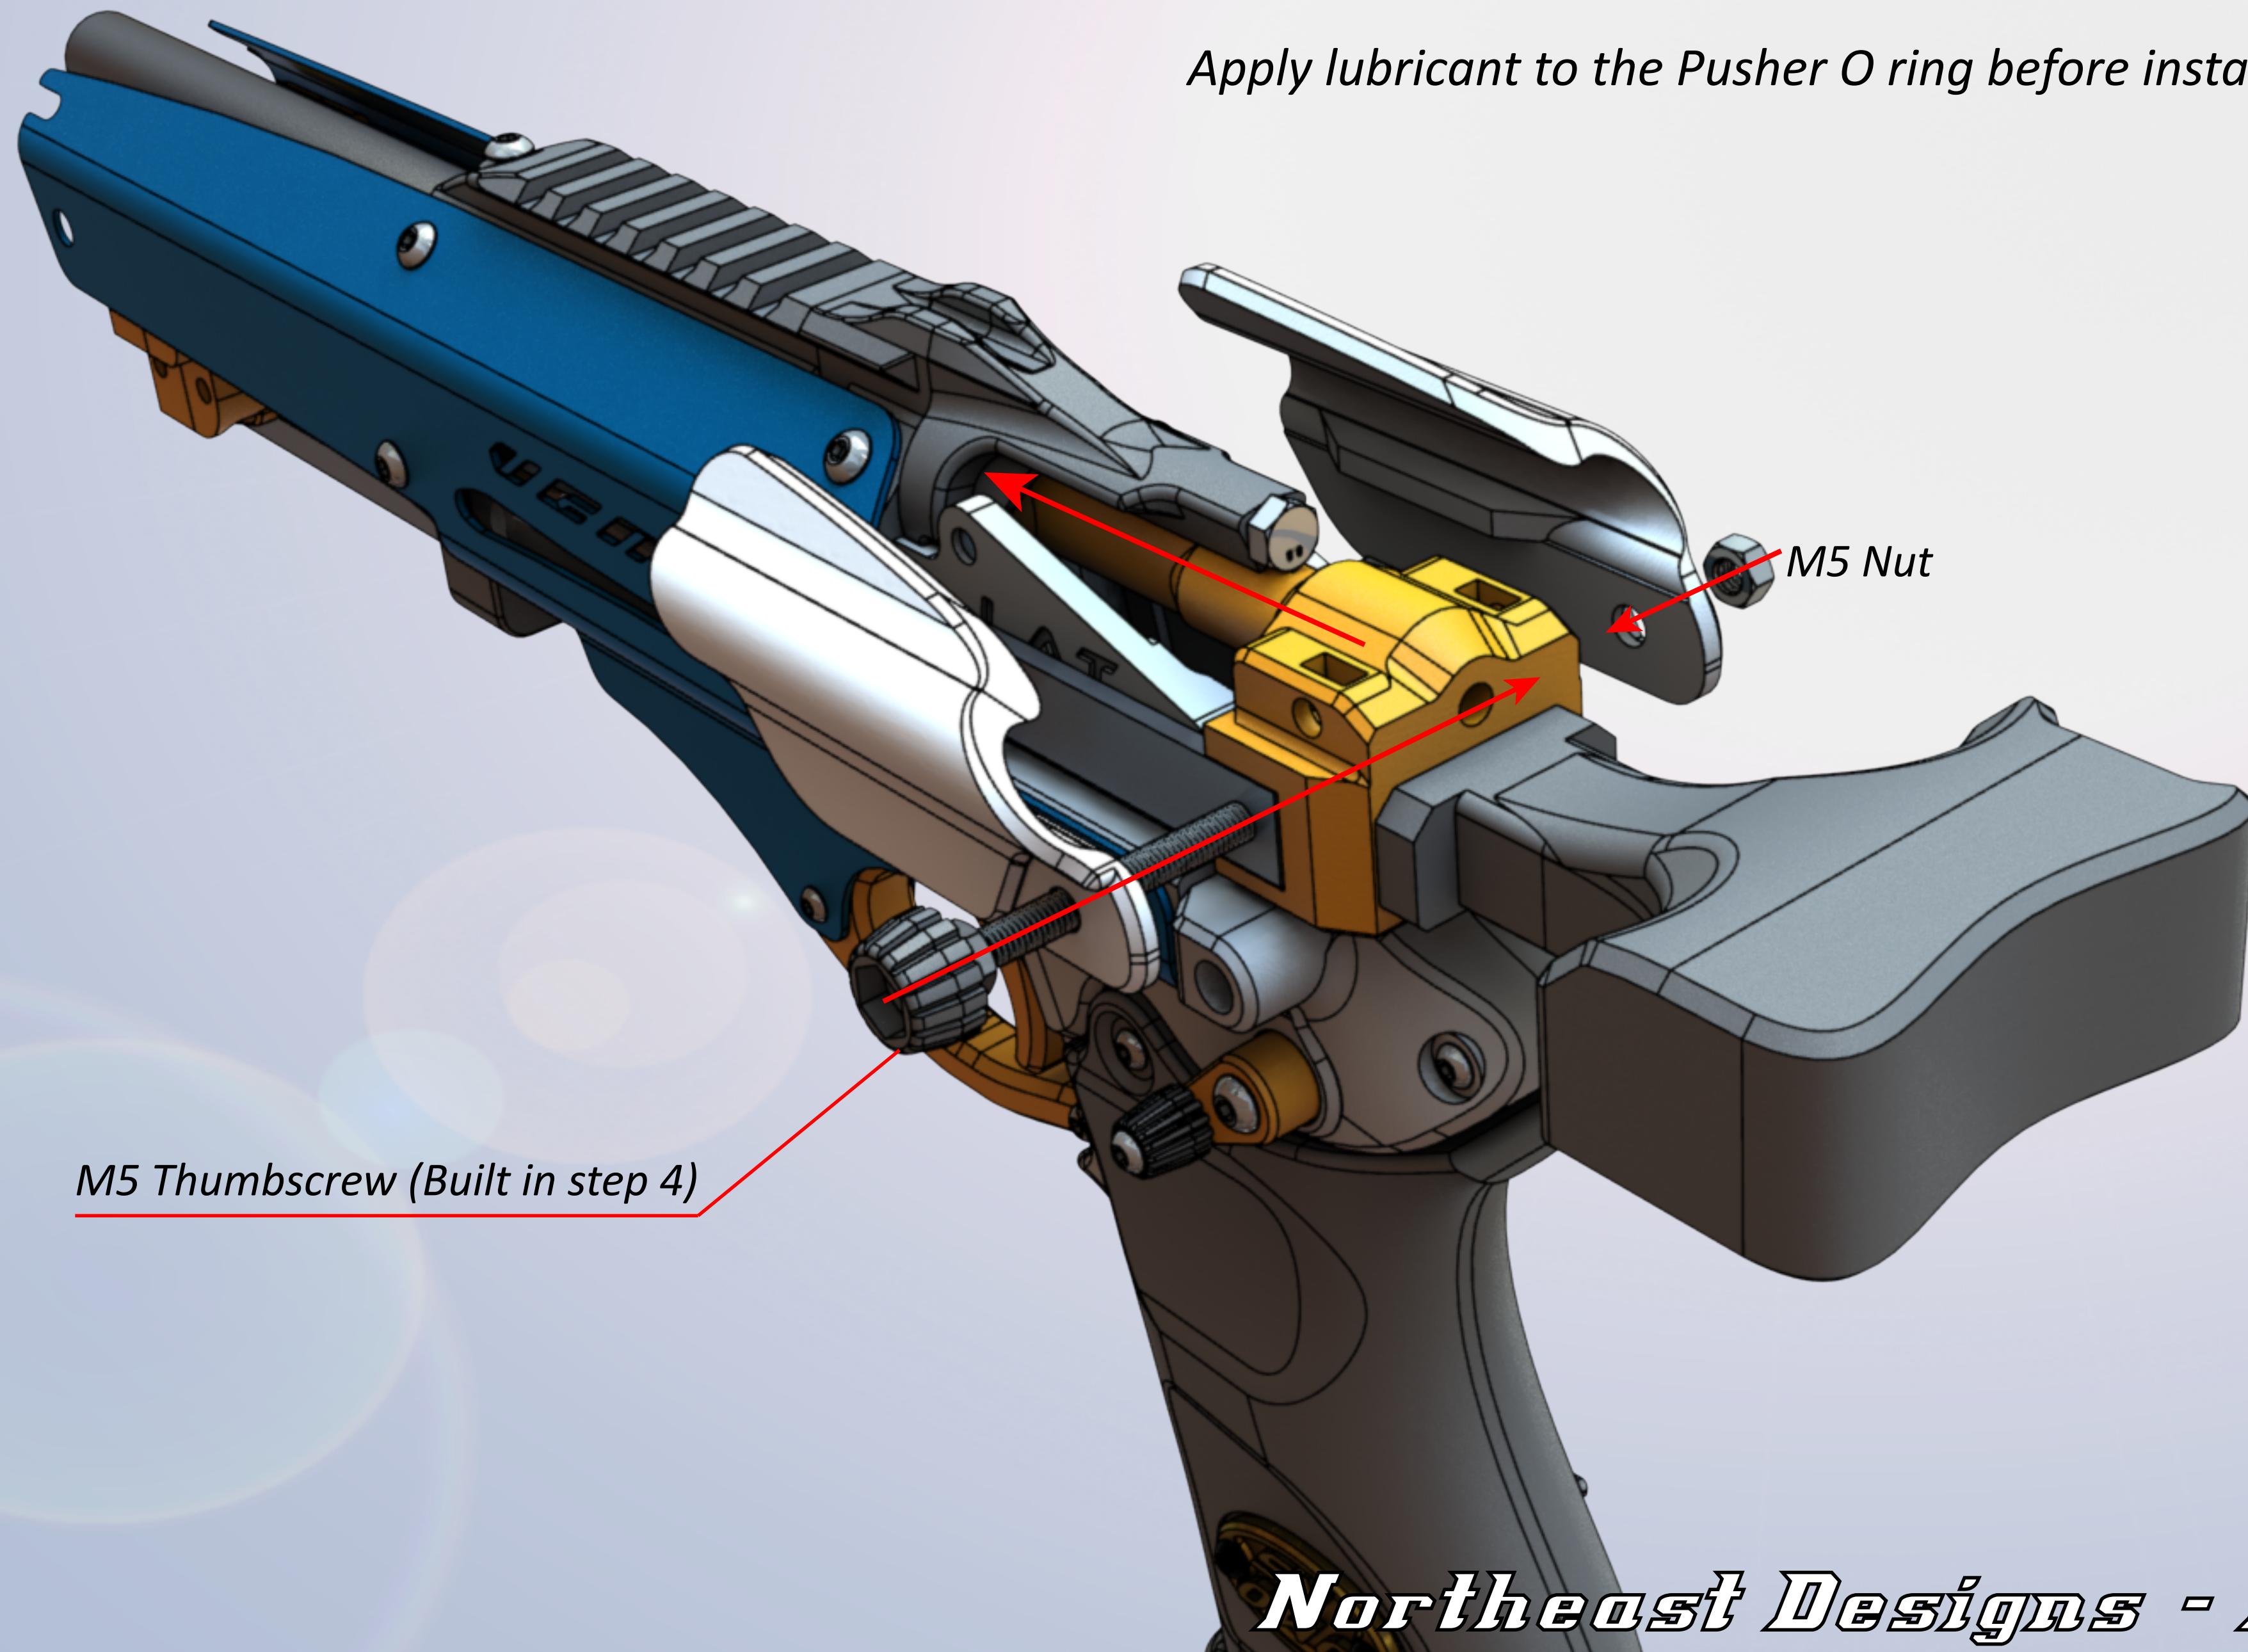

Step 16: Install Muzzle & Detent Pins

