Figo. Quick Reference


Setting up a Figo that is already built and flashed

1 Switch on and join WiFi

1. Plug Figo in. After a hello, the screen shows its setup network.
2. On your phone, join WiFi **Figo-Setup**, password **figo1234**.
3. The setup page opens by itself. If not, browse to `192.168.4.1`.
4. Tap your home WiFi, type its password, tap **Connect**.
5. When it says **Connected!**, put your phone back on home WiFi and open **http://figo.local**. Bookmark it.



Figo's screen

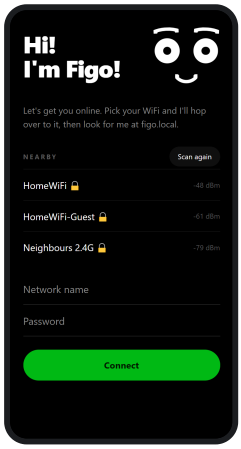

Setup page


2.4 GHz only — Figo can't see 5 GHz networks. **Moved or new router?** If Figo can't find its WiFi when it starts, it opens Figo-Setup again after about 18 seconds.

2 Set up your screens


1. Open **figo.local** → **SCREENS**. Each frame is one of Figo's screens.
2. **Change one:** tap its frame, then tap the preview.
3. **Add one:** tap **+ Add** at the end of the strip, then tap the preview.
4. Type a **name**, not a ticker — "Nasdaq", "Gold", "Solana" — and tap the right result.
5. Tap **Done**, then **Save carousel**. Nothing changes on Figo until you save.



Screens tab

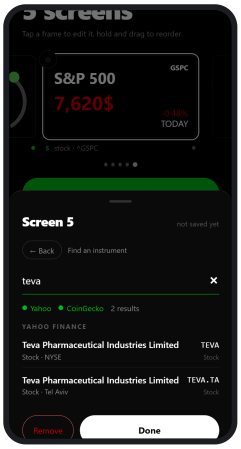

Search by name

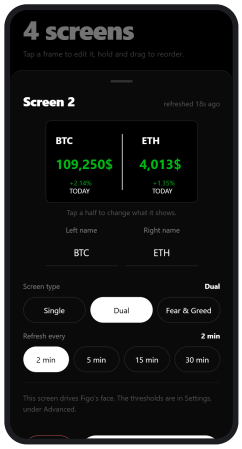


Screen type & refresh

Reorder: hold a frame, then drag. **Remove:** open it, tap Remove. Up to **8** screens. Figo shows each for 8 seconds; swipe the glass to move yourself.

3 The four moods


The face follows the screen with the ★ **star** (Bitcoin on a new Figo) and its change over the last 24 hours.

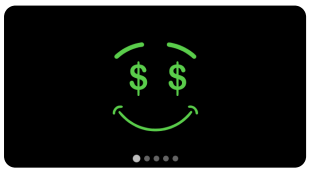


Bullish up 5 % or more



Happy up 1 % to 5 %

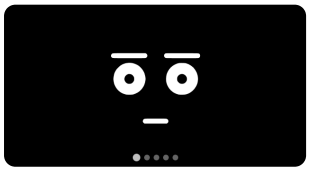

Neutral between −2.5 % and +1 %

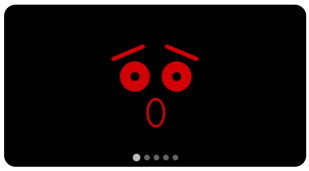

Panicked down 2.5 % or more

Neutral also means "not sure": no fresh price yet, or the starred screen stopped updating. The **FIGO** tab on your phone says which mood it is, and why.

4 Adjust the moods

Pick what the face follows: on the SCREENS tab, tap the ☆ above a frame, then **Save carousel**.

Change the thresholds:

1. Open **SETTINGS** and tap ▸ **Advanced**.
2. Under **Figo's face**, set three numbers (percent):

Bullish above	5	Each number must be bigger than the one below it.
Happy above	1	Neutral is whatever is left in between.
Panicked below	−2.5	

3. Tap **Save face**.

Following something calm? A stock index rarely moves 5 % in a day — try Bullish 1.5, Happy 0.5, Panicked −1, or the face will hardly ever leave Neutral.