Sparky cardboard mock-up - box net

Finished box: 178 wide x 173 tall x 66 deep mm (CAD body size). Pages 2-5 are the net at actual size.

1. Print pages 2-5 at 100% / 'actual size' (not 'fit to page'). Check the 100 mm bar on each page.
2. Lay them out as below (Page 4 | Page 5 on top, Page 2 | Page 3 underneath). Slide each grey shaded strip under the neighbouring page so the lines meet, then tape the pages together.
3. Glue the sheet onto flattened cereal-box card (or cut it into panels along fold lines if the card is too small).
4. Cut out the red holes first while the card is flat, then the black outline.
5. Score the blue fold lines with a pen, fold, and glue the tabs inside.

Fit test (M-21): LED matrix 128 x 32 mm behind the window, button from the top, breadboard flat on the bottom, speaker behind the grille, USB cable through the back slot. Photograph each check.

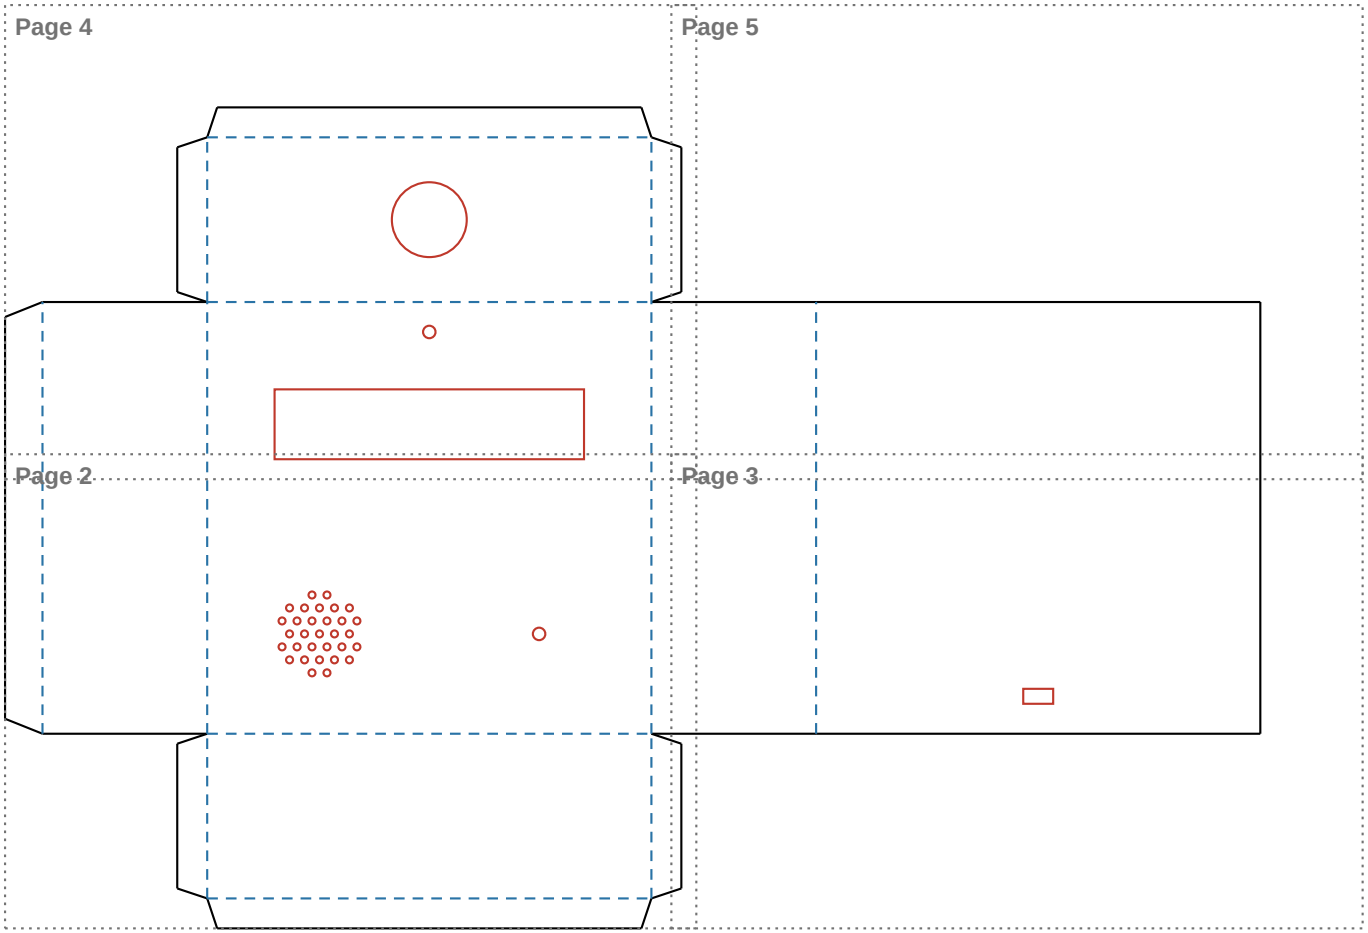

cut (outline)
fold (score lightly first)
cut out (holes)

Sparky mock-up net - Page 2 (bottom-left)

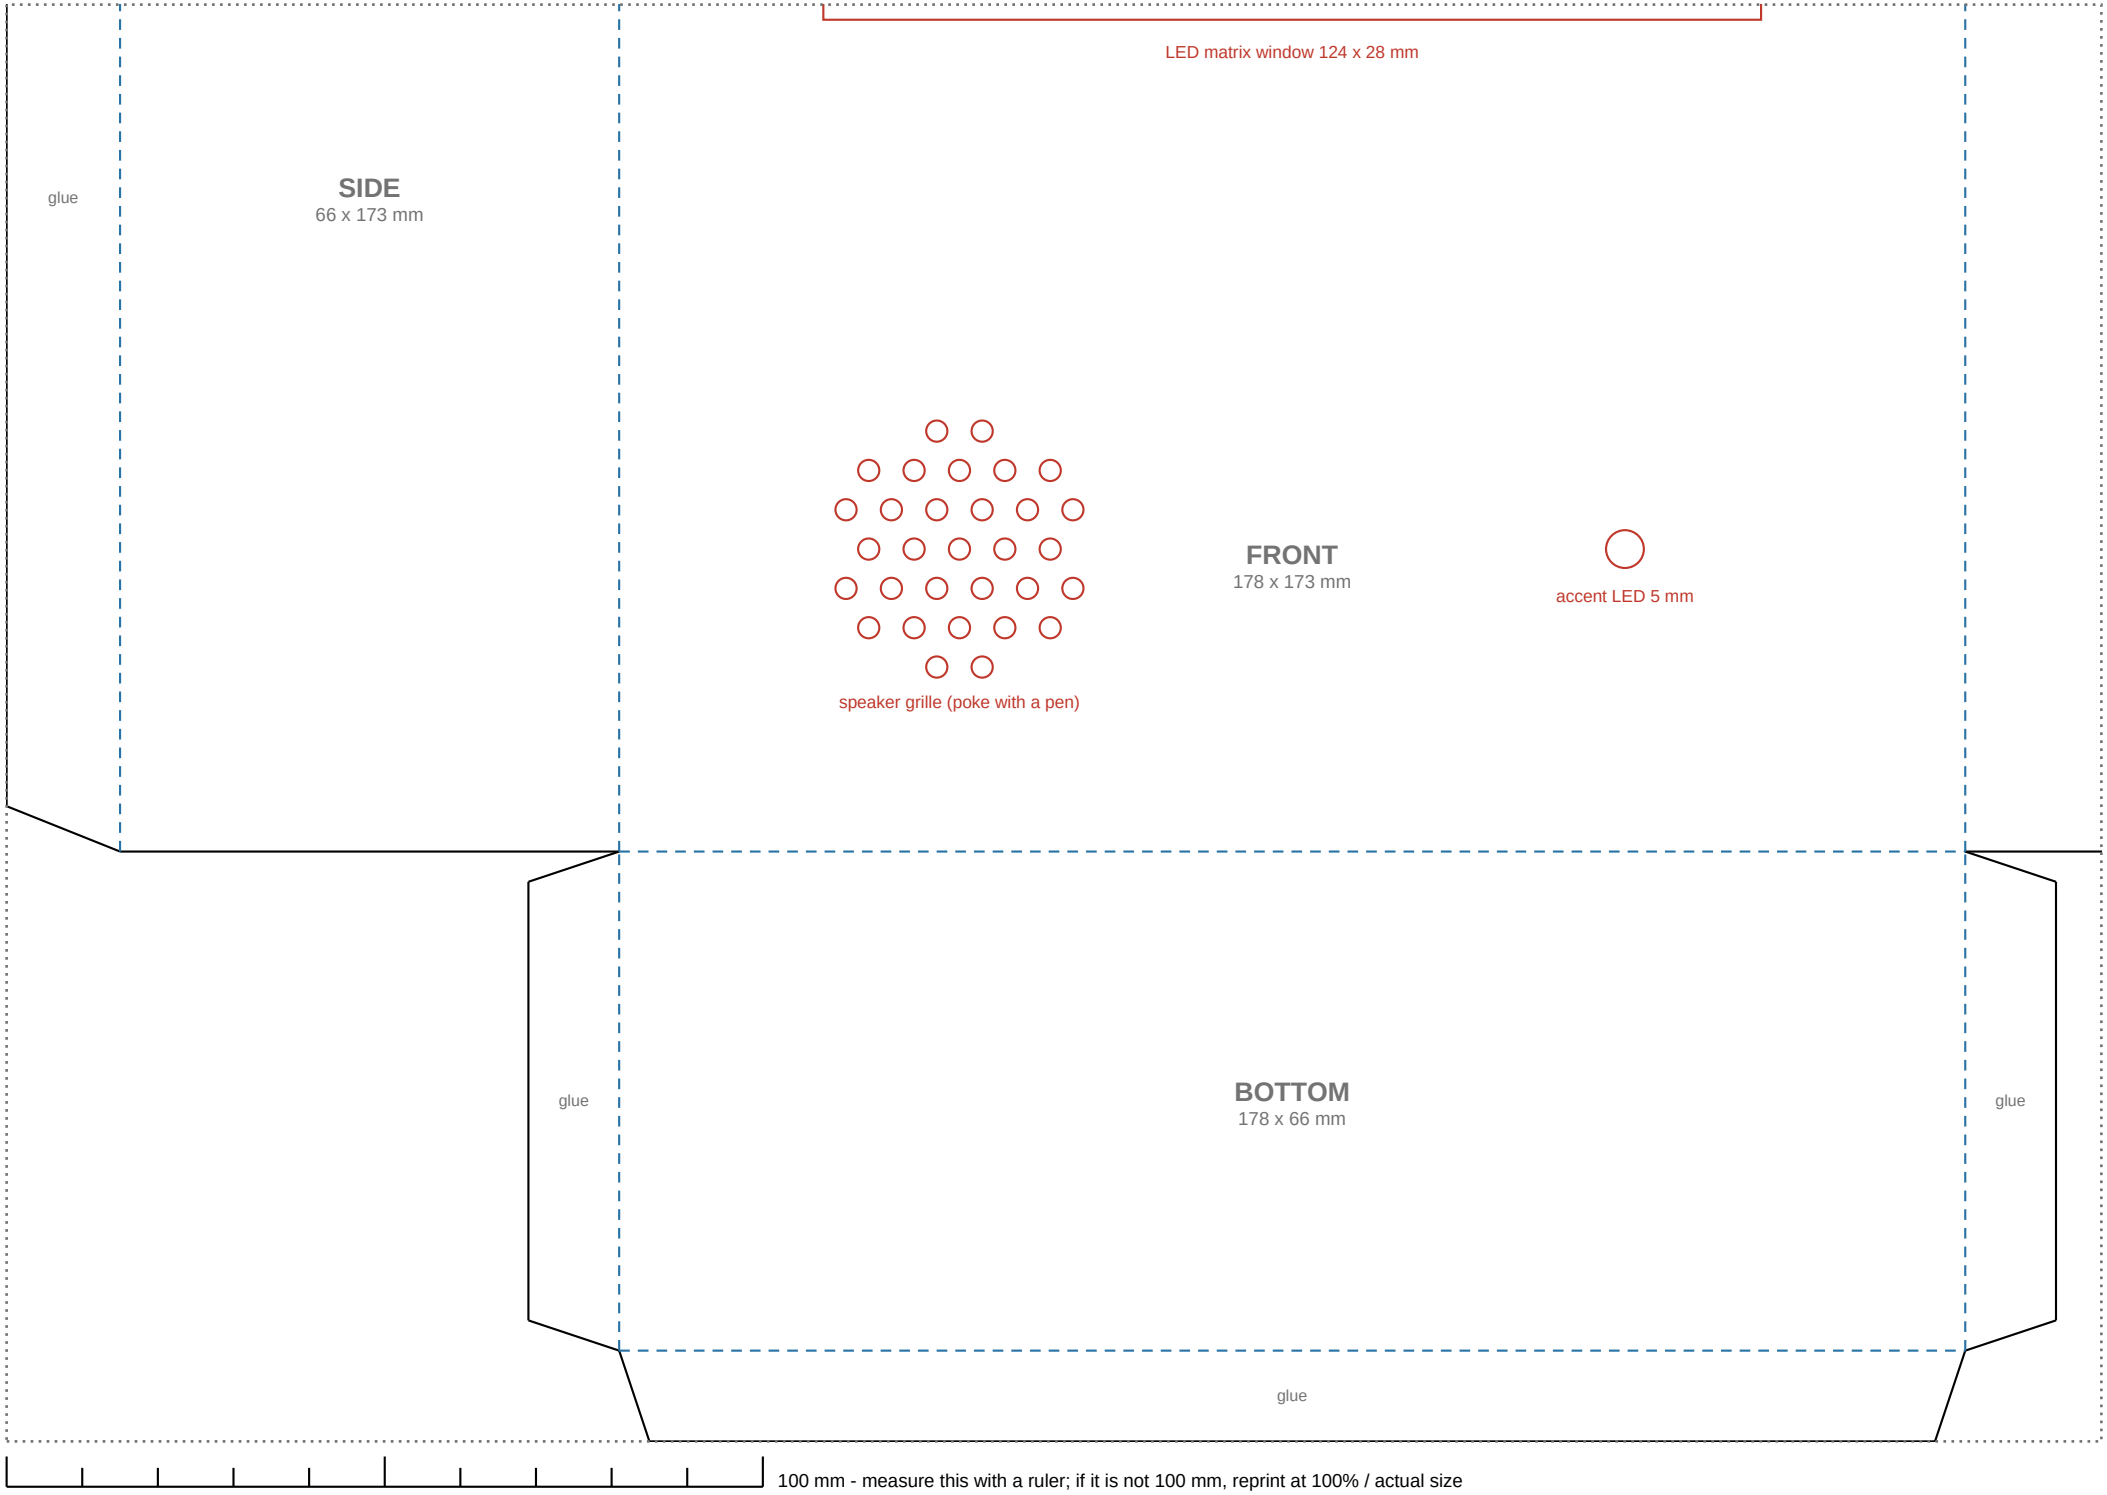

Sparky mock-up net - Page 3 (bottom-right)

Shaded strip = overlap: slide it under the neighbouring page so the lines meet

SIDE
66 x 173 mm

BACK
178 x 173 mm

USB slot 12 x 6 mm (move to match your ESP32)



100 mm - measure this with a ruler; if it is not 100 mm, reprint at 100% / actual size

Sparky mock-up net - Page 4 (top-left)

Shaded strip = overlap: slide it under the neighbouring page so the lines meet

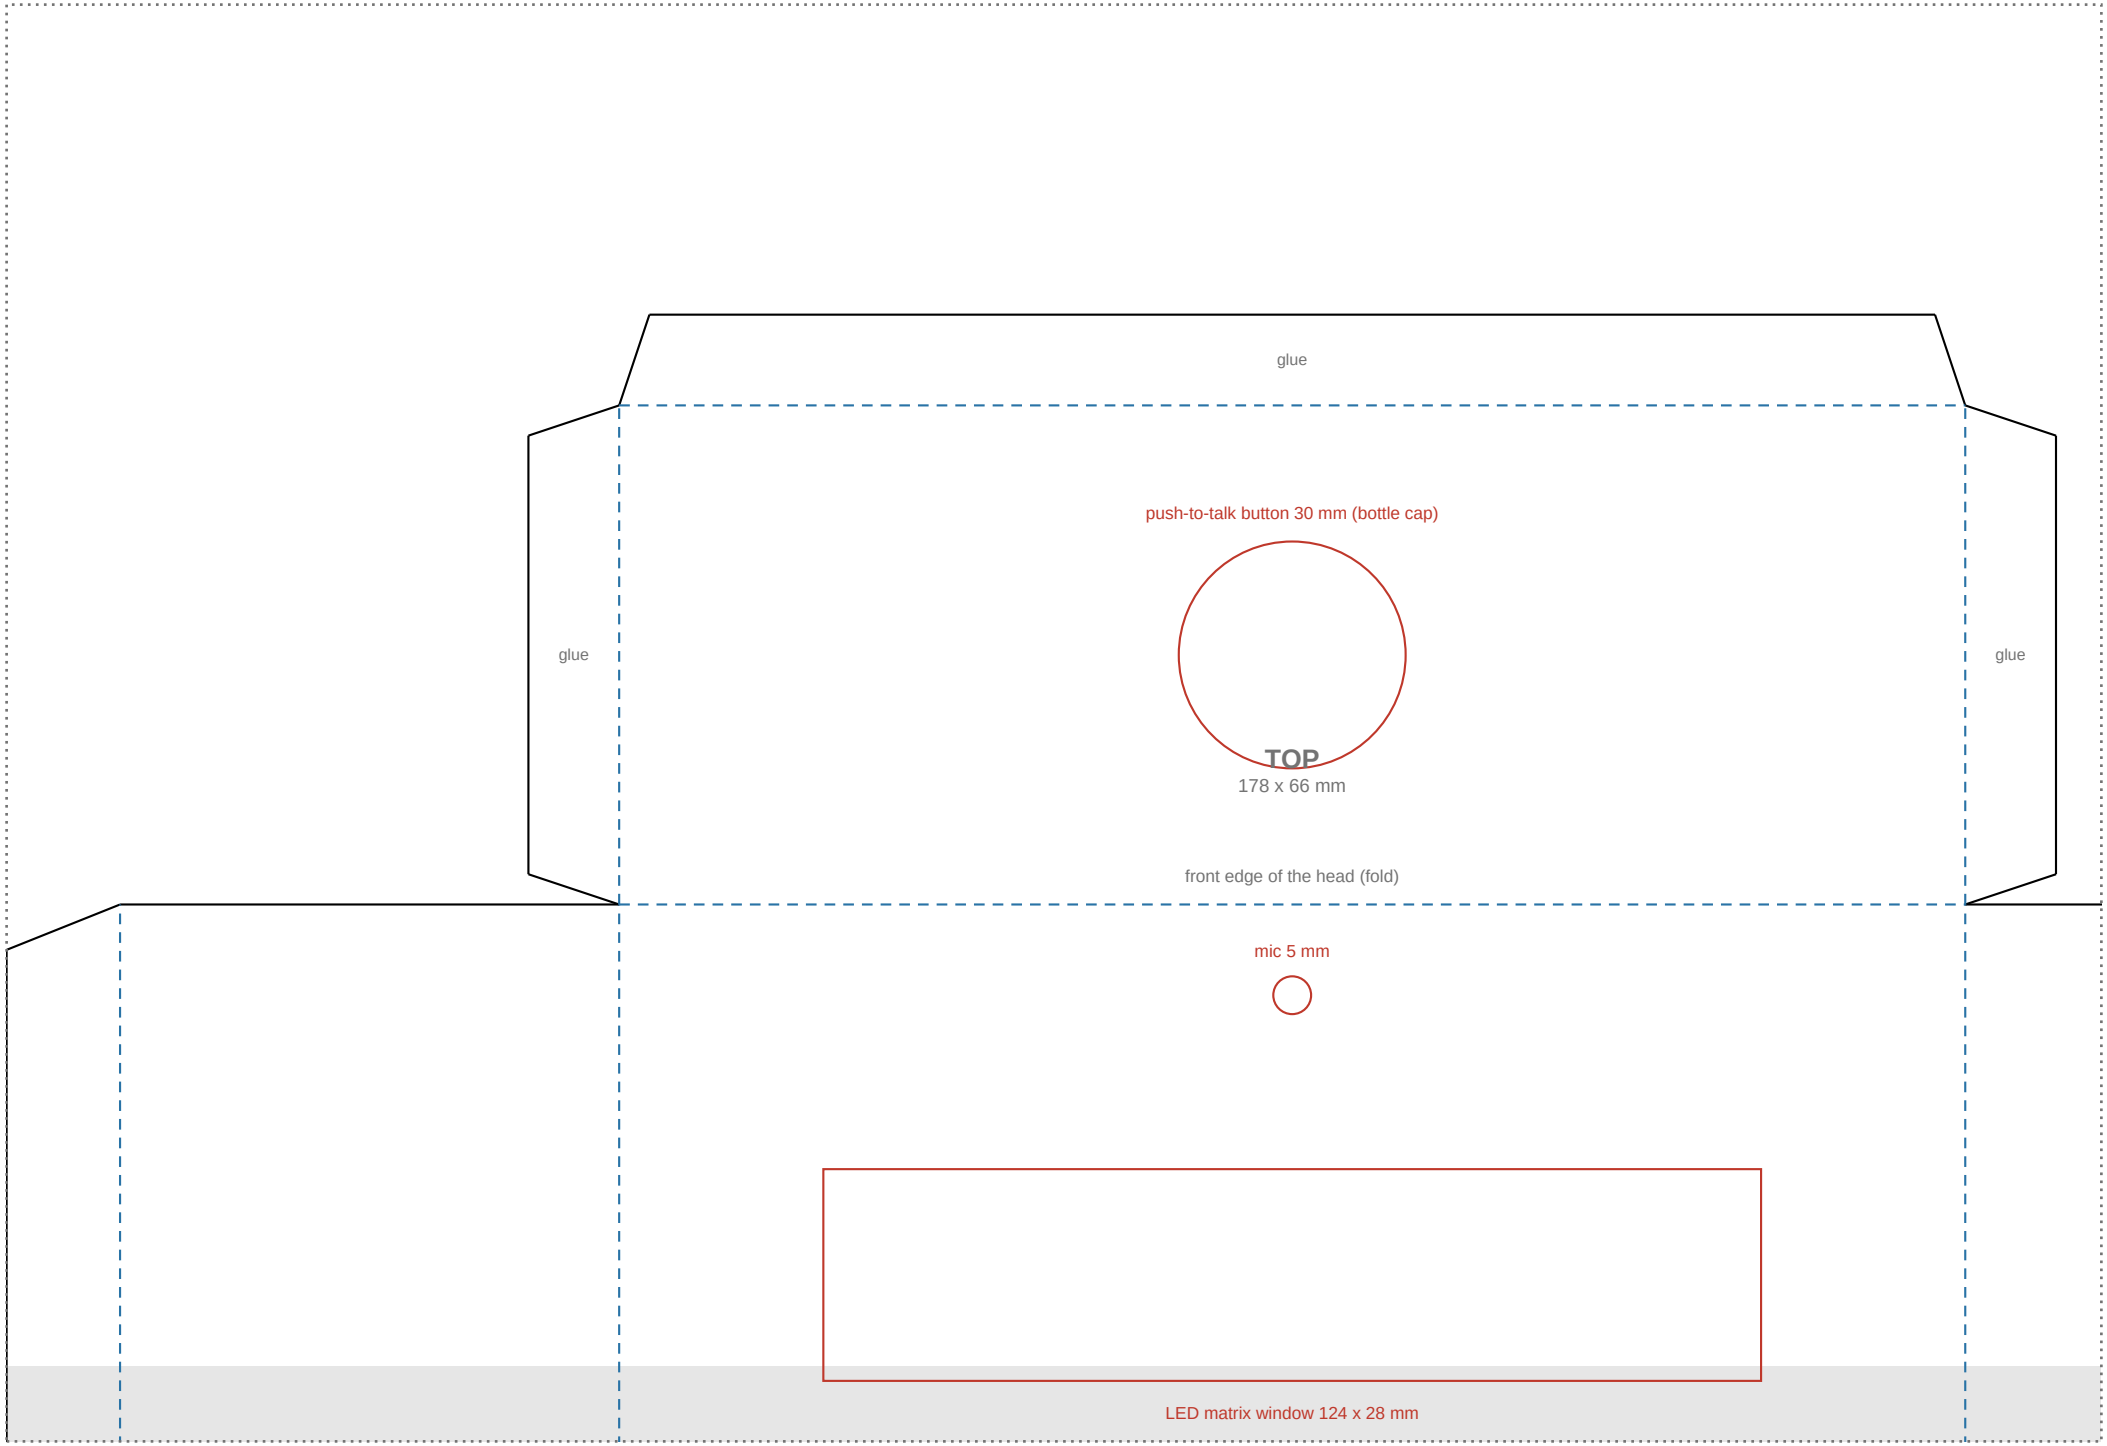

100 mm - measure this with a ruler; if it is not 100 mm, reprint at 100% / actual size

Sparky mock-up net - Page 5 (top-right)

Shaded strip = overlap: slide it under the neighbouring page so the lines meet

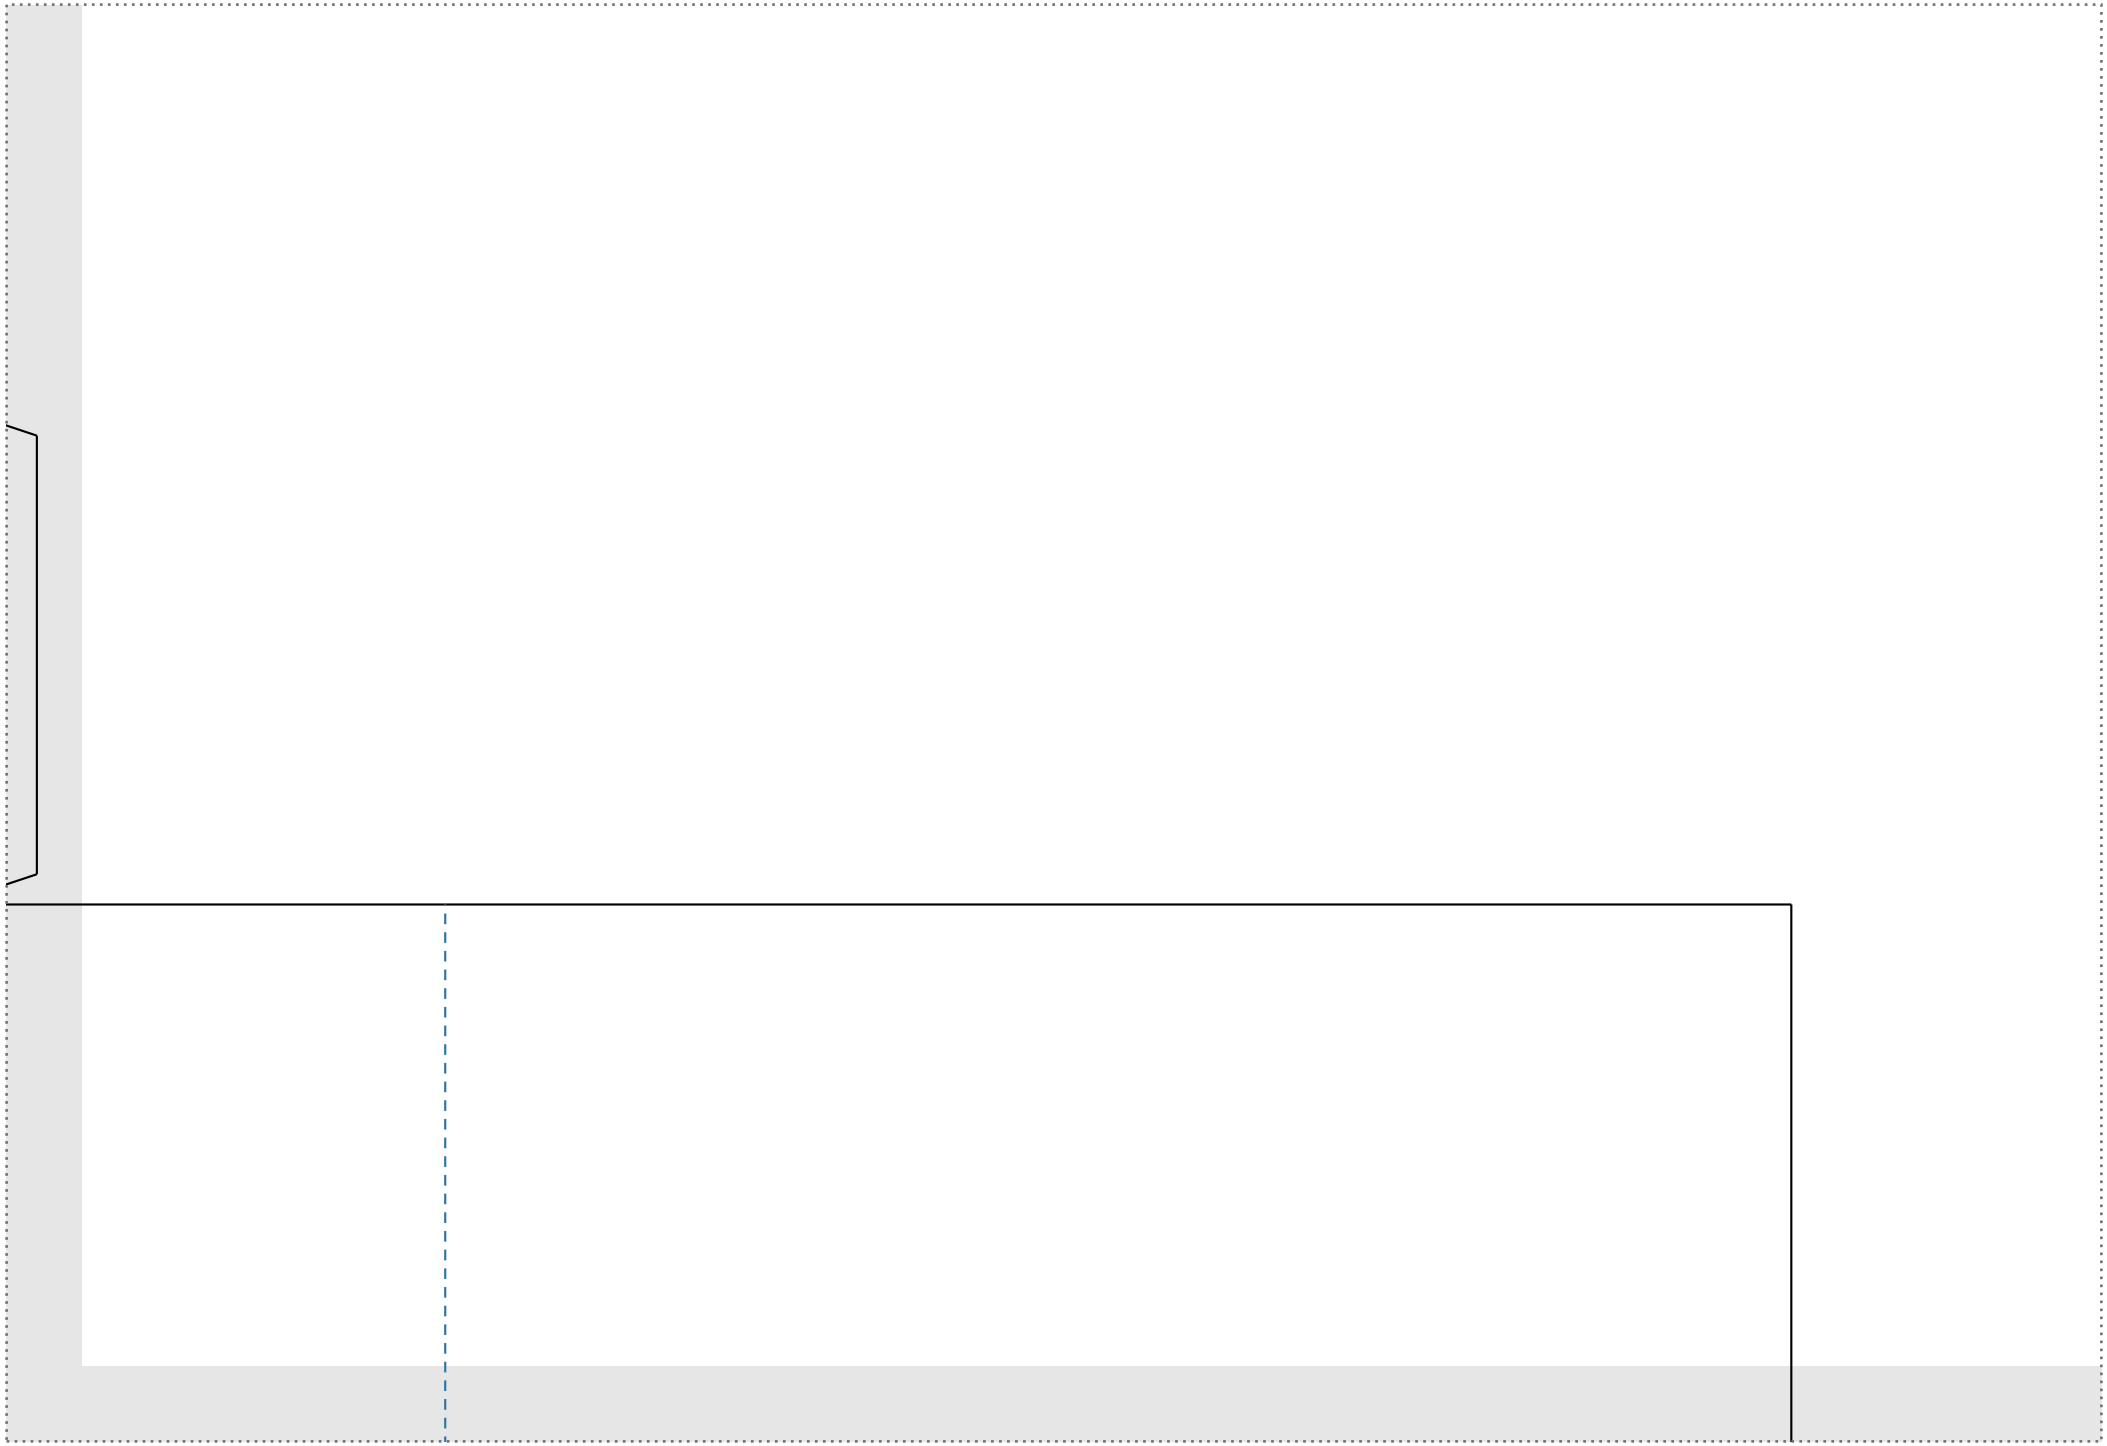

100 mm - measure this with a ruler; if it is not 100 mm, reprint at 100% / actual size