
## PROTOBOARD: BOTTOM

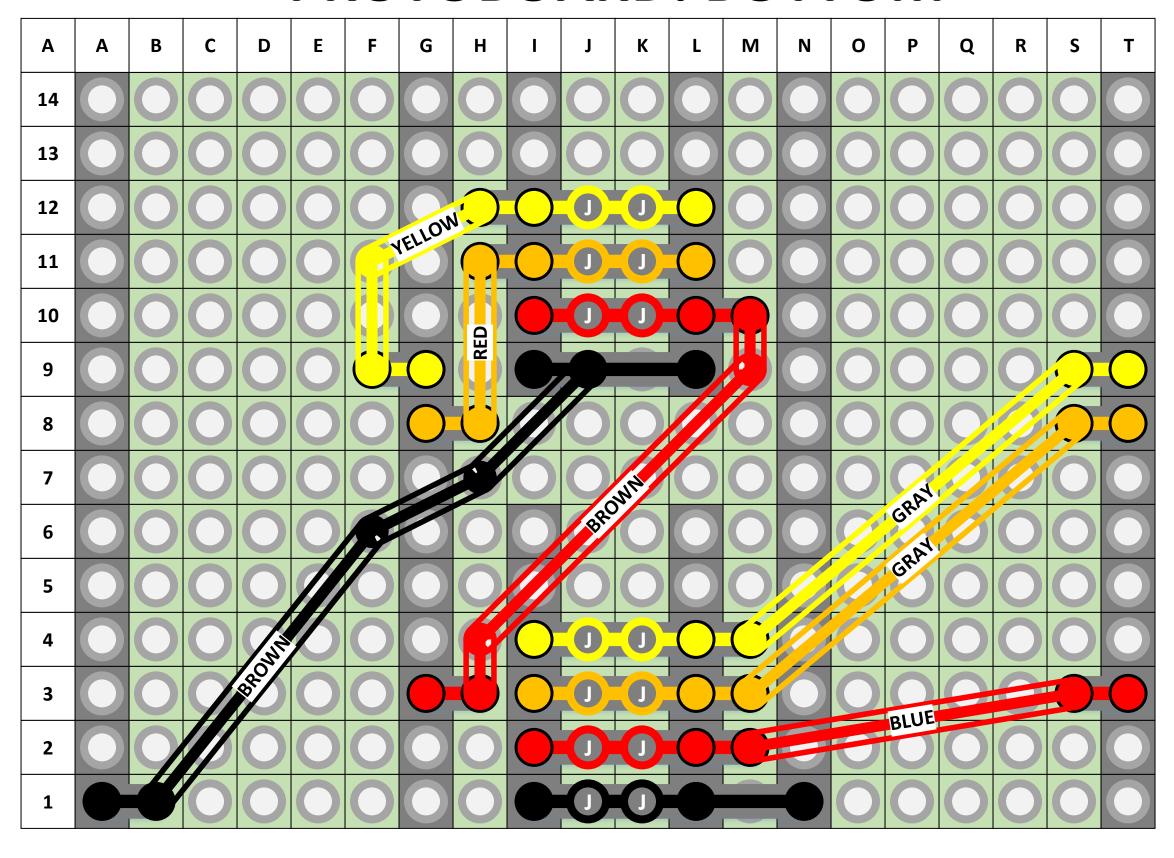





$$\bigcirc$$
 = SDA

$$\bigcirc$$
 = SCL

$$\bigcirc$$
 = 3.3V



## **PROTOBOARD: TOP**

