



1 END ONLY PROVIDED
WITH THREADS FOR LEVELING
FOOT PAD INSTALLATION.
DO NOT CUT THREADED END.


DETAIL 'A'
EXTRUDED ALUMINUM
VERTICAL SUPPORT
P/N: 90003005

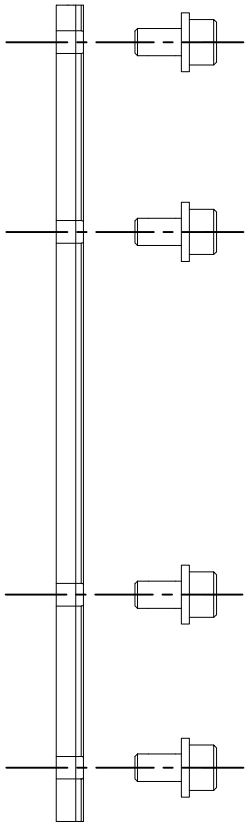


DETAIL 'B'
VERT. SUPPORT
SPLICE CONNECTOR
SCALE: X2
P/N: 90003008

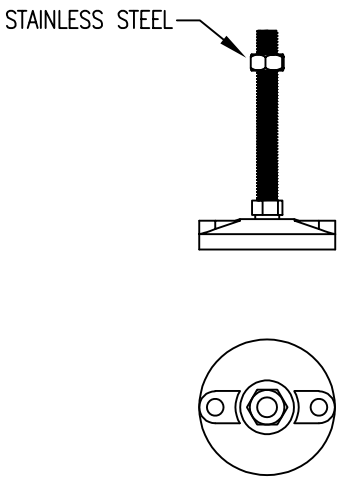

DETAIL 'D'
LEVELING FOOT PAD
P/N: 90003004



CAP SCREW W/ T-NUT

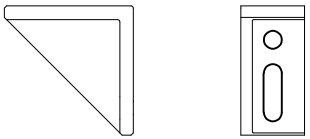

SIDE VIEW FRONT VIEW

DETAIL 'C'
GUSSET KIT W/ HARDWARE X1
P/N: 90003001

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF UVC COMPANY. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT WRITTEN PERMISSION IS PROHIBITED

OTHERWISE SPECIFIED, STANDARD TOLERANCE APPLIES

DEPT	APPROVAL	DATE
PROD		
ENGR / QA		


REV	DATE	DESCRIPTION OF CHAGNE	DFT
A	10/01/2024	UPDATE TO CURRENT CONFIGURATION	HAHN
A	XX/XX/XXXX	INITIAL RELEAE	CN

SCALE	NOT DRAWN TO SCALE	PAGE	1 OF 2

UV RESOURCES

INSTALLATION KIT

DRAWING NO	REV
55002005	A

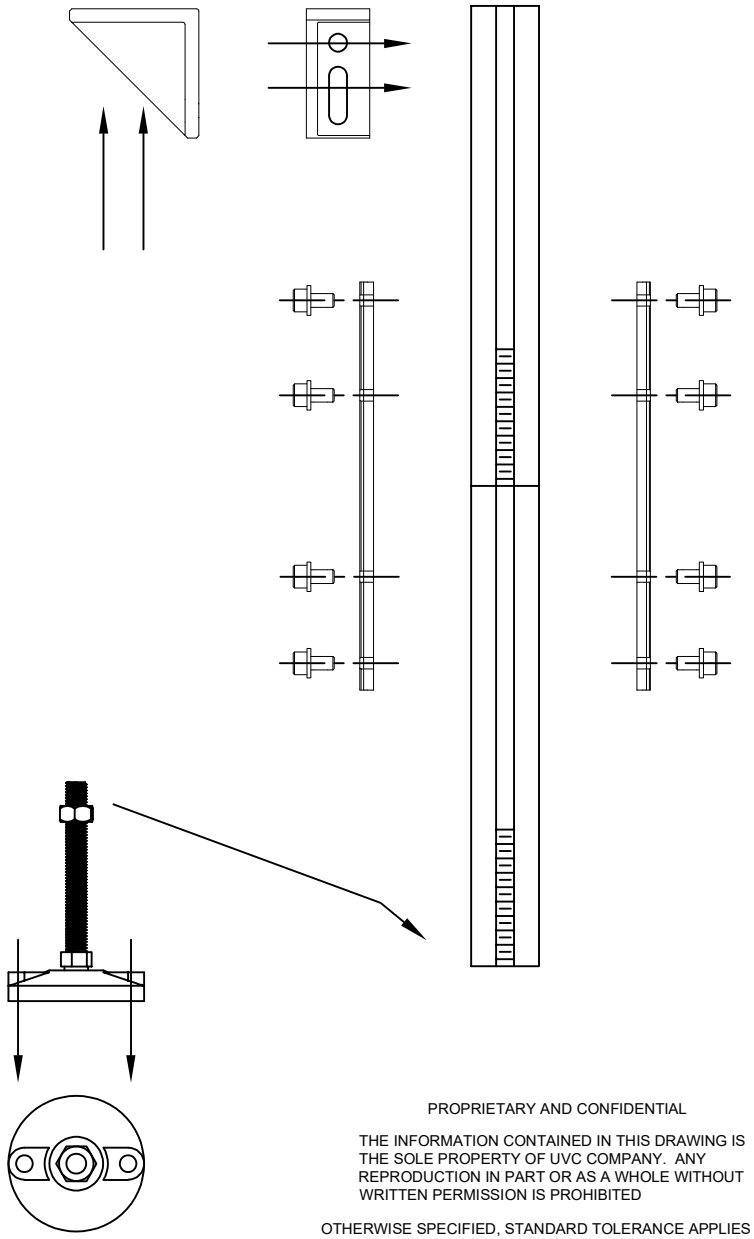

1. MEASURE PLENUM HEIGHT
2. INSTALL GUSSET USING T-NUT / BOLT
3. INSTALL FOOT TO DESIRED HEIGHT
4. CUT THE FRAME
5. INSTALL SPICE KIT BOTH SIDE
6. LOCATE VERTICAL SUPPORT
7. MEASURE DISTANCE BETWEEN VERTICAL SUPPORTS
8. ADJUST LOCATION
9. FIX THE GUSSET
10. FIX THE LEVELING FOOT (OPTION)

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF UVC COMPANY. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT WRITTEN PERMISSION IS PROHIBITED

OTHERWISE SPECIFIED, STANDARD TOLERANCE APPLIES

DEPT	APPROVAL	DATE
PROD		
ENGR / QA		

REV	DATE	DESCRIPTION OF CHAGNE	DFT
SCALE	NOT DRAWN TO SCALE	PAGE	2 OF 2

UVR UV RESOURCES

INSTALLATION KIT

DRAWING NO 55002005

REV B