VALENCIA, CA 91355 Phone: 877.884.4822
Uvresources.com
techsupport@uvresources.com


VERY HIGH OUTPUT GERMICIDAL UVC EMITTER

UV RESOURCES's Very High Output Germicidal UVC lamps (800mA) comes in two different types: GTS & EGTS. GTS is a standard 4-pin connector. EGTS is our proprietary base design version. UV Resources also has selection of 400mA lamps.




DIMENSIONS

STANDARD CONNECTOR – GTS (800mA)

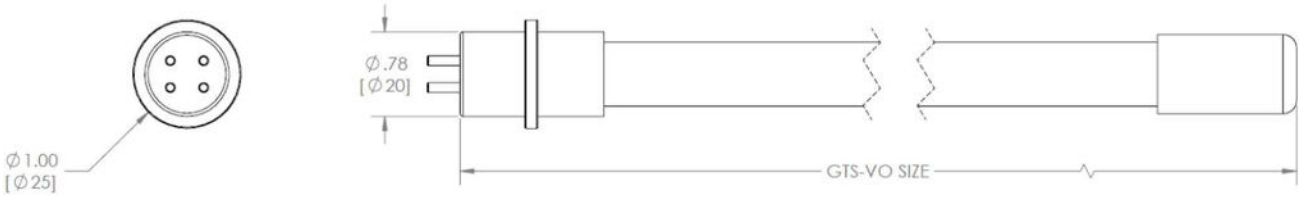

PROPRIETARY CONNECTOR – EGTS (800mA)

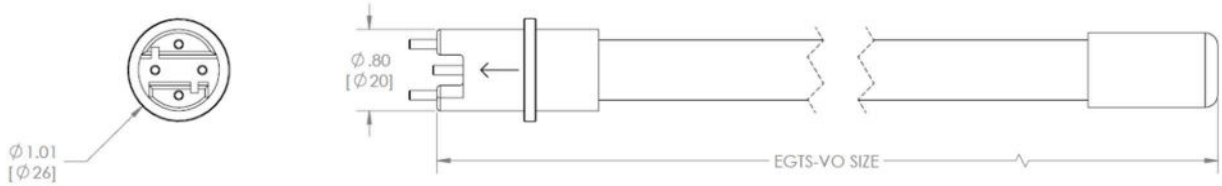

		GTS	
SIZE (IN.)	SIZE (MM)	P/N ENCAPSULATED	P/N REGULAR
12	305	21000701	21000700
16	406	21000101	21000100
20	508	21000201	21000200
24	610	21000301	21000300
30	762	21000401	21000400
36	914	21000501	21000500
42	1067	21000601	21000600
50	1270		
61	1549	21000801	21000800

EGTS	
P/N ENCAPSULATED	P/N REGULAR
21000711	21000710
21000111	21000110
21000211	21000210
21000311	21000310
21000411	21000410
21000511	21000510
21000611	21000610
21000911	21000910
21000811	21000810

VALENCIA, CA 91355 Phone: 877.884.4822
Uvresources.com
techsupport@uvresources.com

OPERATING CONDITIONS


SIZE (IN.)	SIZE (MM)	POWER (W)	MAX LINE POWER (W) @ PF=0.96*	INTENSITY @ 254nm ($\mu W/cm^2$)
12	305	25	26	91
16	406	38	40	130
20	508	47	49	163
24	610	58	61	205
30	762	71	74	250
36	914	85	89	282
42	1067	98	102	325
50	1270	118	123	385
61	1549	143	150	428

*INFORMATION BASED ON UV RESOURCES P/S: 10000187, 10000177, or 10000153-1

Ballast Type	Unit	**NOMINAL** Electronic	**MIN**	**MAX**
Starting Method		Program Start		
Lamp Connection		Series		
Input Voltage	V	100-277	95	280
Input Frequency	Hz	50/60Hz		
Input Power	W	Lamp Dependent		
Power Factor		0.98	0.96	0.99
Total Harmonic Distortion	%	<10.0 @ 120V or<15.0 @ 277V		
Audible Noise	dB	≤65		
Rated Ambient Temperature	°C			90
Rated Lamp Lifetime	Hr	9000		

VALENCIA, CA 91355 Phone: 877.884.4822
Uvresources.com
techsupport@uvresources.com

STANDARD CONNECTOR – RGTS (400mA)

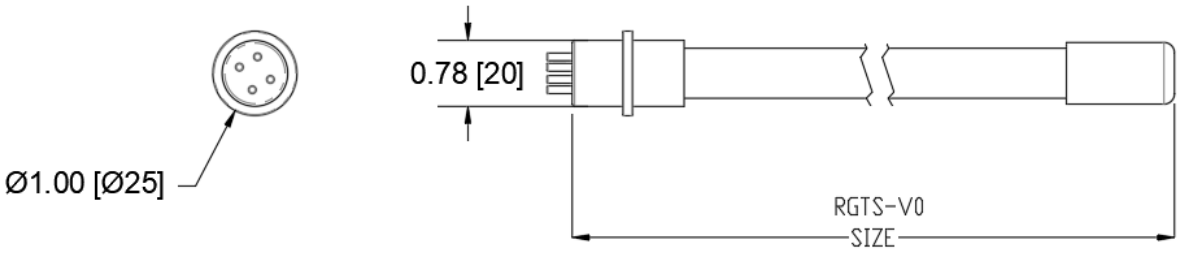

OPERATING CONDITIONS


SIZE (IN.)	SIZE (MM)	POWER (W)	MAX LINE POWER (W) @ PF=0.96	INTENSITY @ 254nm (μW/cm$_2$)*	P/N ENCAPSULATED	P/N REGULAR
12	305	15	19	66	22000371	22000370
16	406	20	26	112	22000301	22000300
20	508	27	34	135	22000201	22000200
24	610	38	40	148	22000101	22000100

*INFORMATION BASED ON UV RESOURCES P/S: 40000120

Ballast Type	Unit	**NOMINAL** Electronic	**MIN**	**MAX**
Starting Method		Program Start		
Lamp Connection		Series		
Input Voltage	V	100-277	110	300
Input Frequency	Hz	50/60Hz		
Input Power	W	Lamp Dependent		
Power Factor		0.98	0.96	0.99
Total Harmonic Distortion	%	<10.0 @ 120V or <15.0 @ 277V		
Audible Noise	dB	≤65		
Rated Ambient Temperature	°C			90
Rated Lamp Lifetime	Hr	9000		

VALENCIA, CA 91355 Phone: 877.884.4822
Uvresources.com
techsupport@uvresources.com


STANDARD BI-PIN CONNECTOR – DE (800mA)

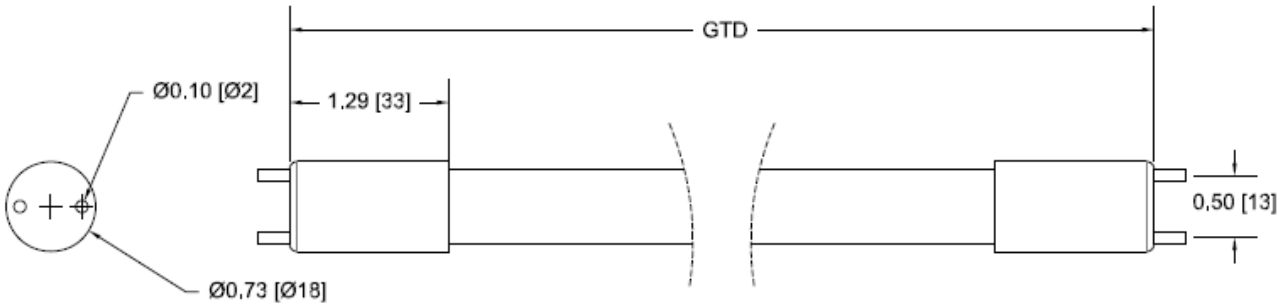

OPERATING CONDITIONS

SIZE (IN.)	SIZE (MM)	POWER (W)	MAX LINE POWER (W) @ PF=0.96	INTENSITY @ 254nm (µW/cm$_2$)*	P/N ENCAPSULATED	P/N REGULAR
22	570	40	42	150	20000201	20000200
34	874	69	72	210	20000401	20000400
40	1027	92	96	275	20000501	20000500

STANDARD CONNECTOR – SEL (800mA)

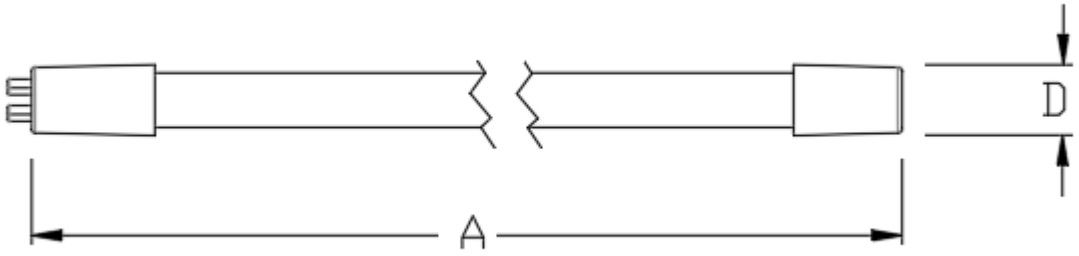

OPERATING CONDITIONS

SIZE (IN.)	SIZE A (MM)	∅ D (MM)	POWER (W)	INTENSITY @ 254nm (µW/cm$_2$)*	P/N ENCAPSULATED	P/N REGULAR
33	845.4	19	75	227	55066559	55066551
61	1556.6	19	145	389	55086559	55086551


VALENCIA, CA 91355 Phone: 877.884.4822
Uvresources.com
techsupport@uvresources.com

STANDARD CONNECTOR – SEL (400mA)

OPERATING CONDITIONS

SIZE (IN.)	SIZE A (MM)	∅ D (MM)	POWER (W)	LAMP WATT CONFIG	INTENSITY @ 254nm ($\mu W/cm_2$)*	P/N ENCAPSULATED
17	437	19	20	20	72	57033559
22	549	19	23		78	55043559
23	584	19	35	25	137	57013559
33	845	19	40	36	145	55063559
45	1148	19	55	50	180	57083559
60	1556	19	75	65	270	57093559

Intensity measured by sensor positioned 1m from lamp's center arc. Lamp mounted in static air (T = 23°C or 73°F).
For simple disinfection applications, only 254nm line is required.
Lamps with 185nm line will generate ozone, UV RESOURCES's lamps will not generate ozone.

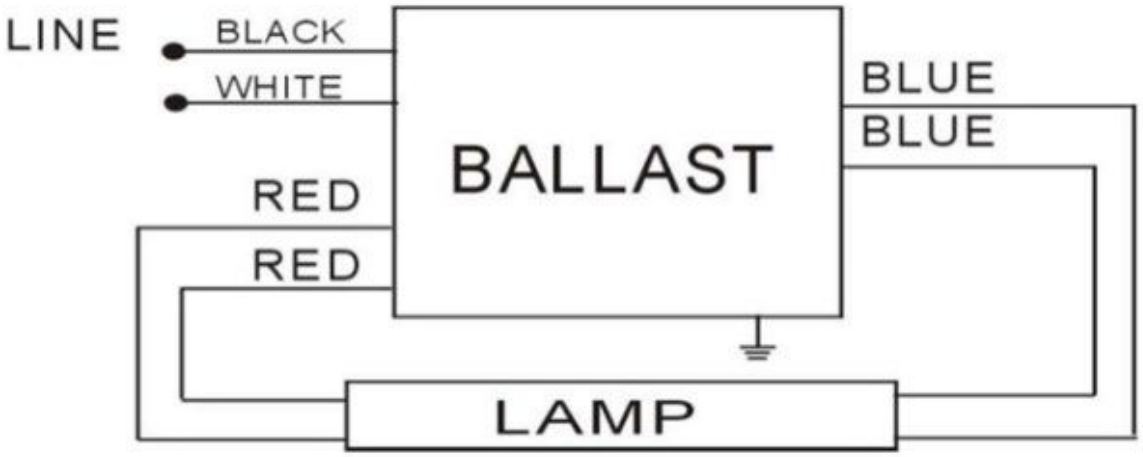

VALENCIA, CA 91355 Phone: 877.884.4822
Uvresources.com
techsupport@uvresources.com

MAINTENANCE

Lamps must be periodically (Every 9000 hours of operation) replaced with genuine UV RESOURCES emitters to maintain design output.

Lamps must be handled only when powered off and with gloves.

SYMPTOMS	POSSIBLE CAUSES	CORRECTIVE ACTION
EMITTER DOES NOT LIGHT	MOMENTARY LOSS OF POWER	RESET POWER. TURN OFF POWER FOR 10 SECONDS THEN TURN POWER BACK ON.
	POOR CONNECTION	CHECK CONNECTION TO EMITTER. CHECK WIRING CONNECTIONS. RESET POWER.
	INCORRECT WIRING	INSPECT CIRCUIT TO WIRING DIAGRAM
	DIRTY PINS	CLEAN PINS. RESET POWER
	SYSTEM MALFUNCTION	CHECK SYSTEM COMPONENTS, INTERLOCK DOOR SWITCHES, RELAYS, MOTION DETECTORS, ETC.
	EMITTER REACHING END OF LIFE	REPLACE WITH NEW EMITTER. RESET POWER.
	DEFECTIVE POWER SUPPLY	REPLACE POWER SUPPLY
VISIBLY WEAK EMITTER LIGHT	BAD WIRING	CHECK WIRING TO EMITTER
	EMITTER REACHING END OF LIFE	REPLACE EMITTER
	EMITTER TOO COLD	IF EMITTER IS AT OR BELOW 35°F (1°C), EMITTER IS TOO COLD TO OPERATE PROPERLY
RED/ORANGE EMITTER	EMITTER REACHING END OF LIFE	REPLACE EMITTER

BROKEN FILAMENT – WILL NOT TURN ON AT ALL
GAS LEAK – WILL NOT TURN ON / GLOW IN RED
EXCESSIVE IMPURITIES (RUN HOT, EVENTUALLY BALLAST WILL SHUT DONW) ON FEW MINUTES THEN OFF – FILAMENT PREMATURE FAILURE

SUGGESTIONS FOR FIXTURE MAINTENANCE

By using the following maintenance suggestions, the ballast will have a longer, more trouble-free life. There are many maintenance contractors and electrical contractors who will economically perform a scheduled maintenance program.

To obtain normal ballast life and maximum efficiency from a UV-C installation, fixtures should be periodically inspected for:

- Lamps cycling on and off
- Heavy lamp discoloration
- Dim lamps
- Slow-starting lamps
- Inoperative lamps
- Dust and dirt

The following general maintenance procedures apply to all lamp and ballast types and will help ensure maximum performance and long component life:

- Lamps should be replaced when they reach 9000 Hr of operation.
- Lamps, reflectors, and deflectors should be cleaned periodically as an accumulation of dirt, combined with high humidity conditions, can impede starting.
- Lamps should be checked to be sure the proper lamp type is being used, according to the information on the label of the installed fixtures.
- Line voltage should be checked at the fixture and compared with the ballast rating to be sure it is within the prescribed limits.
- Lamps cycling on and off may be a warning that the ballast is operating too high a temperature, causing the automatic resetting thermal protector to deactivate the ballast when the temperature limit is exceeded.
- Be sure the fixture and ballast(s) are properly grounded.

CAUTION!

Any electrical system presents potential hazards. Troubleshooting or maintenance procedures should only be performed by qualified personnel. Ballasts and other components, as well as the fixture, must be grounded. All components must be installed and operated in compliance with the National electrical code and all local electrical ordinances.

PROTECT THE BALLAST

A ballast, like any electrical device, generates heat. To ensure maximum ballast life, it is imperative that operating temperatures be kept as low as possible. Burned-out or failing lamps, or high temperatures in or around the fixture, can cause the ballast to overheat, resulting in premature failure.

UV Resources ballasts incorporate internal automatic-resetting thermal protection, which deactivates the ballast should it overheat. Normal operation resumes once the ballast has cooled sufficiently. Cycling will continue until the cause of overheating is corrected.

- CHECK LINE VOLTAGE
- CHECK GROUNDING
- CHECK BALLAST
- CHECK LAMPCONNECTOR SECURELY CONNECTED TO LAMP BASE

VALENCIA, CA 91355 Phone: 877.884.4822
Uvresources.com
techsupport@uvresources.com

QUALITY ASSURANCE

RoHS Compliance: Restriction of Hazardous Substances Directive requirements met.

REACH Compliance: Registration, Evaluation, Authorization, and Restriction of Chemicals requirements met.

Delivery, Storage and Handling: Store UVC Emitters in a clean, dry place and protect from weather and maintenance/construction hazards. Handle UVC Emitters carefully to avoid damage to components, enclosures, and finish. Leave factory shipping covers in place. Do not install damaged components; replace and return damaged components to equipment manufacturer. Comply with manufacturer's installation instructions placement, wiring and testing.

All UV RESOURCES lamps contain mercury less than 12mg.

Country of Origin: Hungary, Poland, USA