
-T Probe Installation (Insertion Mounting)

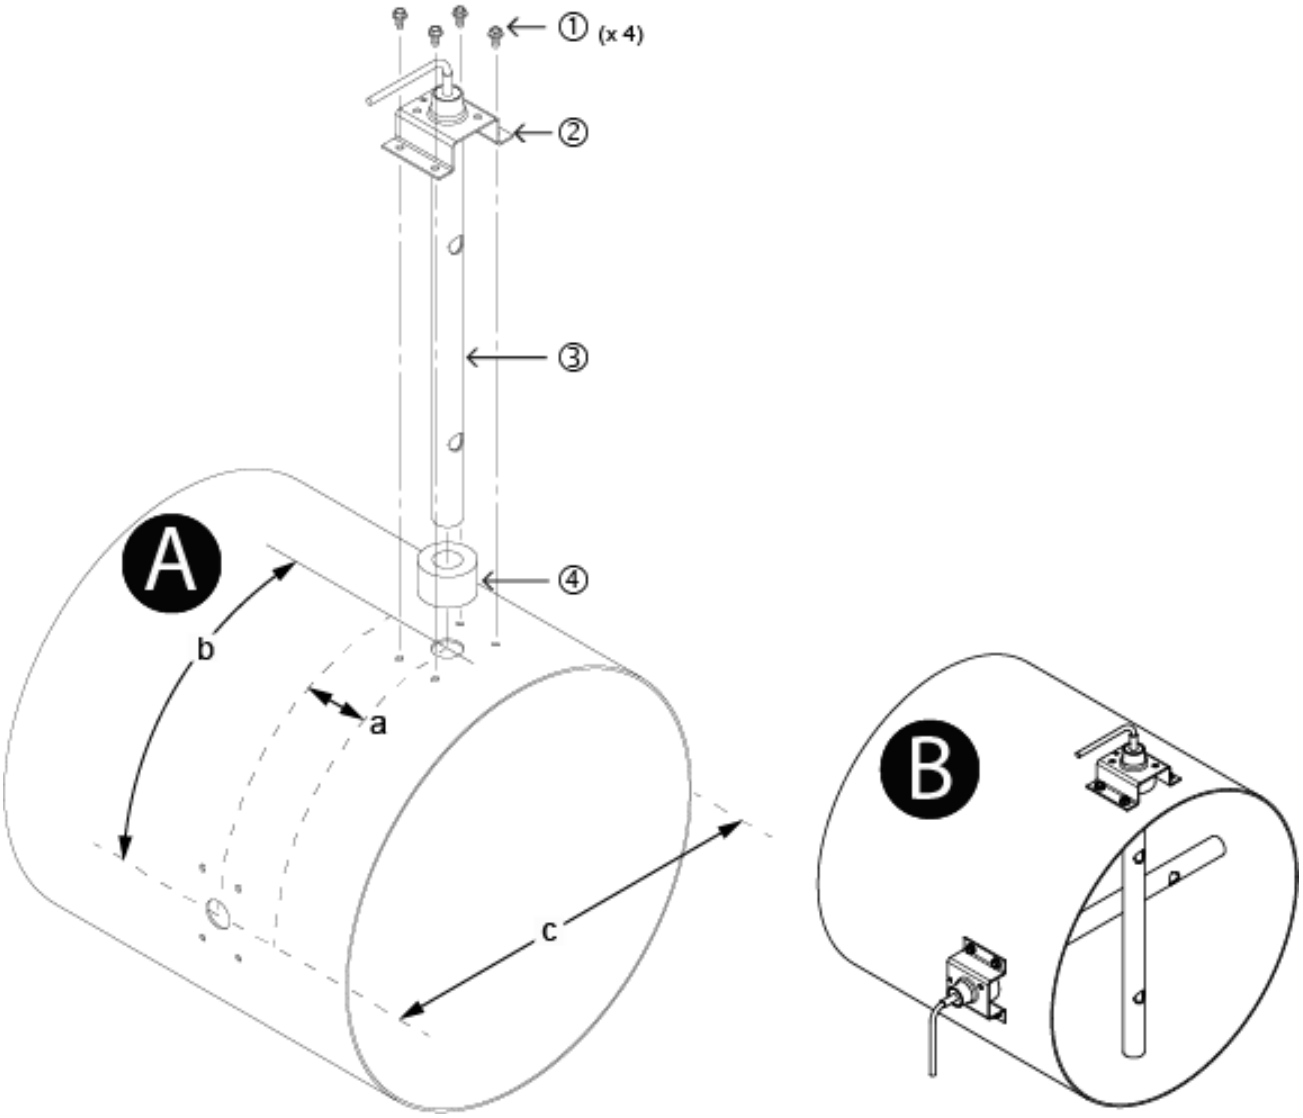

Step 1. Select a location in the duct that meets or exceeds EBTRON's recommended placement guidelines.

⚠ *If the location does not meet or exceed placement guidelines the installed accuracy may be compromised and field adjustment may be necessary.*

Step 2. Probes are ordered with probe length equal to the duct diameter. Verify that the probe length ordered matches the duct size.

⚠ *If the probe length ordered is incorrect, the sensors will not be located in the proper location, thus affecting the installed accuracy. Contact EBTRON customer service for more information.*

⚠ *If the actual size of the duct is not equal to the size ordered, the AREA parameter must be changed in the transmitter to display the proper airflow rate in CFM [l/s].*

⚠ *Do not cut the probe! Cutting the probe will void warranty.*

EBTRON, Inc • 1663 Hwy 701 S., Loris, SC 29569 • Toll Free: 800-2EBTRON (232-8766) • Fax: 843-756-1838 • EBTRON.com


ⓘ *If mounting in a terminal box, locate probe 3 inches minimum upstream of box or 3 inches minimum upstream of existing flow ring.*

REFER TO FIGURE “A” WHEN COMPLETING STEPS 3 TO 10.

Step 3. Mark the center-point where the probe will be located.

Step 4. If two probes are provided, refer to Table 1 and mark an additional center-point dimension ‘b’ along the circumference of the duct (or angle ∠ from the previous probe) offset by dimension ‘a’ from the center-point marked in step 3.

TABLE 1 - PROBE PLACEMENT			
Number of Probes	a	b	∠ from previous
1			
2	2" [50mm]	0.79c	90°

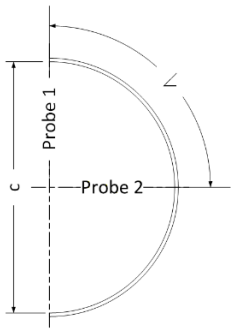

ⓘ *If the probes were ordered for a duct with internal insulation, use the external diameter of the duct for ‘c’ to calculate ‘b’.*

Step 5. Drill a 7/8 inch hole at each probe center-point marked in Step 3 and 4.

Step 6. Remove the foam gasket [④] from the probe tube [③] and insert a probe into the duct. Use the probe mounting bracket [②] as a template to mark the location for the four mounting screws [①]. The mounting bracket will self-align on the round duct to the direction of airflow. Remove the probe from the duct, and reinstall the foam gasket [④] onto the probe tube [③]. Repeat this step for second probe if more than one probe is provided.

Step 7. Drill four appropriately sized pilot holes at each of the locations marked in Step 6 for the four mounting screws [①] selected (screws not provided).

Step 8. Follow steps 9 to 10 for each probe.

Step 9. Insert the probe tube [③] in the duct with the airflow directional arrow pointing in the direction of airflow.

Step 10. Secure the probe mounting bracket to the duct with four sheet metal screws [①] in the holes drilled in Step 7.

Step 11. Probe installation is complete! Figure “B” shows a completed two probe installation.

EBTRON, Inc • 1663 Hwy 701 S., Loris, SC 29569 • Toll Free: 800-2EBTRON (232-8766) • Fax: 843-756-1838 • EBTRON.com