Base unit 600 · drawers

Technical sheet layout for architects and interior designers. Values shown are common modular dimensions drawn for this concept.

FRONT ELEVATION

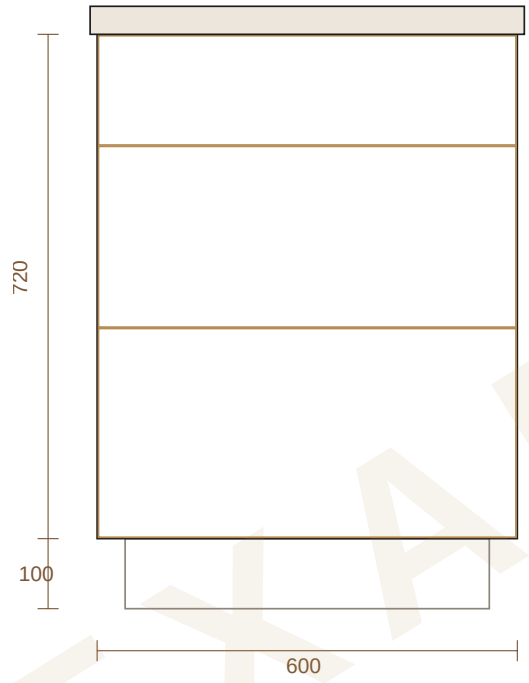

SIDE SECTION

EXAMPLE

Width	600 mm EXAMPLE
Carcass height	720 mm EXAMPLE
Carcass depth	560 mm EXAMPLE
Plinth	100 mm EXAMPLE
Worktop	Per project TO CONFIRM
Fronts	Per collection: Modern, Classic, Dark, Light, Avivi Specials
Carcass material and edging	TO CONFIRM
Runners and hinges	TO CONFIRM

About this file. This sheet shows how Avivi's technical documentation could look in the professionals' area of the new site. It is an example made for a design concept and is not an Avivi specification.

In production, every sheet is generated from Avivi's technical catalogue, together with the matching CAD block (DXF/DWG) and material swatches, and is updated when the catalogue changes.

CAD block: avivi-base-unit-600-example.dxf