8524/B523 Datasheet	3
Functional description	4
OVERVIEW	4
FEATURES	4
Features - B524	4
Features - B523	4
Features - All Models	4
Interfaces	5
BLOCK DIAGRAM	5
POWER	5
VCC	5
3V3	5
VBus	5
ANTENNA	6
Certified Cellular Antenna	6
General Antenna Guidance	
PERIPHERALS AND GPIO	7
JTAG AND SWD	7
Memory map	9
NRF52840 FLASH LAYOUT OVERVIEW	9
EXTERNAL SPI FLASH LAYOUT OVERVIEW (DFU OFFSET: 0X80000000)	9
Pins and button definitions	10
PINOUT DIAGRAM	10
PIN DESCRIPTION	10
LED STATUS	13
System RGB LED	13
Technical specifications	14
ABSOLUTE MAXIMUM RATINGS [1]	14
Supply voltages	14
RECOMMENDED OPERATING CONDITIONS	14
POWER CONSUMPTION	15
RADIO SPECIFICATIONS	16
nRF52840	16
4G LTE cellular characteristics for EG91-E	16
I/O CHARACTERISTICS	17
Mechanical specifications	18
DIMENSIONS AND WEIGHT	18
MECHANICAL DRAWING	18
MATING CONNECTOR AND LAND PATTERN	19
SCREW ASSEMBLY	20
DESIGN CONSIDERATIONS	21
Product Handling	23
ESD PRECAUTIONS	23
CONNECTORS	23
Schematics	24

MICROCONTROLLER	24
QUECTEL CELLULAR MODEM	24
M.2 CONNECTOR	24
SIM AND FLASH	25
BUFFERS	25
Default settings	27
Certification	28
EU DECLARATION OF CONFORMITY	28
UNITED KINGDOM	28
Country compatibility	29
Ordering information	32
Revision history	33

B524/B523 Datasheet



Functional description

OVERVIEW

The B Series System-on-a-Module (SoM) is a LTE Cat 1 cellular device with support for BLE (Bluetooth LE). It is based on the Nordic nRF52840 microcontroller.

The B Series is designed to be integrated into your circuit board design, plugging into a M.2 NGFF connector on your board, allowing the module to be changed or upgraded easily.

FEATURES

Features - B524

- Quectel EG91-E modem
- LTE category 1 module for EMEAA region
- 3GPP E-UTRA Release 13
- Cat 1 bands supported: 1, 3, 7, 8, 20, 28A
- 2G and 3G fallback (900, 1800, and 2100 MHz)
- Embedded Particle EtherSIM (B524)
- Support for selected countries in Europe, Middle East, Africa, and Asia, including Australia and New Zealand. See the cellular carrier list for more information.

Features - B523


- Quectel EG91-E modem
- LTE category 1 module for EMEAA region
- 3GPP E-UTRA Release 13
- Cat 1 bands supported: 1, 3, 7, 8, 20, 28A
- 2G and 3G fallback (900, 1800, and 2100 MHz)
- Embedded Particle SIM (B523)
- Support for Europe only

Features - All Models

- Nordic Semiconductor nRF52840 SoC
- ARM Cortex-M4F 32-bit processor @ 64MHz
- 1MB flash, 256KB RAM
- Bluetooth 5: 2 Mbps, 1 Mbps, 500 Kbps, 125 Kbps
- Supports DSP instructions, HW accelerated Floating Point Unit (FPU) and encryption functions
- Up to +8 dBm TX power (down to -20 dBm in 4 dB steps)
- NFC-A tag
- On-module additional 8MB SPI flash
- 24 mixed signal GPIO (8 x Analog, 8 x PWM), UART, I2C, SPI
- USB 2.0 full speed (12 Mbps)
- JTAG (SWD) pins
- RGB status pins for LED
- Reset and Mode pins for buttons
- On-module MFF2 Particle SIM
- Two on-module U.FL connectors for external antennas
- M.2 interface
- CE certified
- RoHS compliant (lead-free)

Interfaces

BLOCK DIAGRAM

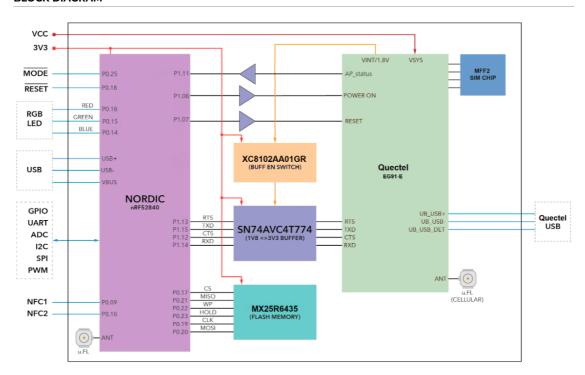

POWER

VCC

VCC is used to supply power to the Quectel EG91-E cellular module. The recommended input voltage range on this pin is between 3.6V to 4.3V DC. Make sure that the supply can handle currents of at least 2 A.

Note: The limit on the B402 (u-blox LTE Cat M1) is 4.2V, so you should limit VCC to 4.2V to preserve compatibility with both modules.

3V3

3V3 is used to supply power to nRF52840, logic ICs, memory, etc.. The 3V3 input voltage range is between 3V to 3.6V DC, but 3.3V is recommended. Make sure that the supply can handle at least 150 mA, however it may need to be larger than that if you have additional 3.3V peripherals on your base board.

We do not recommend using a single 3.6V supply for both VCC and 3V3 as the cellular modem performance may be lower below 3.7V. Use two separate regulators for best results.

VBus

VBus is connected to the USB detect pin of nRF52840 to enables the USB interface. The recommended input voltage range is between 4.35V to 5.5V DC.

There are two radios on the B523 module. A BLE radio (nRF52840) and a cellular radio (Quectel). We have provided two u.FL connectors to plug in the cellular and BLE antenna. These are required if you wish to use the cellular and BLE. If you do not need BLE, you do not need to connect the BLE antenna.



Number	Label	Purpose
1	ВТ	Bluetooth antenna (optional)
2	CELL	Quectel cellular modem antenna
3	ANT DIV	LTF cellular receive diversity antenna

The third connector is the LTE cellular receive diversity antenna. A second cellular antenna can be connected to this connector to improve performance when the device will be moving at high speeds. It is only used for LTE Cat 1 connections and is not supported when in 2G or 3G mode. This antenna is not necessary in most cases and is not included in evaluation kits. (The B402 does not have this connector as receive diversity is not supported in LTE Cat M1 mode.)

Certified Cellular Antenna

SKU	Description
ANTCW2EA	Particle Cellular Flex Antenna 2G/3G/LTE [x1]
ANTCW2TY	Particle Cellular Flex Antenna 2G/3G/LTE Tray of 50 [x50]

- Type: LTE Ultra Wide Band Flex Antenna
- Frequency/band: 698 MHz-2690 MHz
- RoHS Compliant
- Mechanical Specs:
 - o Dimensions: 97 x 21 x 0.2 mm
 - Mounting: 3M adhesive backed for application on non-metallic surfaces
 - o Connector type: FPC + IPEX connector
 - o Cable length: 210 mm

General Antenna Guidance

- The antenna placement needs to follow some basic rules, as any antenna is sensitive to its environment. Mount the antenna at least 10mm from metal components or surfaces, ideally 20mm for best radiation efficiency, and try to maintain a minimum of three directions free from obstructions to be able to operate effectively.
- Needs tuning with actual product enclosure and all components.
- For the BLE antenna, it is recommended to use a 2.4 GHz single-frequency antenna and not a 2.4 GHz + 5 GHz antenna, so as to avoid large gain at the frequency twice of 2.4 GHz which can cause the second harmonic radiation of 2.4 GHz to exceed standards.

PERIPHERALS AND GPIO

Peripheral Type	Qty	Input(I) / Output(O)
Digital	24 (max)	I/O
Analog (ADC)	8 (max)	I
UART	1	1/0
SPI	2	1/0
I2C	2	1/0
USB	1	1/0
PWM	8 (max)	0
NFC	1	0

There are some optional B523 module specific I/O:

- Quectel USB and VBUS (for modem firmware upgrades)
- Quectel Ring Indicator (RI) output

Note: All GPIOs are only rated at 3.3VDC max.

JTAG AND SWD

The B523 module has 4 pads at the bottom exposing the SWD interface of the nRF52840. This interface can be used to debug your code or reprogram your B523 bootloader, device OS, or the user firmware. We use 4 pogo-pins connecting to these pads during production for firmware flashing.



Memory map

NRF52840 FLASH LAYOUT OVERVIEW

- Bootloader (48KB, @0xF4000)
- User Application
 - \circ 256KB @ 0xB4000 (Device OS 3.1 and later)
 - o 128KB @ 0xD4000 (Device OS 3.0 and earlier)
- System (656KB, @0x30000)
- SoftDevice (192KB)

EXTERNAL SPI FLASH LAYOUT OVERVIEW (DFU OFFSET: 0X80000000)

- Reserved (4MB, @0x0040000)
- OTA (1500KB, @0x00289000)
- Reserved (420KB, @0x00220000)
- FAC (128KB, @0x00200000)
- LittleFS (2M, @0x0000000)

Pins and button definitions

PINOUT DIAGRAM

EG91-E CAT-1 SOM						
	H1	H3				
	H5					
vcc	2	1	GND			
vcc	4	3	GND			
vcc	6	5	GND			
vcc	8	7	GND			
3V3	10	9	GND			
3V3	12	11	USB D+			
RESERVED	14	13	USB D-			
VUSB	16	15	GND			
	18	17	NFC1			
SCL	20	19	NFC2			
SDA	22	21	GND			
	VEV	23	ADC0			
	KEY					
MODE	32	33	ADC1			
RESET	34	35	ADC2			
TX	36	37	ADC3			
RX	38	39	AGND			
CTS	40	41	ADC4			
RTS	42	43	ADC5			
EG91 USB+	44	45	ADC6			
EG91 USB-	46	47	ADC7			
cs	48	49	AGND			
MISO	50	51	RESERVED			
MOSI	52	53	RESERVED			
SCK	54	55	RESERVED			
GND	56	57	RESERVED			
RESERVED	58	59	RESERVED			
RESERVED	60	61	RED			
GPI00	62	63	GREEN			
GPI01	64	65	BLUE			
PWM0	66	67	SIM_VCC			
PWM1	68	69	SIM_RST			
PWM2	70	71	SIM_CLK			
PWM3	72	73	SIM_DATA			
EG91 VBUS	74	75	EG91_RI			
	H2	H4				

Pins SOM0 to SOM9 will vary across various SoM modules. For example, cellular-specific pins exists in this range.

Additionally there are RESERVED³ pins, whose functions vary depending on the SoM. For example, nRF52 MCU-based modules use some of these pins for additional ADC and GPIO. They are able to be used as described on the B523, but their function may be be different on future modules.

For maximum cross-module flexibility, you should try to use only the common pins when possible.

PIN DESCRIPTION

#	Pin	Common	Function	nRF52 Description
1	GND	GND	POWER	System ground.
2	VCC	VCC ⁵	POWER	System power in, connect to the +LiPo or supply a fixed 3.6-4.3v power.
3	GND	GND	POWER	System ground.
4	VCC	VCC	POWER	System power in, connect to the +LiPo or supply a fixed 3.6-4.3v power.
5	GND	GND	POWER	System ground.
6	VCC	VCC	POWER	System power in, connect to the +LiPo or supply a fixed 3.6-4.3v power.
7	GND	GND	POWER	System ground.
8	VCC	VCC	POWER	System power in, connect to the +LiPo or supply a fixed 3.6-4.3v power.
9	GND	GND	POWER	System ground.
10	3V3	3V3	POWER	System power in, supply a fixed 3.0-3.6v power.
11	USB D+	USB D+	Ю	Data+ pin of the NRF52840 USB port.

12 373 373 POWER POWER System power in supply a fixed 30-35ky power. 18 VSB D. USB D. 10 December 20 December 20 December 20 December 20 December 20 System power in, USB detect pin for nRF52840.5 yon this pin enables the USB interface. 18 NC II SOM43 NPC input System power in, USB detect pin for nRF52840.5 yon this pin enables the USB interface. 18 NC II SOM43 NPC input System power in, USB detect pin for nRF52840.5 yon this pin enables the USB interface. 18 NC II SOM43 NPC input System power in, USB detect pin for nRF52840.5 yon this pin enables the USB interface. 18 NC II SOM43 NPC incented to the MODE of Control of Power input. System ground. 19 NPC II SOM43 NPC II POWER INCENTED AND GROUND POWER. System ground. 20 D1 SCAL II DO POWER INCENTED AND GROUND POWER. System ground. 31 AD ADCO 10 POWER INCENTED AND GROUND POWER. Active low reset to put. 32 AD ADCO 10 POWER INCENTED AND GROUND POWER. Active low reset to put.<						
14 NC RESERVED* NC Leave unconnected. 15 GND GND POWER System ground. 16 VUSB VUSB POWER System ground. 17 NFCI SOM3*** NFC*** System power in, USB detect pin for nRF52840. SV on this pin enables the USB interface. 18 NC RESERVED*** NFC*** Leave unconnected. 18 NC RESERVED*** NC Leave unconnected. 20 D1 SCL 10 PO27*** I2C SCL, and digital only GPIO. 21 GND GND POWER*** System ground. 21 GND SDA 10 PO26*** I2C SDA, and digital only GPIO. 22 AD SDA 10 PO24*** Analog input ADCO**, and digital GPIO. 32 AD ADCO*** 10 PO24*** Analog input ADCO**, and digital GPIO. 33 AL ADCO*** 10 PO28*** Analog input ADCO**, and digital GPIO. 34 RESET*** 10	12	3V3	3V3	POWER		System power in, supply a fixed 3.0-3.6v power.
15 CND CND POWER System ground. 16 VUSB VUSB POWER System power in, USB detect pin for nRFS2B40. SV on this pin enables the USB interface. 17 NFC1 SOM3** NFC input POWER Leave unconnected. 18 NC RESERVED** NC Leave unconnected. 19 NFC2 SOM4*** NFC input POWER Leave unconnected. 20 D1 SCL IO POZ7 ICC SCL, and digital only GPIO. 21 CND CND POWER System ground. 22 D0 SDA IO POZ8 EVESTD, and digital only GPIO. 23 AOD ADC0 IO POZ5 Connected to the MODE button input, and digital only GPIO. 24 RESET RESET I Active-low reset input. 35 AQ ADC2 IO PO28 Analog input ADC2*, and digital GPIO. 36 D9 TX IO PO20 Analog input ADC3*, and digital GPIO. 37	13	USB D-	USB D-	Ю		Data- pin of the NRF52840 USB port.
16 VUSB VUSB POWER (Input Properties) System power in, USB detect pin for nRFS2840. SV on this pin enables the USB interface. 17 NFC1 SOM33 NFC (Input Properties) PO.09 NFC antenna connection. 18 NC RESERVED3 NC Leave unconnected. 19 NFC2 SOM43 NFC PO.00 NFC antenna connection. 20 D1 SCL IO PO.27 I2C SCL, and digital only GPIO. 21 GND GND POWER System ground. 22 D0 SDA IO PO.02 I2C SDA, and digital only GPIO. 23 AO ADC0 IO PO.02 ICC SDA, and digital only GPIO. 24 MGDE MGDE IO PO.02 Connected to the MODE button input, and digital only GPIO. 25 AC ADC1 IO PO.02 Analog input ADC2*, and digital GPIO. 36 AB ABC2 ADC2 IO PO.28 Analog input ADC2*, and digital GPIO. 37 A3 ADC3 <	14	NC	RESERVED ³	NC		Leave unconnected.
	15	GND	GND	POWER		System ground.
No. Cantenna connection.	16	VUSB	VUSB	POWER		
NFC2 SOM43	17	NFC1	SOM3 ³		P0.09	NFC antenna connection.
19	18	NC	RESERVED ³	NC		Leave unconnected.
21 GND GND POWER System ground. 22 DO SDA IO P026 I2C SDA, and digital only GPIO. 23 AO ADCO IO P035 Analog input ADCO², and digital GPIO. 32 MODE MODE IO P025 Connected to the MODE button input, and digital only GPIO. 33 AI ADCI IO P0.04 Analog input ADC3², and digital GPIO. 34 RESET RESET I Active-low reset input. 35 A2 ADC2 IO P0.28 Analog input ADC3², and digital GPIO. 36 D9 TX IO P0.08 Primarily used as UART TX, but can also be used as a digital GPIO. 37 A3 ADC3 IO P0.08 Primarily used as UART RX, but can also be used as a digital GPIO. 39 AGND AGND POWER System analog ground. 40 D3 RESERVED3 IO P0.08 Primarily used as UART RX, but can also be used as a digital GPIO. 41 A4 RESERVED3	19	NFC2	SOM4 ³		P0.10	NFC antenna connection.
22 DO SDA IO PO26 IZC SDA, and digital only CPIO. 23 AO ADCO IO P003 Analog input ADCO*, and digital GPIO. 32 MODE MODE IO P025 Connected to the MODE button input, and digital only GPIO. 33 AI ADCI IO P024 Analog input ADCI*, and digital GPIO. 34 RESET RESET I Active-low reset input. 35 AZ ADC2 IO P028 Analog input ADC3*, and digital GPIO. 36 D9 TX IO P029 Analog input ADC3*, and digital GPIO. 37 A3 ADC3 IO P029 Analog input ADC3*, and digital GPIO. 39 AGND AGND POWER System analog ground. 40 D3 RESERVED3 IO P100 UART flow control CTS, SCL1 (WireI), SPII MOSI, digital only CPIO. 41 A4 RESERVED3 IO P030 Analog input ADC3*, and digital GPIO. 42 D2 RESERVED3 IO	20	D1	SCL	Ю	P0.27	I2C SCL, and digital only GPIO.
23 AO ADCO IO PO.03 Analog input ADCo ² , and digital GPIO. 32 MODE MODE IO PO.25 Connected to the MODE button input, and digital only GPIO. 33 AI ADCI IO PO.04 Analog input ADCI ² , and digital GPIO. 34 RESET RESET I Active-low reset input. 35 A2 ADC2 IO PO.28 Analog input ADC2 ² , and digital GPIO. 36 D9 TX IO PO.06 Primarily used as UART TX, but can also be used as a digital GPIO. 37 A3 ADC3 IO PO.29 Analog input ADC3 ² , and digital GPIO. 38 D10 RX IO PO.08 Primarily used as UART TX, but can also be used as a digital GPIO. 40 D3 RESERVED3 IO PD.08 Primarily used as UART RX, but can also be used as a digital GPIO. 41 A4 RESERVED3 IO PD.00 Primarily used as UART RX, but can also be used as a digital only CPIO. 42 D2 RESERVED3 IO PD.00 <t< td=""><td>21</td><td>GND</td><td>GND</td><td>POWER</td><td></td><td>System ground.</td></t<>	21	GND	GND	POWER		System ground.
32 MODE MODE IO P0.25 Connected to the MODE button input, and digital only GPIO. 33 A1 ADCI IO P0.04 Analog input ADCI², and digital GPIO. 34 RESET RESET I Active-low reset input. 35 A2 ADC2 IO P0.28 Analog input ADC2², and digital GPIO. 36 D9 TX IO P0.06 Primarily used as UART TX, but can also be used as a digital GPIO. 37 A3 ADC3 IO P0.08 Primarily used as UART RX, but can also be used as a digital GPIO. 39 AGND AGND POWER System analog ground. 40 D3 RESERVED³ IO P1.00 LART flow control CTS, SCL1 (Wirel), SPII MOSI, digital only GPIO. 41 A4 RESERVED³ IO P0.30 Analog input ADC4², and digital GPIO. 42 D2 RESERVED³ IO P0.31 Analog input ADC5², and digital GPIO. 43 A5 RESERVED³ IO P0.05 Analog input ADC6², and digital only GPIO.	22	D0	SDA	Ю	P0.26	I2C SDA, and digital only GPIO.
33 A1 ADC1 IO P0.04 Analog input ADC1², and digital GPIO. 34 RESET RESET I Active-low reset input. 35 A2 ADC2 IO P0.28 Analog input ADC2², and digital GPIO. 36 D9 TX IO P0.06 Primarily used as UART TX, but can also be used as a digital GPIO. 37 A3 ADC3 IO P0.29 Analog input ADC3², and digital GPIO. 38 D10 RX IO P0.08 Primarily used as UART TX, but can also be used as a digital GPIO. 40 D3 RESERVED³ IO P0.08 Primarily used as UART RX, but can also be used as a digital GPIO. 41 A4 RESERVED³ IO P0.08 CPIO. UART flow control CTS, SCL1 (Wirel), SPII MOSI, digital only GPIO. 42 D3 RESERVED³ IO P0.31 Analog input ADC4², and digital GPIO. 43 A5 RESERVED³ IO P0.31 Analog input ADC6², and digital GPIO. 45 A6 RESERVED³ IO P0.02 A	23	AO	ADC0	Ю	P0.03	Analog input ADCO ² , and digital GPIO.
34 RESET RESET I Active-low reset input. 35 A2 ADC2 IO P0.28 Analog input ADC2², and digital GPIO. 36 D9 TX IO P0.06 Primarily used as UART TX, but can also be used as a digital GPIO. 37 A3 ADC3 IO P0.29 Analog input ADC3², and digital GPIO. 38 D10 RX IO P0.08 Primarily used as UART RX, but can also be used as a digital GPIO. 40 D3 RESERVED3 IO P1.10 UART flow control CTS, SCL1 (Wire1), SPII MOSI, digital only GPIO. 41 A4 RESERVED3 IO P0.30 Analog input ADC4², and digital GPIO. 42 D2 RESERVED3 IO P0.31 Analog input ADC5², and digital GPIO. 43 A5 RESERVED3 IO P0.31 Analog input ADC6², and digital GPIO. 44 Quectel USB D+ SOM0 IO P0.05 Analog input ADC6², and digital GPIO. 45 A6 RESERVED3 IO P0.05 Analog input ADC7², and digital GPIO. <td>32</td> <td>MODE</td> <td>MODE</td> <td>Ю</td> <td>P0.25</td> <td>Connected to the MODE button input, and digital only GPIO.</td>	32	MODE	MODE	Ю	P0.25	Connected to the MODE button input, and digital only GPIO.
ADC2 IO P0.28 Analog input ADC2 ² , and digital GPIO. Po.06 Primarily used as UART TX, but can also be used as a digital GPIO. AA ADC3 IO P0.29 Analog input ADC3 ² , and digital GPIO. RX IO P0.08 Primarily used as UART RX, but can also be used as a digital GPIO. AGND AGND POWER System analog ground. AGND AGND POWER System analog ground. ACCIONATION AGND POWER AGNO AGNO AGNO AGNO AGNO AGNO AGNO AGNO	33	A1	ADC1	Ю	P0.04	Analog input ADC1 ² , and digital GPIO.
36 D9 TX IO P0.06 Primarily used as UART TX, but can also be used as a digital CPIO. 37 A3 ADC3 IO P0.29 Analog input ADC3², and digital CPIO. 38 DIO RX IO P0.08 Primarily used as UART RX, but can also be used as a digital CPIO. 39 AGND AGND POWER System analog ground. 40 D3 RESERVED3 IO P1.10 UART flow control CTS, SCL1 (Wirel), SPII MOSI, digital only CPIO. 41 A4 RESERVED3 IO P0.30 Analog input ADC4², and digital CPIO. 42 D2 RESERVED3 IO P0.31 Analog input ADC5², and digital CPIO. 43 A5 RESERVED3 IO P0.31 Analog input ADC5², and digital CPIO. 44 Quectel USB D+ SOM0 IO Data+ pin of the cellular modem USB port. 45 A6 RESERVED3 IO P0.05 Analog input ADC6², and digital CPIO. 46 Quectel USB D+ SOM1 IO P0.02 Analog input ADC7², and digital OPIO. 47 A7 RESERVED3 IO P0.02	34	RESET	RESET	ı		Active-low reset input.
36 D9 IX IO POUS GPIO. 37 A3 ADC3 IO PO.29 Analog input ADC3², and digital GPIO. 38 D10 RX IO PO.80 Primarily used as UART RX, but can also be used as a digital GPIO. 39 AGND AGND POWER System analog ground. 40 D3 RESERVED³ IO P1.10 UART flow control CTS, SCL1 (Wirel), SPII MOSI, digital only GPIO. 41 A4 RESERVED³ IO P0.30 Analog input ADC4², and digital GPIO. 42 D2 RESERVED³ IO P0.31 Analog input ADC5², and digital GPIO. 43 A5 RESERVED³ IO P0.31 Analog input ADC5², and digital GPIO. 44 Quectel USB D+ SOMO IO Data+ pin of the cellular modem USB port. 45 A6 RESERVED³ IO P0.05 Analog input ADC6², and digital GPIO. 46 Quectel USB D- SOMI IO Data- pin of the cellular modem USB port. 47 A7 RESERVED³ IO P0.02 Analog input ADC6², and digital GPIO. 48 D8 CS IO P0.07 SPI interface CS, and digital OPIO. 49 AGND AGND POWER System analog ground. 50 D11 MISO IO P1.08 SPI interface MISO, and digital only GPIO. 51 NC RESERVED³ NC Leave unconnected. 52 D12 MOSI IO P1.09 SPI interface SCK, and digital only GPIO. 53 NC RESERVED³ NC Leave unconnected. 54 D13 SCK IO P0.11 SPI interface SCK, and digital only GPIO. 55 NC RESERVED³ NC Leave unconnected. 56 GND GND POWER System analog ground.	35	A2	ADC2	Ю	P0.28	Analog input ADC2 ² , and digital GPIO.
38DIORXIOP0.08Primarily used as UART RX, but can also be used as a digital CPIO.39AGNDAGNDPOWERSystem analog ground.40D3RESERVED3IOP1.10UART flow control CTS, SCL1 (Wirel), SPII MOSI, digital only CPIO.41A4RESERVED3IOP0.30Analog input ADC42, and digital GPIO.42D2RESERVED3IOP1.02UART flow control RTS, SDA1 (Wirel), SPII SCK, digital only GPIO.43A5RESERVED3IOP0.31Analog input ADC52, and digital GPIO.44USB D+SOM0IOData+ pin of the cellular modem USB port.45A6RESERVED3IOP0.05Analog input ADC62, and digital GPIO.46Quectel USB D-SOM1IOData- pin of the cellular modem USB port.47A7RESERVED3IOP0.02Analog input ADC72, and digital GPIO.48D8CSIOP0.02Analog input ADC72, and digital only GPIO.49AGNDAGNDPOWERSystem analog ground.50D11MISOIOP1.08SPI interface MISO, and digital only GPIO.51NCRESERVED3NCLeave unconnected.52D12MOSIIOP1.09SPI interface MOSI, and digital only GPIO.53NCRESERVED3NCLeave unconnected.54D13SCKIOP0.11SPI interface SCK, and digital only GPIO.55NCRESERVED3NC	36	D9	TX	Ю	P0.06	_
38 DIO RX IO PO.08 GPIO. 39 ACND AGND POWER System analog ground. 40 D3 RESERVED ³ IO PI.10 UART flow control CTS, SCL1 (Wirel), SPII MOSI, digital only GPIO. 41 A4 RESERVED ³ IO PO.30 Analog input ADC4 ² , and digital GPIO. 42 D2 RESERVED ³ IO PO.31 Analog input ADC4 ² , and digital GPIO. 44 Quectel USB D+ SOMO IO Data+ pin of the cellular modem USB port. 45 A6 RESERVED ³ IO PO.05 Analog input ADC6 ² , and digital GPIO. 46 Quectel USB D- SOMI IO Data+ pin of the cellular modem USB port. 47 A7 RESERVED ³ IO PO.05 Analog input ADC6 ² , and digital GPIO. 48 DB CS IO PO.07 SPI interface CS, and digital GPIO. 49 AGND AGND POWER System analog ground. 50 DII MISO IO PI.08 SPI interface MISO, and digital only GPIO. 51 NC RESERVED ³ NC Leave unconnected. 52 DI2 MOSI IO PI.09 SPI interface MOSI, and digital only GPIO. 53 NC RESERVED ³ NC Leave unconnected. 54 DI3 SCK IO PO.11 SPI interface SCK, and digital only GPIO. 55 NC RESERVED ³ NC Leave unconnected. 56 GND GND POWER System analog ground.	37	А3	ADC3	Ю	P0.29	Analog input ADC3 ² , and digital GPIO.
40 D3 RESERVED³ IO P1.10 UART flow control CTS, SCL1 (Wire1), SPI1 MOSI, digital only GPIO. 41 A4 RESERVED³ IO P0.30 Analog input ADC4², and digital GPIO. 42 D2 RESERVED³ IO P1.02 UART flow control RTS, SDA1 (Wire1), SPI1 SCK, digital only GPIO. 43 A5 RESERVED³ IO P0.31 Analog input ADC5², and digital GPIO. 44 Quectel USB D+ SOMO IO Data+ pin of the cellular modem USB port. 45 A6 RESERVED³ IO P0.05 Analog input ADC6², and digital GPIO. 46 Quectel USB D- SOMI IO Data- pin of the cellular modem USB port. 47 A7 RESERVED³ IO P0.02 Analog input ADC7², and digital GPIO. 48 D8 CS IO P0.07 SPI interface CS, and digital only GPIO. 49 AGND AGND POWER System analog ground. 50 D11 MISO IO P1.08 SPI interface MISO, and digital only GPIO. 51 NC RESERVED³ NC Leave unconnected. 52 D12 MOSI IO P1.09 SPI interface MOSI, and digital only GPIO. 53 NC RESERVED³ NC Leave unconnected. 54 D13 SCK IO P0.11 SPI interface SCK, and digital only GPIO. 55 NC RESERVED³ NC Leave unconnected. 56 GND GND POWER System analog ground.	38	D10	RX	Ю	P0.08	
A4 RESERVED³ IO PI.IO GPIO. 41 A4 RESERVED³ IO PO.30 Analog input ADC4², and digital GPIO. 42 D2 RESERVED³ IO PI.02 UART flow control RTS, SDA1 (Wire1), SPII SCK, digital only GPIO. 43 A5 RESERVED³ IO PO.31 Analog input ADC5², and digital GPIO. 44 Quectel USB D+ SOMO IO Data+ pin of the cellular modem USB port. 45 A6 RESERVED³ IO PO.05 Analog input ADC6², and digital GPIO. 46 Quectel USB D- SOM1 IO Data- pin of the cellular modem USB port. 47 A7 RESERVED³ IO PO.07 Analog input ADC7², and digital GPIO. 48 DB CS IO PO.07 SPI interface CS, and digital only GPIO. 49 AGND AGND POWER System analog ground. 50 DI1 MISO IO PI.08 SPI interface MISO, and digital only GPIO. 51 NC RESERVED³ NC Leave unconnected. 52 DI2 MOSI IO PI.09 SPI interface MOSI, and digital only GPIO. 53 NC RESERVED³ NC Leave unconnected. 54 DI3 SCK IO PO.11 SPI interface SCK, and digital only GPIO. 55 NC RESERVED³ NC Leave unconnected. 56 GND GND POWER System analog ground.	39	AGND	AGND	POWER		System analog ground.
42 D2 RESERVED³ IO P1.02 UART flow control RTS, SDA1 (Wire1), SPI1 SCK, digital only GPIO. 43 A5 RESERVED³ IO P0.31 Analog input ADC5², and digital GPIO. 44 Quectel USB D+ SOMO IO Data+ pin of the cellular modem USB port. 45 A6 RESERVED³ IO P0.05 Analog input ADC6², and digital GPIO. 46 Quectel USB D- SOM1 IO Data- pin of the cellular modem USB port. 47 A7 RESERVED³ IO P0.02 Analog input ADC7², and digital GPIO. 48 D8 CS IO P0.07 SPI interface CS, and digital only GPIO. 49 AGND AGND POWER System analog ground. 50 D11 MISO IO P1.08 SPI interface MISO, and digital only GPIO. 51 NC RESERVED³ NC Leave unconnected. 52 D12 MOSI IO P1.09 SPI interface MOSI, and digital only GPIO. 53 NC RESERVED³ NC Leave unconnected. 54 D13 SCK IO P0.11 SPI interface SCK, and digital only GPIO. 55 NC RESERVED³ NC Leave unconnected. 56 GND GND POWER System analog ground.	40	D3	RESERVED ³	Ю	P1.10	
A5 RESERVED³ IO PI.02 GPIO. 43 A5 RESERVED³ IO PO.31 Analog input ADC5², and digital GPIO. 44 Quectel USB D+ SOMO IO Data+ pin of the cellular modem USB port. 45 A6 RESERVED³ IO PO.05 Analog input ADC6², and digital GPIO. 46 Quectel USB D- SOM1 IO Data- pin of the cellular modem USB port. 47 A7 RESERVED³ IO PO.02 Analog input ADC7², and digital GPIO. 48 D8 CS IO PO.07 SPI interface CS, and digital only GPIO. 49 AGND AGND POWER System analog ground. 50 D11 MISO IO P1.08 SPI interface MISO, and digital only GPIO. 51 NC RESERVED³ NC Leave unconnected. 52 D12 MOSI IO P1.09 SPI interface MOSI, and digital only GPIO. 53 NC RESERVED³ NC Leave unconnected. 54 D13 SCK IO P0.11 SPI interface SCK, and digital only GPIO. 55 NC RESERVED³ NC Leave unconnected. 56 GND GND POWER System analog ground.	41	A4	RESERVED ³	Ю	P0.30	Analog input ADC4 ² , and digital GPIO.
44 Quectel USB D+ SOMO IO Data+ pin of the cellular modem USB port. 45 A6 RESERVED³ IO PO.05 Analog input ADC6², and digital GPIO. 46 Quectel USB D- SOM1 IO Data- pin of the cellular modem USB port. 47 A7 RESERVED³ IO PO.02 Analog input ADC7², and digital GPIO. 48 D8 CS IO PO.07 SPI interface CS, and digital only GPIO. 49 AGND AGND POWER System analog ground. 50 D11 MISO IO P1.08 SPI interface MISO, and digital only GPIO. 51 NC RESERVED³ NC Leave unconnected. 52 D12 MOSI IO P1.09 SPI interface MOSI, and digital only GPIO. 53 NC RESERVED³ NC Leave unconnected. 54 D13 SCK IO P0.11 SPI interface SCK, and digital only GPIO. 55 NC RESERVED³ NC Leave unconnected. 56 GND GND POWER System analog ground.	42	D2	RESERVED ³	Ю	P1.02	
44 USB D+ SOMO IO Data+ pin of the cellular modem USB port. 45 A6 RESERVED³ IO PO.05 Analog input ADC6², and digital GPIO. 46 Quectel USB D- SOM1 IO Data- pin of the cellular modem USB port. 47 A7 RESERVED³ IO PO.02 Analog input ADC7², and digital GPIO. 48 D8 CS IO PO.07 SPI interface CS, and digital only GPIO. 49 AGND AGND POWER System analog ground. 50 D11 MISO IO P1.08 SPI interface MISO, and digital only GPIO. 51 NC RESERVED³ NC Leave unconnected. 52 D12 MOSI IO P1.09 SPI interface MOSI, and digital only GPIO. 53 NC RESERVED³ NC Leave unconnected. 54 D13 SCK IO P0.11 SPI interface SCK, and digital only GPIO. 55 NC RESERVED³ NC Leave unconnected. 56 GND GND POWER System analog ground.	43	A5	RESERVED ³	Ю	P0.31	Analog input ADC5 ² , and digital GPIO.
46 Quectel USB D- SOM1 IO Data- pin of the cellular modem USB port. 47 A7 RESERVED³ IO P0.02 Analog input ADC7², and digital GPIO. 48 D8 CS IO P0.07 SPI interface CS, and digital only GPIO. 49 AGND AGND POWER System analog ground. 50 D11 MISO IO P1.08 SPI interface MISO, and digital only GPIO. 51 NC RESERVED³ NC Leave unconnected. 52 D12 MOSI IO P1.09 SPI interface MOSI, and digital only GPIO. 53 NC RESERVED³ NC Leave unconnected. 54 D13 SCK IO P0.11 SPI interface SCK, and digital only GPIO. 55 NC RESERVED³ NC Leave unconnected. 56 GND GND POWER System analog ground.	44		SOM0	Ю		Data+ pin of the cellular modem USB port.
USB D- SOMI USB D- SOMI O Data- pin of the cellular modem USB port. A7 RESERVED ³ IO P0.02 Analog input ADC7 ² , and digital GPIO. 48 D8 CS IO P0.07 SPI interface CS, and digital only GPIO. 49 AGND AGND POWER System analog ground. 50 D11 MISO IO P1.08 SPI interface MISO, and digital only GPIO. 51 NC RESERVED ³ NC Leave unconnected. 52 D12 MOSI IO P1.09 SPI interface MOSI, and digital only GPIO. 53 NC RESERVED ³ NC Leave unconnected. 54 D13 SCK IO P0.11 SPI interface SCK, and digital only GPIO. 55 NC RESERVED ³ NC Leave unconnected. 56 GND GND POWER System analog ground.	45	A6	RESERVED ³	Ю	P0.05	Analog input ADC6 ² , and digital GPIO.
48 D8 CS IO P0.07 SPI interface CS, and digital only GPIO. 49 AGND AGND POWER System analog ground. 50 D11 MISO IO P1.08 SPI interface MISO, and digital only GPIO. 51 NC RESERVED ³ NC Leave unconnected. 52 D12 MOSI IO P1.09 SPI interface MOSI, and digital only GPIO. 53 NC RESERVED ³ NC Leave unconnected. 54 D13 SCK IO P0.11 SPI interface SCK, and digital only GPIO. 55 NC RESERVED ³ NC Leave unconnected. 56 GND GND POWER System analog ground.	46		SOM1	Ю		Data- pin of the cellular modem USB port.
49 AGND AGND POWER System analog ground. 50 D11 MISO IO P1.08 SPI interface MISO, and digital only GPIO. 51 NC RESERVED ³ NC Leave unconnected. 52 D12 MOSI IO P1.09 SPI interface MOSI, and digital only GPIO. 53 NC RESERVED ³ NC Leave unconnected. 54 D13 SCK IO P0.11 SPI interface SCK, and digital only GPIO. 55 NC RESERVED ³ NC Leave unconnected. 56 GND GND POWER System analog ground.	47	A7	RESERVED ³	Ю	P0.02	Analog input ADC7 ² , and digital GPIO.
50 D11 MISO IO P1.08 SPI interface MISO, and digital only GPIO. 51 NC RESERVED ³ NC Leave unconnected. 52 D12 MOSI IO P1.09 SPI interface MOSI, and digital only GPIO. 53 NC RESERVED ³ NC Leave unconnected. 54 D13 SCK IO P0.11 SPI interface SCK, and digital only GPIO. 55 NC RESERVED ³ NC Leave unconnected. 56 GND GND POWER System analog ground.	48	D8	CS	Ю	P0.07	SPI interface CS, and digital only GPIO.
51 NC RESERVED ³ NC Leave unconnected. 52 D12 MOSI IO P1.09 SPI interface MOSI, and digital only GPIO. 53 NC RESERVED ³ NC Leave unconnected. 54 D13 SCK IO P0.11 SPI interface SCK, and digital only GPIO. 55 NC RESERVED ³ NC Leave unconnected. 56 GND GND POWER System analog ground.	49	AGND	AGND	POWER		System analog ground.
52D12MOSIIOP1.09SPI interface MOSI, and digital only GPIO.53NCRESERVED3NCLeave unconnected.54D13SCKIOP0.11SPI interface SCK, and digital only GPIO.55NCRESERVED3NCLeave unconnected.56GNDGNDPOWERSystem analog ground.	50	DII	MISO	Ю	P1.08	SPI interface MISO, and digital only GPIO.
NC RESERVED ³ NC Leave unconnected. 54 D13 SCK IO P0.11 SPI interface SCK, and digital only GPIO. 55 NC RESERVED ³ NC Leave unconnected. 56 GND GND POWER System analog ground.	51	NC	RESERVED ³	NC		Leave unconnected.
54 D13 SCK IO P0.11 SPI interface SCK, and digital only GPIO. 55 NC RESERVED ³ NC Leave unconnected. 56 GND GND POWER System analog ground.	52	D12	MOSI	Ю	P1.09	SPI interface MOSI, and digital only GPIO.
55 NC RESERVED ³ NC Leave unconnected. 56 GND GND POWER System analog ground.	53	NC	RESERVED ³	NC		Leave unconnected.
56 GND GND POWER System analog ground.	54	D13	SCK	Ю	P0.11	SPI interface SCK, and digital only GPIO.
56 GND GND POWER System analog ground.	55					· • •

58	NC	RESERVED ³	NC		Leave unconnected.
59	NC	RESERVED ³	NC		Leave unconnected.
60	NC	RESERVED ³	NC		Leave unconnected.
61	RGBR	RED	Ю	P0.16	Red pin of the RGB LED.
62	D22	GPIO0	Ю	P1.01	GPIO0, digital only.
63	RGBG	GREEN	Ю	P0.15	Green pin of the RGB LED.
64	D23	GPIO1	Ю	P1.03	GPIO1, digital only.
65	RGBB	BLUE	Ю	P0.14	Blue pin of the RGB LED.
66	D4	PWM0	Ю	P0.12	SPII MISO, Digital only GPIO, and PWM0.
67	SIM_VCC ¹	SOM5 ³	POWER		Leave unconnected, 1.8V/3V SIM Supply Output from cellular modem.
68	D5	PWM1	Ю	P0.24	Digital only GPIO, and PWM1.
69	SIM_RST ¹	SOM6 ³	Ю		Leave unconnected, 1.8V/3V SIM Reset Output from cellular modem.
70	D6	PWM2	Ю	P1.04	Digital only GPIO, and PWM2.
71	SIM_CLK ¹	SOM7 ³	Ю		Leave unconnected, 1.8V/3V SIM Clock Output from cellular modem.
72	D7	PWM3	Ю	P0.13	Digital only GPIO, and PWM3.
73	SIM_DATA ¹	SOM8 ³	Ю		Leave unconnected, 1.8V/3V SIM Data I/O of cellular modem with internal 4.7 k pull-up.
74	Quectel VBUS	SOM2 ³	Ю		USB detect pin for cellular modem. 5V on this pin enables the Quectel USB interface.
75	Quectel RI	SOM9 ⁴	Ю		Ring indicator

¹These pins are connected to the internal MFF2 SIM and should be left open.

By default, the Tinker application firmware enables the use of the bq24195 PMIC and MAX17043 fuel gauge. This in turn uses I2C (D0 and D1) and pin A6 (PM_INT). If you are not using the PMIC and fuel gauge and with to use these pins for other purposes, be sure to disable system power configuration. This setting is persistent, so you may want to disable it with your manufacturing firmware only.

System.setPowerConfiguration(SystemPowerConfiguration());

If you are using Ethernet with the B Series SoM, the following pins are used by Ethernet:

Device OS Pin	M.2 Pin	Ethernet Pin
MISO	50	SPI MISO
MOSI	52	SPI MOSI
SCK	54	SPISCK

²A0-A7 are 12-bit Analog-to-Digital (A/D) inputs (0-4095).

³SoM-specific and Reserved pins will vary depending on module. They are able to be used on the B523, but their function may be be different on future modules.

⁴RI is available on the B523 (Quectel) but not on the B402 (u-blox LTE M1)

⁵The VCC maximum is 4.3V on the B523 (Quectel) but is 4.2V on the B402 (u-blox LTE M1). For compatibility across modules, limit this to 4.2V.

A7	47	nRESET
D22	62	nINTERRUPT
D8	48	nCHIP SELECT

LED STATUS

System RGB LED

Unlike the Boron, the B523 module does not have an on-module RGB system status LED. We have provided its individual control pins for you to connect an LED of your liking. This will allow greater flexibility in the end design of your products.

A detailed explanation of different color codes of the RGB system LED can be found $\underline{\text{here.}}$

Technical specifications

ABSOLUTE MAXIMUM RATINGS [1]

Supply voltages

Parameter	Symbol	Min Typ	Max	Unit
Supply voltages				
Supply Input Voltage	VCC	-0.3	+4.7	V
Supply Input Voltage	3V3	-0.3	+3.9	V
VBUS USB supply voltage	VUSB	-0.3	+5.8	V
I/O pin voltage				
VI/O, VDD ≤ 3.6 V	Ю	-0.3	VDD + 0.3	V
VI/O, VDD > 3.6 V	Ю	-0.3	+3.9	V
NFC antenna pin current				
I _{NFC1/2}	NFC1/NFC2		80	mA
Radio				
BT RF input level (52840)			10	dBm
Environmental				
Storage temperature		-40	+85	°C

[1] Stresses beyond those listed under absolute maximum ratings may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated under recommended operating conditions is not implied. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.

RECOMMENDED OPERATING CONDITIONS

Parameter	Symbol	Min	Тур	Max	Unit
Supply voltages					
Supply Input Voltage	VCC	+3.6	+3.8	+4.3	V
Supply Input Voltage	3V3	+3.0	+3.3	+3.6	V
VBUS USB supply voltage	VUSB	+4.35	+5.0	+5.5	V
Environmental					
Normal operating temperature ¹		-20	+25	+75 ³	°C
Extended operating temperature ²		-40		+85	°C
Humidity Range Non condensing, relative humidity				95	%

Notes:

¹ Normal operating temperature range (fully functional and meet 3GPP specifications).

² Extended operating temperature range (RF performance may be affected outside normal operating range, though module is fully functional)

³ The maximum operating temperature is 75°C on the B523 (Quectel) but is 65°C on the B402 (ublox LTE M1). For compatibility across modules, limit this to 65°C.

Parameter	Symbol	Min	Тур	Peak	Unit
Operating Current (uC on, peripherals and radio disabled)	l _{idle}	4.47	4.48	4.51	mA
Operating Current (uC on, cellular on but not connected)	I _{cell_idle}	17.5	34.2	744	mA
Operating Current (uC on, cellular connecting to tower)	I _{cell_conn_twr}	17.9	72.3	711	mA
Operating Current (uC on, cellular connecting to cloud)	I _{cell_conn_cloud}	23.0	93.6	669	mA
Operating Current (uC on, cellular connected but idle)	I _{cell_cloud_idle}	22.9	26.8	149	mA
Operating Current (uC on, cellular connected and transmitting)	I _{cell_cloud_tx}	113	139	519	mA
STOP mode sleep, GPIO wake-up	I _{stop_gpio}	323	538	916	uA
STOP mode sleep, analog wake-up	I _{stop_analog}	272	537	948	uA
STOP mode sleep, RTC wake-up	I _{stop_intrtc}	264	537	947	uA
STOP mode sleep, BLE wake-up, advertising	I _{stop_ble_adv}		604	2260	uA
STOP mode sleep, BLE wake-up, connected	I _{stop_ble_conn}		619	1700	uA
STOP mode sleep, serial wake-up	I _{stop_usart}	327	537	912	uA
STOP mode sleep, cellular wake-up	I _{stop_cell}	18.7	23.1	140	mA
ULP mode sleep, GPIO wake-up	l _{ulp_gpio}		53.6	446	uA
ULP mode sleep, analog wake-up	l _{ulp_analog}		55.8	420	uA
ULP mode sleep, RTC wake-up	l _{ulp_intrtc}		54.8	444	uA
ULP mode sleep, BLE wake-up, advertising	l _{ulp_ble_adv}		139	2430	uA
ULP mode sleep, BLE wake-up, connected	I _{ulp_ble_conn}		162	1090	uA
ULP mode sleep, serial wake-up	l _{ulp_usart}	317	537	938	uA
ULP mode sleep, cellular wake-up	l _{ulp_cell}	18.4	22.8	149	mA
HIBERNATE mode sleep, GPIO wake-up	I _{hib_gpio}		29.7	430	uA
HIBERNATE mode sleep, analog wake-up	I _{hib_analog}		30.8	441	uA

¹The min, and particularly peak, values may consist of very short transients. The typical (typ) values are the best indicator of overall power consumption over time. The peak values indicate the absolute minimum capacity of the power supply necessary, not overall consumption.

Boron has two radio modules.

nRF52840

- Bluetooth® 5, 2.4 GHz
 - o 95 dBm sensitivity in 1 Mbps Bluetooth® low energy mode
 - \circ 103 dBm sensitivity in 125 kbps Bluetooth® low energy mode (long range)
 - \circ 20 to +8 dBm TX power, configurable in 4 dB steps

4G LTE cellular characteristics for EG91-E

Parameter	Value
Protocol stack	3GPP Release 13
RAT	LTE Cat 1
LTE FDD Bands	Band 28A (700 MHz)
	Band 20 (800 MHz)
	Band 8 (900 MHz)
	Band 3 (1800 MHz)
	Band 1 (2100 MHz)
	Band 7 (2600 MHz)
WCDMA Bands	Band 8 (900 MHz)
	Band 1 (2100)
GSM Bands	EGSM900 (900 MHz)
	DCS1800 (1800 MHz)
Power class	Class 4 (33dBm ± 2dB) for EGSM900
	Class 1 (30dBm ± 2dB) for DCS1800
	Class E2 (27dBm ± 3dB) for EGSM900 8-PSK
	Class E2 (26dBm ± 3dB) for DCS1800 8-PSK
	Class 3 (24dBm ± 3dB) for WCDMA bands
	Class 3 (23dBm ± 2dB) for LTE FDD bands

These specifications are based on the nRF52840 datasheet.

Symbol	Parameter	Min	Тур	Max	Unit
VIH	Input high voltage	0.7 xVDD		VDD	V
VIL	Input low voltage	VSS		0.3 xVDD	V
VOH,SD	Output high voltage, standard drive, 0.5 mA, VDD ≥1.7	VDD - 0.4		VDD	V
VOH,HDH	Output high voltage, high drive, 5 mA, VDD \geq 2.7 V	VDD - 0.4		VDD	V
VOH,HDL	Output high voltage, high drive, 3 mA, VDD \geq 1.7 V	VDD - 0.4		VDD	V
VOL,SD	Output low voltage, standard drive, 0.5 mA, VDD \geq 1.7	VSS		VSS + 0.4	V
VOL,HDH	Output low voltage, high drive, 5 mA, VDD \geq 2.7 V	VSS		VSS + 0.4	V
VOL,HDL	Output low voltage, high drive,3 mA, VDD \geq 1.7 V	VSS		VSS + 0.4	V
IOL,SD	Current at VSS+0.4 V, output set low, standard drive, VDD≥1.7	1	2	4	mA
IOL,HDH	Current at VSS+0.4 V, output set low, high drive, VDD >= 2.7V	6	10	15	mA
IOL,HDL	Current at VSS+0.4 V, output set low, high drive, VDD >= 1.7V	3			mA
IOH,SD	Current at VDD-0.4 V, output set high, standard drive, VDD≥1.7	1	2	4	mA
IOH,HDH	Current at VDD-0.4 V, output set high, high drive, VDD >= 2.7V	6	9	14	mA
IOH,HDL	Current at VDD-0.4 V, output set high, high drive, VDD >= 1.7V	3			mA
tRF,15pF	Rise/fall time, standard drivemode, 10-90%, 15 pF load ¹		9		ns
tRF,25pF	Rise/fall time, standard drive mode, 10-90%, 25 pF load ¹		13		ns
tRF,50pF	Rise/fall time, standard drive mode, 10-90%, 50 pF load ¹		25		ns
tHRF,15pF	Rise/Fall time, high drive mode, 10-90%, 15 pF load ¹		4		ns
tHRF,25pF	Rise/Fall time, high drive mode, 10-90%, 25 pF load ¹		5		ns
tHRF,50pF	Rise/Fall time, high drive mode, 10-90%, 50 pF load ¹		8		ns
RPU	Pull-up resistance	11	13	16	kΩ
RPD	Pull-down resistance	11	13	16	kΩ
CPAD	Pad capacitance		3		pF
CPAD_NFC	Pad capacitance on NFC pads		4		pF
INFC_LEAK	Leakage current between NFC pads when driven to different states		1	10	μΑ

- Rise and fall times based on simulations
- GPIO default to standard drive (2mA) but can be reconfigured to high drive (9mA) in Device OS 2.0.0 and later using the pinSetDriveStrength() function.

Mechanical specifications

DIMENSIONS AND WEIGHT

Parameters	Value	Unit
Width	30	mm
Height	42	mm
Thickness	5.5	mm
Weight	6.2	grams

MECHANICAL DRAWING



Dimensions are in millimeters.

The mating connector is a an M.2 (NGFF) type 4. Note that there are several different key configurations for the M.2, and type 4 is different than is commonly used on SSDs.


One compatible connector is the <u>TE 2199230-4</u>. It is widely available including at suppliers such as <u>DigiKey</u>.





We recommend this screw assembly to securely affix the B series SoM to your circuit board. From top to bottom:

- M3 screw, 3mm long
- M3 washer
- M3 standoff, 2.45mm

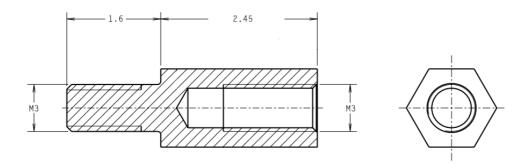

• Mounting hole, 2.6 mm metal hole, 3.1mm metal ring diameter (picture is of the bottom side of the circuit board)



- An <u>alternative design</u> uses a <u>JAE SM3ZS067U410-NUTI-R1200</u> standoff. It's reflow soldered to your base board and has a threaded hole for a M2*3 screw to hold down the SoM. This may be easier to obtain.
- Note that a hold-down screw is required because the M.2 connector does not have integrated locks and the SoM will pop up if not attached to the base board.

DESIGN CONSIDERATIONS

We strongly recommend against placing components under the SOM board because there is not enough height.



Product Handling

ESD PRECAUTIONS

The B series contains highly sensitive electronic circuitry and is an Electrostatic Sensitive Device (ESD). Handling an B series without proper ESD protection may destroy or damage it permanently. Proper ESD handling and packaging procedures must be applied throughout the processing, handling and operation of any application that incorporates the B series module. ESD precautions should be implemented on the application board where the B series is mounted. Failure to observe these precautions can result in severe damage to the B series!

CONNECTORS

The U.FL antenna connector is not designed to be constantly plugged and unplugged. The antenna pin is static sensitive and you can destroy the radio with improper handling. A tiny dab of glue (epoxy, rubber cement, liquid tape or hot glue) on the connector can be used securely hold the plug in place.

The M.2 edge connector is static sensitive and should be handled carefully. The M.2 connector is not designed for repeated removal and insertion of the module.

Schematics

MICROCONTROLLER



QUECTEL CELLULAR MODEM



M.2 CONNECTOR



Note: The labels for CTS and RTS are reversed in this schematic.

SIM AND FLASH



BUFFERS





Default settings

The B series comes pre-programmed with a bootloader and a user application called Tinker. This application works with an iOS and Android app also named Tinker that allows you to very easily toggle digital pins, take analog and digital readings and drive variable PWM outputs.

The bootloader allows you to easily update the user application via several different methods, USB, OTA, Serial Y-Modem, and also internally via the Factory Reset procedure. All of these methods have multiple tools associated with them as well.

Certification

EU DECLARATION OF CONFORMITY

We, Particle Industries, Inc., declare under our sole responsibility that the product, B524 and B523, to which this declaration relates, is in conformity with RED Directive 2014/53/EU and (EU) 2015/863 RoHS Directive 2011/65/EU (Recast).

The full text of the EU declaration of conformity is available at the following Internet address https://www.particle.io/.

Radiation Exposure Statement: This equipment complies with radiation exposure limits set forth for an uncontrolled environment.

The operating frequency bands and the maximum transmitted power limit are listed below:

- BLE 2402-2480MHz, 10dBm
- LTE B1 B3 B7 B8 B20 B28 704.5-959.3MHz 1710.7-2687.5 MHz, 25dBm
- WCDMA 882.4-957.6 MHz 1922.6-2167.4 MHz, 25dBm
- EGSM900 880-915 925-960 MHz (35dBm)
- DCS1800 1710-1785 1805-1880 MHz (32dBm)

UNITED KINGDOM

UKCA Conformity:

Radio Equipment Regulations 2017 (S.I. 2017/1206)

Country compatibility

Country	Model	Technologies	Carriers
Albania	B524	2G, 3G, Cat1	ALBtelecom, Telekom, Vodafone
Algeria	B524	2G, 3G, Cat1	Mobilis, Ooredoo
Aruba	B524	2G, 3G, Cat1	Setar
Australia	B524	3G, Cat1	Optus, Telstra, Vodafone
Austria	B524	2G, 3G, Cat1	3 (Drei), A1, T-Mobile
Bahrain	B524	2G, 3G, Cat1	Zain
Bangladesh	B524	2G, 3G, Cat1	Bangalink, GrameenPhone
Belarus	B524	2G, 3G, Cat1	Al
Belgium	B524	2G, 3G, Cat1	Base, Orange, Proximus
Bosnia and Herzegovina	B524	2G, 3G	BH Telecom, HT Eronet
Botswana	B524	2G, 3G, Cat1	BeMobile
Brunei	B524	2G, 3G, Cat1	DST
Bulgaria	B524	2G, 3G	A1, Telenor, Vivacom
Burkina Faso	B524	2G, 3G, Cat1	Orange
Cabo Verde	B524	2G, 3G, Cat1	CVMóvel, Unitel T+
Cambodia	B524	2G, 3G	Metfone
Chad	B524	2G, 3G, Cat1	Airtel
Chile	B524	2G, 3G, Cat1	Claro, Entel, Movistar
Congo (Brazzaville)	B524	2G, 3G, Cat1	Airtel
Congo (Kinshasa)	B524	2G, 3G, Cat1	Airtel
Côte d'Ivoire	B524	2G, 3G, Cat1	MTN
Croatia	B524	2G, 3G, Cat1	Hrvatski Telekom, Tele2
Cyprus	B524	2G, 3G, Cat1	Cytamobile-Vodafone, MTN, PrimeTel
Czechia	B524	2G, 3G, Cat1	O2, T-Mobile, Vodafone
Denmark	B524	2G, 3G, Cat1	3 (Tre), TDC, Telenor, Telia
Egypt	B524	2G, 3G, Cat1	Etisalat, Orange
Estonia	B524	2G, 3G, Cat1	Elisa, Tele2, Telia
eSwatini	B524	2G, 3G, Cat1	MTN
Ethiopia	B524	2G, 3G, Cat1	Ethio Telecom
Faroe Islands	B524	2G, 3G	Faroese Telecom, Vodafone
Finland	B524	2G, 3G, Cat1	DNA, Elisa, Telia
France	B524	2G, 3G, Cat1	Bouygues, Free Mobile, Orange, SFR
French Guiana	B524	2G, 3G	Digicel
Gabon	B524	2G, 3G, Cat1	Airtel
Germany	B524	2G, 3G, Cat1	O2, Telekom, Vodafone
Ghana	B524	2G, 3G, Cat1	AirtelTigo, MTN, Vodafone
Gibraltar	B524	2G, 3G, Cat1	Gibtel
Greece	B524	2G, 3G, Cat1	Cosmote, Vodafone, Wind
Guadeloupe	B524	2G, 3G	Orange
Guinea	B524	2G, 3G, Cat1	MTN
Guinea-Bissau	B524	2G, 3G, Cat1	MTN
Guyana	B524	2G	Digicel

11.34	DE2/	20.70	Pistol
Haiti	B524	2G, 3G	Digicel CMUK CCL ConstTans
Hong Kong	B524	2G, 3G, Cat1	CMHK, CSL, SmarTone
Hungary	B524	2G, 3G, Cat1	Magyar Telekom, Telenor, Vodafone
Iceland	B524	2G, 3G, Cat1	Nova, Siminn, Vodafone
Indonesia	B524	2G, 3G, Cat1	Indosat, Telkomsel, XL Axiata
Ireland	B524	2G, 3G, Cat1	3 (Tre), Meteor, O2, Vodafone
Israel	B524	2G, 3G, Cat1	Hot Mobile, Orange, Pelephone
Italy	B524	2G, 3G, Cat1	TIM, Vodafone, Wind
Jordan	B524	2G, 3G, Cat1	Zain
Kazakhstan	B524	2G, 3G, Cat1	Beeline, K-Cell
Kenya	B524	2G, 3G, Cat1	Airtel
Kuwait	B524	2G, 3G, Cat1	Viva, Zain
Latvia	B524	2G, 3G, Cat1	Bite, LMT, Tele2
Liechtenstein	B524	2G, 3G, Cat1	Mobilkom, Orange
Lithuania	B524	2G, 3G, Cat1	Bite, Omnitel, Tele2
Luxembourg	B524	2G, 3G, Cat1	Orange, POST, Tango
Macao	B524	2G, 3G, Cat1	СТМ
Madagascar	B524	2G, 3G, Cat1	Airtel
Malawi	B524	2G, 3G, Cat1	Airtel
Malaysia	B524	2G, 3G, Cat1	Celcom, DiGi, Maxis
Malta	B524	2G, 3G, Cat1	Go Mobile, Vodafone
Moldova	B524	2G, 3G, Cat1	Moldcell, Orange
Mongolia	B524	2G, 3G	Mobicom, Unitel
Montenegro	B524	2G, 3G, Cat1	Mtel, T-Mobile, Telenor
Morocco	B524	2G, 3G, Cat1	Inwi, Medi Telecom
Mozambique	B524	2G, 3G, Cat1	Vodacom
Myanmar	B524	2G, 3G, Cat1	MPT, Telenor
Namibia	B524	2G, 3G, Cat1	Telecom Namibia
Netherlands	B524	2G, 3G, Cat1	KPN, T-Mobile, Vodafone
New Zealand	B524	2G, 3G, Cat1	2degrees, Spark, Vodafone
Nigeria	B524	2G, 3G, Cat1	9mobile, Airtel, Glo, MTN
Norway	B524	2G, 3G, Cat1	TDC, Telenor, Telia
Oman	B524	2G, 3G, Cat1	Ooredoo
Pakistan	B524	2G, 3G, Cat1	Mobilink, Telenor, Ufone, Warid
Palestine	B524	2G, 3G	Jawwal
Papua New Guinea	B524	2G, 3G	bmobile
Poland	B524	2G, 3G, Cat1	Orange, Play, Plus, T-Mobile
Portugal	B524	2G, 3G, Cat1	NOS, TMN, Vodafone
Qatar	B524	2G, 3G, Cat1	Ooredoo, Vodafone
Romania	B524	2G, 3G, Cat1	DigiMobil, Orange, Telekom Romania, Vodafone
Rwanda	B524	2G, 3G, Cat1	Airtel, MTN
Serbia	B524	2G, 3G, Cat1	Telenor, VIP
Seychelles	B524	2G, 3G, Cat1	Airtel
Sint Maarten	B524	2G, 3G, Cat1	TelCell
Slovakia	B524	2G, 3G, Cat1	O2, Orange, Telekom
		,,,	,

Slovenia B524 2G, 3G, Cat1 A1, Mobitel South Africa B524 2G, 3G, Cat1 Cell C, MTN, Vodacom South Korea B524 3G, Cat1 KT, LG U+, SK Telecom South Sudan B524 2G, 3G, Cat1 MTN Spain B524 2G, 3G, Cat1 Orange, Telefonica, Vodafone, Yoigo Sri Lanka B524 2G, 3G, Cat1 Dialog, Mobitel Suriname B524 2G, 3G Telesur Sweden B524 2G, 3G, Cat1 3 (Tre), Tele2, Telenor, Telia Switzerland B524 3G, Cat1 Salt, Sunrise, Swisscom Taiwan B524 3G, Cat1 Chunghwa, FarEasTone, T Star, Taiwan Mobile Tanzania B524 2G, 3G, Cat1 Airtel Thailand B524 2G, 3G, Cat1 Als, DTAC, True Move Tunisia B524 2G, 3G, Cat1 Orange Tunisie, Tunisie Telecom Uganda B524 2G, 3G, Cat1 Africell, Airtel, MTN United Kingdom B524 2G, 3G, Cat1 MobiFone, Viettel, Vinaphone				
South Korea B524 3G, Cat1 KT, LG U+, SK Telecom South Sudan B524 2G, 3G, Cat1 MTN Spain B524 2G, 3G, Cat1 Orange, Telefonica, Vodafone, Yoigo Sri Lanka B524 2G, 3G, Cat1 Dialog, Mobitel Suriname B524 2G, 3G Telesur Sweden B524 2G, 3G, Cat1 3 (Tre), Tele2, Telenor, Telia Switzerland B524 3G, Cat1 Salt, Sunrise, Swisscom Taiwan B524 3G, Cat1 Chunghwa, FarEasTone, T Star, Taiwan Mobile Tanzania B524 2G, 3G, Cat1 Airtel Thailand B524 2G, 3G, Cat1 Als, DTAC, True Move Tunisia B524 2G, 3G, Cat1 Orange Tunisie, Tunisie Telecom Uganda B524 2G, 3G, Cat1 Africell, Airtel, MTN United Kingdom B524 2G, 3G, Cat1 3, EE, Manx, O2, Sure, Vodafone Vietnam B524 2G, 3G, Cat1 MobiFone, Viettel, Vinaphone	Slovenia	B524	2G, 3G, Cat1	A1, Mobitel
South Sudan B524 2G, 3G, Cat1 MTN Spain B524 2G, 3G, Cat1 Orange, Telefonica, Vodafone, Yoigo Sri Lanka B524 2G, 3G, Cat1 Dialog, Mobitel Suriname B524 2G, 3G Telesur Sweden B524 2G, 3G, Cat1 3 (Tre), Tele2, Telenor, Telia Switzerland B524 3G, Cat1 Salt, Sunrise, Swisscom Taiwan B524 3G, Cat1 Chunghwa, FarEasTone, T Star, Taiwan Mobile Tanzania B524 2G, 3G, Cat1 Airtel Thailand B524 2G, 3G, Cat1 Als, DTAC, True Move Tunisia B524 2G, 3G, Cat1 Orange Tunisie, Tunisie Telecom Uganda B524 2G, 3G, Cat1 3, EE, Manx, O2, Sure, Vodafone Vietnam B524 2G, 3G, Cat1 MobiFone, Viettel, Vinaphone	South Africa	B524	2G, 3G, Cat1	Cell C, MTN, Vodacom
Spain B524 2G, 3G, Cat1 Orange, Telefonica, Vodafone, Yoigo Sri Lanka B524 2G, 3G, Cat1 Dialog, Mobitel Suriname B524 2G, 3G Telesur Sweden B524 2G, 3G, Cat1 3 (Tre), Tele2, Telenor, Telia Switzerland B524 3G, Cat1 Salt, Sunrise, Swisscom Taiwan B524 3G, Cat1 Chunghwa, FarEasTone, T Star, Taiwan Mobile Tanzania B524 2G, 3G, Cat1 Airtel Thailand B524 2G, 3G, Cat1 Als, DTAC, True Move Tunisia B524 2G, 3G, Cat1 Orange Tunisie, Tunisie Telecom Uganda B524 2G, 3G, Cat1 Africell, Airtel, MTN United Kingdom B524 2G, 3G, Cat1 3, EE, Manx, O2, Sure, Vodafone Vietnam B524 2G, 3G, Cat1 MobiFone, Viettel, Vinaphone	South Korea	B524	3G, Cat1	KT, LG U+, SK Telecom
Sri Lanka B524 2G, 3G, Catl Dialog, Mobitel Suriname B524 2G, 3G Telesur Sweden B524 2G, 3G, Catl 3 (Tre), Tele2, Telenor, Telia Switzerland B524 3G, Catl Salt, Sunrise, Swisscom Taiwan B524 3G, Catl Chunghwa, FarEasTone, T Star, Taiwan Mobile Tanzania B524 2G, 3G, Catl Airtel Thailand B524 2G, 3G, Catl Als, DTAC, True Move Tunisia B524 2G, 3G, Catl Orange Tunisie, Tunisie Telecom Uganda B524 2G, 3G, Catl Africell, Airtel, MTN United Kingdom B524 2G, 3G, Catl 3, EE, Manx, O2, Sure, Vodafone Vietnam B524 2G, 3G, Catl MobiFone, Viettel, Vinaphone	South Sudan	B524	2G, 3G, Cat1	MTN
Suriname B524 2G, 3G Telesur Sweden B524 2G, 3G, Cat1 3 (Tre), Tele2, Telenor, Telia Switzerland B524 3G, Cat1 Salt, Sunrise, Swisscom Taiwan B524 3G, Cat1 Chunghwa, FarEasTone, T Star, Taiwan Mobile Tanzania B524 2G, 3G, Cat1 Airtel Thailand B524 2G, 3G, Cat1 AlS, DTAC, True Move Tunisia B524 2G, 3G, Cat1 Orange Tunisie, Tunisie Telecom Uganda B524 2G, 3G, Cat1 Africell, Airtel, MTN United Kingdom B524 2G, 3G, Cat1 3, EE, Manx, O2, Sure, Vodafone Vietnam B524 2G, 3G, Cat1 MobiFone, Viettel, Vinaphone	Spain	B524	2G, 3G, Cat1	Orange, Telefonica, Vodafone, Yoigo
SwedenB5242G, 3G, Cat13 (Tre), Tele2, Telenor, TeliaSwitzerlandB5243G, Cat1Salt, Sunrise, SwisscomTaiwanB5243G, Cat1Chunghwa, FarEasTone, T Star, Taiwan MobileTanzaniaB5242G, 3G, Cat1AirtelThailandB5242G, 3G, Cat1AlS, DTAC, True MoveTunisiaB5242G, 3G, Cat1Orange Tunisie, Tunisie TelecomUgandaB5242G, 3G, Cat1Africell, Airtel, MTNUnited KingdomB5242G, 3G, Cat13, EE, Manx, O2, Sure, VodafoneVietnamB5242G, 3G, Cat1MobiFone, Viettel, Vinaphone	Sri Lanka	B524	2G, 3G, Cat1	Dialog, Mobitel
Switzerland B524 3G, Cat1 Salt, Sunrise, Swisscom Taiwan B524 3G, Cat1 Chunghwa, FarEasTone, T Star, Taiwan Mobile Tanzania B524 2G, 3G, Cat1 Airtel Thailand B524 2G, 3G, Cat1 Als, DTAC, True Move Tunisia B524 2G, 3G, Cat1 Orange Tunisie, Tunisie Telecom Uganda B524 2G, 3G, Cat1 Africell, Airtel, MTN United Kingdom B524 2G, 3G, Cat1 3, EE, Manx, O2, Sure, Vodafone Vietnam B524 2G, 3G, Cat1 MobiFone, Viettel, Vinaphone	Suriname	B524	2G, 3G	Telesur
Taiwan B524 3G, Cat1 Chunghwa, FarEasTone, T Star, Taiwan Mobile Tanzania B524 2G, 3G, Cat1 Airtel Thailand B524 2G, 3G, Cat1 Als, DTAC, True Move Tunisia B524 2G, 3G, Cat1 Orange Tunisie, Tunisie Telecom Uganda B524 2G, 3G, Cat1 Africell, Airtel, MTN United Kingdom B524 2G, 3G, Cat1 3, EE, Manx, O2, Sure, Vodafone Vietnam B524 2G, 3G, Cat1 MobiFone, Viettel, Vinaphone	Sweden	B524	2G, 3G, Cat1	3 (Tre), Tele2, Telenor, Telia
Tanzania B524 2G, 3G, Catl Airtel Thailand B524 2G, 3G, Catl AIS, DTAC, True Move Tunisia B524 2G, 3G, Catl Orange Tunisie, Tunisie Telecom Uganda B524 2G, 3G, Catl Africell, Airtel, MTN United Kingdom B524 2G, 3G, Catl 3, EE, Manx, O2, Sure, Vodafone Vietnam B524 2G, 3G, Catl MobiFone, Viettel, Vinaphone	Switzerland	B524	3G, Cat1	Salt, Sunrise, Swisscom
Thailand B524 2G, 3G, Catl AIS, DTAC, True Move Tunisia B524 2G, 3G, Catl Orange Tunisie, Tunisie Telecom Uganda B524 2G, 3G, Catl Africell, Airtel, MTN United Kingdom B524 2G, 3G, Catl 3, EE, Manx, O2, Sure, Vodafone Vietnam B524 2G, 3G, Catl MobiFone, Viettel, Vinaphone	Taiwan	B524	3G, Cat1	Chunghwa, FarEasTone, T Star, Taiwan Mobile
Tunisia B524 2G, 3G, Catl Orange Tunisie, Tunisie Telecom Uganda B524 2G, 3G, Catl Africell, Airtel, MTN United Kingdom B524 2G, 3G, Catl 3, EE, Manx, O2, Sure, Vodafone Vietnam B524 2G, 3G, Catl MobiFone, Viettel, Vinaphone	Tanzania	B524	2G, 3G, Cat1	Airtel
UgandaB5242G, 3G, Cat1Africell, Airtel, MTNUnited KingdomB5242G, 3G, Cat13, EE, Manx, O2, Sure, VodafoneVietnamB5242G, 3G, Cat1MobiFone, Viettel, Vinaphone	Thailand	B524	2G, 3G, Cat1	AIS, DTAC, True Move
United Kingdom B524 2G, 3G, Catl 3, EE, Manx, O2, Sure, Vodafone Vietnam B524 2G, 3G, Catl MobiFone, Viettel, Vinaphone	Tunisia	B524	2G, 3G, Cat1	Orange Tunisie, Tunisie Telecom
Vietnam B524 2G, 3G, Catl MobiFone, Viettel, Vinaphone	Uganda	B524	2G, 3G, Cat1	Africell, Airtel, MTN
	United Kingdom	B524	2G, 3G, Cat1	3, EE, Manx, O2, Sure, Vodafone
Zambia B524 2G, 3G, Catl Airtel	Vietnam	B524	2G, 3G, Cat1	MobiFone, Viettel, Vinaphone
	Zambia	B524	2G, 3G, Cat1	Airtel

Ordering information

SKU	Description	Region	Modem	EtherSIM	Lifecycle	Replacement
B524MEA	B Series LTE CAT-1/3G/2G (EMEAA) [x1]	EMEAA	EG91-E	✓	GA	
B524MTY	B Series LTE CAT-1/3G/2G (EMEAA), Tray [x50]	EMEAA	EG91-E	1	GA	
B523MEA	B Series LTE CAT-1/3G/2G (Europe) [x1]	EMEAA	EG91-E		NRND	B524MEA
B523MTY	B Series LTE CAT-1/3G/2G (Europe), Tray [x50]	EMEAA	EG91-E		Deprecated	B524MTY

[•] EMEAA: Selected countries in Europe, Middle East, Africa, and Asia, including Australia and New Zealand. See the <u>cellular carrier list</u> for more information.

Revision history

Revision	Date	Author	Comments
001	27 Apr 2020	RK	First Release
002	30 Jul 2020	RK	Added explanation of DIV connector
003	16-Sep-2020	RK	Added power consumption information
004	04-Jan-2021	RK	Fix incorrect pin number on pogo pin diagram
005	15-Mar-2021	RK	Updated model, carrier, ordering information
006	23-Mar-2021	RK	Pins 40 and 42 functions were reversed
007	26-Apr-2021	RK	Added B524 model number
800	14-May-2021	RK	Pins 40 and 42 were not actually reversed
009	19-May-2021	RK	List Ethernet reserved pins
010	28-Jun-2021	RK	Added Device OS 3.1 memory map information
011	10-Sep-2021	RK	Changed wording of peak vs. max current
012	05-May-2022	RK	Corrected number of PWM outputs (8)
013	11-Aug-2022	RK	Correct typo in 3V3 explanation
014	29-Aug-2022	RK	Added EU declaration of conformity
015	16-Sep-2022	RK	Added UKCA conformity
016	31-Oct-2022	RK	Updated EU operating frequencies