

USB in (PC) and USB-C power-only, 5 V rail via Schottky OR




USB hub module (FE1.1s) and PCM2902 module: wire pads

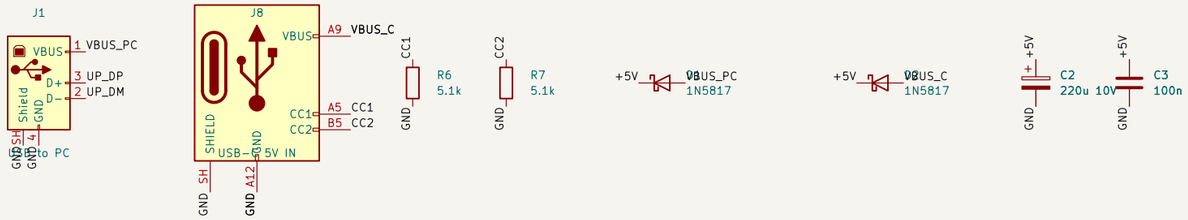

Audio: record feed from the master (J4), playback out (J7)

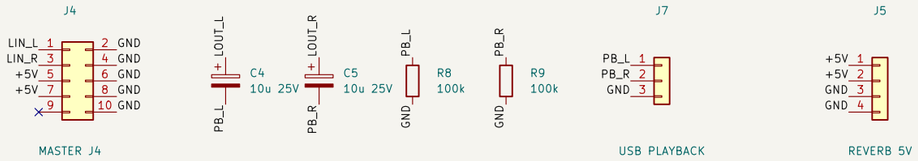

DIN MIDI IN (6N138, VCC 5 V, output pulled to 3.3 V) and MIDI OUT (3.3 V spec)

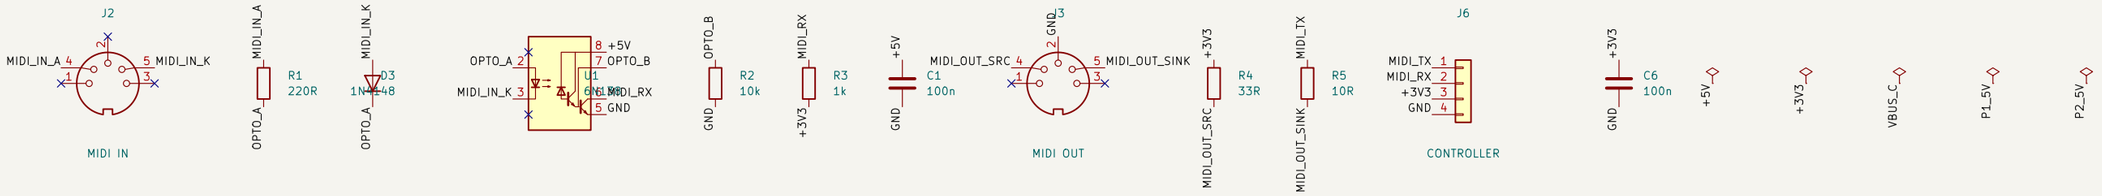

Phase 3b digital board v1. Spec: Stuff/mixer/phase3b_digital/README.md. Hub (FE1.1s) and PCM2902 are ready-made modules wired to the labelled pads. 6N138 runs from 5 V (datasheet minimum 4.5 V); its open-collector output is pulled up to the ESP32 3.3 V. GND meets the

Sheet: /		
File: mixer_digital.kicad_sch		
Title: Mixer Phase 3b – digital board (USB hub, USB audio, DIN MIDI)		
Size: A3	Date: 2026-10-26	**Rev: 1**
KiCad E.D.A. 10.0.7		Id: 1/1