
XFUSION FusionDirector for vROps 2.9.10

User Guide

Issue	04
Date	2026-09-30

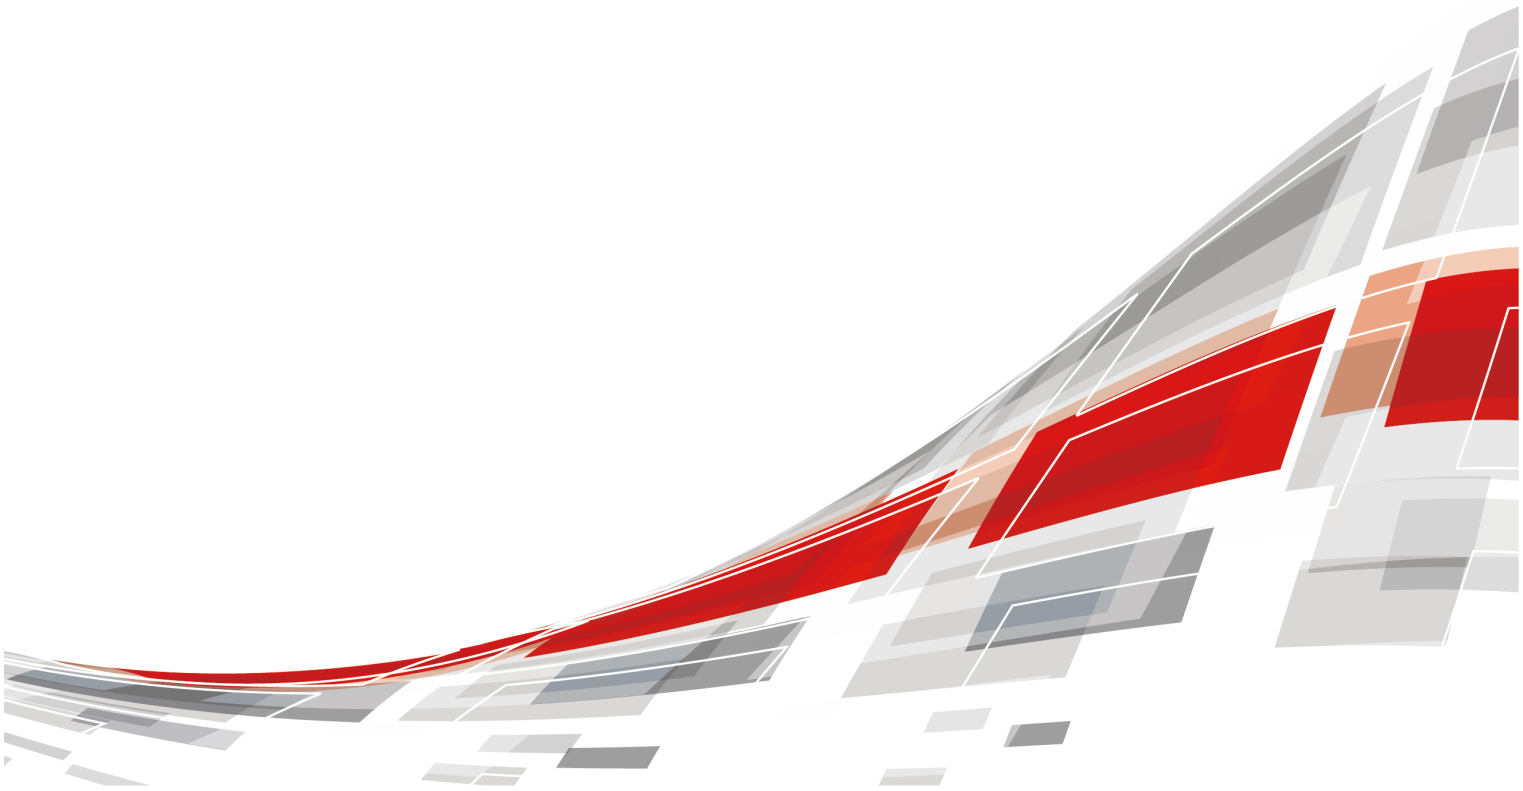

XFUSION INTERNATIONAL PTE. LTD.

Copyright © XFUSION INTERNATIONAL PTE. LTD. 2026. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of XFUSION INTERNATIONAL PTE. LTD.

Trademarks and Permissions

XFUSION and other xFusion trademarks are trademarks of XFUSION INTERNATIONAL PTE. LTD. All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

The purchased products, services and features are stipulated by the contract made between xFusion and the customer. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope. Unless otherwise specified in the contract, all statements, information, and recommendations in this document are provided "AS IS" without warranties, guarantees or representations of any kind, either express or implied.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

XFUSION INTERNATIONAL PTE. LTD.

Website: https://www.xfusion.com

About this Document

Overview

This guide describes how to install and maintain the VMware Aria Operations (vRealize Operations Manager/VMware Cloud Foundation Operations, as vROps/VCF) plug-in.

Since different versions of vROPs may differ in functionality and operation, please see the actual display of the vROPs interface for specific supported operations.

Intended Audience

This guide is intended for:

- Technical support engineers
- System maintenance engineers

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
DANGER	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
NOTICE	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance deterioration, or unanticipated results. NOTICE is used to address practices not related to personal injury.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Symbol	Description
NOTE	Calls attention to important information, best practices, and tips. NOTE is used to address information not related to personal injury, equipment damage, and environment deterioration.

Change History

Changes between document issues are cumulative. The latest document issue contains all the changes made in earlier issues.

Issue	Date	Description
04	2026-09-30	Added VMware Cloud Foundation Operations 9.0 version.
03	2025-06-30	Added VMware Aria Operations 8.18 version.
02	2023-09-30	Added VMware Aria Operations 8.12 version.
01	2023-03-30	The issue is the first official release.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Contents

About this Document ii

1 Overview 1

2 Managing the vROps Plug-in 3

2.1 Installation 3
2.1.1 Installating the vROps plug-in for versions 8.1 or earlier 3
2.1.2 Installating the vROps plug-in for version 8.12 6
2.1.3 Installating the vROps plug-in for versions SaaS 9
2.2 Uninstallation 12
2.2.1 Uninstalling the vROps plug-in for versions 8.1 or earlier 13
2.2.2 Uninstalling the vROps plug-in version 8.12 14
2.2.3 Unstallating the vROps plug-in for versions SaaS 15
2.3 Upgrade 17
2.3.1 Upgrading the vROps plug-in for versions 8.1 or earlier 17
2.3.2 Upgrading the vROps plug-in for version 8.12 17
2.3.3 Upgrading the vROps plug-in for version SaaS 20

3 Configuring FusionDirector 21

3.1 Adding FusionDirector 21
3.1.1 For the vROps plug-in for versions 8.1 or earlier 21
3.1.2 For the vROps plug-in for version 8.12 30
3.1.3 For the vROps plug-in for version SaaS 39
3.2 Modifing FusionDirector 49
3.2.1 For the vROps plug-in for versions 8.1 or earlier 49
3.2.2 For the vROps plug-in for version 8.12 and SaaS 51
3.3 Deleting FusionDirector 53
3.3.1 For the vROps plug-in for versions 8.1 or earlier 53
3.3.2 For the vROps plug-in for version 8.12 and SaaS 54

4 Querying XFUSION Server Information 56

4.1 Querying Servers 56
4.1.1 For the vROps plug-in for versions 8.1 or earlier 56
4.1.2 For the vROps plug-in for version 8.12 and SaaS 58
4.2 Querying Component Information 60
4.2.1 For the vROps plug-in for versions 8.1 or earlier 60

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

4.2.2 For the vROps plug-in for version 8.12 and SaaS....63
4.3 Querying Component Group Information....65
4.3.1 For the vROps plug-in for versions 8.1 or earlier....65
4.3.2 For the vROps plug-in for version 8.12 and SaaS....66
4.4 Querying Server Information....67
4.4.1 For the vROps plug-in for versions 8.1 or earlier....67
4.4.2 For the vROps plug-in for version 8.12 and SaaS....68
4.5 Querying Server Type Information....68
4.5.1 For the vROps plug-in for versions 8.1 or earlier....68
4.5.2 For the vROps plug-in for version 8.12 and SaaS....69
4.6 Querying the FusionDirector Information....69
4.6.1 For the vROps plug-in for versions 8.1 or earlier....70
4.6.2 For the vROps plug-in for version 8.12 and SaaS....70
5 Querying XFUSION Enclosure Information....72
5.1 Querying Enclosures....72
5.1.1 For the vROps plug-in for versions 8.1 or earlier....72
5.1.2 For the vROps plug-in for version 8.12 and SaaS....73
5.2 Querying Component Information....74
5.2.1 For the vROps plug-in for versions 8.1 or earlier....74
5.2.2 For the vROps plug-in for version 8.12 and SaaS....76
5.3 Querying Component Group Information....79
5.3.1 For the vROps plug-in for versions 8.1 or earlier....79
5.3.2 For the vROps plug-in for version 8.12 and SaaS....80
5.4 Querying Enclosure Information....81
5.4.1 For the vROps plug-in for versions 8.1 or earlier....81
5.4.2 For the vROps plug-in for version 8.12 and SaaS....81
5.5 Querying the FusionDirector Information....82
5.5.1 For the vROps plug-in for versions 8.1 or earlier....82
5.5.2 For the vROps plug-in for version 8.12 and SaaS....83
6 Querying Dashboard Information....84
6.1 Querying the FusionDirector Overview Dashboard....84
6.1.1 For the vROps plug-in for versions 8.1 or earlier....84
6.1.2 For the vROps plug-in for version 8.12 and SaaS....85
6.2 Querying XFUSION Servers Overview Dsahborad....85
6.2.1 For the vROps plug-in for versions 8.1 or earlier....85
6.2.2 For the vROps plug-in for version 8.12 and SaaS....89
6.3 Querying XFUSION Servers Detailed Dashboard....93
6.3.1 For the vROps plug-in for versions 8.1 or earlier....93
6.3.2 For the vROps plug-in for version 8.12 and SaaS....94
6.4 Querying XFUSION Enclosure Overview Dashboard....96
6.4.1 For the vROps plug-in for versions 8.1 or earlier....96
6.4.2 For the vROps plug-in for version 8.12 and SaaS....96

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

6.5 Querying XFUSION Enclosure Detailed Dashboard....97
6.5.1 For the vROps plug-in for versions 8.1 or earlier....97
6.5.2 For the vROps plug-in for version 8.12 and SaaS....98
7 Viewing Alerts....100
7.1 For the vROps plug-in for versions 8.1 or earlier....100
7.2 For the vROps plug-in for version 8.12 and SaaS....101
8 Querying the XFUSION vROps Plug-in Version....103
8.1 For the vROps plug-in for versions 8.1 or earlier....103
8.2 For the vROps plug-in for version 8.12 and SaaS....104
A Obtaining Technical Support....105
B Communication Matrix....106

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

1 Overview

Function Description

The FusionDirector for vROps plug-in can be used to manage and monitor servers. Only vRealize Operations Manager 8.0, 8.1, VMware Aria Operations 8.12, 8.14, 8.16, 8.18 and SaaS are supported. This document uses vRealize Operations Manager 8.1, VMware Aria Operations 8.12 and SaaS as an example. The pictures are for reference only. Please refer to the actual operation interface.

The FusionDirector for vROps plug-in provides the following functions:

- Query the basic information about severs and enclosures (also referred to as chassis).
- Query the alert information about severs and enclosures.
- Query the health status of severs and enclosures.
- Query statistics about the FusionDirector, severs, and enclosures using the dashboard.

Servers supported by the FusionDirector for vROps plug-in

Table Servers supported by the FusionDirector for vROps plug-in. lists servers supported by the FusionDirector for vROps plug-in.

Table 1-1 Servers supported by the FusionDirector for vROps plug-in.

Type	Server Model
Rack	1288H V5
	2288H V5
	2488 V5
	2488H V5
	8100 V5
	RH2288H V3
	1288H V6

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Type	Server Model
	2288H V6
	1288H V7
	2288H V7
	5288 V7
	2158H V8
	2258H V8
Blade	CH121 V5
	CH242 V5
	CH121 V3
	CH242 V3
Chassis	E9000 (MM920)

Matching Versions

Software	Matching Versions
FusionDirector	FusionDirector: 1.6.0.SPC1 or later

Software Requirements

Type	Version
vROPS	vROPS 8.0 vROPS 8.1 vROPS 8.12 vROPS 8.14 vROPS 8.16 vROPS 8.18 VCF 9.0 vROPS SaaS

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

2 Managing the vROps Plug-in

2.1 Installation

2.2 Uninstallation

2.3 Upgrade

2.1 Installation

2.1.1 Installating the vROps plug-in for versions 8.1 or earlier

Prerequisites

You have obtained the vROps plug-in software package and verified its integrity.

Step 1 Obtain the vROps plug-in software package (for example, **XFUSION_FusionDirector_For_vROps_***X.X.X***.zip**) and its SHA256 verification file (for example, **XFUSION_FusionDirector_For_vROps.sha256_***X.X.X***.sum**) from **GitHub**.

Step 2 Verify the integrity of the vROps plug-in software package(on Linux).

1. Go to the directory where the plug-in installation package and SHA256 verification file are stored.
2. Run the **sha256sum -c < (grep** *software package name sha256 verification file name***)** command to verify the software package.

   Example: **sha256sum -c <(grep XFUSION_FusionDirector_For_vROps_***X.X.X***.zip XFUSION_FusionDirector_For_vROps_***X.X.X***.sha256.summ)**
3. Check whether the verification result is **OK**.
   - If yes, the software package has not been tampered with and can be used.
   - If no, the software package has been tampered with. Obtain a new software package.

----End

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Procedure

Install the vROps plug-in.

Step 1 Decompress the installation package.

Obtain the installer, such as **XFUSIONFusionDirectorManagementPack_***X.X.X***.pak**.

Step 2 On the vROps WebUI, choose **Administration**.

The **Administration** page is displayed.


Step 3 In the navigation pane on the left, choose **Repository**.

The **Repository** page is displayed.

Step 4 In the lower part of the page, click **ADD/UPGRADE**.

The **Add Solution** dialog box is displayed, as shown in **Figure Add Solution**.

Figure 2-1 Add Solution

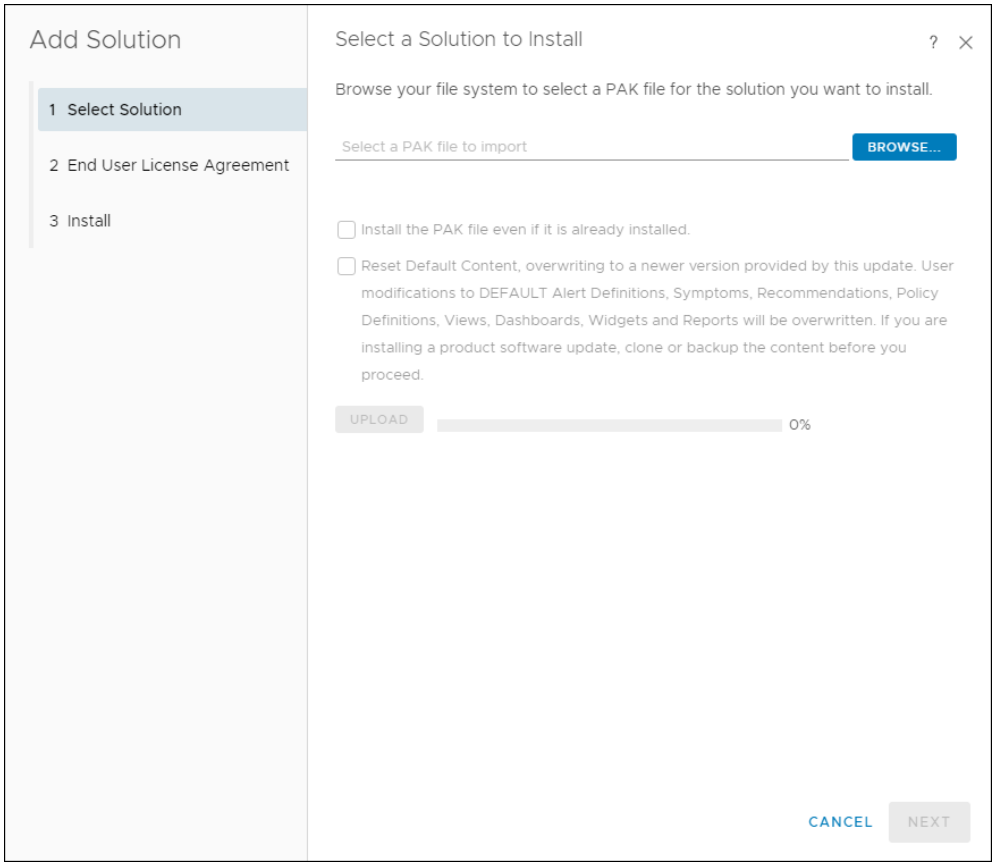

Step 5 On the **Select Solution** tab page, click **BROWSE** and select the plug-in installation file.

Step 6 Select **Install the PAK file even if it is already installed**.

Step 7 Click **UPLOAD** and upload the installation file.

Step 8 Click **NEXT**.


 Copyright © XFUSION INTERNATIONAL PTE. LTD.

The **Confirmation** dialog box is displayed.

Step 9 Click **Yes**.

The **End User License Agreement** tab page is displayed, as shown in **Figure End User License Agreement**.

Figure 2-2 End User License Agreement

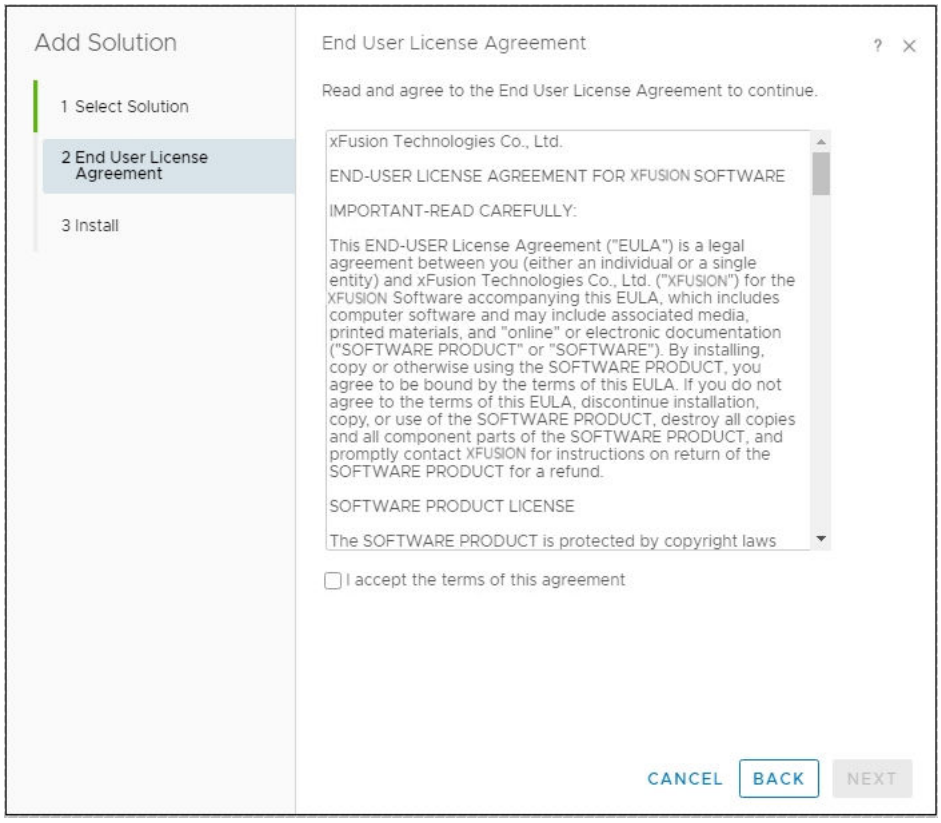

Step 10 Select **I accept the terms of this agreement** and click **NEXT**.


The **Installation** tab page is displayed.

Step 11 After the installation is complete, click **FINISH**.

In the lower part of the **Repository** page, view the installed vROps plug-in, as shown in **Figure Viewing the installed vROps plug-in**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 2-3 Viewing the installed vROps plug-in

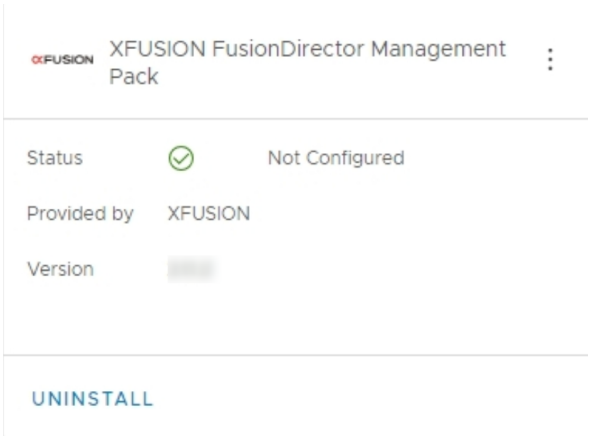

----End

2.1.2 Installating the vROps plug-in for version 8.12

Procedure

Install the vROps plug-in.

Step 1 Decompress the installation package.

Obtain the installer, such as **XFUSIONFusionDirectorManagementPack_***X.X.X***.pak**.

Step 2 On the vROps WebUI, choose **Data Sources** > **Integrations**.

The **Integrations** page is displayed.

Step 3 In the Integrations page, choose **Repository**.


The **Repository** page is displayed.

Step 4 In the upper part of the page, click **ADD.**

The **Add Solution** dialog box is displayed, as shown in **Figure Add Solution**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 2-4 Add Solution

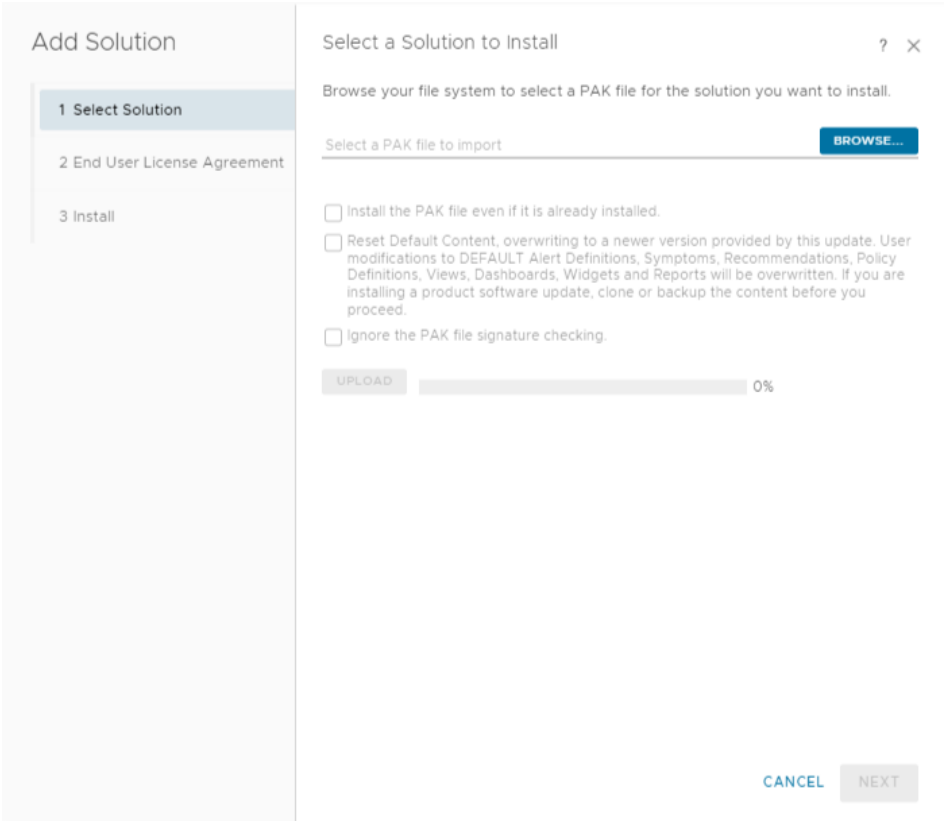

Step 5 On the **Select Solution** tab page, click **BROWSE** and select the plug-in installation file.

Step 6 Select **Ignore the PAK file signature checking.**

Step 7 Click **UPLOAD** and upload the installation file.

Step 8 Click **NEXT**.


The **Confirmation** dialog box is displayed.

Step 9 Click **Yes**.

The **End User License Agreement** tab page is displayed, as shown in **Figure 2-5**

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 2-5 End User License Agreement

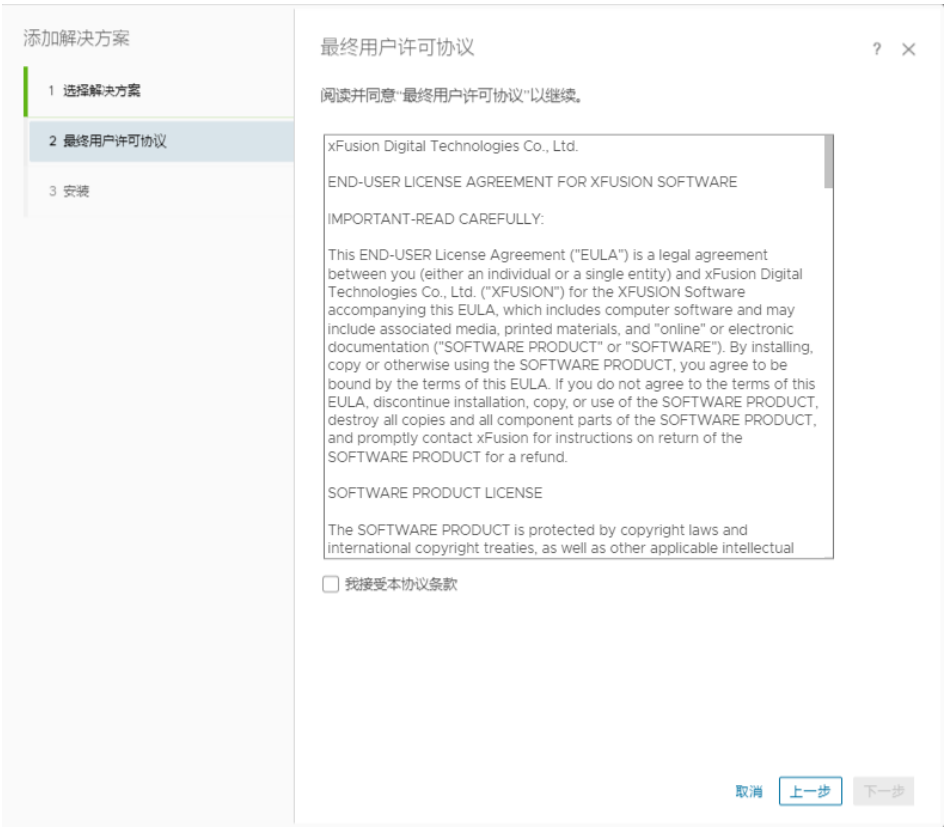

Step 10 Select **I accept the terms of this agreement** and click **NEXT**.

The **Installation** tab page is displayed.

Step 11 After the installation is complete, click **FINISH**.

In the lower part of the **Repository** page, view the installed vROps plug-in, as shown in **Figure 2-6**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 2-6 Viewing the installed vROps plug-in



----End

2.1.3 Installating the vROps plug-in for versions SaaS

Step 1 Log in to VMware Aria Operations.

Step 2 Configure cloud proxies. For details, see **Configuring Cloud Proxies in VMware Aria Operations**.


NOTE

If cloud proxies fail to be configured, you need to check whether the network and DNS parameters are correctly configured.

Step 3 On the VMware Aria Operations WebUI, choose **Data Sources** > **Integrations** > **Repository**.


The **Repository** page is displayed, as shown in**Figure 2-7**

Figure 2-7 Repository

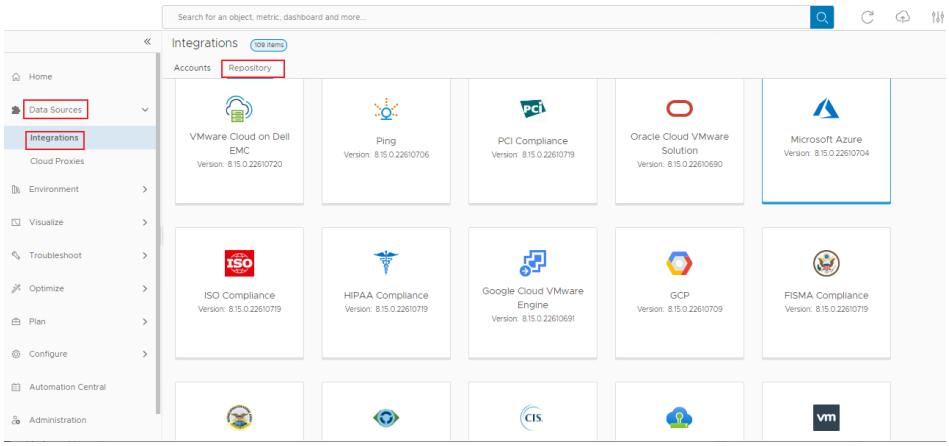


Step 4 In the Repository page, go to the **Available Integrations** area, as shown in **Figure 2-8**.

Figure 2-8 Available Integrations

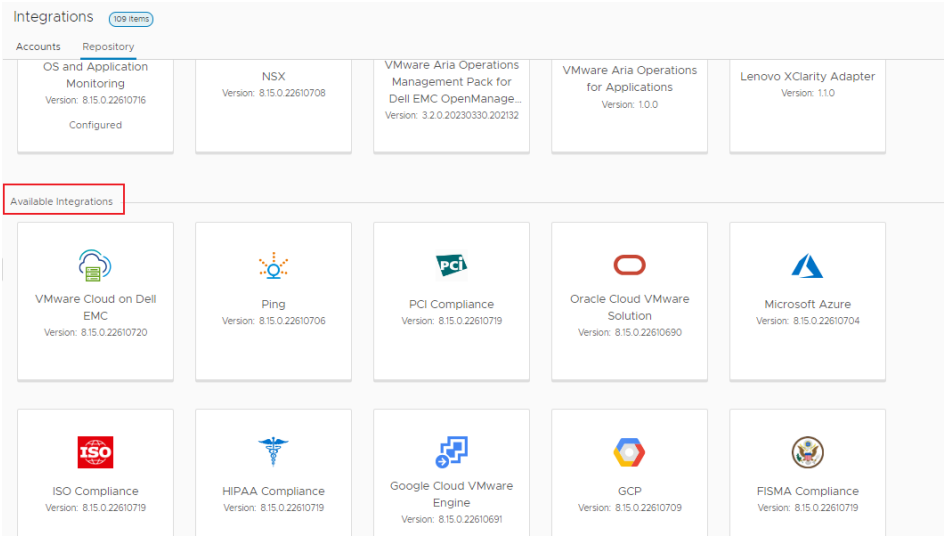

Step 5 Click **XFUSION FusionDirector Management Pack**, as shown in**Figure 2-9**.

Figure 2-9 XFUSION FusionDirector Management Pack

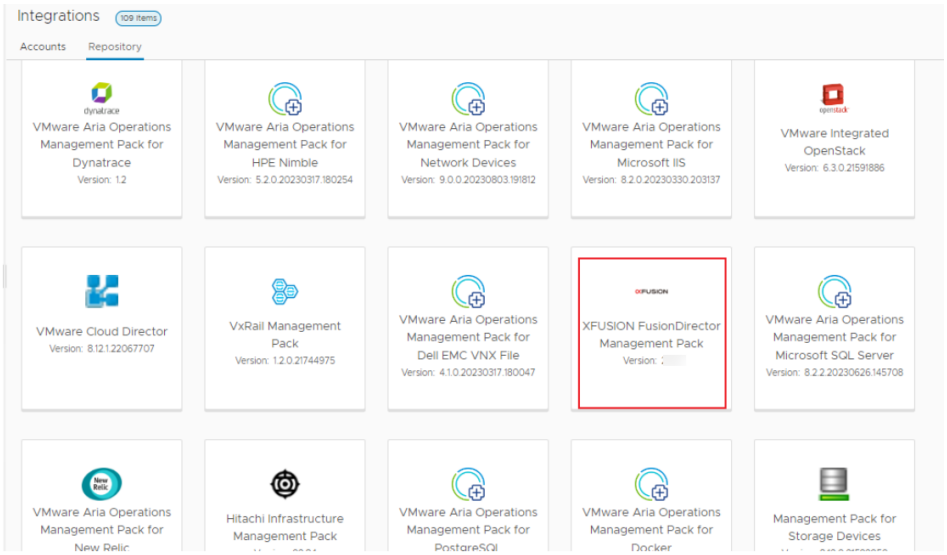


Step 6 Click **GET**.

The **Add Management Pack** dialog box is displayed, as shown in **Figure Add Solution**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 2-10 Add Management Pack

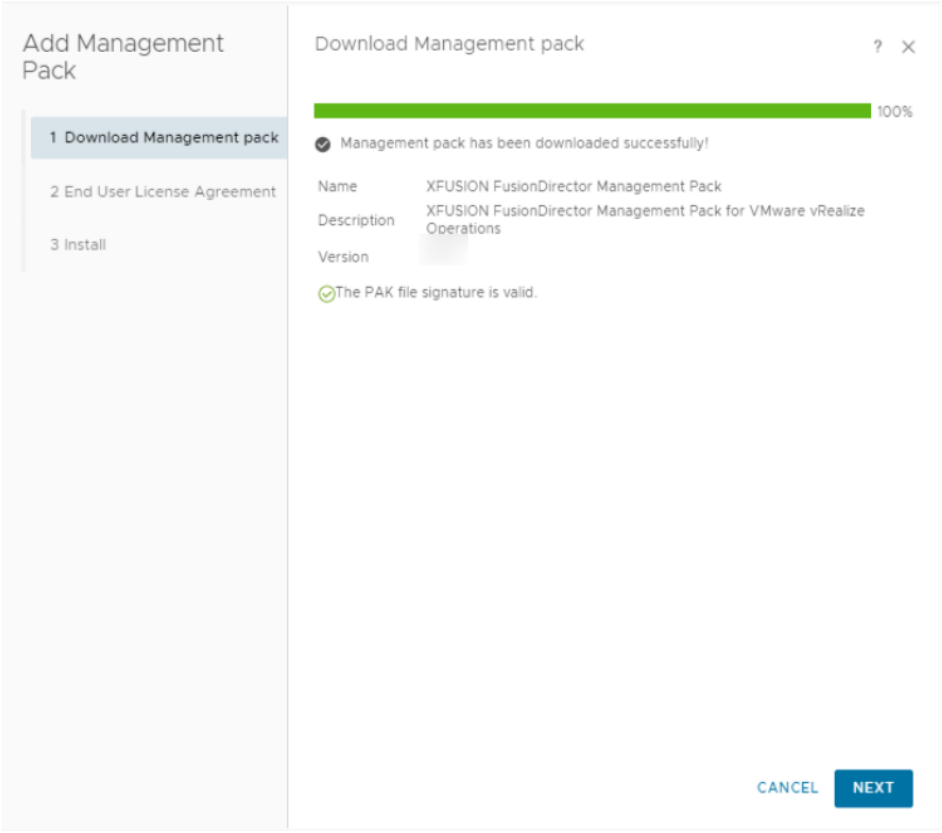


Step 7 Click **NEXT**.

The **End User License Agreement** tab page is displayed, as shown in **Figure 2-11**

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 2-11 End User License Agreement

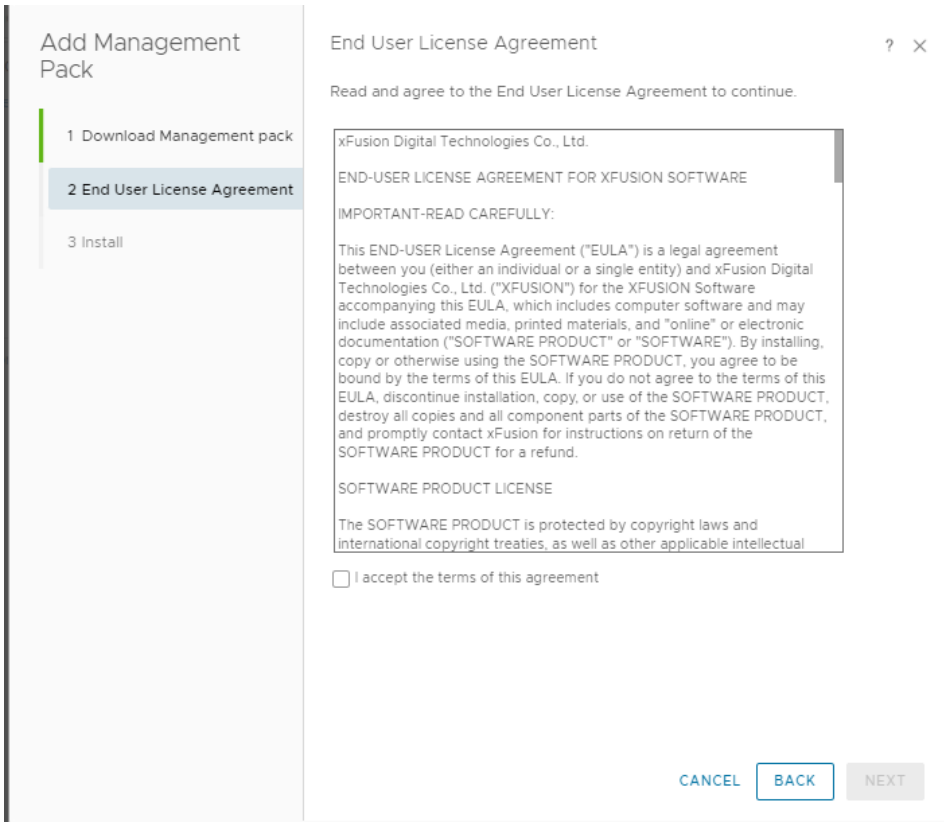


Step 8 Select **I accept the terms of this agreement** and click **NEXT**.

The **Installation** tab page is displayed.

Step 9 After the installation is complete, click **FINISH**.

In the **Repository** page, view the installed vROps plug-in, as shown in **Figure 2-12**.

Figure 2-12 Viewing the installed vROps plug-in

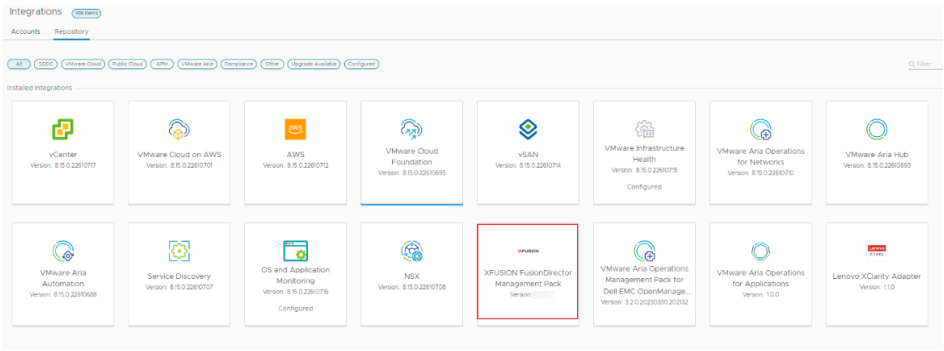

----End

2.2 Uninstallation

2.2.1 Uninstalling the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, choose **Administration**.


The **Administration** page is displayed.

Step 2 In the navigation pane on the left, choose **Repository**.

The **Repository** page is displayed.


Step 3 In the lower part of the page, select the vROps plug-in to be uninstalled and click **UNINSTALL**, as shown in **Figure 2-13**.

Figure 2-13 Uninstalling the vROps plug-in

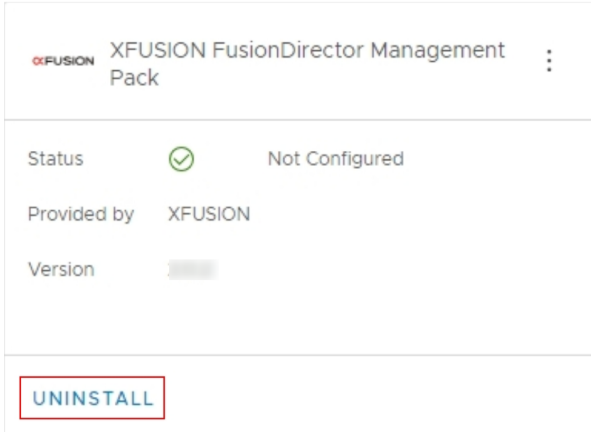

The **Warning** dialog box is displayed, as shown in **Figure 2-14**.

Figure 2-14 Warning dialog box

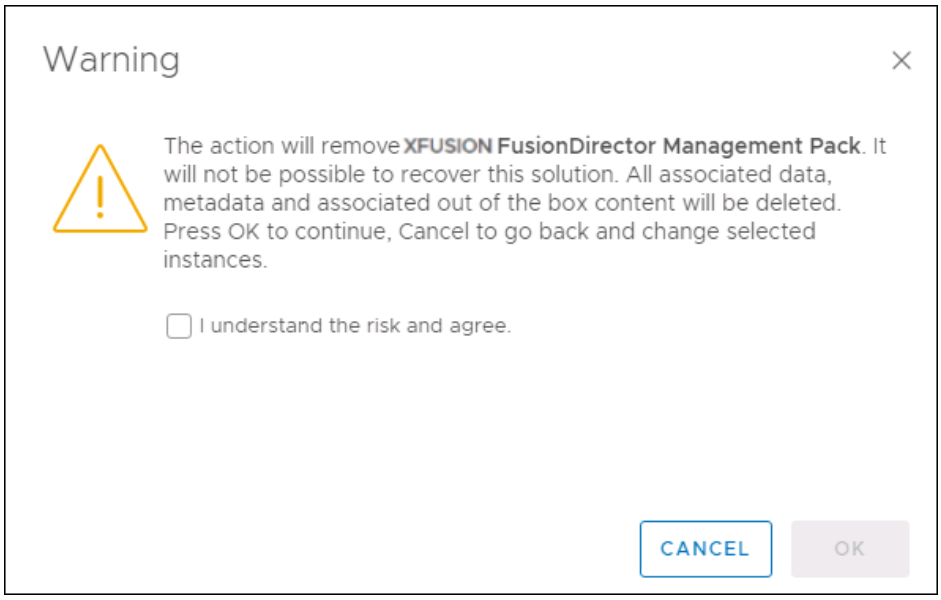

Step 4 Select **I understand the risk and agree.** and click **OK**.

The vROps plug-in is uninstalled.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Step 5 You are advised to manually delete the dashboard after the plug-in is uninstalled.

1. On the vROps WebUI, choose **Dashboards**.

   The **Dashboards** page is displayed.
2. In the **Dashboards** page, choose **Dashboards** > **Fusion Director Overview Dashboard**.

   The **Fusion Director Overview Dashboard** page is displayed.
3. Click **Operation** next to the **Fusion Director Overview Dashboard**, the operation list is expanded.
4. Click **Delete**.

----End

2.2.2 Uninstalling the vROps plug-in version 8.12

Step 1 On the vROps WebUI, choose **Data Sources** > **Integrations**.


The **Integrations** page is displayed.

Step 2 In the **Integrations** page, choose **Repository**.

The **Repository** page is displayed.

Step 3 In the page, select the vROps plug-in to be uninstalled and click > **UNINSTALL**, as shown in **Figure 2-15**.


Figure 2-15 Uninstalling the vROps plug-in

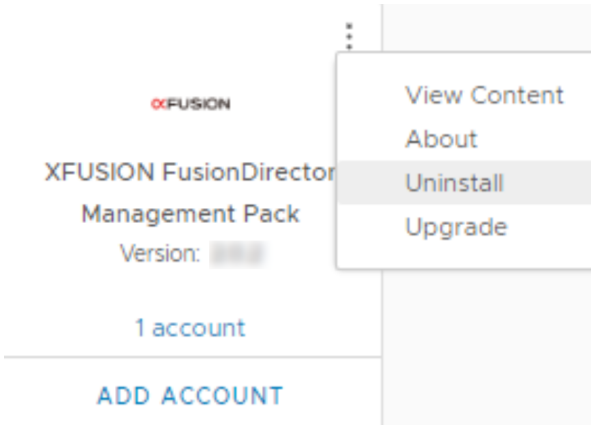

The **Warning** dialog box is displayed, as shown in **Figure 2-16**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 2-16 Warning dialog box

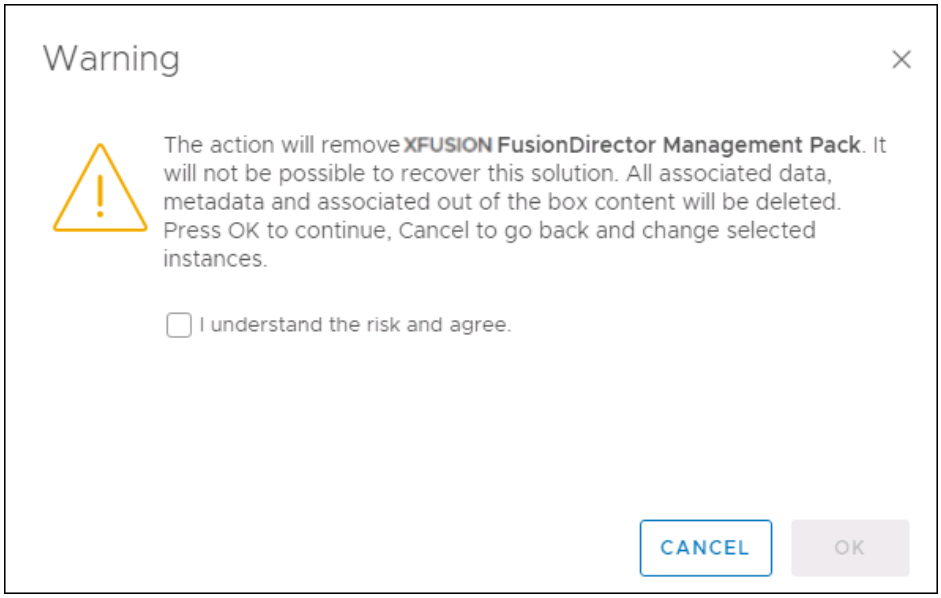

Step 4 Select **I understand the risk and agree.** and click **OK**.

The vROps plug-in is uninstalled.

Step 5 You are advised to manually delete the dashboard after the plug-in is uninstalled.

1. On the vROps WebUI, choose **Visualize > Dashboards > Manage**.
   The **Manage** page is displayed.
2. In the **Manage** page, choose **Fusion Director Overview Dashboard**.
   The **Fusion Director Overview Dashboard** page is displayed.
3. Click **Operation** next to the **Fusion Director Overview Dashboard**, the operation list is expanded.
4. Click **Delete**.


----End

2.2.3 Unstallating the vROps plug-in for versions SaaS

Step 1 On the VMware Aria Operations WebUI, choose **Data Sources** > **Integrations** > **Repository**.

The **Repository** page is displayed, as shown in **Figure 2-17**


Figure 2-17 Repository

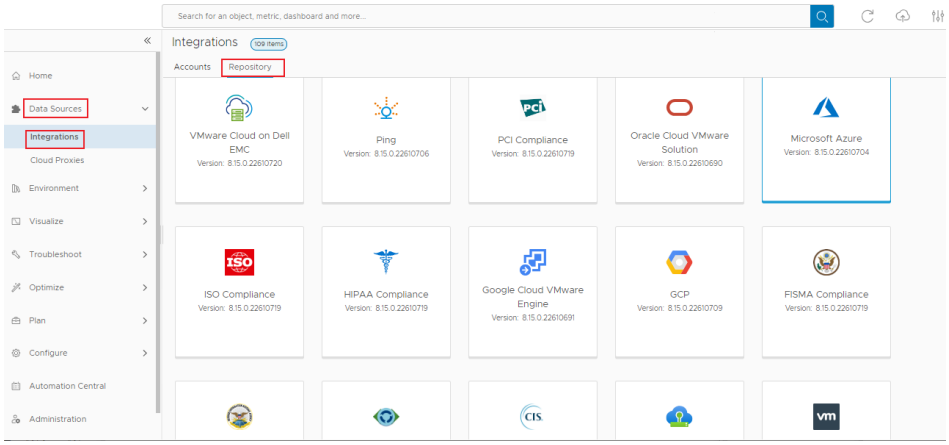

Step 2 In the page, select the vROps plug-in to be uninstalled,.


The **Management Pack Details** page is displayed, as shown in **Figure 2-18**.

Figure 2-18 Management Pack Details

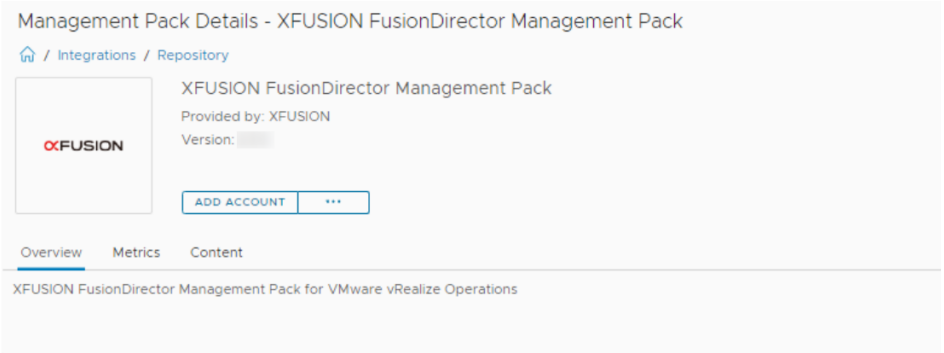

Step 3 Click ••• > **Uninstall**, as shown in **Figure 2-19**.


Figure 2-19 Uninstall

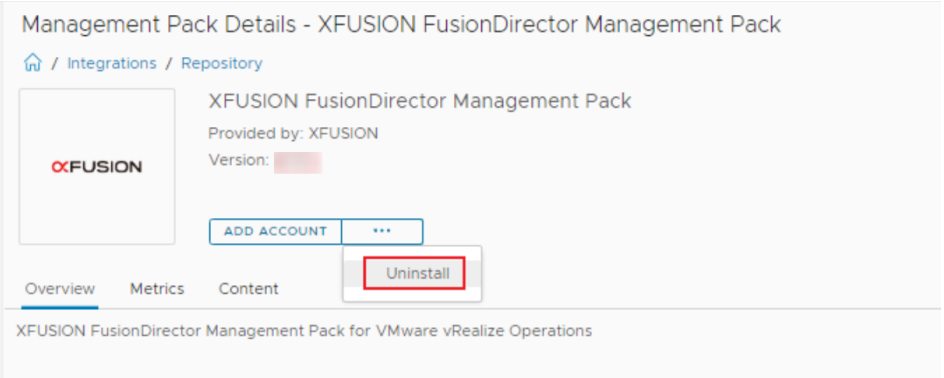

The **Warning** dialog box is displayed, as shown in **Figure 2-20**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 2-20 Warning dialog box

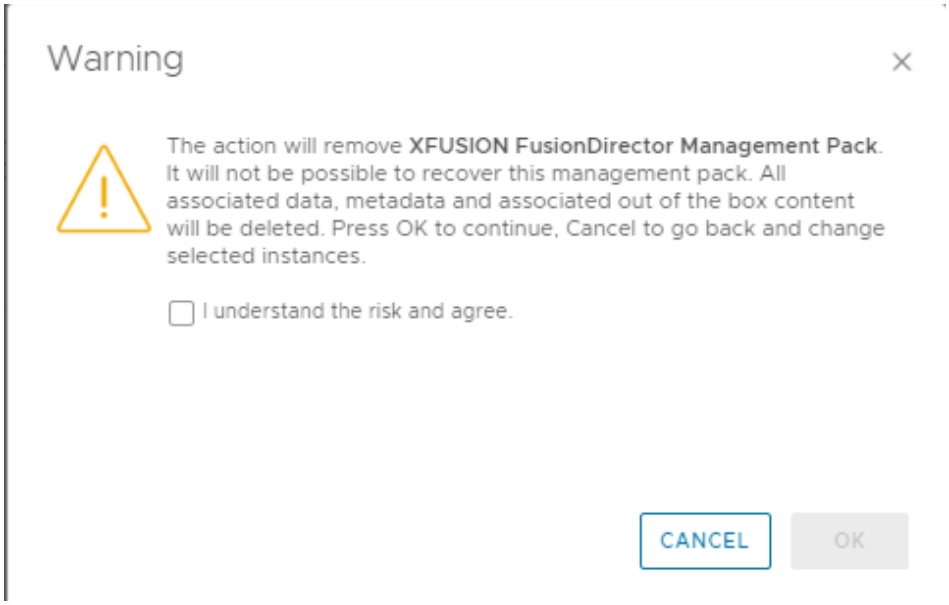

Step 4 Select **I understand the risk and agree.** and click **OK**.

The vROps plug-in is uninstalled.

----End

2.3 Upgrade

2.3.1 Upgrading the vROps plug-in for versions 8.1 or earlier

Procedure

Step 1 (Optional) Uninstall the vROps plug-in of the earlier version. For details, see **2.2.1 Uninstalling the vROps plug-in for versions 8.1 or earlier**.

Step 2 Install the vROps plug-in of the new version. For details, see **2.1.1 Installating the vROps plug-in for versions 8.1 or earlier**.

----End

2.3.2 Upgrading the vROps plug-in for version 8.12

Step 1 On the vROps WebUI, choose **Data Sources** > **Integrations**.

The **Integrations** page is displayed.


Step 2 In the **Integrations** page, choose **Repository**.

The **Repository** page is displayed.

Step 3 In the page, select the vROps plug-in to be uninstalled and click ⋮ > **Upgrade**, as shown in **Figure 2-21**.


 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 2-21 Upgrading the vROps plug-in

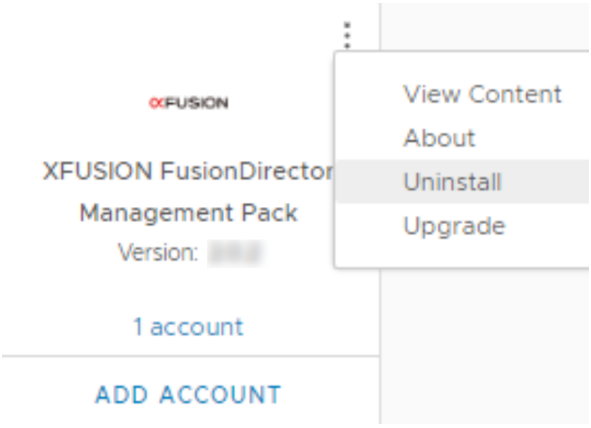

Step 4 The **Add Solution** dialog box is displayed, as shown in **Figure Add Solution**.

Figure 2-22 Add Solution

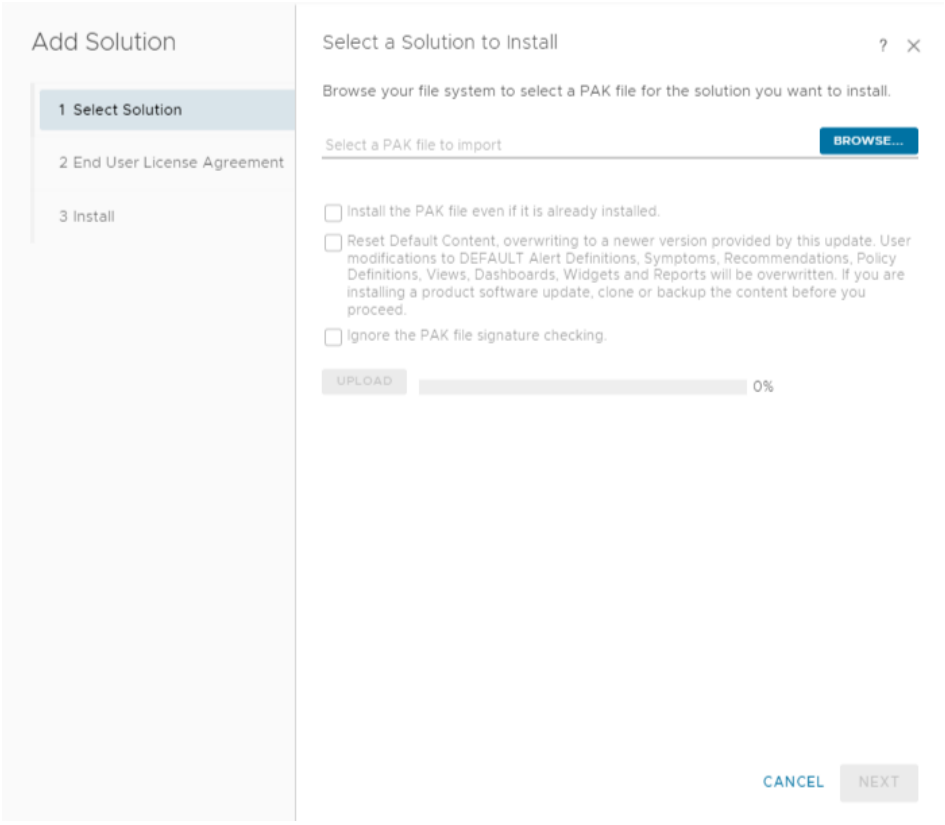

Step 5 On the **Select Solution** tab page, click **BROWSE** and select the plug-in installation file.

Step 6 Select **Install the PAK file even if it is already installed** and **Ignore the PAK file singnature checking**.

Step 7 Click **UPLOAD** and upload the installation file.

Step 8 Click **NEXT**.


The **Confirmation** dialog box is displayed.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Step 9 Click **Yes**.

The **End User License Agreement** tab page is displayed, as shown in**Figure 2-5**

Figure 2-23 End User License Agreement

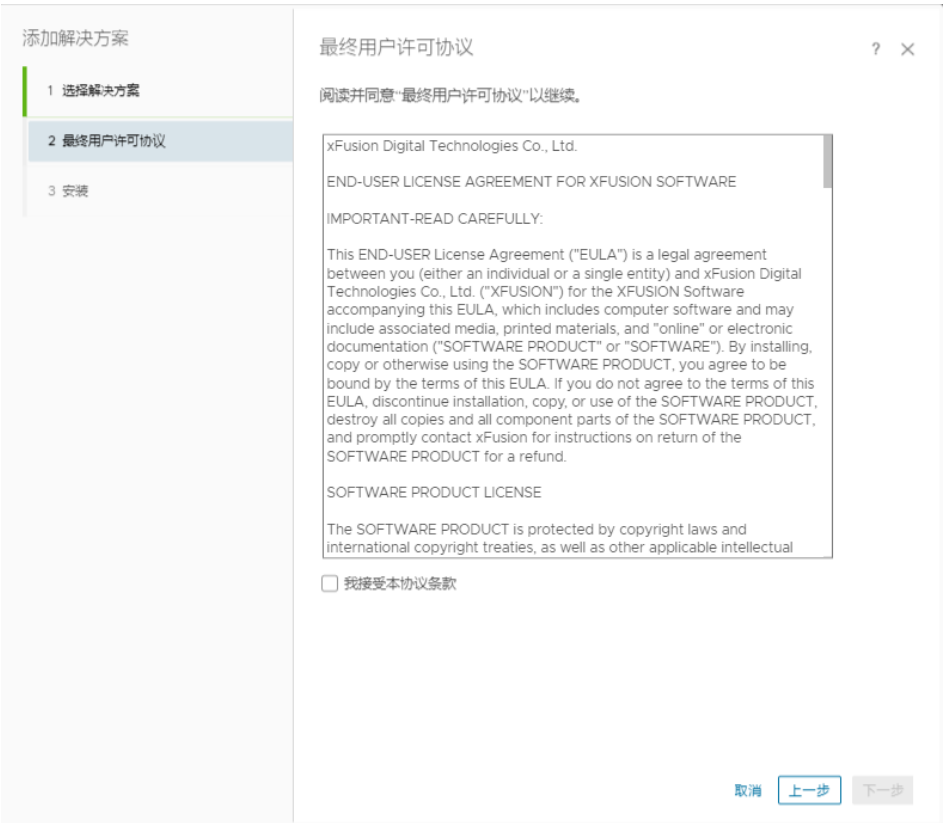

Step 10 Select **I accept the terms of this agreement** and click **NEXT**.

The **Installation** tab page is displayed.

Step 11 After the installation is complete, click **FINISH**.

In the lower part of the **Repository** page, view the installed vROps plug-in, as shown in **Figure 2-6**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 2-24 Viewing the installed vROps plug-in



----End

2.3.3 Upgrading the vROps plug-in for version SaaS

Upgrade the vROps plug-in for version SaaS, For details, see **Upgrading Integrations in VMware Aria Operations Cloud**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

3 Configuring FusionDirector

3.1 Adding FusionDirector
3.2 Modifing FusionDirector
3.3 Deleting FusionDirector

3.1 Adding FusionDirector

3.1.1 For the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, choose **Administration**.

The **Administration** page is displayed.

Step 2 In the navigation tree on the left, choose **Other Accounts**.

The **Other Accounts** page is displayed.


Step 3 Click **ADD ACCOUNT**.

Step 4 Select the type of the account to be added, for example, **FusionDirectorAdapter**.

The **New Account** page is displayed, as shown in **Figure 3-1**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 3-1 New Account

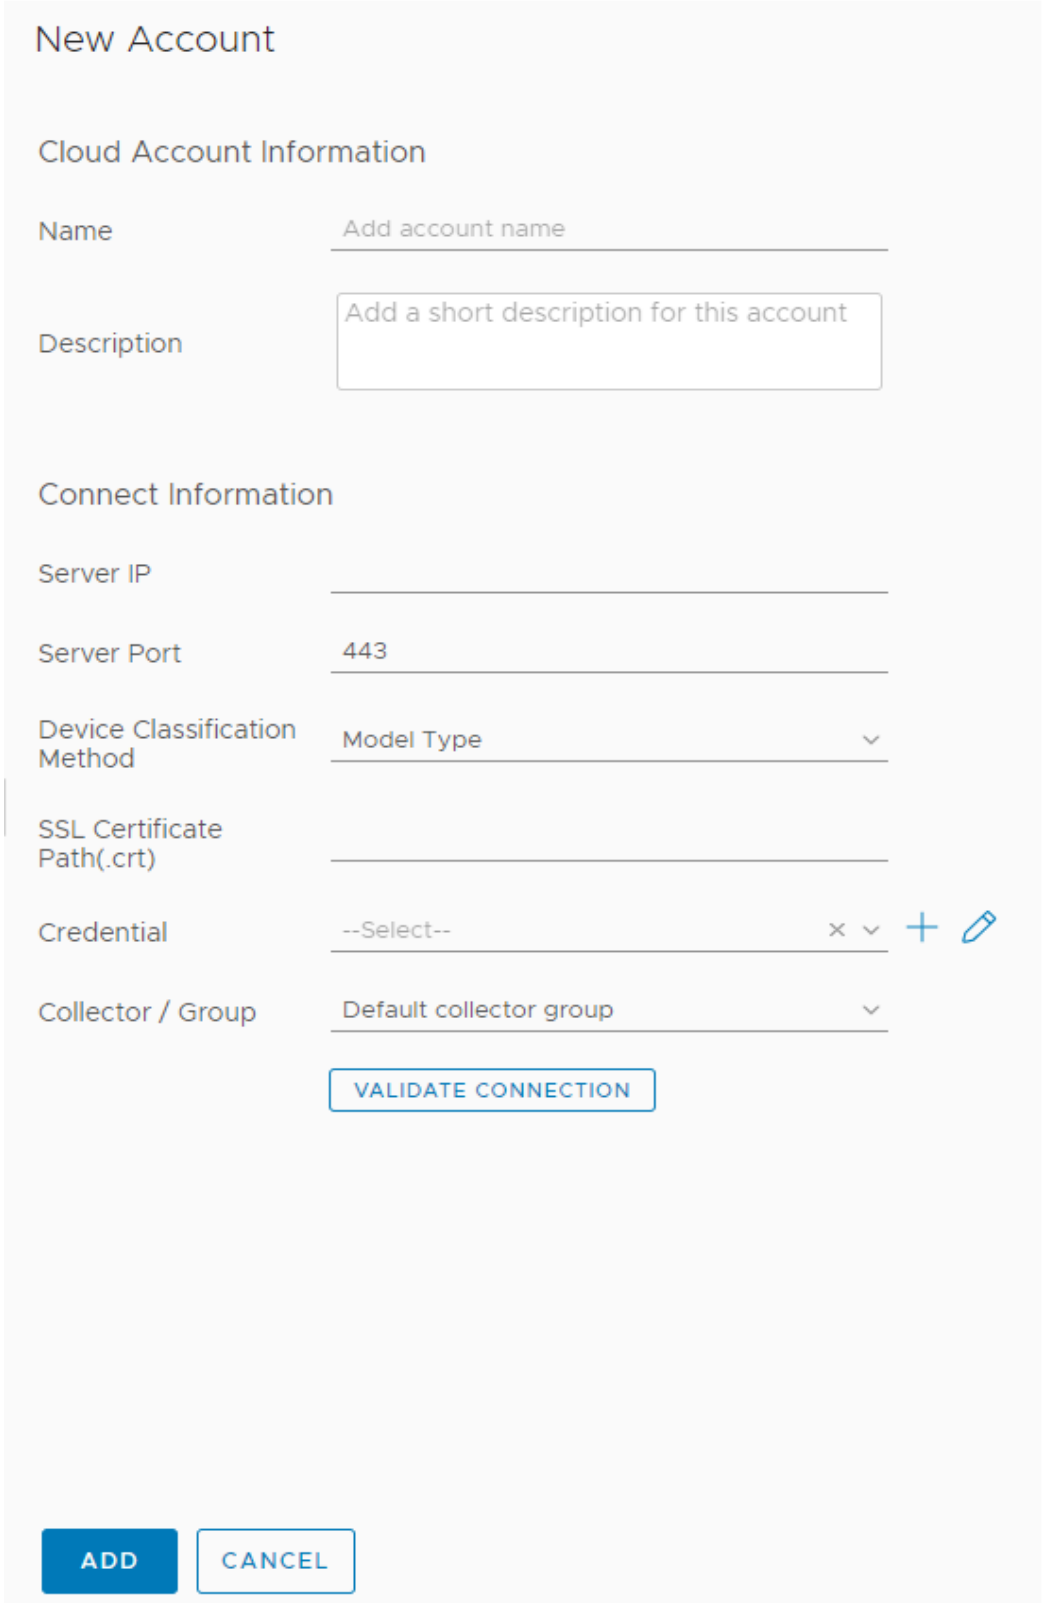

Step 5 Set the following parameters:

- **Name**: user-defined name to identify different FusionDirector instances

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

- **Description**: (optional) user-defined description to describe a FusionDirector instance
- **Server IP**: FusionDirector IP address
- **Server Port**: FusionDirector port number, which is **443** by default.
- **Device Classification Method**: way to classify servers
  - **Model Type**: type view
  - **Group Type**: group view
- **SSL Certificate Path(.crt)**: (optional) path of the certificate in the vROps


NOTICE

You are advised to upload the SSL certificate for security. For details about how to upload the certificate, see **Step 6** to **Step 7**.

Step 6 (Optional) Obtain the certificate.

1. Access the FusionDirector WebUI.
2. Click **Certificate error** in the address box of the browser.
   The **Certificate Invalid** dialog box is displayed, as shown in **Figure 3-2**.


Figure 3-2 Invalid certificate

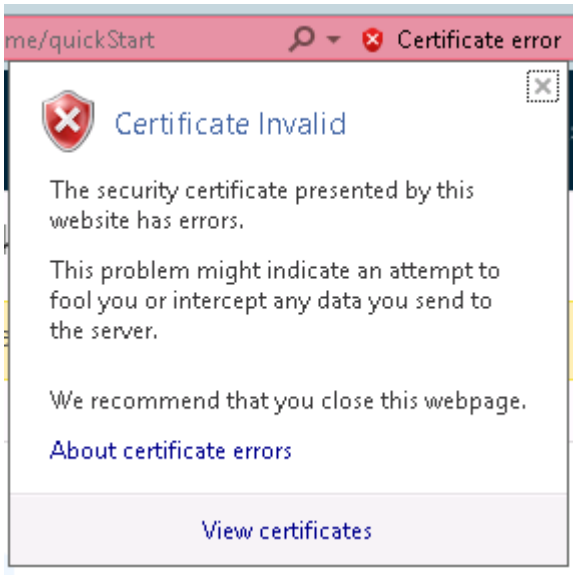

3. Click **View certificates**.
   The **Certificate** dialog box is displayed.
4. Click the **Details** tab.
   The **Details** tab is displayed, as shown in **Figure 3-3**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 3-3 Details

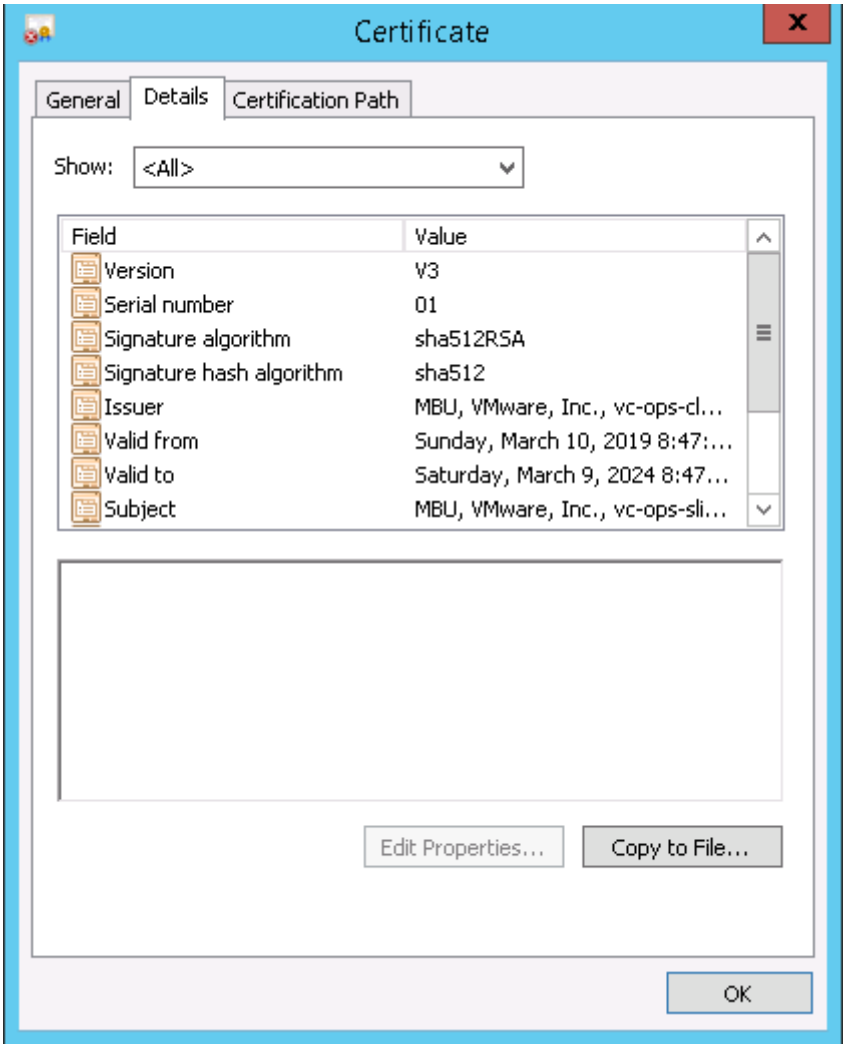

5. Click **Copy to File...**.
   The **Certificate Export Wizard** is displayed, as shown in **Figure 3-4**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.


Figure 3-4 Certificate Export Wizard



6. Click **Next**. In the **Certificate Export Wizard** dialog box, select **DER encoding binary X.509 (.CER)**, as shown in **Figure 3-5**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.


Figure 3-5 Setting the format of files to be exported

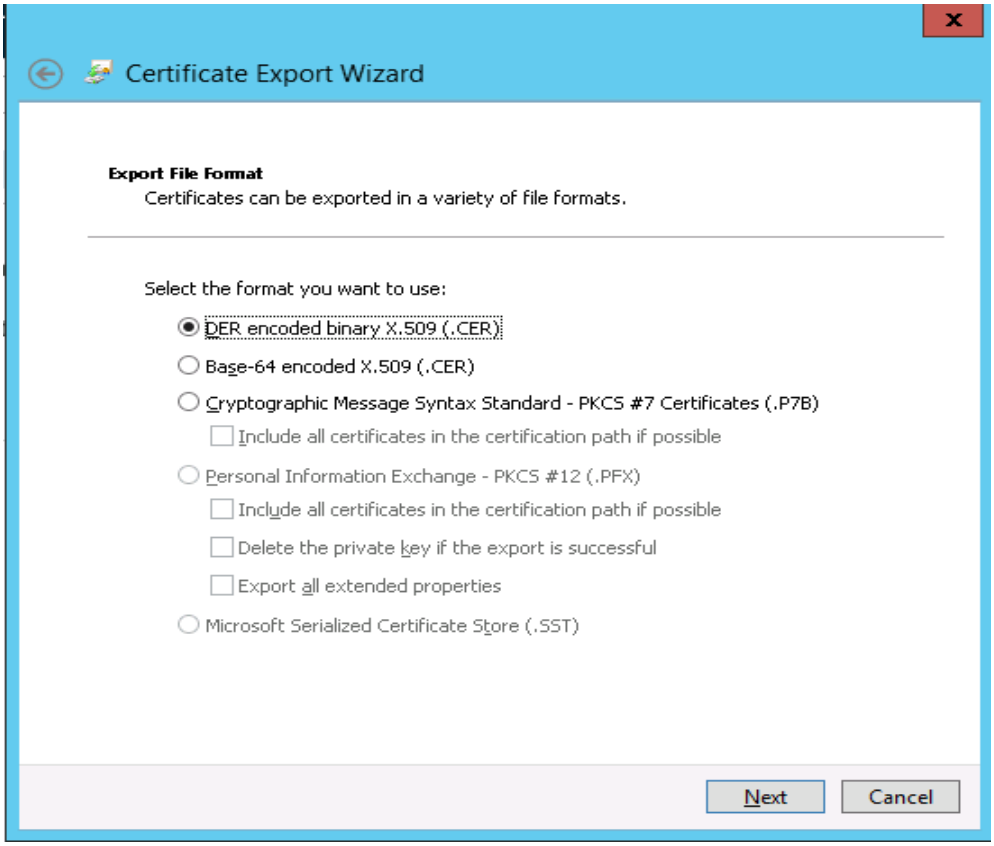

7. Click **Next**. In the **Certificate Export Wizard** dialog box, click **Browse...**, select the certificate export path, and enter the certificate file name, as shown in **Figure 3-6**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 3-6 Service certificate

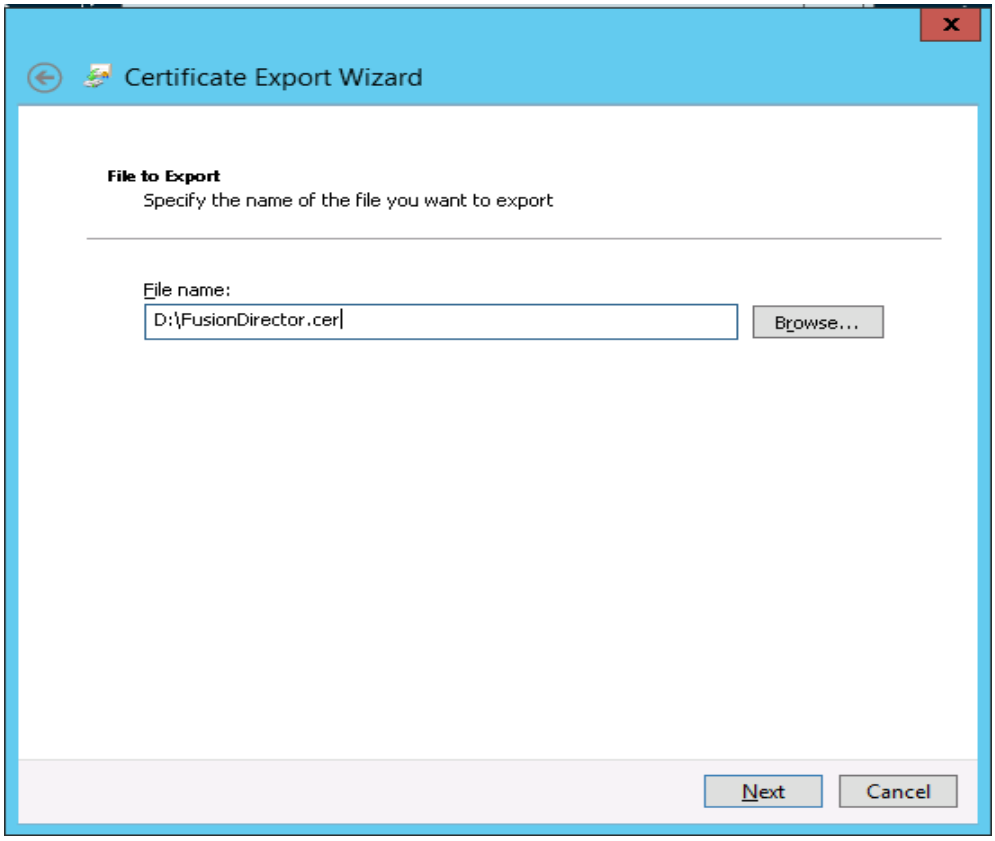


8. Click **Next** to complete certificate export.

Step 7 (Optional) Import the certificate file to the vROps backend.

1. Configure the SSH access permission for the vROps.
   a. The vROps backend is displayed, as shown in **Figure 3-7**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 3-7 vROps backend

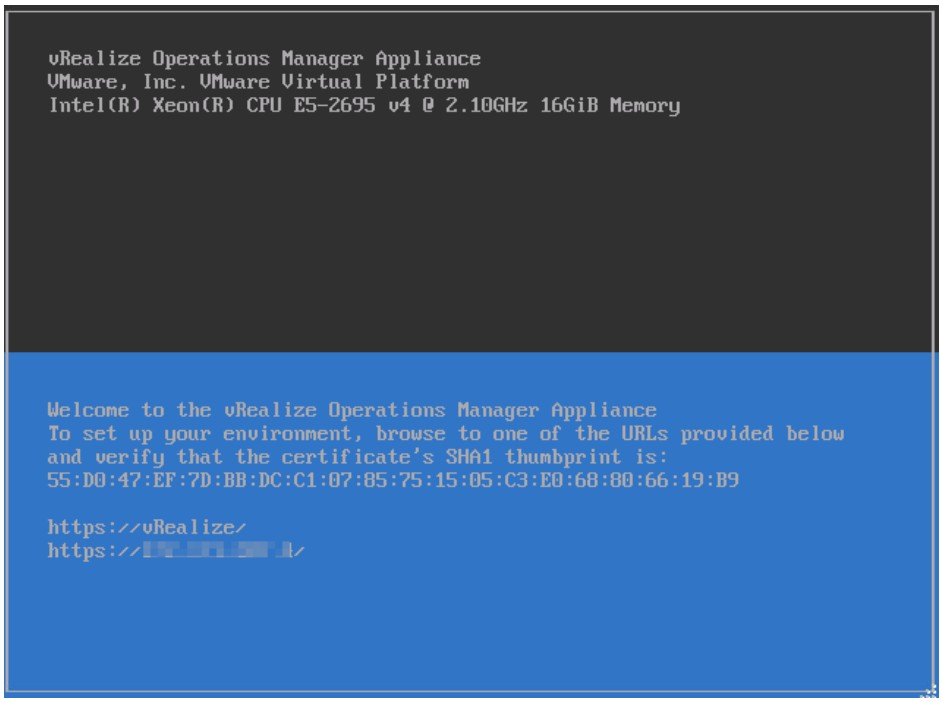


b. Press **Alt+F1** and enter the username and password to log in to the vROps, as shown in **Figure 3-8**.

NOTE

- The username is **root** and the initial password is blank.
- When you log in for the first time, you need to change the initial password, press **Enter**, enter previous and new passwords, and confirm the new password. The new password must contain uppercase letters, lowercase letters, digits, and special characters.

Figure 3-8 Logging in to the vROps

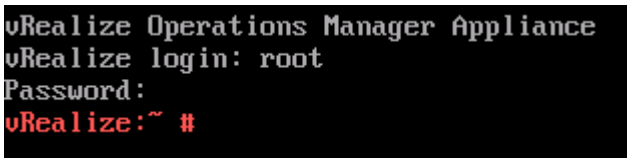

c. Run the **vi /etc/ssh/sshd_config** command to edit the configuration file **sshd_config**.

   Change the value of **MaxSession** to **20** and the value of **AllowTcpForwarding** to **yes**.

d. Run the **service sshd start** command to start the SSHD service.

e. Run the **chkconfig sshd on** command to enable the SSHD service.

f. Run the **service vmware-vcops-firewall stop** command to disable the firewall.

g. Run the **chkconfig vmware-vcops-firewall off** command to disable the firewall upon startup.


 Copyright © XFUSION INTERNATIONAL PTE. LTD.

2. Use the SSH tool to upload the certificate file to **/usr/lib/vmware-vcops/user/plugins/inbound**.
3. Enter the SSL certificate path **/usr/lib/vmware-vcops/user/plugins/inbound/FusionDirector.crt** in **Step 5**.

Step 8 In the **Credential** field, click +.

The **Manage Credentials** dialog box is displayed, as shown in **Figure 3-9**.

Figure 3-9 Manage Credentials

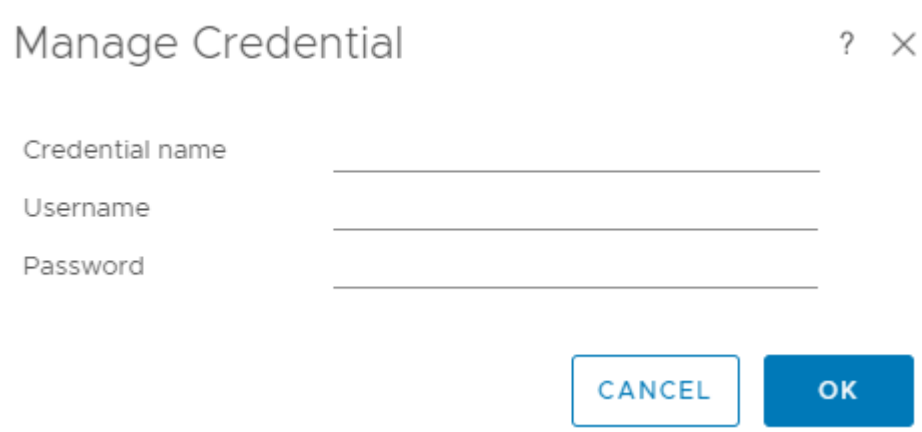


Step 9 Set the following parameters and click **OK**.

- **Credential name**: user-defined name to identify different credentials
- **Username**: FusionDirector username to access the Redfish API. The default username is **rootRedfish**.
- **Password**: FusionDirector password to access the Redfish API. The default password is **Machine@123**.

Step 10 Click **VALIDATE CONNECTION**.

If the test connection is successful, a dialog box is displayed, as shown in **Figure 3-10**. Click **OK**. If the test connection fails, the failure cause is displayed. Modify the FusionDirector information as prompted.

Figure 3-10 Successful test connection

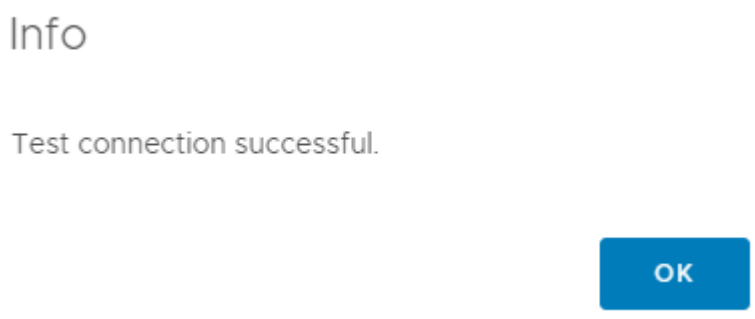


Step 11 Click **ADD**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

The FusionDirector instance is added.

On the **Other Accounts** page, view the added FusionDirector instance, as shown in **Figure 3-11**.

Figure 3-11 Viewing the added account

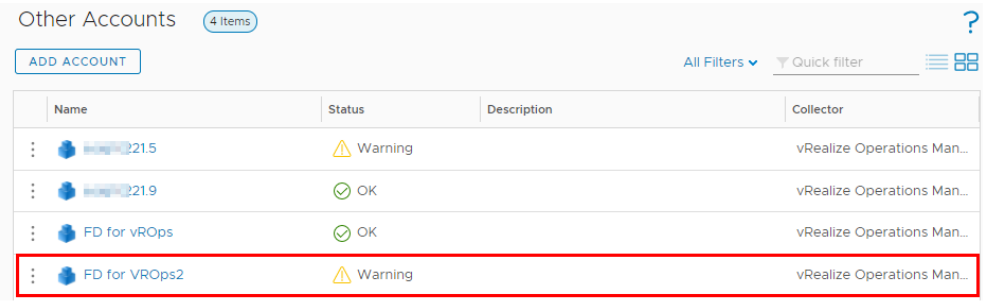

----End

3.1.2 For the vROps plug-in for version 8.12

Step 1 On the vROps WebUI, choose **Data Sources** > **Integrations**.

The **Integrations** page is displayed.

Step 2 In the **Integrations** page, choose **Accounts**.

The **Accounts** page is displayed.


Step 3 Click **Add Account**.

Step 4 Select the type of the account to be added, for example, **FusionDirectorAdapter**.

The **Add Account** page is displayed, as shown in **Figure 3-12**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 3-12 Add Account

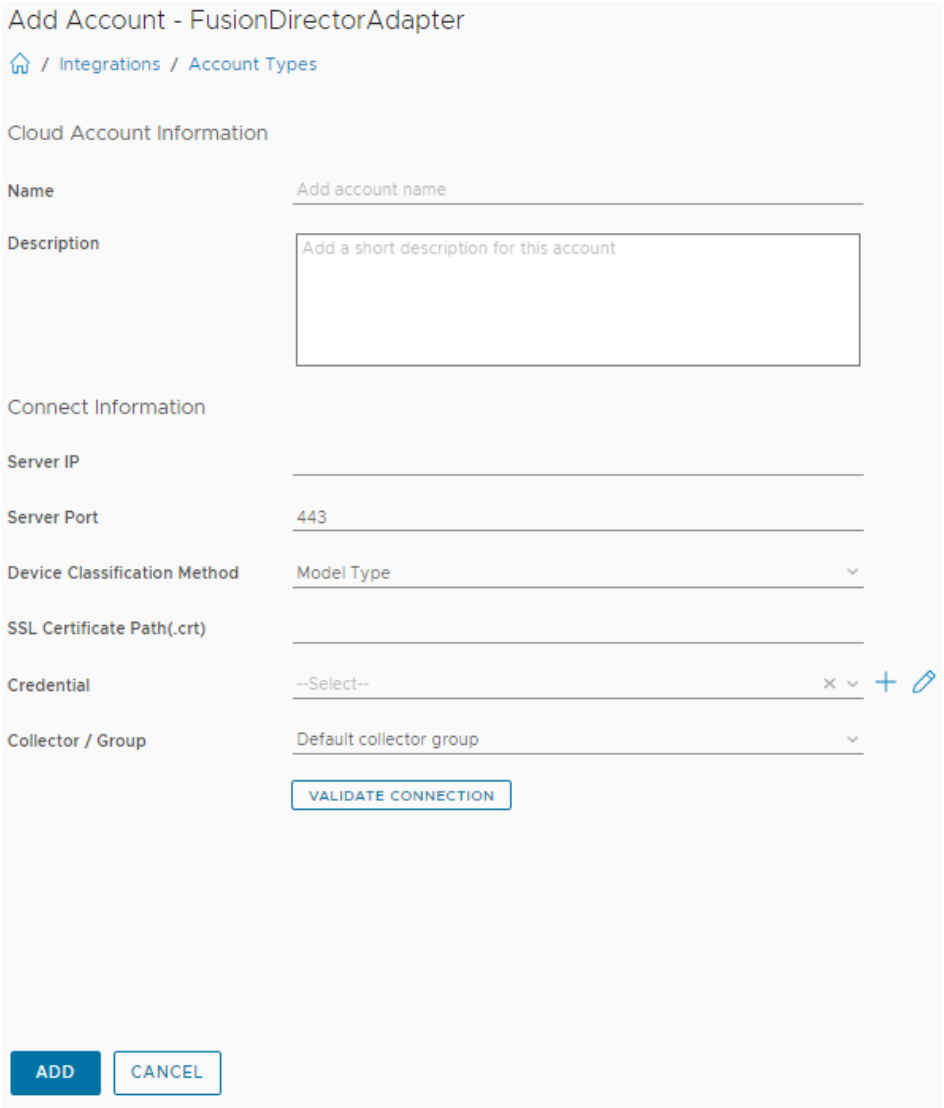

Step 5 Set the following parameters:

- **Name**: user-defined name to identify different FusionDirector instances
- **Description**: (optional) user-defined description to describe a FusionDirector instance
- **Server IP**: FusionDirector IP address
- **Server Port**: FusionDirector port number, which is **443** by default.
- **Device Classification Method**: way to classify servers
  - **Model Type**: type view
  - **Group Type**: group view
- **SSL Certificate Path(.crt)**: (optional) path of the certificate in the vROps

NOTICE


You are advised to upload the SSL certificate for security. For details about how to upload the certificate, see **Step 5** to **Step 6**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Step 6 (Optional) Obtain the certificate.

1. Access the FusionDirector WebUI.
2. Click **Certificate error** in the address box of the browser.
   The **Certificate Invalid** dialog box is displayed, as shown in **Figure 3-13**.


   Figure 3-13 Invalid certificate

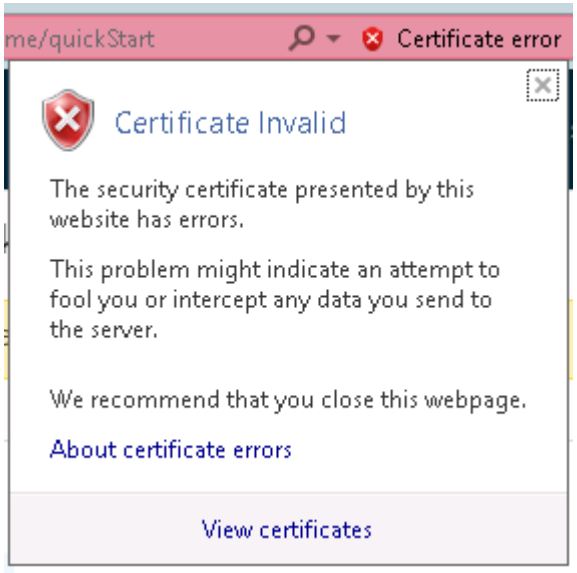

3. Click **View certificates**.
   The **Certificate** dialog box is displayed.
4. Click the **Details** tab.
   The **Details** tab is displayed, as shown in **Figure 3-14**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 3-14 Details

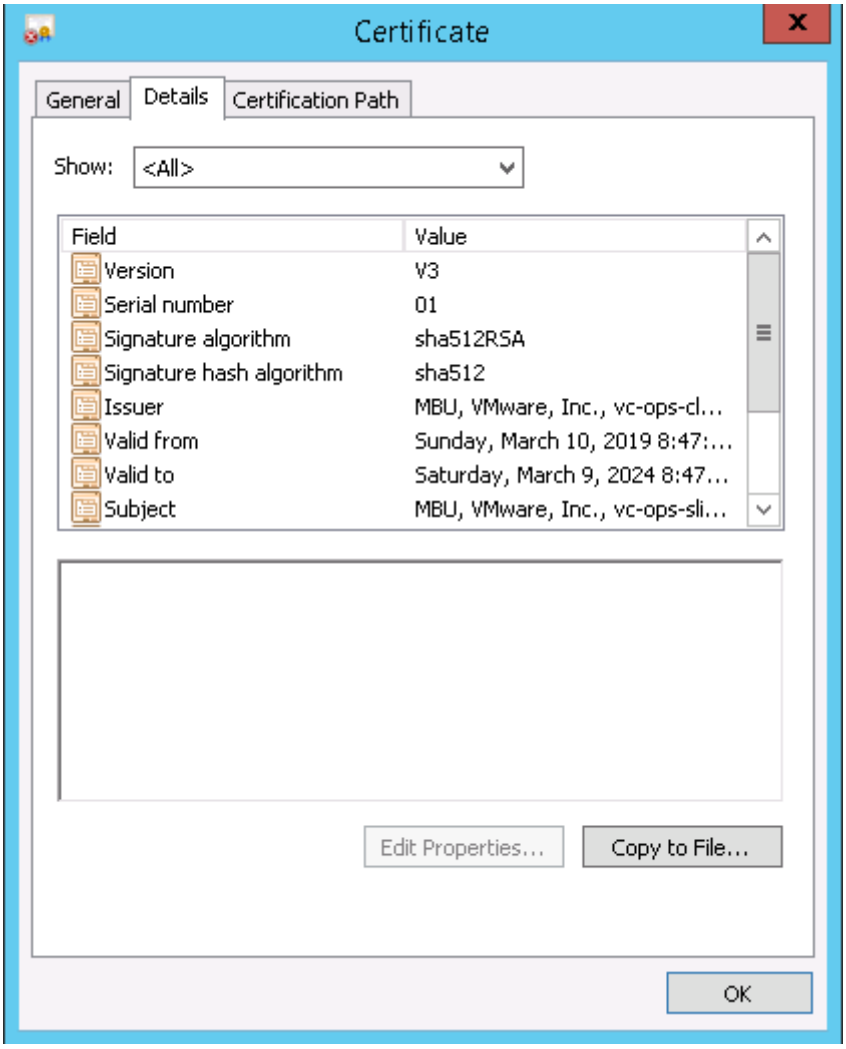

5. Click **Copy to File...**.
   The **Certificate Export Wizard** is displayed, as shown in **Figure 3-15**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.


Figure 3-15 Certificate Export Wizard



6. Click **Next**. In the **Certificate Export Wizard** dialog box, select **DER encoding binary X.509 (.CER)**, as shown in **Figure 3-16**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.


Figure 3-16 Setting the format of files to be exported

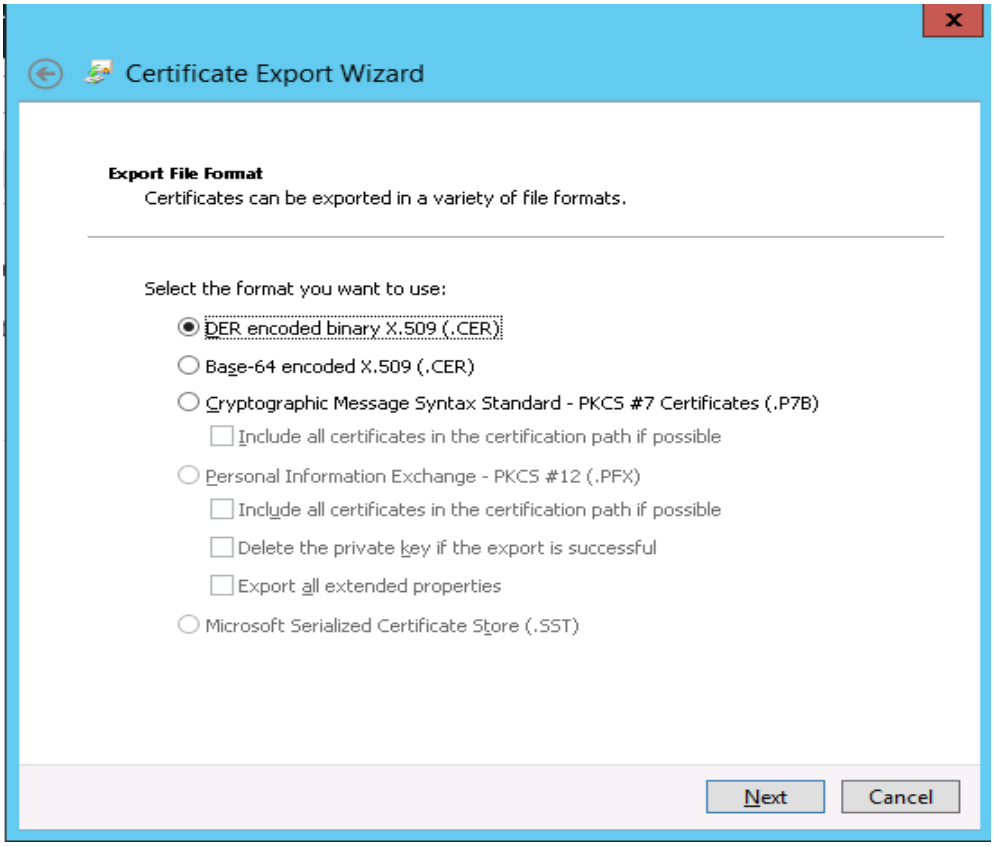

7. Click **Next**. In the **Certificate Export Wizard** dialog box, click **Browse...**, select the certificate export path, and enter the certificate file name, as shown in **Figure 3-17**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 3-17 Service certificate

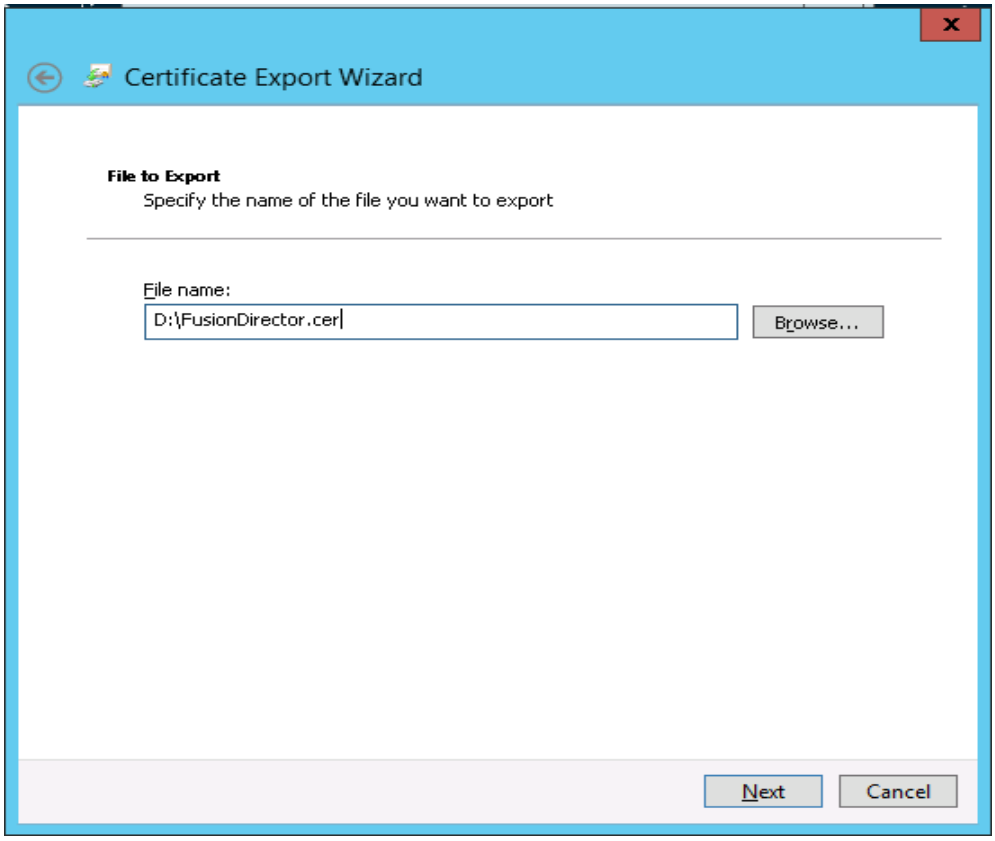


8. Click **Next** to complete certificate export.

Step 7 (Optional) Import the certificate file to the vROps backend.

1. Configure the SSH access permission for the vROps.
   a. The vROps backend is displayed, as shown in **Figure 3-18**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 3-18 vROps backend

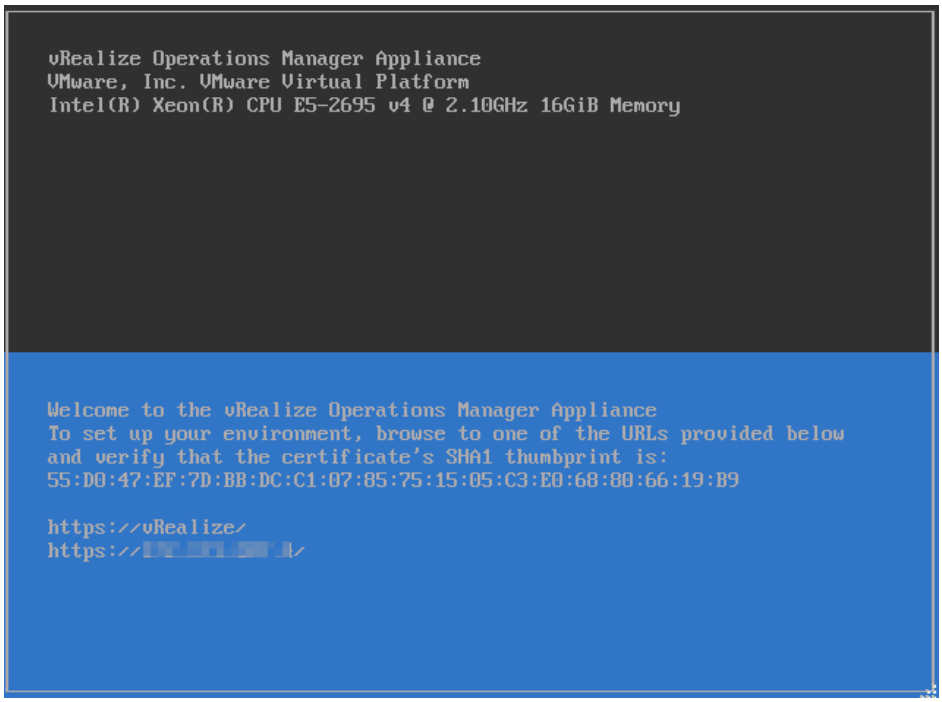


b. Press **Alt+F1** and enter the username and password to log in to the vROps, as shown in **Figure 3-19**.

NOTE

- The username is **root** and the initial password is blank.
- When you log in for the first time, you need to change the initial password, press **Enter**, enter previous and new passwords, and confirm the new password. The new password must contain uppercase letters, lowercase letters, digits, and special characters.

Figure 3-19 Logging in to the vROps

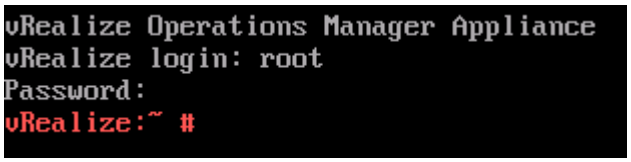

c. Run the **vi /etc/ssh/sshd_config** command to edit the configuration file **sshd_config**.

   Change the value of **MaxSession** to **20** and the value of **AllowTcpForwarding** to **yes**.

d. Run the **service sshd start** command to start the SSHD service.

e. Run the **chkconfig sshd on** command to enable the SSHD service.

f. Run the **service vmware-vcops-firewall stop** command to disable the firewall.

g. Run the **chkconfig vmware-vcops-firewall off** command to disable the firewall upon startup.


 Copyright © XFUSION INTERNATIONAL PTE. LTD.

2. Use the SSH tool to upload the certificate file to **/usr/lib/vmware-vcops/user/plugins/inbound**.
3. Enter the SSL certificate path **/usr/lib/vmware-vcops/user/plugins/inbound/FusionDirector.crt** in **Step 5**.

Step 8 In the **Credential** field, click +.

The **Manage Credentials** dialog box is displayed, as shown in **Figure 3-20**.

Figure 3-20 Manage Credentials

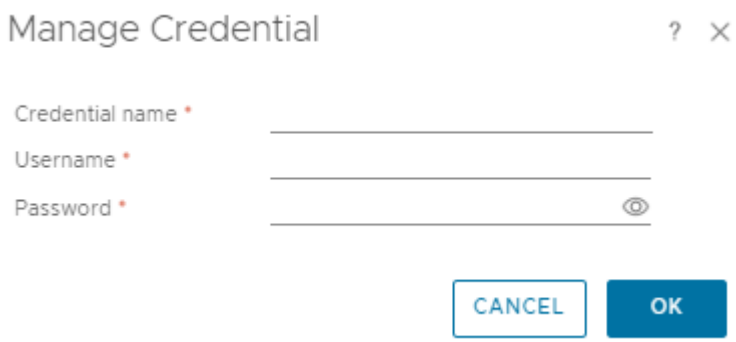


Step 9 Set the following parameters and click **OK**.

- **Credential name**: user-defined name to identify different credentials
- **Username**: FusionDirector username to access the Redfish API. The default username is **rootRedfish**.
- **Password**: FusionDirector password to access the Redfish API. The default password is **Machine@123**.

Step 10 Click **VALIDATE CONNECTION**.

If the test connection is successful, a dialog box is displayed, as shown in **Figure 3-21**. Click **OK**. If the test connection fails, the failure cause is displayed. Modify the FusionDirector information as prompted.

Figure 3-21 Successful test connection

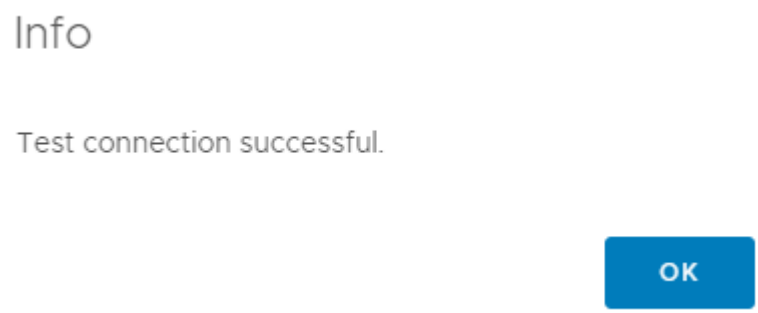


Step 11 Click **ADD**.

The FusionDirector instance is added.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

On the **Accounts** page, view the added FusionDirector instance, as shown in **Figure 3-22**.

Figure 3-22 Viewing the added account

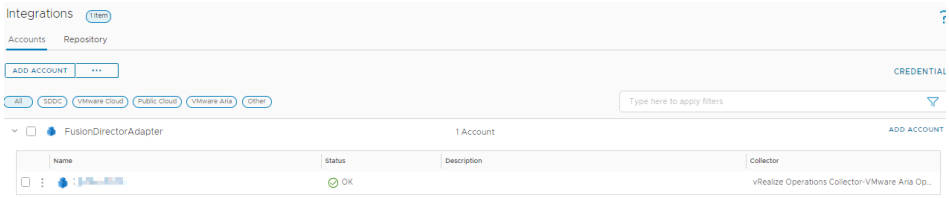


----End

3.1.3 For the vROps plug-in for version SaaS

Step 1 On the VMware Aria Operations WebUI, choose **Data Sources** > **Integrations** > **Repository**.

The **Repository** page is displayed, as shown in **Figure 3-23**


Figure 3-23 Repository

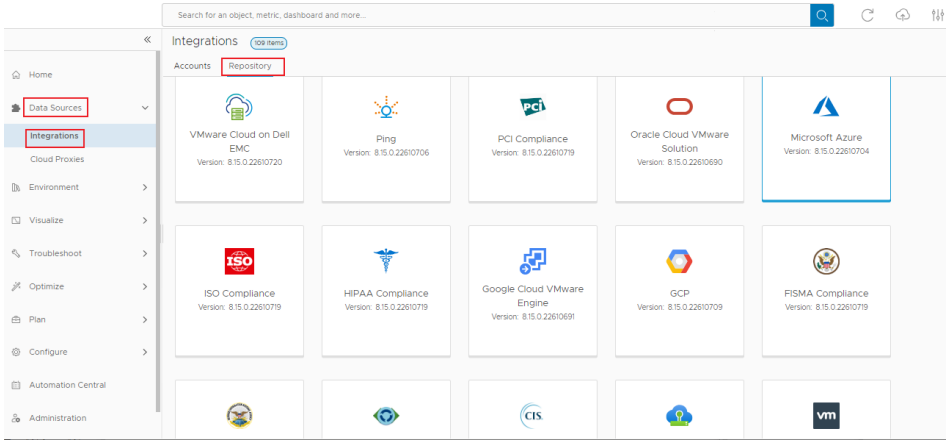

Step 2 In the page, select the installed vROps plug-in,.

The **Management Pack Details** page is displayed, as shown in **Figure 3-24**.

Figure 3-24 Management Pack Details

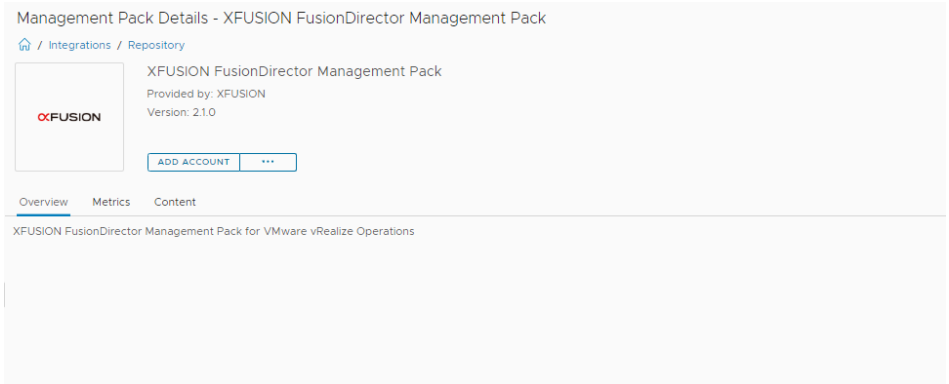


 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Step 3 Click **Add Account**.

Step 4 Select the type of the account to be added, for example, **FusionDirectorAdapter**.

The **Add Account** page is displayed, as shown in **Figure 3-25**.

Figure 3-25 Add Account

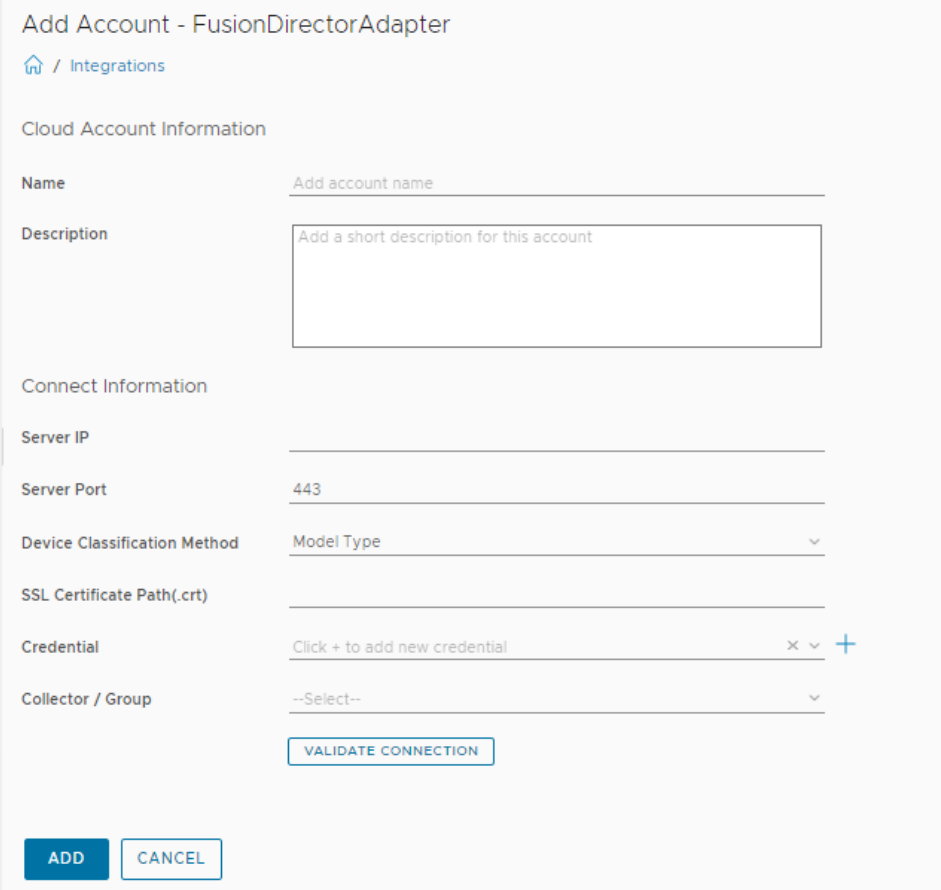

Step 5 Set the following parameters:

- **Name**: user-defined name to identify different FusionDirector instances
- **Description**: (optional) user-defined description to describe a FusionDirector instance
- **Server IP**: FusionDirector IP address
- **Server Port**: FusionDirector port number, which is **443** by default.
- **Device Classification Method**: way to classify servers
  - **Model Type**: type view
  - **Group Type**: group view
- **SSL Certificate Path(.crt)**: (optional) path of the certificate in the vROps

NOTICE


You are advised to upload the SSL certificate for security. For details about how to upload the certificate, see **Step 6** to **Step 7**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Step 6 (Optional) Obtain the certificate.

1. Access the FusionDirector WebUI.
2. Click **Certificate error** in the address box of the browser.
   The **Certificate Invalid** dialog box is displayed, as shown in **Figure 3-26**.


   Figure 3-26 Invalid certificate

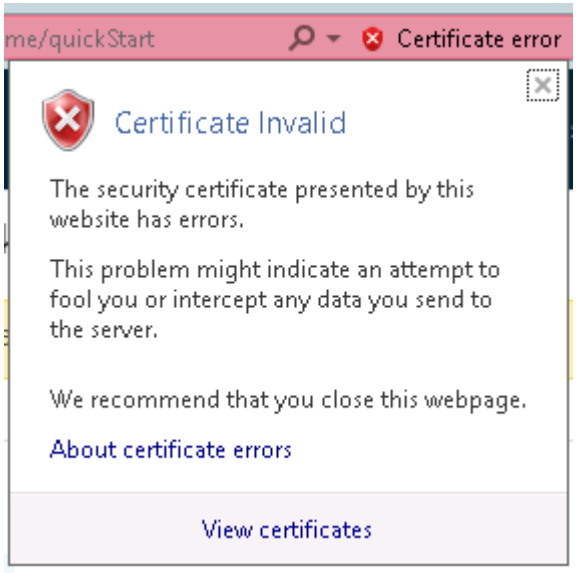

3. Click **View certificates**.
   The **Certificate** dialog box is displayed.
4. Click the **Details** tab.
   The **Details** tab is displayed, as shown in **Figure 3-27**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 3-27 Details

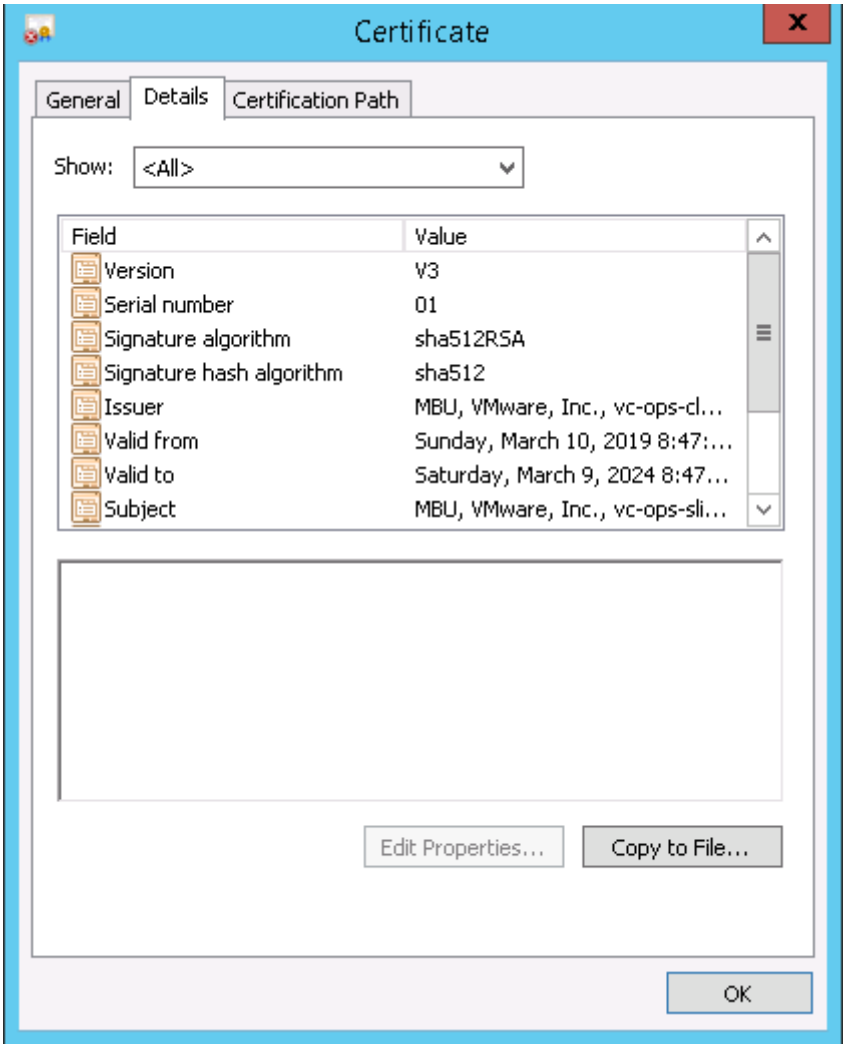

5. Click **Copy to File...**.
   The **Certificate Export Wizard** is displayed, as shown in **Figure 3-28**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.


Figure 3-28 Certificate Export Wizard



6. Click **Next**. In the **Certificate Export Wizard** dialog box, select **DER encoding binary X.509 (.CER)**, as shown in **Figure 3-29**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.


Figure 3-29 Setting the format of files to be exported

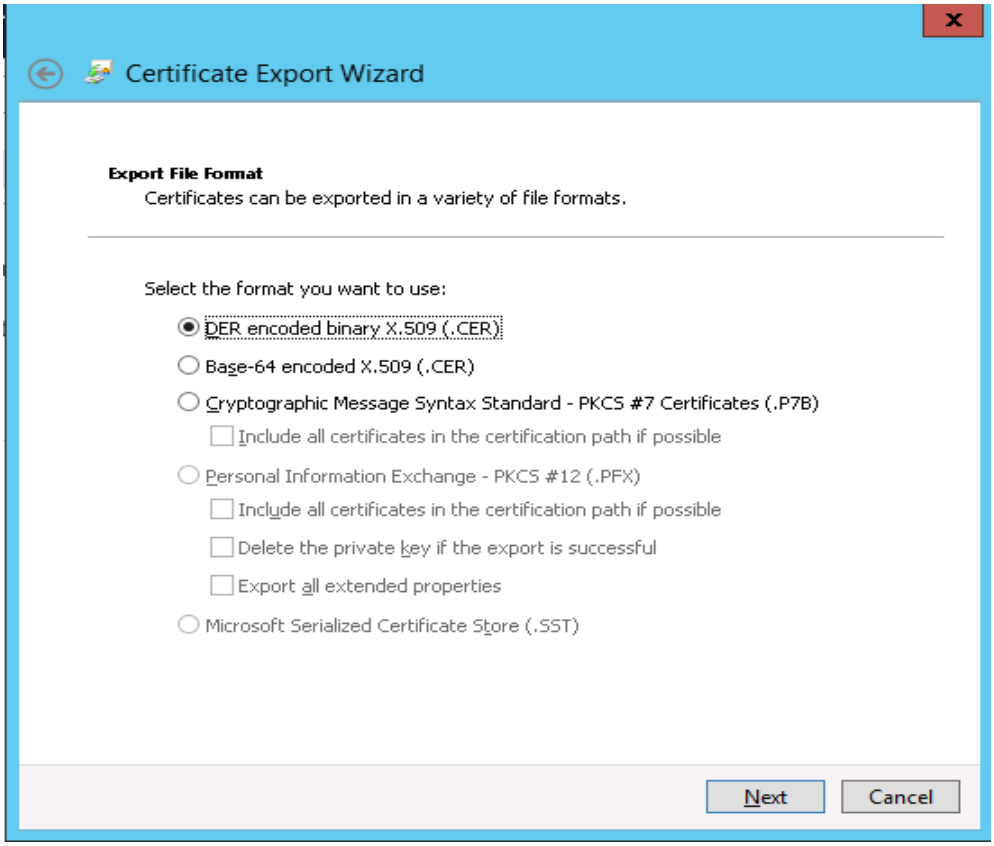

7. Click **Next**. In the **Certificate Export Wizard** dialog box, click **Browse...**, select the certificate export path, and enter the certificate file name, as shown in **Figure 3-30**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 3-30 Service certificate

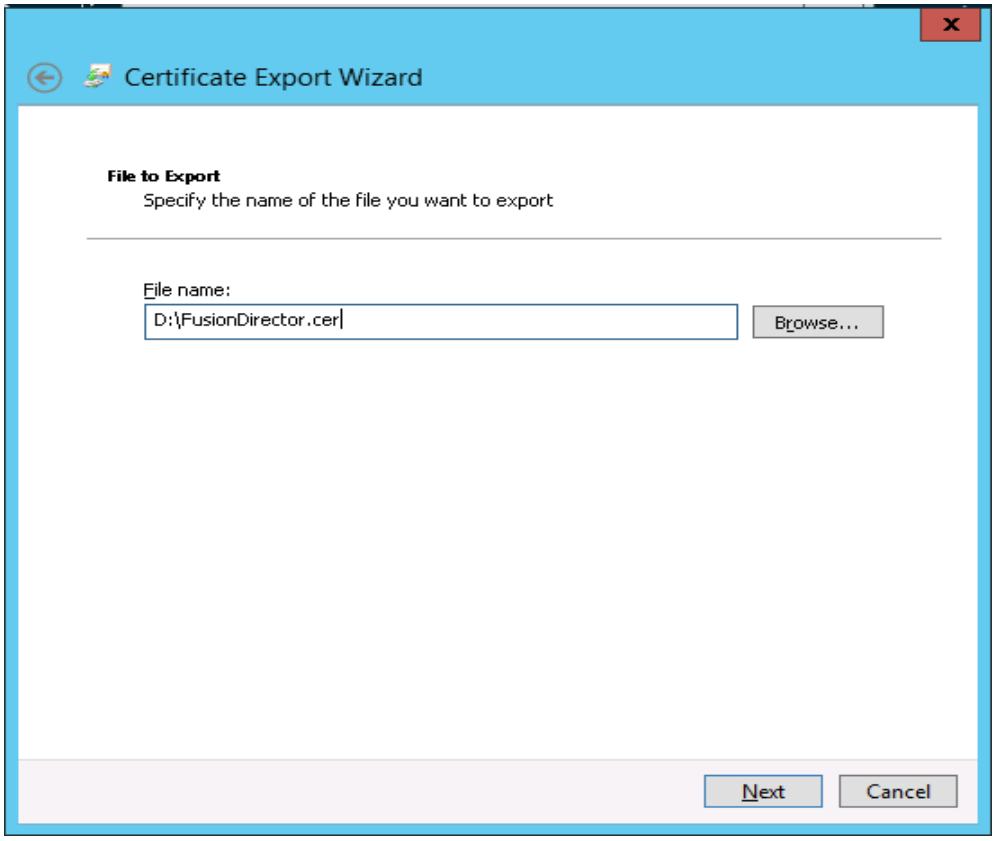


8. Click **Next** to complete certificate export.

Step 7 (Optional) Import the certificate file to the vROps backend.

1. Configure the SSH access permission for the vROps.
   a. The vROps backend is displayed, as shown in **Figure 3-31**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 3-31 vROps backend

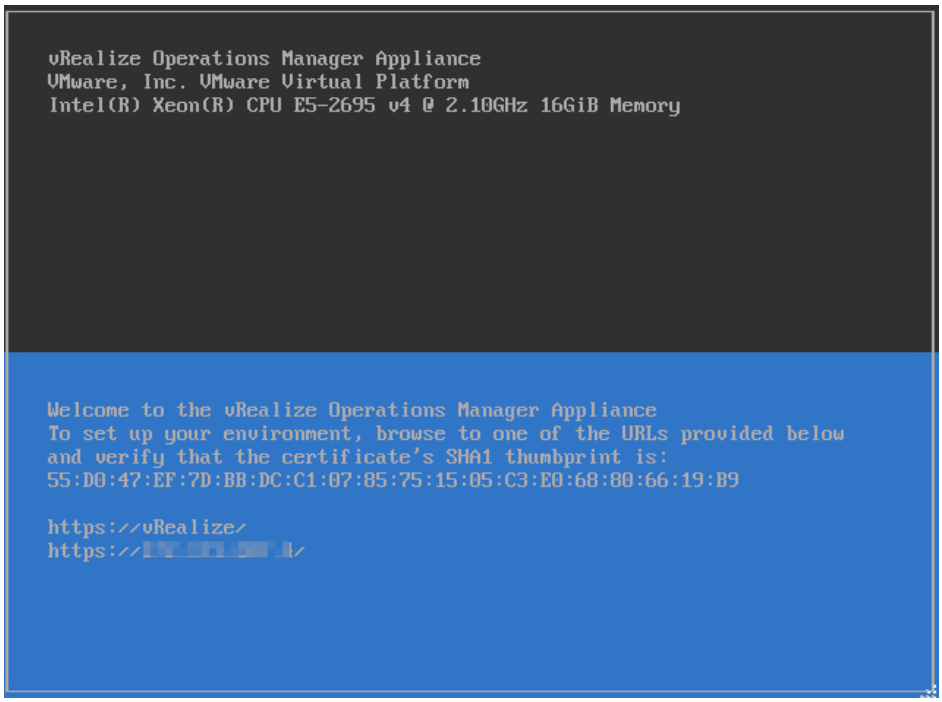


b. Press **Alt+F1** and enter the username and password to log in to the vROps, as shown in **Figure 3-32**.

NOTE

- The username is **root** and the initial password is blank.
- When you log in for the first time, you need to change the initial password, press **Enter**, enter previous and new passwords, and confirm the new password. The new password must contain uppercase letters, lowercase letters, digits, and special characters.

Figure 3-32 Logging in to the vROps

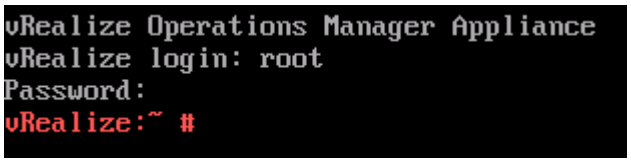

c. Run the **vi /etc/ssh/sshd_config** command to edit the configuration file **sshd_config**.

   Change the value of **MaxSession** to **20** and the value of **AllowTcpForwarding** to **yes**.

d. Run the **service sshd start** command to start the SSHD service.

e. Run the **chkconfig sshd on** command to enable the SSHD service.

f. Run the **service vmware-vcops-firewall stop** command to disable the firewall.

g. Run the **chkconfig vmware-vcops-firewall off** command to disable the firewall upon startup.


 Copyright © XFUSION INTERNATIONAL PTE. LTD.

2. Use the SSH tool to upload the certificate file to **/usr/lib/vmware-vcops/user/plugins/inbound**.
3. Enter the SSL certificate path **/usr/lib/vmware-vcops/user/plugins/inbound/FusionDirector.crt** in **Step 5**.

Step 8 In the **Credential** field, click +.

The **Manage Credentials** dialog box is displayed, as shown in **Figure 3-33**.

Figure 3-33 Manage Credentials

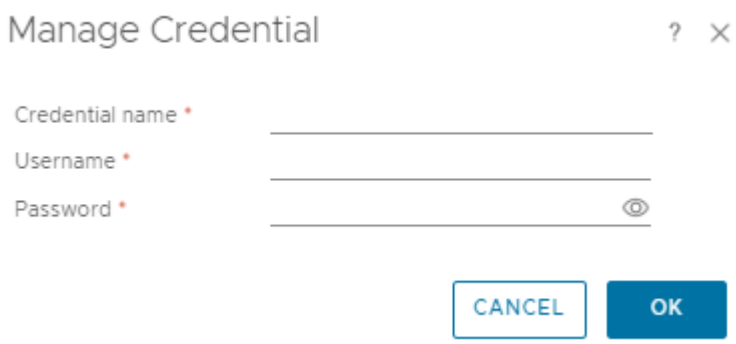

Step 9 Set the following parameters and click **OK**.

- **Credential name**: user-defined name to identify different credentials
- **Username**: FusionDirector username to access the Redfish API. The default username is **rootRedfish**.
- **Password**: FusionDirector password to access the Redfish API. The default password is **Machine@123**.


Step 10 In **Collector/Group** select the collector/group generated when configuring the cloud proxy in **2.1.3 Installating the vROps plug-in for versions SaaS**.

NOTE

When configuring the cloud proxy, you can customize the collector/group name, usually named CloudProxy-*xxx*.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.


Figure 3-34 Collector/Group

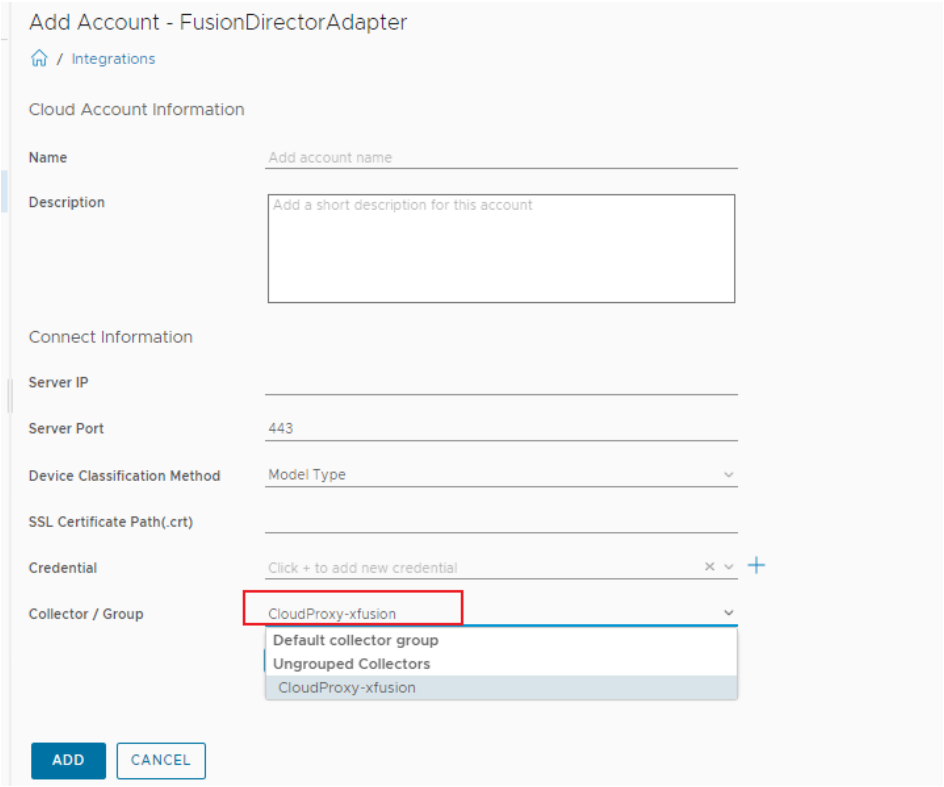

Step 11 Click **VALIDATE CONNECTION**.

If the test connection is successful, a dialog box is displayed, as shown in **Figure 3-35**. Click **OK**. If the test connection fails, the failure cause is displayed. Modify the FusionDirector information as prompted.

Figure 3-35 Successful test connection

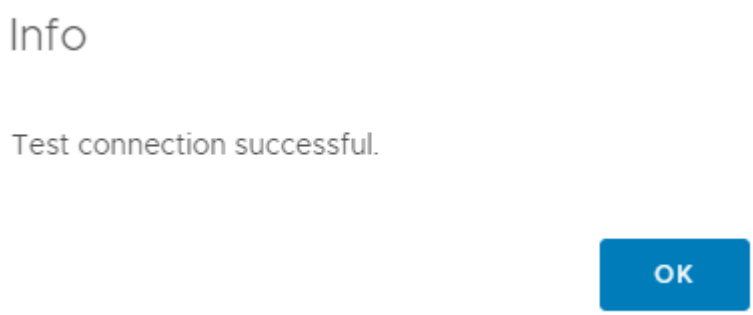


Step 12 Click **ADD**.

The FusionDirector instance is added.

On the **Accounts** page, view the added FusionDirector instance, as shown in **Figure 3-36**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 3-36 Viewing the added account

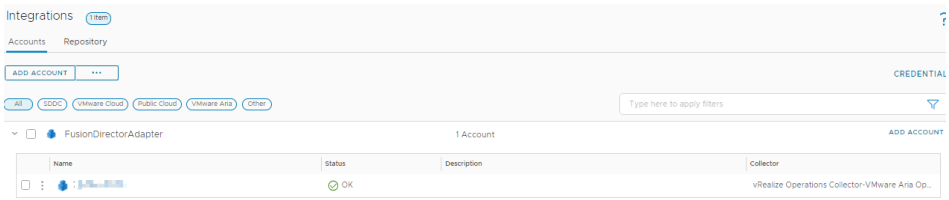

----End

3.2 Modifing FusionDirector

3.2.1 For the vROps plug-in for versions 8.1 or earlier


Step 1 On the vROps WebUI, choose **Administration**.

The **Administration** page is displayed.

Step 2 In the navigation tree on the left, choose **Other Accounts**.

The **Other Accounts** page is displayed, as shown in **Figure 3-37**.

Figure 3-37 Other Accounts

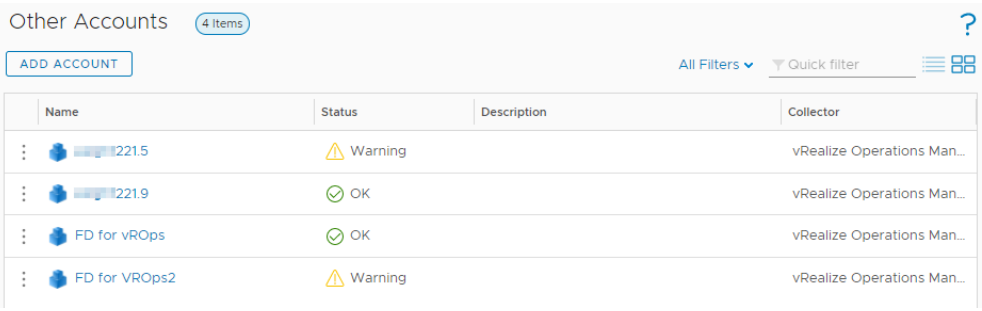


Step 3 Click the name of the FusionDirector instance to be modified, for example, **FD for vROps**.

The FusionDirector information page is displayed, as shown in **Figure 3-38**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 3-38 FusionDirector information page

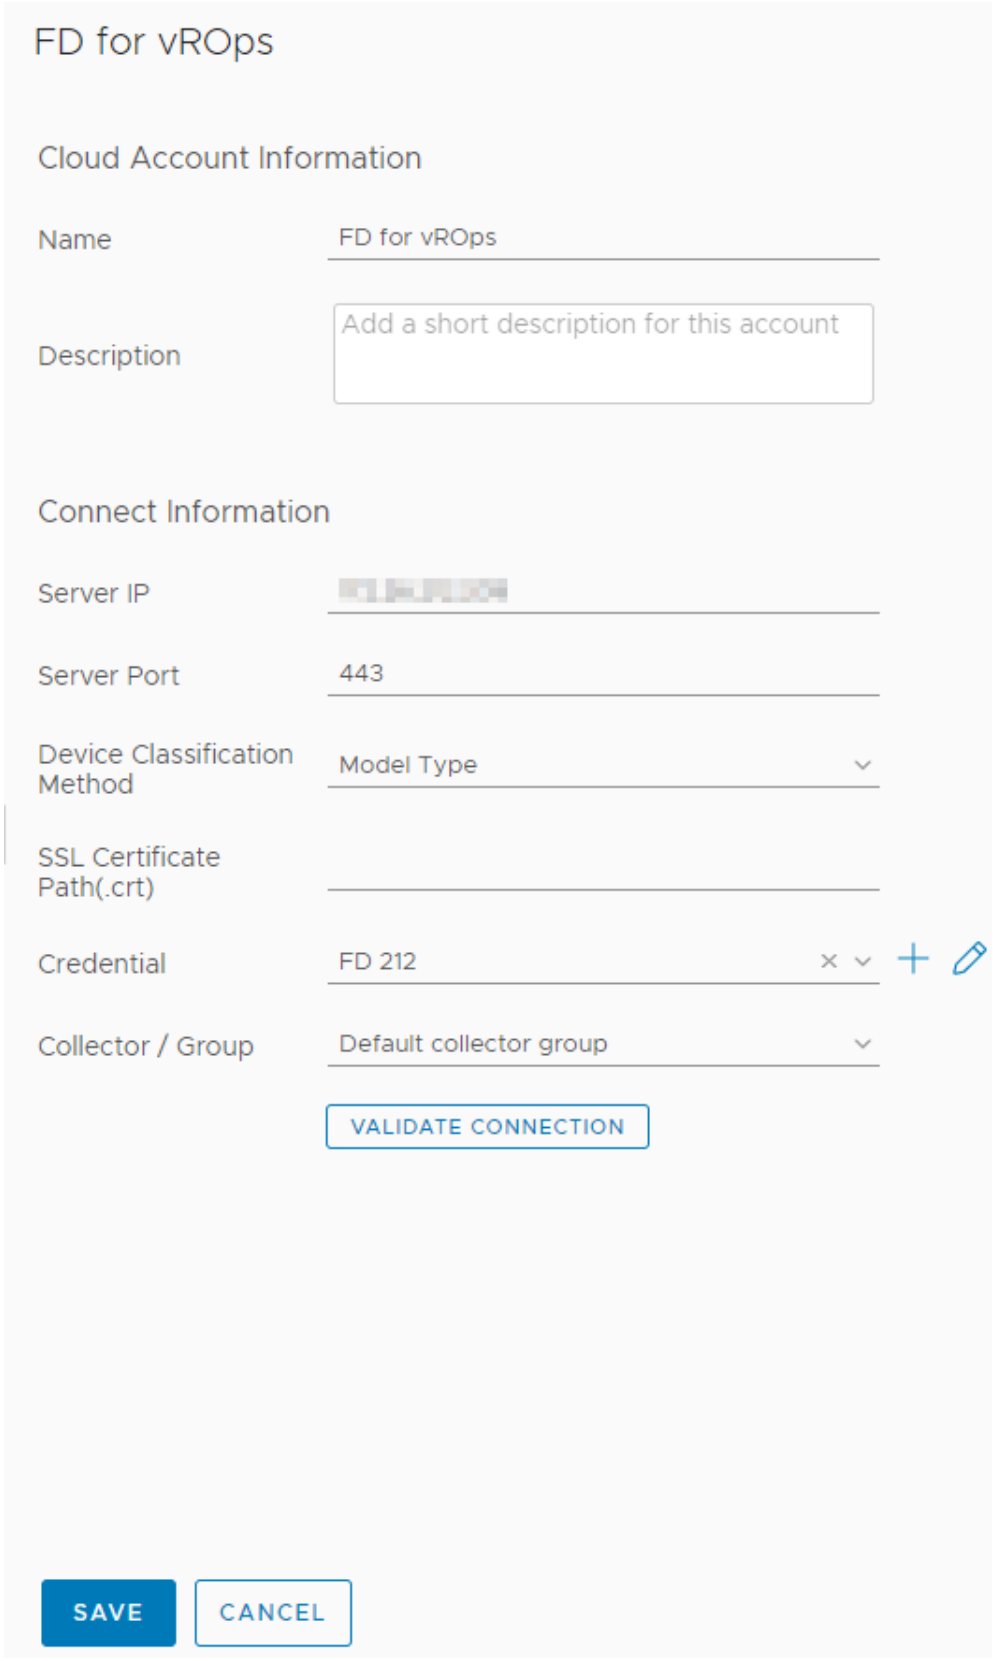

Step 4 Modify the following parameters as required:

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

- **Display name**: user-defined name to identify different FusionDirector instances
- **Description**: (optional) user-defined description to describe a FusionDirector instance
- **Server IP**: FusionDirector IP address
- **Server Port**: FusionDirector port number, which is **443** by default.
- **Device Classification Method**: way to classify servers
  - **Model Type**: classify servers by type
  - **Group Type**: classify servers by group
- **SSL Certificate Path(.crt)**: (optional) path of the certificate in the vROps
- **Credential**: Click to change the credential name, username, and password.

NOTE

If the FusionDirector port number, username, or password is changed after the FusionDirector connection, you need to synchronize the new port number, user name, or password to the FusionDirector. Otherwise, server management is affected.

Step 5 Check whether the information in the **Connect Information** area is modified.

- If yes, click **VALIDATE CONNECTION**.

  If the test connection is successful, a dialog box is displayed. Click **OK**. If the test connection fails, the failure cause is displayed. Modify the FusionDirector information as prompted.
- If no, go to **Step 6**.

Step 6 Click **SAVE**.

The **Other Accounts** page is displayed. You can view the modified FusionDirector information.

----End

3.2.2 For the vROps plug-in for version 8.12 and SaaS

Step 1 On the vROps WebUI, choose **Data Sources** > **Integrations**.

The **Integrations** page is displayed.

Step 2 In the **Integrations** page, choose **Accounts**.

The **Accounts** page is displayed.

Step 3 Click .


The account list is displayed.

Step 4 Click the name of the FusionDirector instance to be modified, for example, **FD for vROps**.

The FusionDirector information page is displayed, as shown in **Figure 3-39**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 3-39 FusionDirector information page

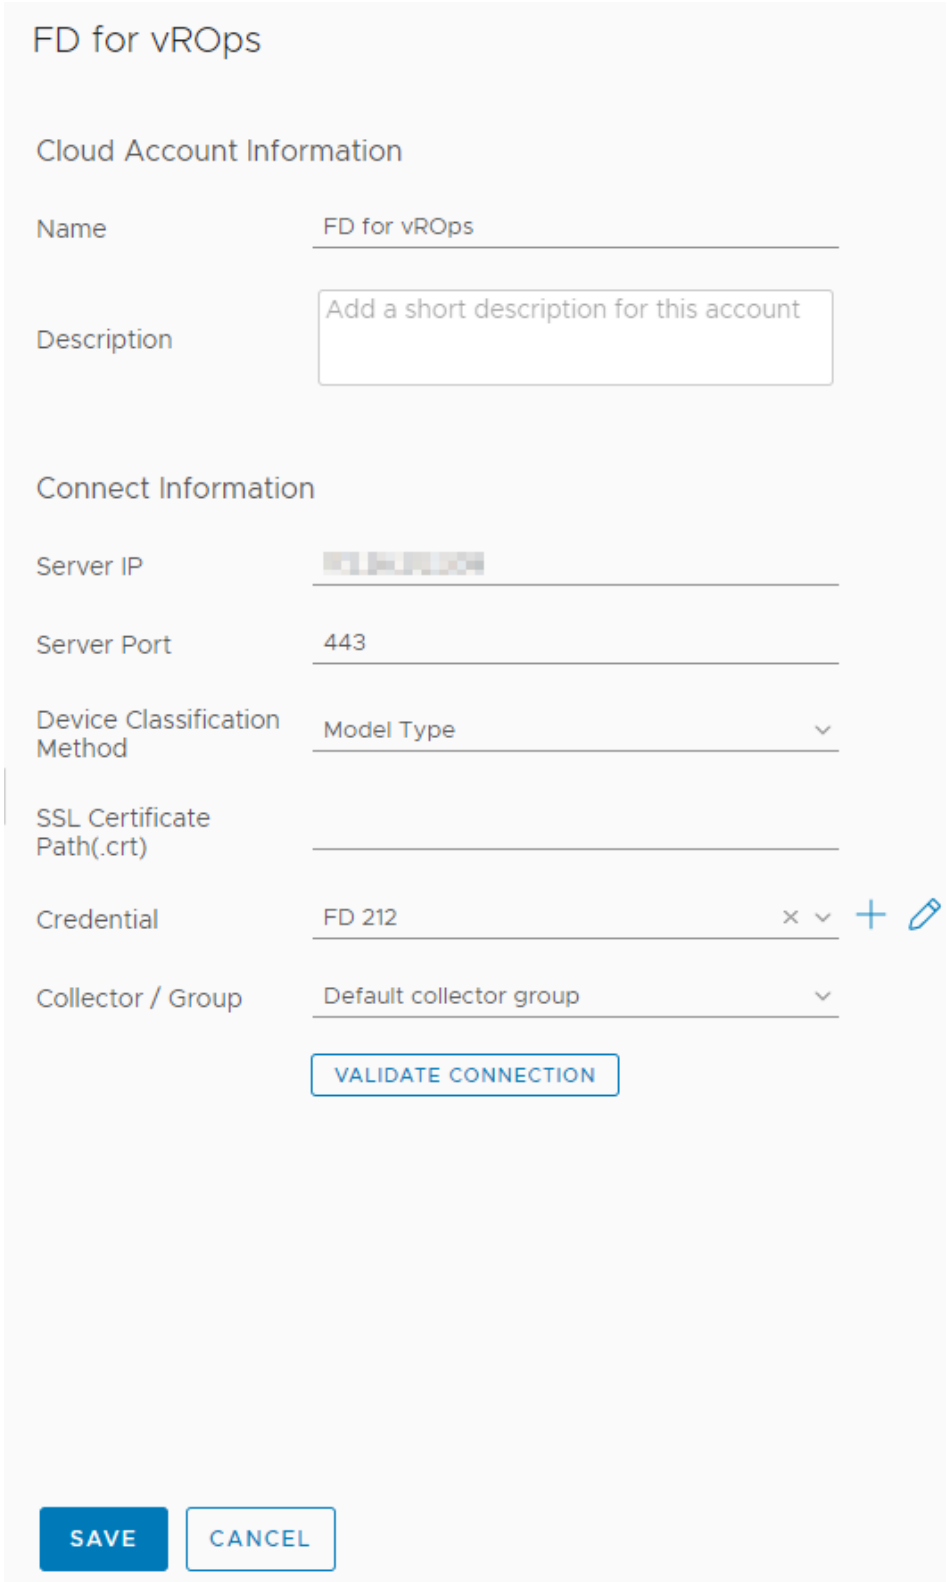

Step 5 Modify the following parameters as required:

- **Display name**: user-defined name to identify different FusionDirector instances

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

- **Description**: (optional) user-defined description to describe a FusionDirector instance
- **Server IP**: FusionDirector IP address
- **Server Port**: FusionDirector port number, which is **443** by default.
- **Device Classification Method**: way to classify servers
  - **Model Type**: classify servers by type
  - **Group Type**: classify servers by group
- **SSL Certificate Path(.crt)**: (optional) path of the certificate in the vROps
- **Credential**: Click to change the credential name, username, and password.

NOTE

If the FusionDirector port number, username, or password is changed after the FusionDirector connection, you need to synchronize the new port number, user name, or password to the FusionDirector. Otherwise, server management is affected.

Step 6 Check whether the information in the **Connect Information** area is modified.

- If yes, click **VALIDATE CONNECTION**.

  If the test connection is successful, a dialog box is displayed. Click **OK**. If the test connection fails, the failure cause is displayed. Modify the FusionDirector information as prompted.
- If no, go to **Step 6**.

Step 7 Click **SAVE**.

The **Other Accounts** page is displayed. You can view the modified FusionDirector information.

----End

3.3 Deleting FusionDirector

3.3.1 For the vROps plug-in for versions 8.1 or earlier


Step 1 On the vROps WebUI, choose **Administration**.

The **Administration** page is displayed.

Step 2 In the navigation tree on the left, choose **Other Accounts**.

The **Other Accounts** page is displayed, as shown in **Figure 3-40**.

Figure 3-40 Other Accounts

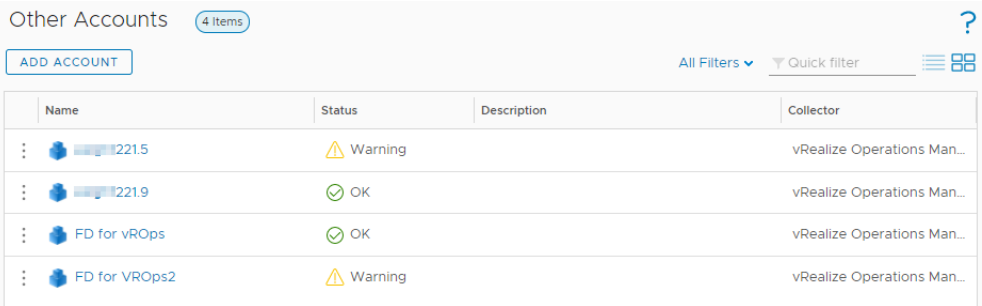

 Copyright © XFUSION INTERNATIONAL PTE. LTD.


Step 3 Click ⋮ next to the name of the FusionDirector instance to be deleted.

The operation selection list is displayed.

Step 4 Click **Delete**.

A confirmation dialog box is displayed, as shown in **Figure 3-41**.

Figure 3-41 Deletion confirmation dialog box

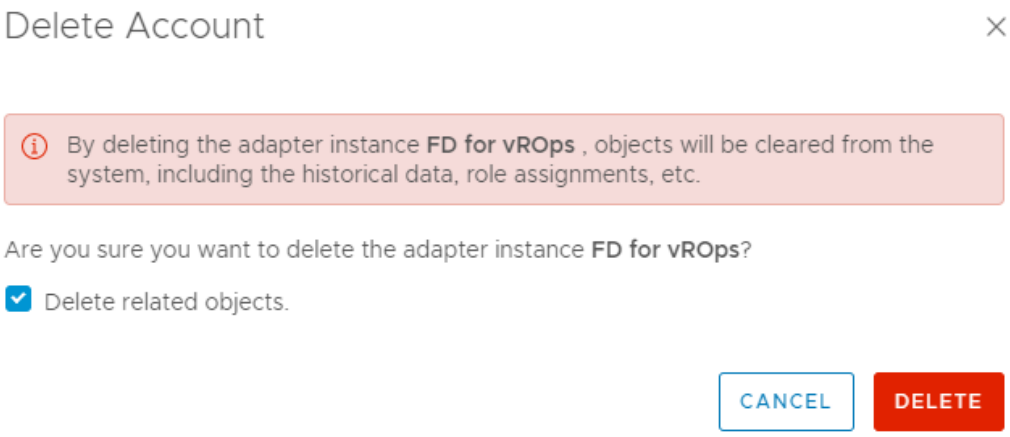

Step 5 Select **Delete related objects.** (which is selected by default) and click **DELETE**.

The FusionDirector instance is deleted.

----End

3.3.2 For the vROps plug-in for version 8.12 and SaaS


Step 1 On the vROps WebUI, choose **Data Sources** > **Integrations**.

The **Integrations** page is displayed.

Step 2 In the **Integrations** page, choose **Accounts**.

The **Accounts** page is displayed.

Figure 3-42 Accounts

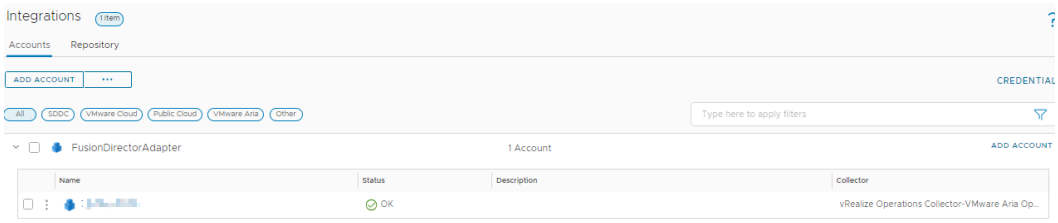

Step 3 Click ›.

The account list is displayed.

Step 4 Click ⋮ next to the name of the FusionDirector instance to be deleted.


The operation selection list is displayed.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Step 5 Click **Delete**.

A confirmation dialog box is displayed, as shown in **Figure 3-43**.

Figure 3-43 Deletion confirmation dialog box

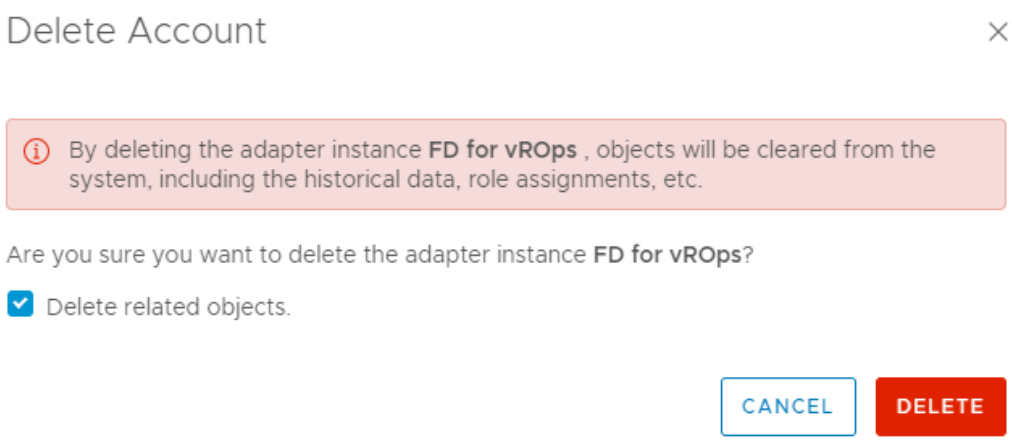

Step 6 (Optional) Select **Delete related objects.** (which is selected by default) and click **DELETE**.

The FusionDirector instance is deleted.

----End

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

4 Querying XFUSION Server Information

4.1 Querying Servers
4.2 Querying Component Information
4.3 Querying Component Group Information
4.4 Querying Server Information
4.5 Querying Server Type Information
4.6 Querying the FusionDirector Information

4.1 Querying Servers

4.1.1 For the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, choose **Environment**.

The **Environment** page is displayed.


Step 2 In the navigation pane, choose **XFUSION FusionDirector Management Pack** > **XFUSION Servers**.

The **XFUSION Servers** page is displayed.

Step 3 In the navigation pane, view the list of all servers, as shown in **Figure 4-1** and **Figure 4-2**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.


Figure 4-1 XFUSION servers by Model Type

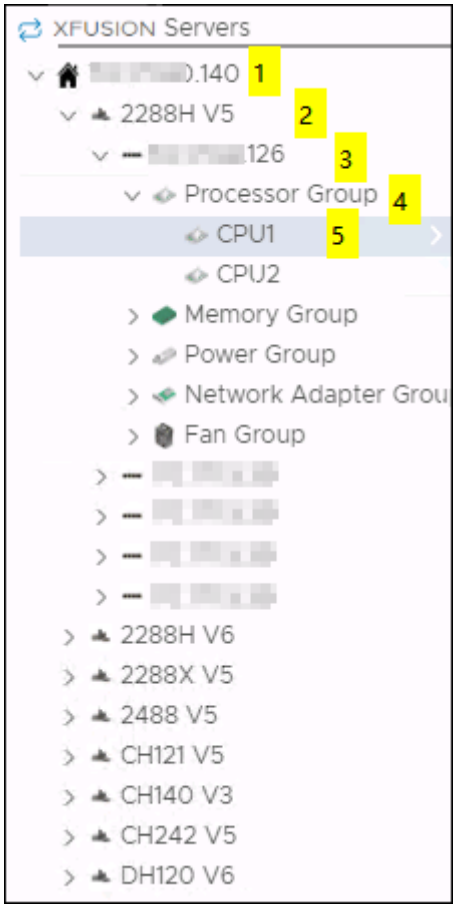

- 1: FusionDirector IP address
- 2: Server model
- 3: Server label and iBMC IP address. If no label is set for the server, only the iBMC IP address is displayed. For details about how to set the server label, see the ***FusionDirector Operation Guide***.
- 4: Component group
- 5: A component

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 4-2 XFUSION servers by Group Type

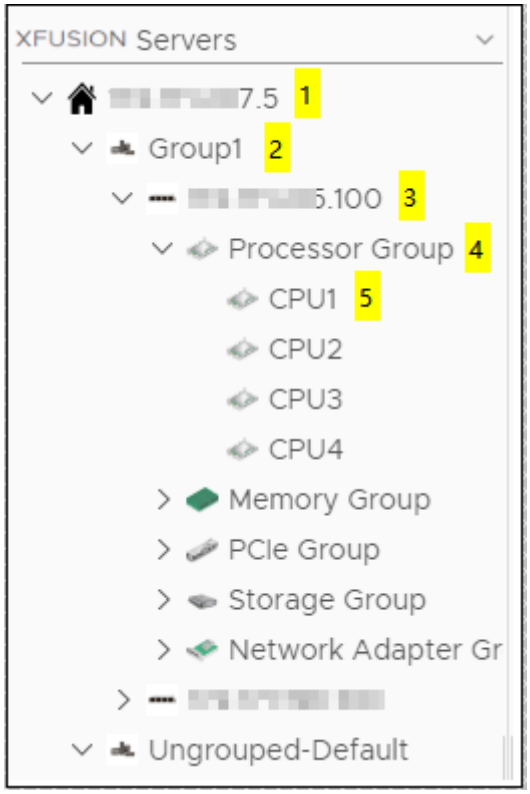

- 1: FusionDirector IP address
- 2: Server group name, which can be set in the FusionDirector. For details, see the ***FusionDirector Operation Guide***.
- 3: Server label and iBMC IP address. If no label is set for the server, only the iBMC IP address is displayed. For details about how to set the server label, see the ***FusionDirector Operation Guide***.
- 4: Component type
- 5: A component

----End

4.1.2 For the vROps plug-in for version 8.12 and SaaS

Step 1 On the vROps WebUI, choose **Environment > Object Browser**.

The **Object Browser** page is displayed.


Step 2 In the page, choose **XFUSION FusionDirector Management Pack** > **XFUSION Servers**.

The **XFUSION Servers** page is displayed.

Step 3 In the page, view the list of all servers, as shown in **Figure 4-3** and**Figure 4-4**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.


Figure 4-3 XFUSION servers by Model Type

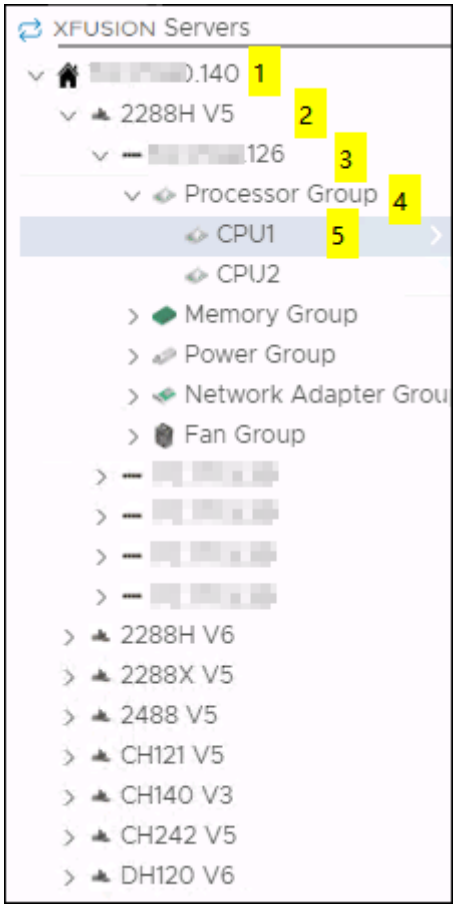

- 1: FusionDirector IP address
- 2: Server model
- 3: Server label and iBMC IP address. If no label is set for the server, only the iBMC IP address is displayed. For details about how to set the server label, see the ***FusionDirector Operation Guide***.
- 4: Component group
- 5: A component

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 4-4 XFUSION servers by Group Type

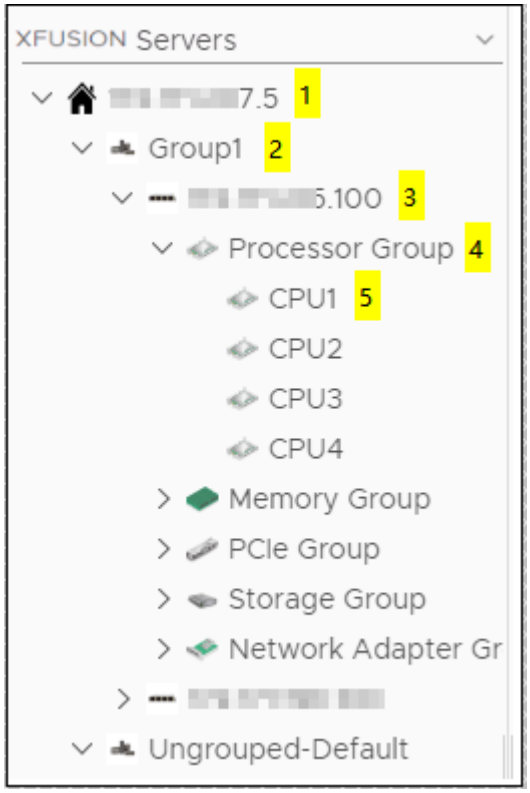

- 1: FusionDirector IP address
- 2: Server group name, which can be set in the FusionDirector. For details, see the ***FusionDirector Operation Guide***.
- 3: Server label and iBMC IP address. If no label is set for the server, only the iBMC IP address is displayed. For details about how to set the server label, see the ***FusionDirector Operation Guide***.
- 4: Component type
- 5: A component

----End

4.2 Querying Component Information

4.2.1 For the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, select **Environment**.

The **Environment** page is displayed.


Step 2 In the navigation pane, choose **XFUSION FusionDirector Management Pack** > **XFUSION Servers**.

The **XFUSION Servers** page is displayed.

Step 3 Select a FusionDirector IP address, a server model (by Group Type), a server, a component group, and a component, as shown in **Figure 4-5**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 4-5 Component information

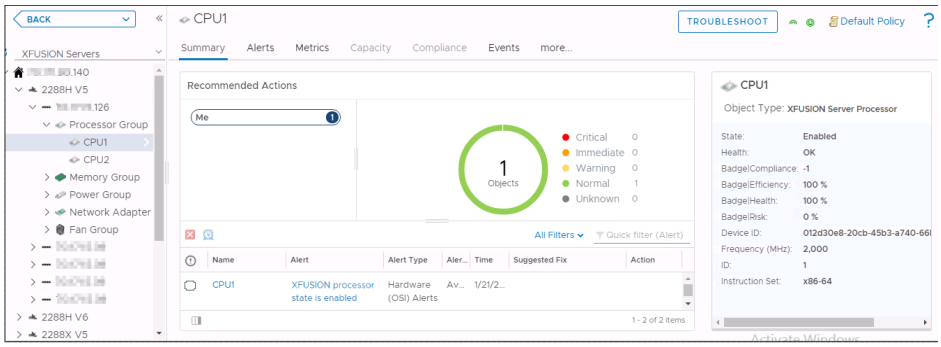


Step 4 View the summary of the component.

1. Click **Summary**.

   The **Summary** page is displayed.

2. In the **Recommended Actions** area, view the running status and alarm information about the component, as shown in **Figure 4-6**.

Figure 4-6 Viewing the summary

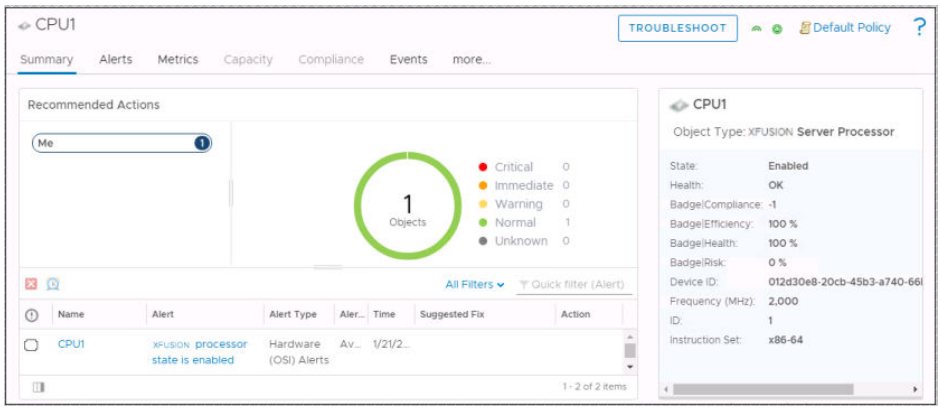


Step 5 View warning information of the component.

1. Click **Alerts**.

   The **Alerts** page is displayed.

2. Select a grouping mode, for example, **Object Type**.
3. Click ❯ to expand the warning list.
4. Click a warning name to view details about the warning.

Figure 4-7 Viewing warning information

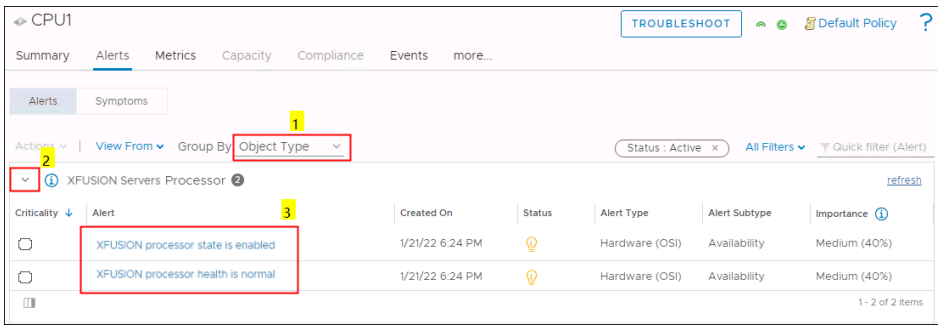


 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Step 6 View the real-time status curve of the component.

1. Click **Metrics**.

   The **Metrics** page is displayed.


   Figure 4-8 Metrics

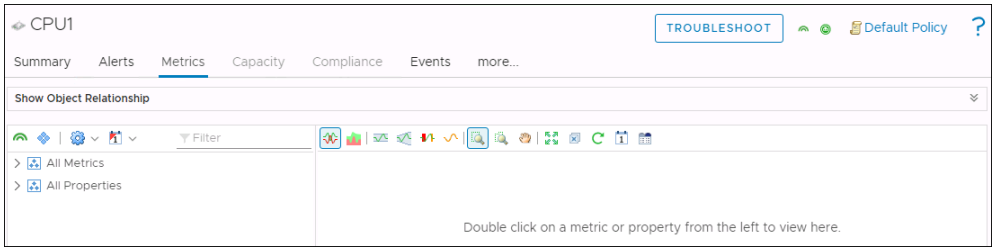

2. Click ⟩ to expand the information list under **All Metrics** or **All Properties**.
3. Double-click the real-time status information to be viewed. For example, double-click **Health**, as shown in **Figure 4-9**.

   You can view the real-time status curve in the right pane.

   Figure 4-9 Viewing the real-time status curve

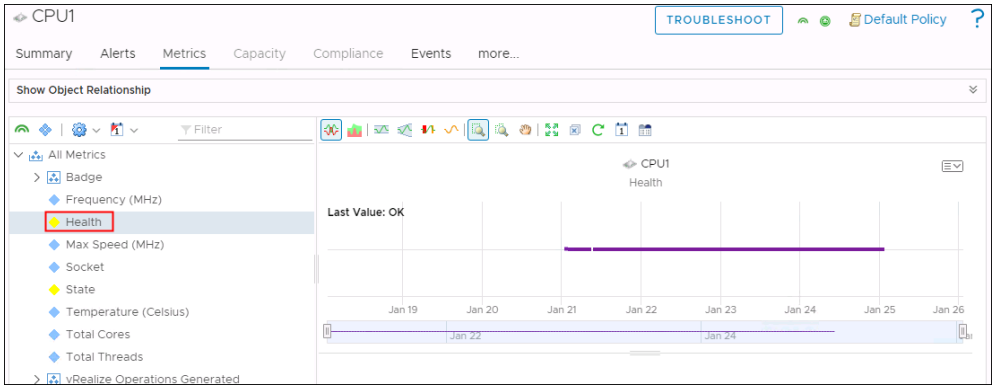


Step 7 View details about a component view.

1. Click **more** > **Details**.

   The **Details** page is displayed.
2. Select a view.
3. View details about the view.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 4-10 Viewing details about the view

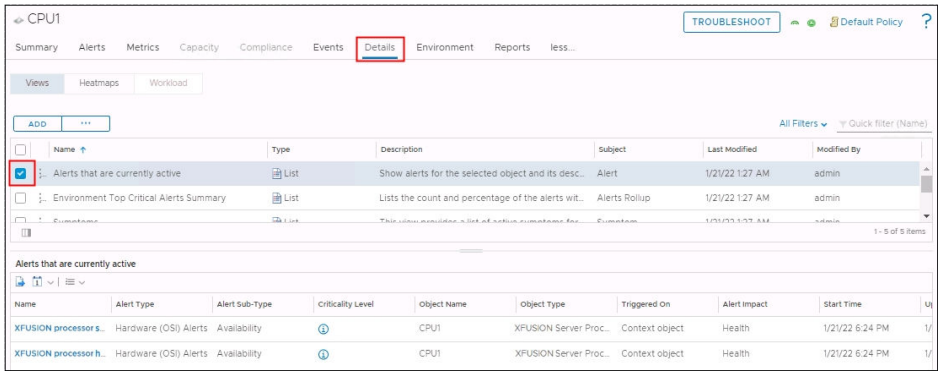

----End

4.2.2 For the vROps plug-in for version 8.12 and SaaS

Step 1 On the vROps WebUI, choose **Environment > Object Browser**.


The **Object Browser** page is displayed.

Step 2 In the page, choose **XFUSION FusionDirector Management Pack** > **XFUSION Servers**.

The **XFUSION Servers** page is displayed.

Step 3 Select a FusionDirector IP address, a server model (by Group Type), a server, a component group, and a component, as shown in **Figure 4-11**.

Figure 4-11 Component information

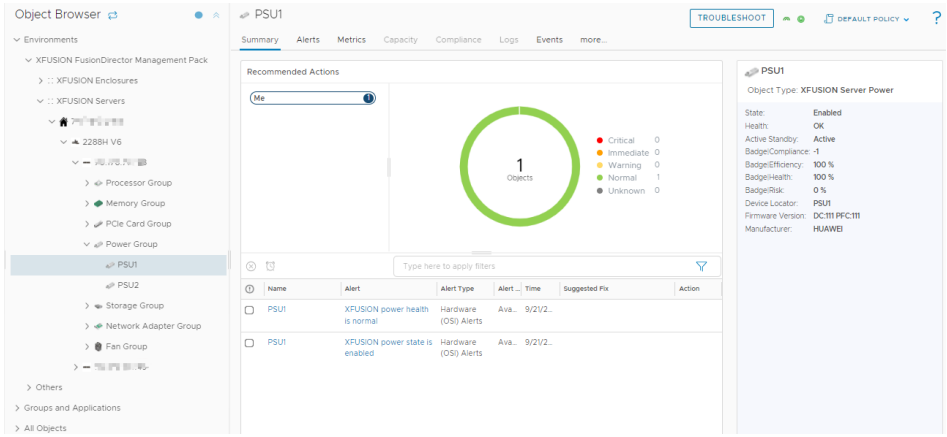

Step 4 View the summary of the component.


1. Click **Summary**.

   The **Summary** page is displayed.

2. In the **Recommended Actions** area, view the running status and alarm information about the component, as shown in **Figure 4-13**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 4-12 Viewing the summary

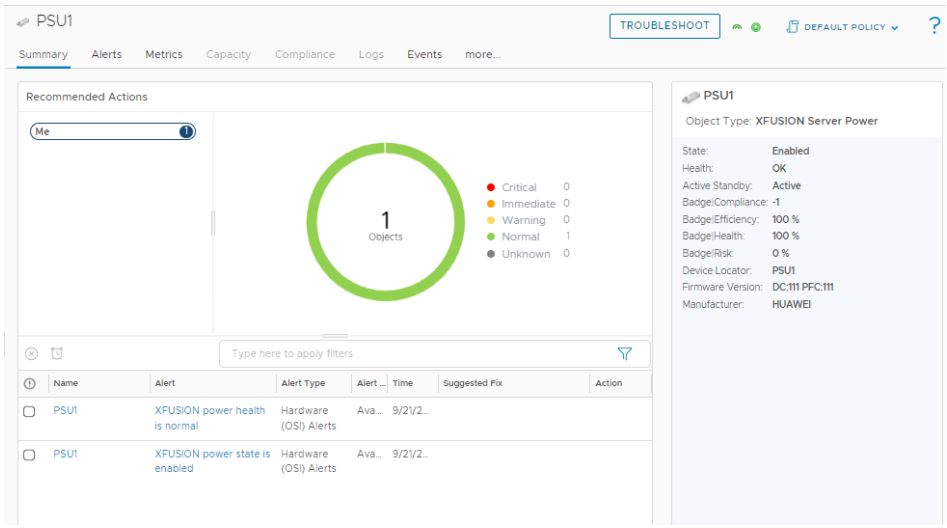


Step 5 View warning information of the component.

1. Click **Alerts**.

   The **Alerts** page is displayed.
2. Select a grouping mode, for example, **Object Type**.
3. Click > to expand the warning list.
4. Click a warning name to view details about the warning.

Figure 4-13 Viewing warning information

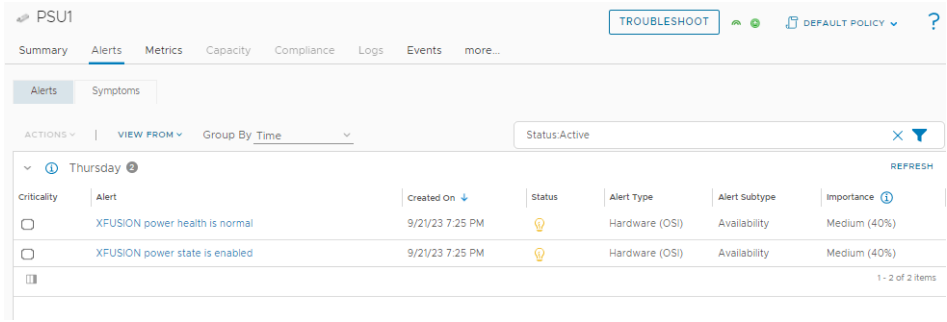


Step 6 View the real-time status curve of the component.

1. Click **Metrics**.

   The **Metrics** page is displayed.

Figure 4-14 Metrics

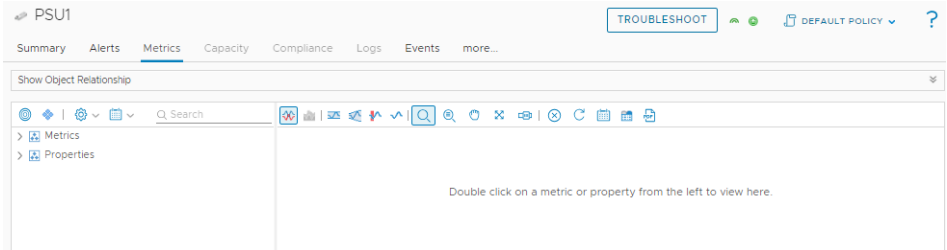


 Copyright © XFUSION INTERNATIONAL PTE. LTD.

2. Click > to expand the information list under **All Metrics** or **All Properties**.
3. Double-click the real-time status information to be viewed. For example, double-click **Health.**

   You can view the real-time status curve in the right pane.

Figure 4-15 Viewing the real-time status curve

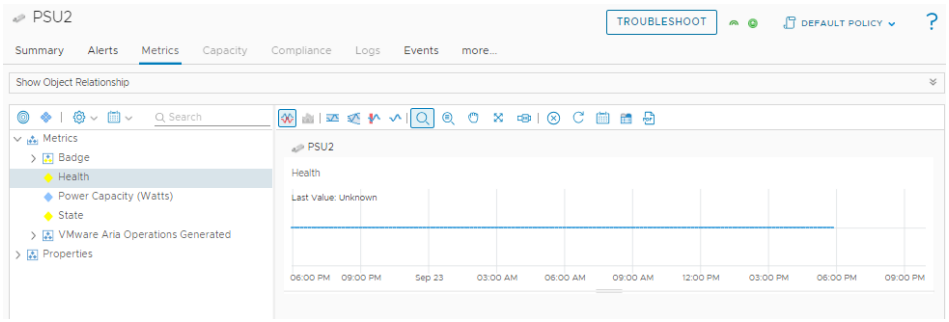


Step 7 View details about a component view.

1. Click **more** > **Details**.

   The **Details** page is displayed.
2. Select a view.
3. View details about the view.

Figure 4-16 Viewing details about the view

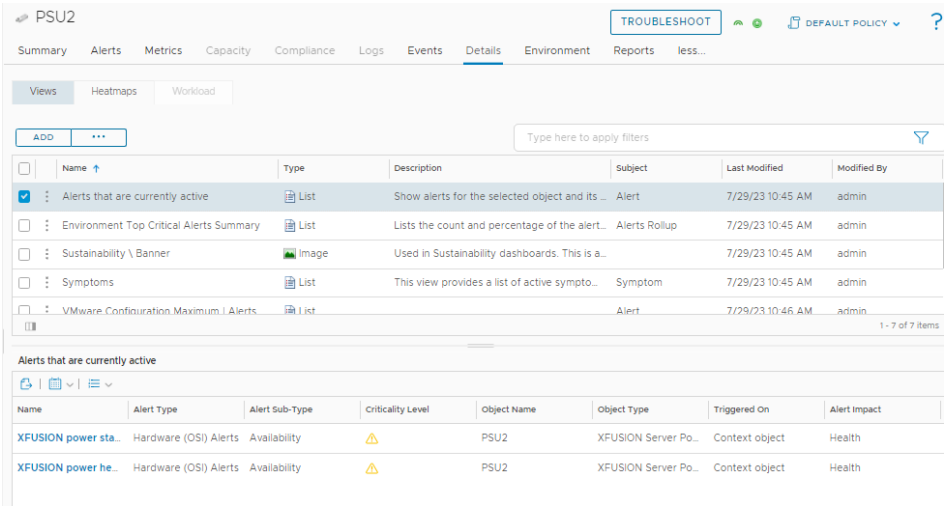

----End

4.3 Querying Component Group Information

4.3.1 For the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, choose **Environment**.

The **Environment** page is displayed.


 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Step 2 In the navigation pane, choose **XFUSION FusionDirector Management Pack** > **XFUSION Servers**.

The **XFUSION Servers** page is displayed.

Step 3 Select a FusionDirector IP address, a server model (by **Group Type**), a server, and a component group, as shown in **Figure 4-17**.

Figure 4-17 Component group information

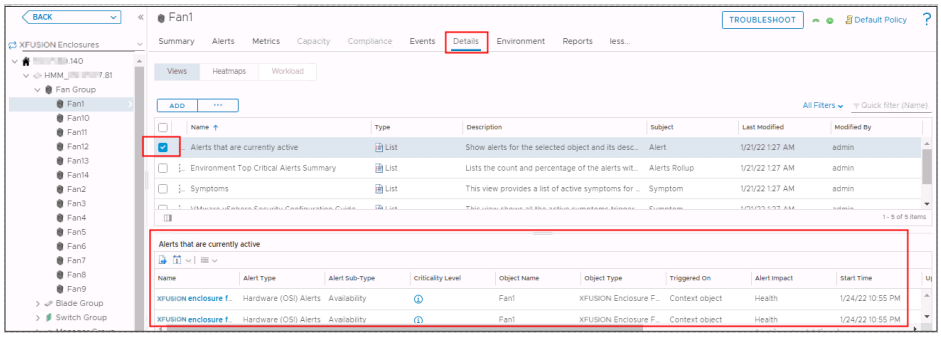

Step 4 See **4.2 Querying Component Information** to view the summary, warnings, details, and real-time status curves of all components in the component group.

----End

4.3.2 For the vROps plug-in for version 8.12 and SaaS

Step 1 On the vROps WebUI, choose **Environment > Object Browser**.

The **Object Browser** page is displayed.


Step 2 In the page, choose **XFUSION FusionDirector Management Pack** > **XFUSION Servers**.

The **XFUSION Servers** page is displayed.

Step 3 Select a FusionDirector IP address, a server model (by Group Type), a server, a component group, as shown in **Figure 4-18**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 4-18 Component group information

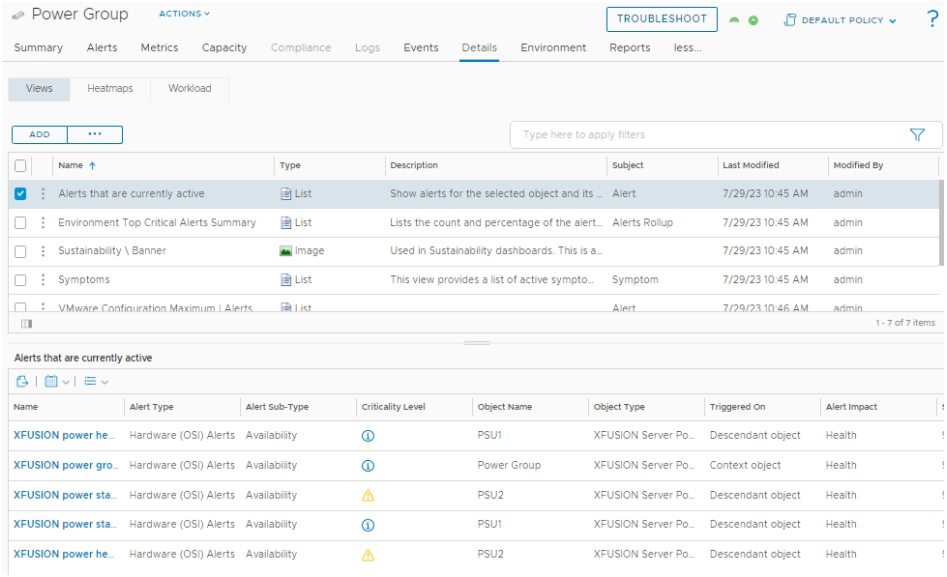

Step 4 See **4.2 Querying Component Information** to view the summary, warnings, details, and real-time status curves of all components in the component group.

----End

4.4 Querying Server Information

4.4.1 For the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, choose **Environment**.


The **Environment** page is displayed.

Step 2 In the navigation pane, choose **XFUSION FusionDirector Management Pack** > **XFUSION Servers**.

The **XFUSION Servers** page is displayed.

Step 3 Select a FusionDirector IP address, a server model (by **Group Type**), and a server, as shown in **Figure 4-19**.

Figure 4-19 Server information

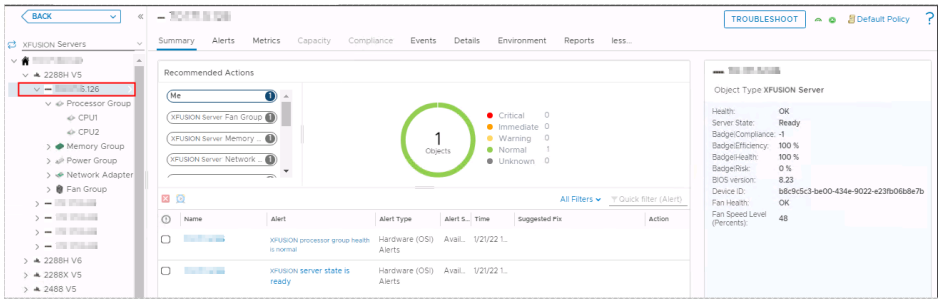

Step 4 See **4.2 Querying Component Information** to view the summary, warnings, details, and real-time status curves of all components of the server.

----End

4.4.2 For the vROps plug-in for version 8.12 and SaaS

Step 1 On the vROps WebUI, choose **Environment > Object Browser**.


The **Object Browser** page is displayed.

Step 2 In the page, choose **XFUSION FusionDirector Management Pack** > **XFUSION Servers**.

The **XFUSION Servers** page is displayed.

Step 3 Select a FusionDirector IP address, a server model (by **Group Type**), and a server, as shown in **Figure 4-20**.

Figure 4-20 Server information

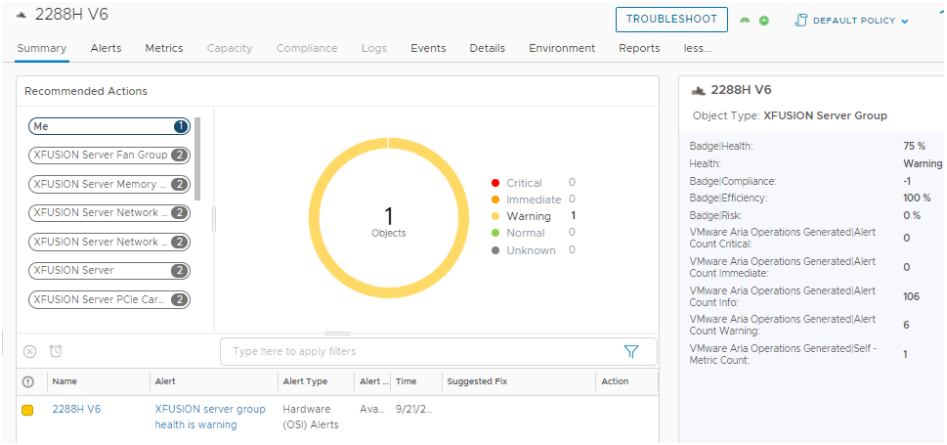

Step 4 See **4.2 Querying Component Information** to view the summary, warnings, details, and real-time status curves of all components of the server.

----End

4.5 Querying Server Type Information

4.5.1 For the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, choose **Environment**.

The **Environment** page is displayed.


Step 2 In the navigation pane, choose **XFUSION FusionDirector Management Pack** > **XFUSION Servers**.

The **XFUSION Servers** page is displayed.

Step 3 Select a FusionDirector IP address and a server model (by Group Type), as shown in **Figure 4-21**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 4-21 Server type

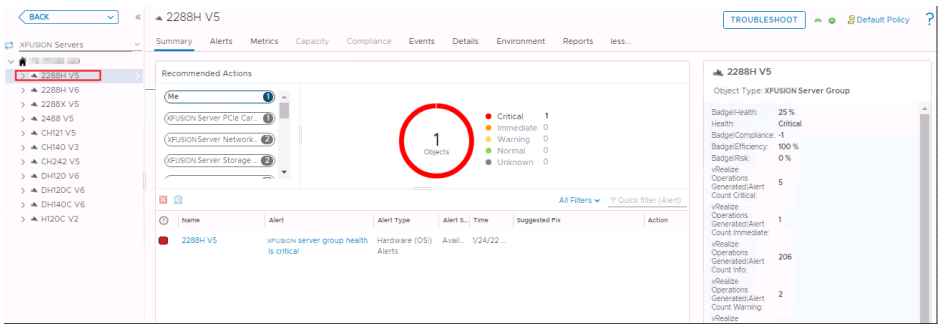

Step 4 See **4.2 Querying Component Information** to view the summary, warnings, details, and real-time status curves of all components of the server type.

----End

4.5.2 For the vROps plug-in for version 8.12 and SaaS

Step 1 On the vROps WebUI, choose **Environment > Object Browser**.


The **Object Browser** page is displayed.

Step 2 In the page, choose **XFUSION FusionDirector Management Pack** > **XFUSION Servers**.

The **XFUSION Servers** page is displayed.

Step 3 Select a FusionDirector IP address and a server model (by Group Type), as shown in **Figure 4-22**.

Figure 4-22 Server type

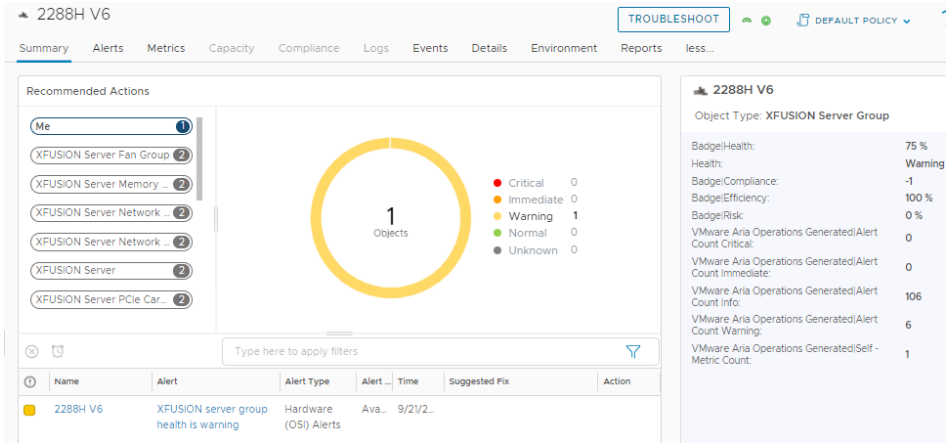

Step 4 See **4.2 Querying Component Information** to view the summary, warnings, details, and real-time status curves of all components of the server type.

----End

4.6 Querying the FusionDirector Information

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

4.6.1 For the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, choose **Environment**.


The **Environment** page is displayed.

Step 2 In the navigation pane, choose **XFUSION FusionDirector Management Pack** > **XFUSION Servers**.

The **XFUSION Servers** page is displayed.

Step 3 Select a FusionDirector IP address, as shown in **Figure 4-23**.

Figure 4-23 FusionDirector information

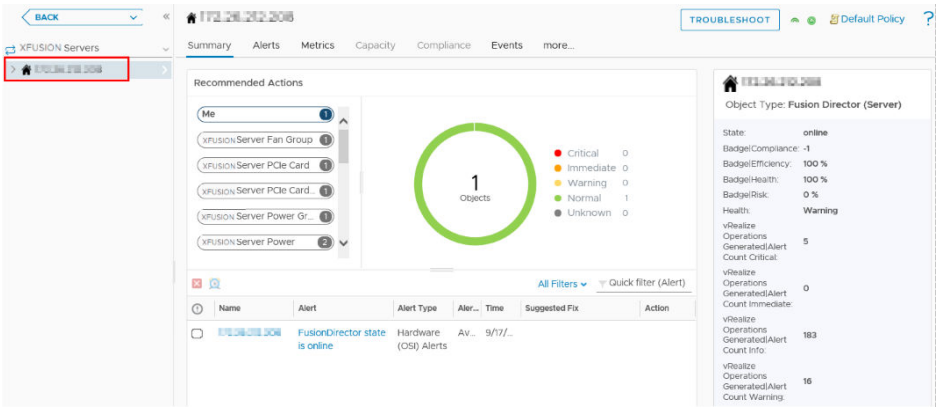

Step 4 See **4.2 Querying Component Information** to view the summary, warnings, details, and real-time status curves of all components of the FusionDirector instance.

----End

4.6.2 For the vROps plug-in for version 8.12 and SaaS

Step 1 On the vROps WebUI, choose **Environment > Object Browser**.

The **Object Browser** page is displayed.


Step 2 In the page, choose **XFUSION FusionDirector Management Pack** > **XFUSION Servers**.

The **XFUSION Servers** page is displayed.

Step 3 Select a FusionDirector IP address, as shown in **Figure 4-24**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 4-24 FusionDirector information

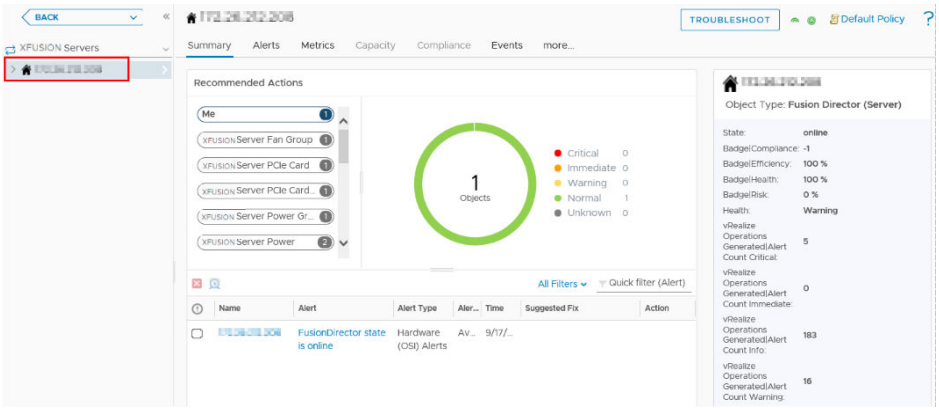

Step 4 See **4.2 Querying Component Information** to view the summary, warnings, details, and real-time status curves of all components of the FusionDirector instance.

----End

5 Querying XFUSION Enclosure Information

5.1 Querying Enclosures
5.2 Querying Component Information
5.3 Querying Component Group Information
5.4 Querying Enclosure Information
5.5 Querying the FusionDirector Information

5.1 Querying Enclosures

5.1.1 For the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, choose **Environment**.

The **Environment** page is displayed.


Step 2 In the navigation pane, choose **XFUSION FusionDirector Management Pack** > **XFUSION Enclosures**.

The **XFUSION Enclosures** page is displayed.

Step 3 In the navigation pane, view the list of all enclosures, as shown in **Figure 5-1**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 5-1 XFUSION enclosures

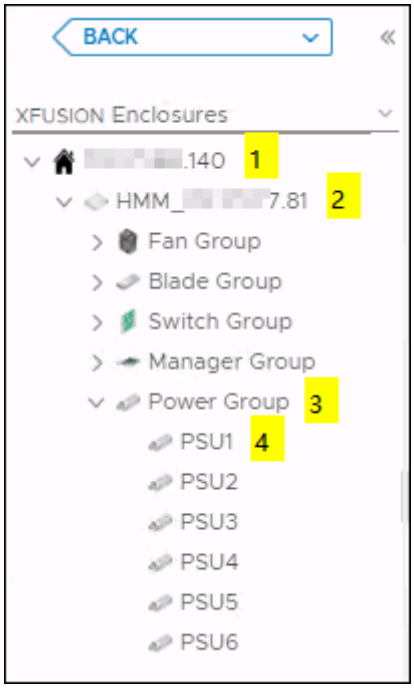

- 1: FusionDirector IP address
- 2: Enclosure name and iBMC IP address
- 3: Component group
- 4: A component

----End

5.1.2 For the vROps plug-in for version 8.12 and SaaS

Step 1 On the vROps WebUI, choose **Environment > Object Browser**.

The **Object Browser** page is displayed.


Step 2 In the page, choose **XFUSION FusionDirector Management Pack** > **XFUSION Enclosures**.

The **XFUSION Enclosures** page is displayed.

Step 3 In the page, view the list of all enclosures, as shown in **Figure 5-2**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 5-2 XFUSION enclosures

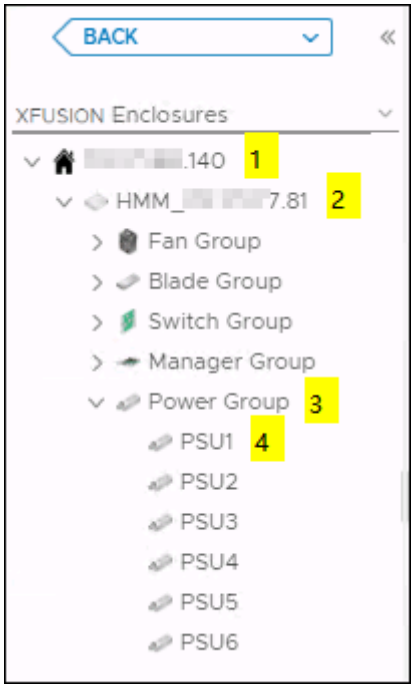

- 1: FusionDirector IP address
- 2: Enclosure name and iBMC IP address
- 3: Component group
- 4: A component

----End

5.2 Querying Component Information

5.2.1 For the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, choose **Environment**.

The **Environment** page is displayed.


Step 2 In the navigation pane, choose **XFUSION FusionDirector Management Pack** > **XFUSION Enclosures**.

The **XFUSION Enclosures** page is displayed.

Step 3 Select a FusionDirector IP address, an enclosure, a component group, and a component, as shown in **Figure 5-3**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 5-3 Component information

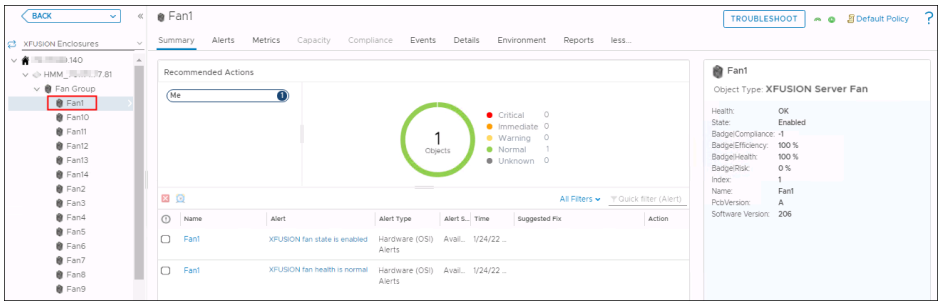


Step 4 View the summary of the component.

1. Click **Summary**.

   The **Summary** page is displayed.

2. In the **Recommended Actions** area, view the running status and alarm information about the component, as shown in **Figure 5-4**.

Figure 5-4 Viewing the summary

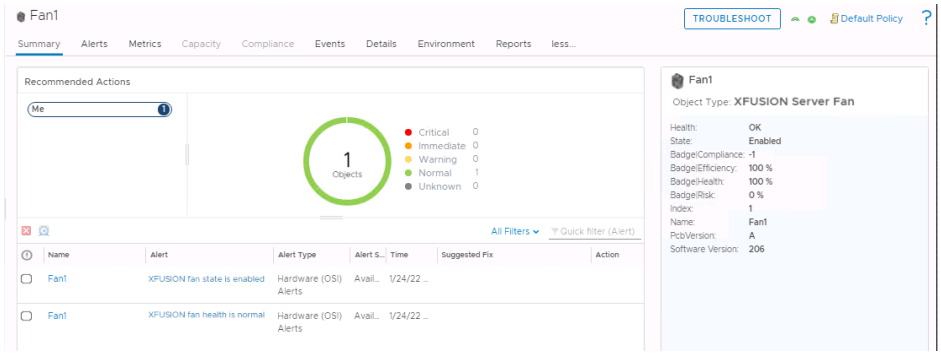


Step 5 View warning information of the component.

1. Click **Alerts**.

   The **Alerts** page is displayed.

2. Select a grouping mode, for example, **Object Type**.
3. Click > to expand the warning list.
4. Click a warning name to view details about the warning.

Figure 5-5 Viewing warning information

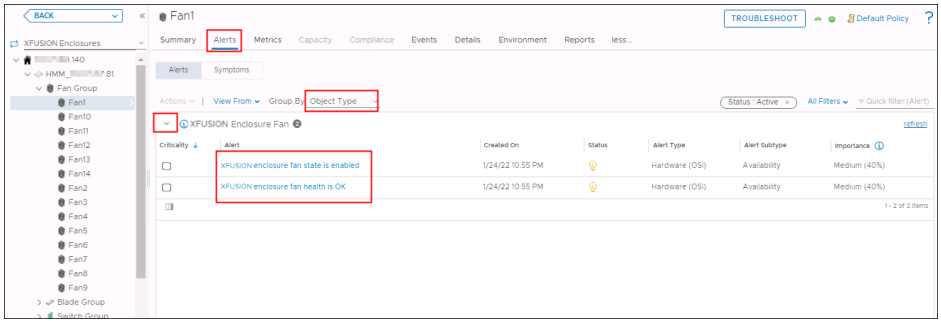


Step 6 View the real-time status curve of the component.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.


1. Click **Metrics**.
   The **Metrics** page is displayed.

Figure 5-6 Metrics

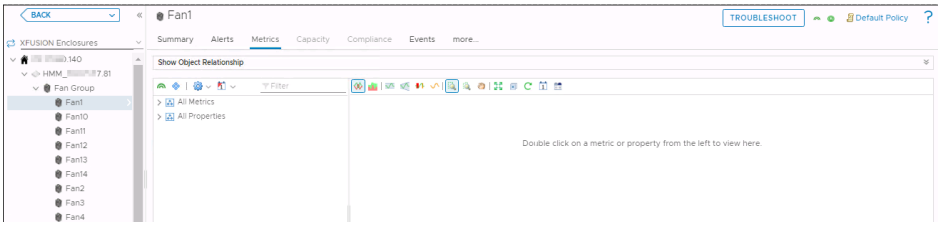

2. Click > to expand the information list under **All Metrics** or **All Properties**.
3. Double-click the real-time status information to be viewed. For example, double-click **Health**, as shown in **Figure 5-7**.
   You can view the real-time status curve in the right pane.


Figure 5-7 Viewing the real-time status curve

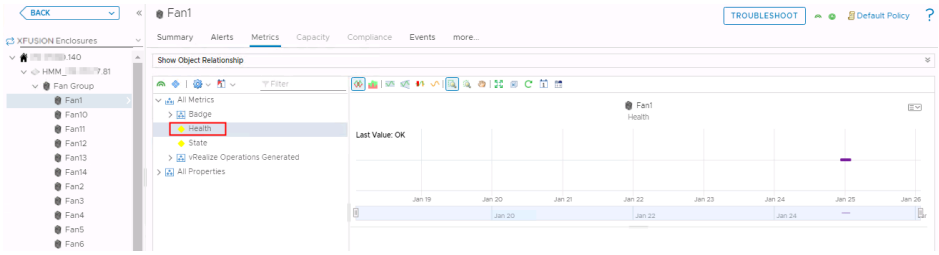

Step 7 View details about a component view.

1. Click **more** > **Details**.
   The **Details** page is displayed.
2. Select a view.
3. View details about the view.

Figure 5-8 Viewing details about the view

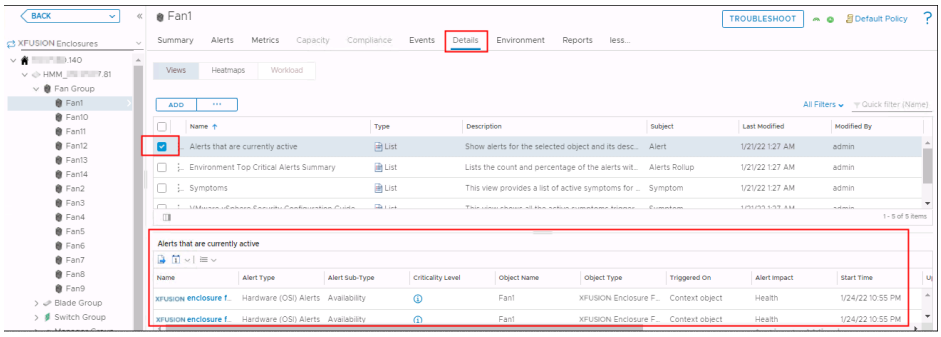

----End

5.2.2 For the vROps plug-in for version 8.12 and SaaS

Step 1 On the vROps WebUI, choose **Environment > Object Browser**.

The **Object Browser** page is displayed.


 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Step 2 In the navigation pane, choose **XFUSION FusionDirector Management Pack** > **XFUSION Enclosures**.

The **XFUSION Enclosures** page is displayed.

Step 3 Select a FusionDirector IP address, an enclosure, a component group, and a component, as shown in **Figure 5-9**.

Figure 5-9 Component information

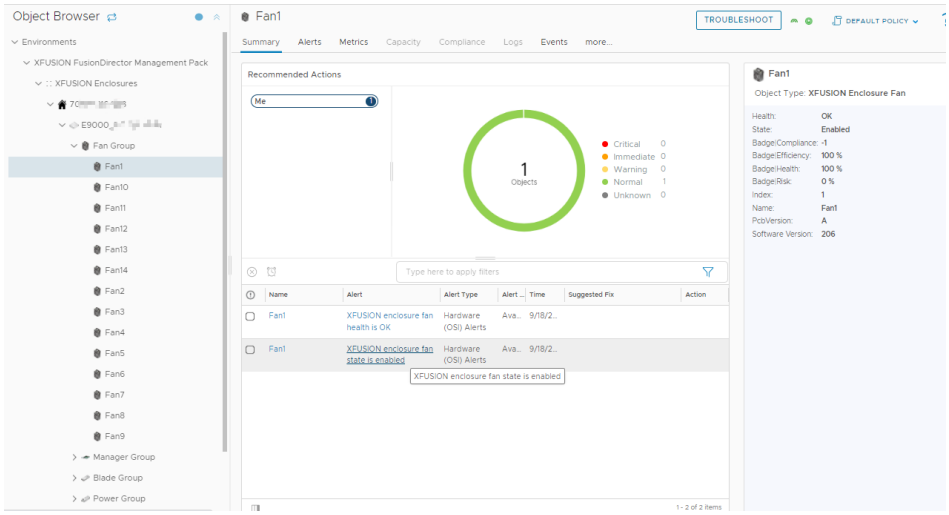


Step 4 View the summary of the component.

1. Click **Summary**.

   The **Summary** page is displayed.

2. In the **Recommended Actions** area, view the running status and alarm information about the component, as shown in **Figure 5-10**.

Figure 5-10 Viewing the summary

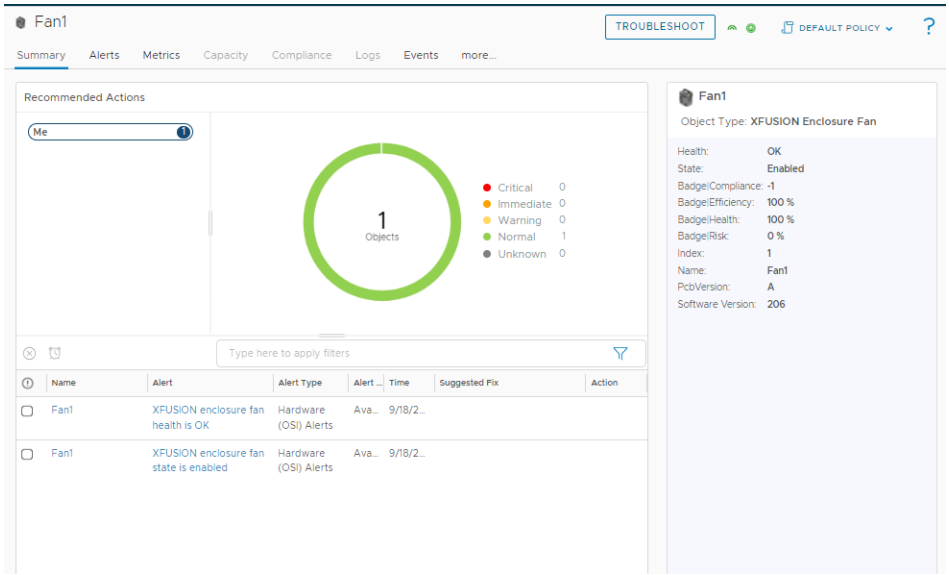


Step 5 View warning information of the component.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

1. Click **Alerts**.
   The **Alerts** page is displayed.
2. Select a grouping mode, for example, **Object Type**.
3. Click > to expand the warning list.
4. Click a warning name to view details about the warning.


Figure 5-11 Viewing warning information

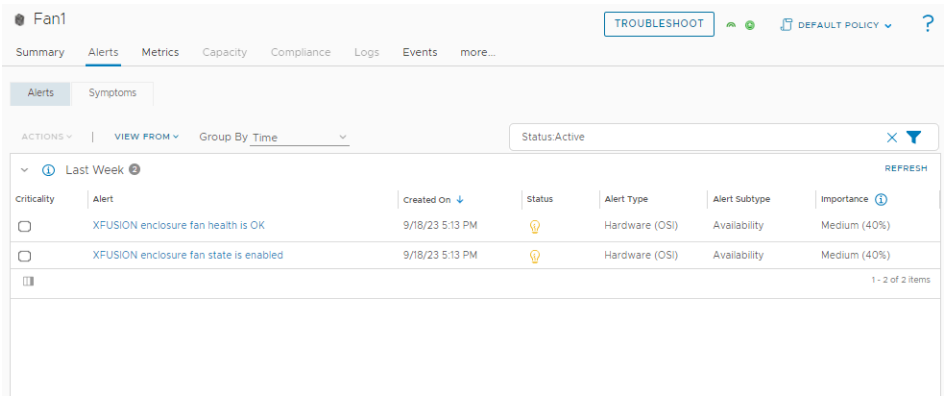

Step 6 View the real-time status curve of the component.

1. Click **Metrics**.
   The **Metrics** page is displayed.


   Figure 5-12 Metrics

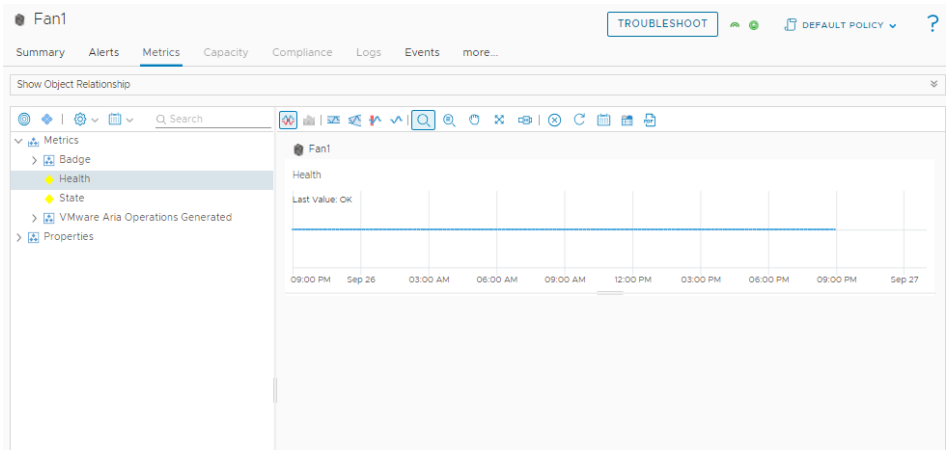

2. Click > to expand the information list under **All Metrics** or **All Properties**.
3. Double-click the real-time status information to be viewed. For example, double-click **Health**, as shown in **Figure 5-13**.
   You can view the real-time status curve in the right pane.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 5-13 Viewing the real-time status curve

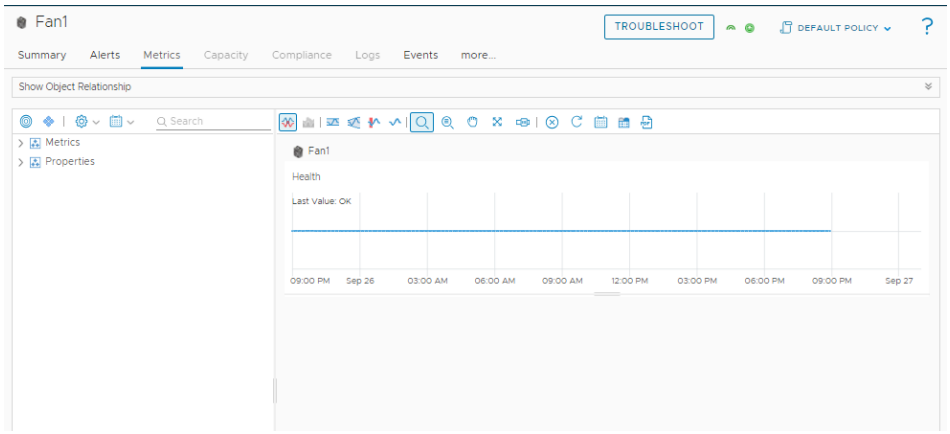


Step 7 View details about a component view.

1. Click **more** > **Details**.

   The **Details** page is displayed.
2. Select a view.
3. View details about the view.

Figure 5-14 Viewing details about the view

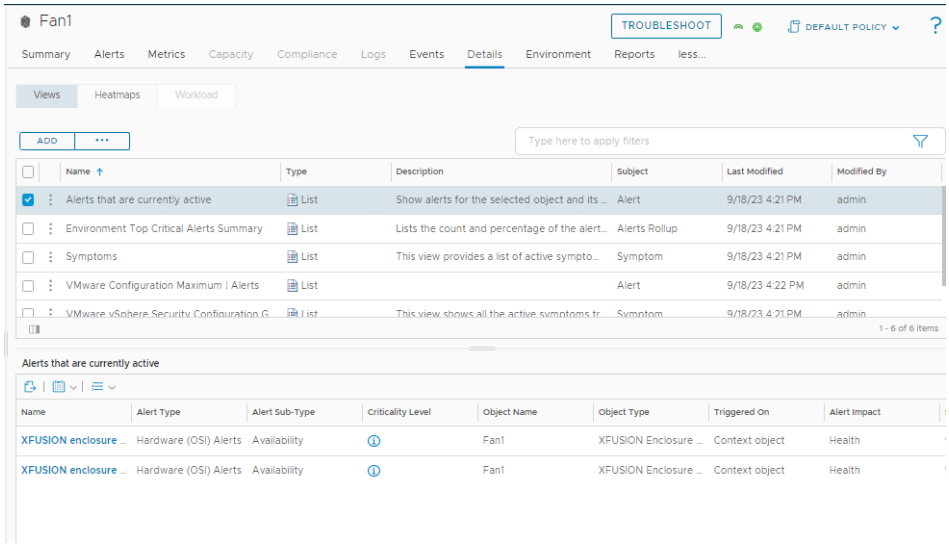

----End

5.3 Querying Component Group Information

5.3.1 For the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, choose **Environment**.

The **Environment** page is displayed.


Step 2 In the navigation pane, choose **XFUSION FusionDirector Management Pack** > **XFUSION Enclosures**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

The **XFUSION Enclosures** page is displayed.

Step 3 Select a FusionDirector IP address, an enclosure, and a component group, as shown in **Figure 5-15**.

Figure 5-15 Component group information

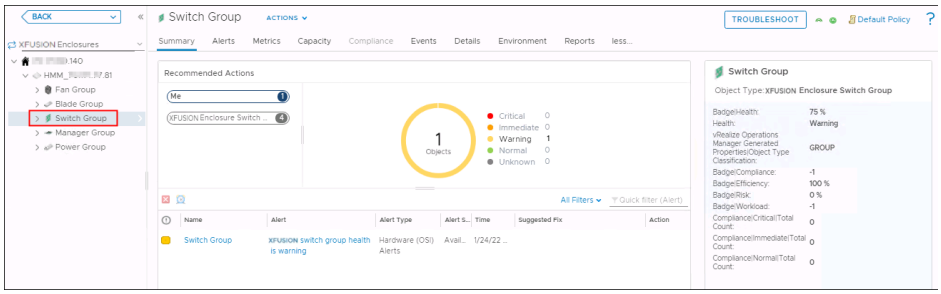

Step 4 See **5.2 Querying Component Information** to view the summary, warnings, details, and real-time status curves of all components in the component group.

----End

5.3.2 For the vROps plug-in for version 8.12 and SaaS

Step 1 On the vROps WebUI, choose **Environment > Object Browser**.


The **Object Browser** page is displayed.

Step 2 In the navigation pane, choose **XFUSION FusionDirector Management Pack** > **XFUSION Enclosures**.

The **XFUSION Enclosures** page is displayed.

Step 3 Select a FusionDirector IP address, an enclosure, and a component group, as shown in **Figure 5-16**.

Figure 5-16 Component group information

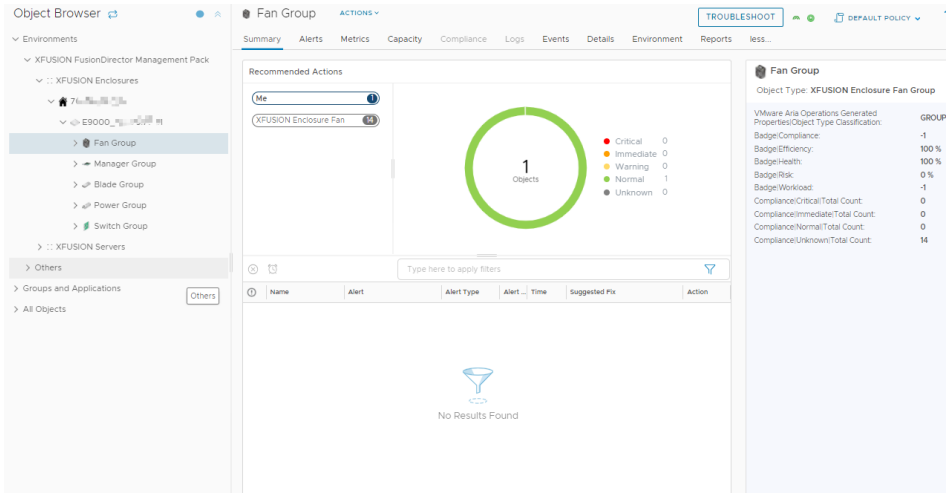

Step 4 See **5.2 Querying Component Information** to view the summary, warnings, details, and real-time status curves of all components in the component group.

----End

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

5.4 Querying Enclosure Information

5.4.1 For the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, choose **Environment**.


The **Environment** page is displayed.

Step 2 In the navigation pane, choose **XFUSION FusionDirector Management Pack** > **XFUSION Enclosures**.

The **XFUSION Enclosures** page is displayed.

Step 3 Select a FusionDirector IP address and an enclosure, as shown in **Figure 5-17**.

Figure 5-17 Enclosure information

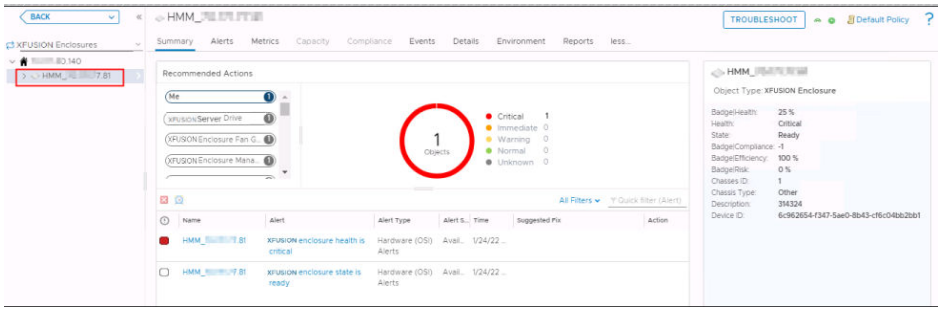

Step 4 See **5.2 Querying Component Information** to view the summary, warnings, details, and real-time status curves of all components of the enclosure.

----End

5.4.2 For the vROps plug-in for version 8.12 and SaaS

Step 1 On the vROps WebUI, choose **Environment > Object Browser**.

The **Object Browser** page is displayed.


Step 2 In the navigation pane, choose **XFUSION FusionDirector Management Pack** > **XFUSION Enclosures**.

The **XFUSION Enclosures** page is displayed.

Step 3 Select a FusionDirector IP address and an enclosure, as shown in **Figure 5-18**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 5-18 Enclosure information

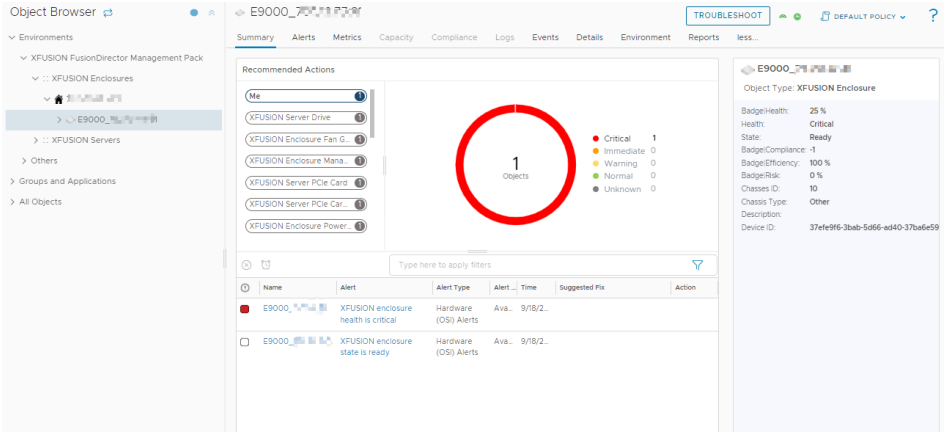

Step 4 See **5.2 Querying Component Information** to view the summary, warnings, details, and real-time status curves of all components of the enclosure.

----End

5.5 Querying the FusionDirector Information

5.5.1 For the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, choose **Environment**.


The **Environment** page is displayed.

Step 2 In the navigation pane, choose **XFUSION FusionDirector Management Pack** > **XFUSION Enclosures**.

The **XFUSION Enclosures** page is displayed.

Step 3 Select a FusionDirector IP address, as shown in **Figure 5-19**.

Figure 5-19 FusionDirector information

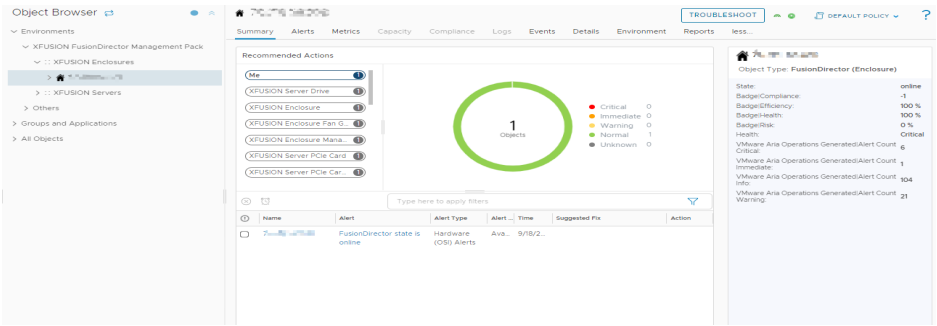

Step 4 See **5.2 Querying Component Information** to view the summary, warnings, details, and real-time status curves of all components of the FusionDirector instance.

----End

5.5.2 For the vROps plug-in for version 8.12 and SaaS

Step 1 On the vROps WebUI, choose **Environment > Object Browser**.


The **Object Browser** page is displayed.

Step 2 In the navigation pane, choose **XFUSION FusionDirector Management Pack** > **XFUSION Enclosures**.

The **XFUSION Enclosures** page is displayed.

Step 3 Select a FusionDirector IP address, as shown in **Figure 5-20**.

Figure 5-20 FusionDirector information

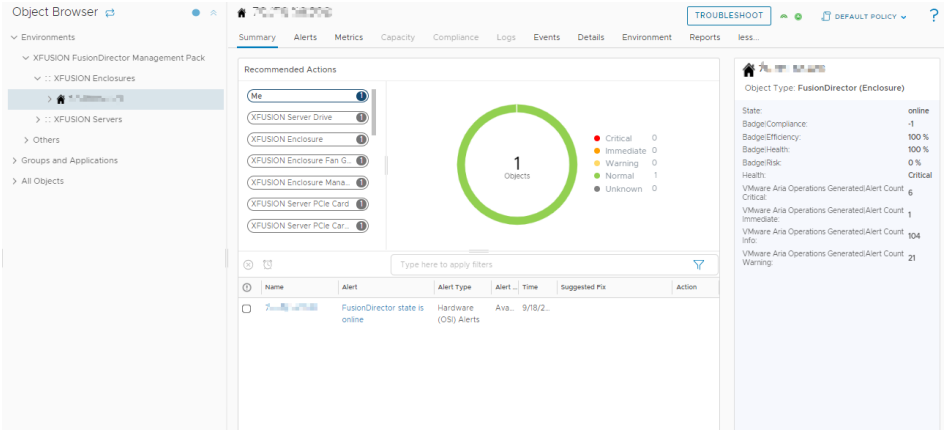

Step 4 See **5.2 Querying Component Information** to view the summary, warnings, details, and real-time status curves of all components of the FusionDirector instance.

----End

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

6 Querying Dashboard Information

6.1 Querying the FusionDirector Overview Dashboard
6.2 Querying XFUSION Servers Overview Dsahborad
6.3 Querying XFUSION Servers Detailed Dashboard
6.4 Querying XFUSION Enclosure Overview Dashboard
6.5 Querying XFUSION Enclosure Detailed Dashboard

6.1 Querying the FusionDirector Overview Dashboard

6.1.1 For the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, choose **Dashboards**.


The **Dashboards** page is displayed.

Step 2 In the navigation pane, choose **Dashboards** > **Fusion Director Overview Dashboard**.

The **Fusion Director Overview Dashboard** page is displayed.

You can view the FusionDirector name, adapter type, object type, policy, collection state, collection status, server IP address, port, state, FusionDirector version, and classification method, as shown in **Figure 6-1**.

Figure 6-1 FusionDirector Overview Dashboard

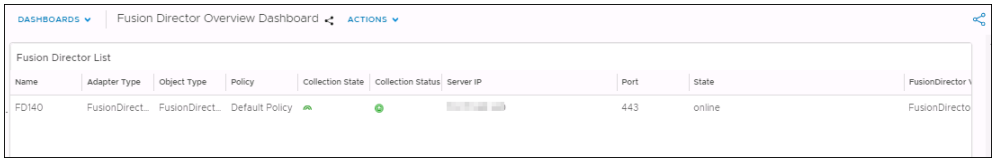

----End

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

6.1.2 For the vROps plug-in for version 8.12 and SaaS

Step 1 On the vROps WebUI, choose **Visualize >Dashboards > Manage**.


The **Manage** page is displayed.

Step 2 In the **Manage** page, choose **Dashboards** > **Fusion Director Overview Dashboard**.

The **Fusion Director Overview Dashboard** page is displayed.

You can view the FusionDirector name, adapter type, object type, policy, collection state, collection status, server IP address, port, state, FusionDirector version, and classification method, as shown in **Figure 6-2**.

Figure 6-2 FusionDirector Overview Dashboard

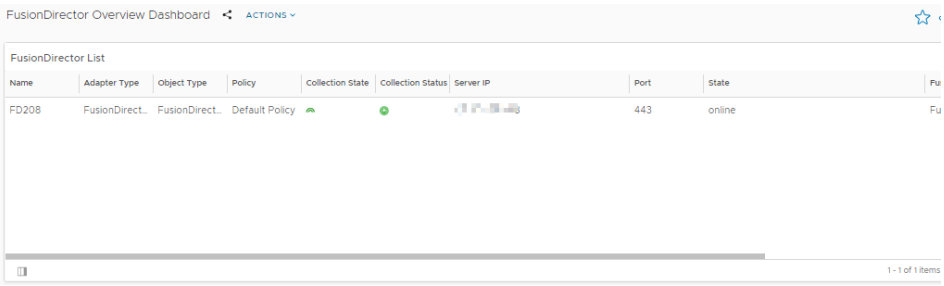

----End

6.2 Querying XFUSION Servers Overview Dsahborad

6.2.1 For the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, choose **Dashboards**.

The **Dashboards** page is displayed.

Step 2 In the navigation pane, choose **Dashboards** > **XFUSION Servers Overview Dashboard**.


The **XFUSION Servers Overview Dashboard** page is displayed.

You can view the following information, as shown in **Figure 6-3**.

- Servers Environment Health
- Servers Latest Alerts
- Top High Power Consumption Servers
- Top High Inlet Temperature Servers
- Top High Fan Speed On Average Servers
- Select About for Power Consumption Trend
- Select About for Temperature Trend
- Select About for Fan Speed Trend


 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 6-3 XFUSION Servers Overview Dashboard

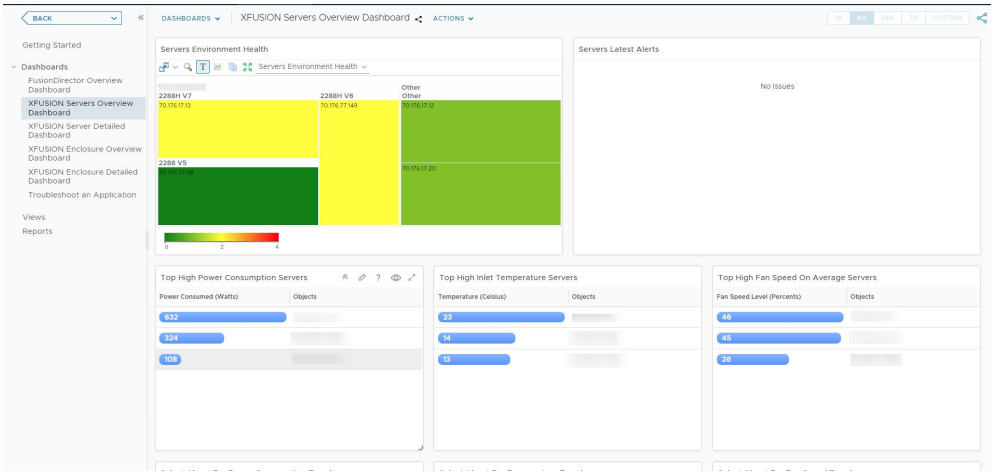

Step 3 In the **Servers Environment Heath** area, select a server. You can view the latest alarms of the server in the **Servers Latest Alerts** area, as shown in **Figure 6-4**.


Figure 6-4 XFUSION Servers Latest Alerts

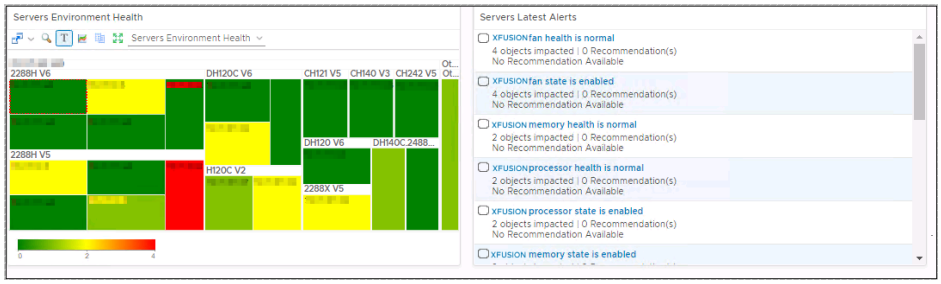

Step 4 In the **Top High Power Consumption Servers** area, select different servers. You can view power consumption trends of these servers in the **Select About For Power Consumption Trend** area, as shown in **Figure 6-5**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.


Figure 6-5 Power consumption trend

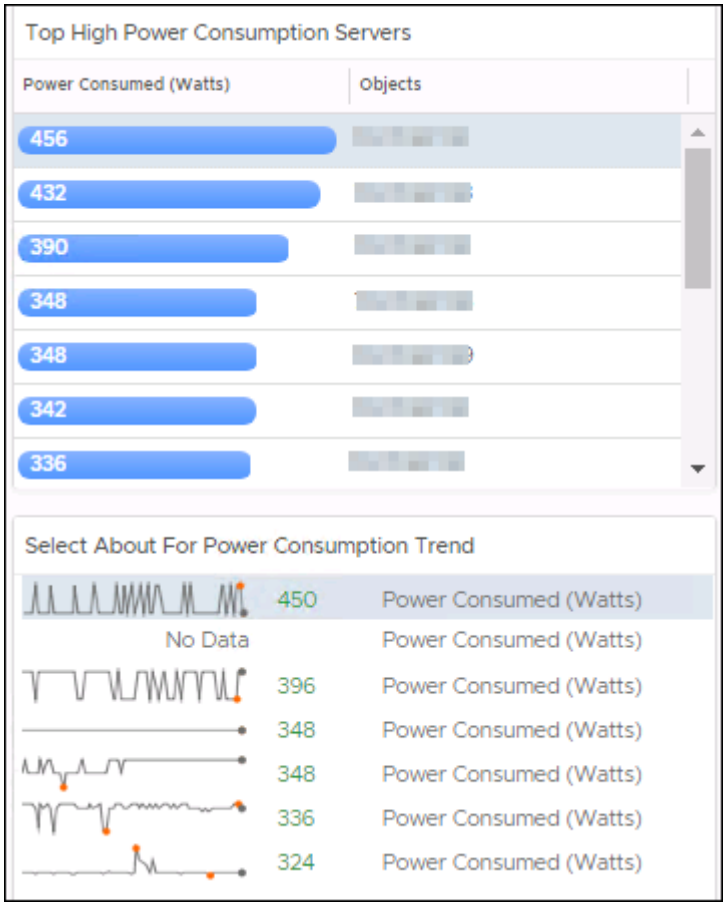

Step 5 In the **Top High Inlet Temperature Servers** area, select different servers. You can view temperature trends of these servers in the **Select About For Temperature Trend** area, as shown in **Figure 6-6**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.


Figure 6-6 Temperature trend

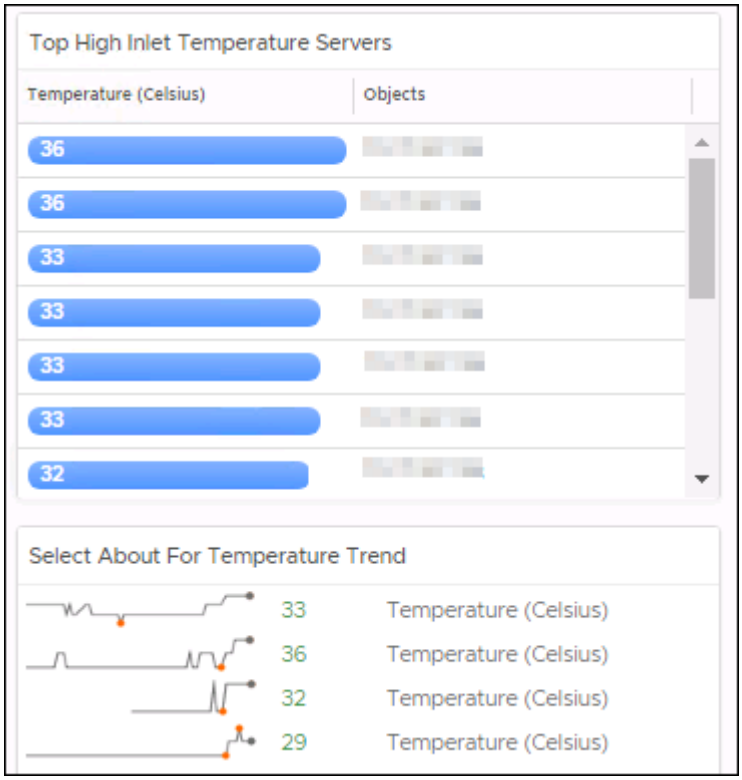

Step 6 In the **Top High Fan Speed On Average Servers** area, select different servers. You can view fan speed trends of these servers in the **Select About For Fan Speed Trend** area, as shown in **Figure 6-7**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 6-7 Fan speed trend

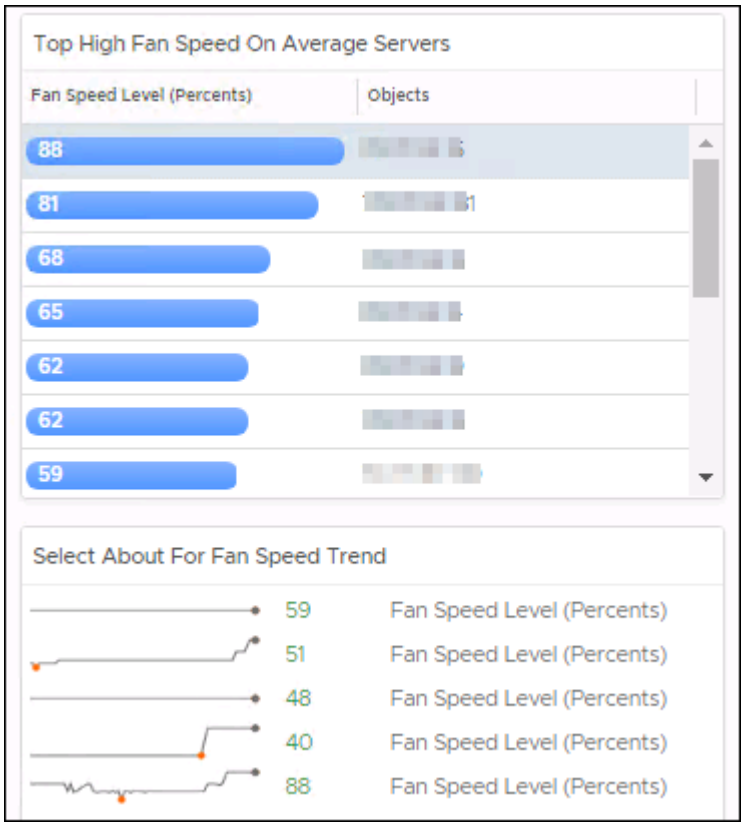

----End

6.2.2 For the vROps plug-in for version 8.12 and SaaS

Step 1 On the vROps WebUI, choose **Visualize >Dashboards > Manage**.

The **Dashboards** page is displayed.

Step 2 In the **Manage** page, choose **Dashboards** > **XFUSION Servers Overview Dashboard**.


The **XFUSION Servers Overview Dashboard** page is displayed.

You can view the following information, as shown in **Figure 6-8**.

- Servers Environment Health
- Servers Latest Alerts
- Top High Power Consumption Servers
- Top High Inlet Temperature Servers
- Top High Fan Speed On Average Servers
- Select About for Power Consumption Trend
- Select About for Temperature Trend
- Select About for Fan Speed Trend


 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 6-8 XFUSION Servers Overview Dashboard

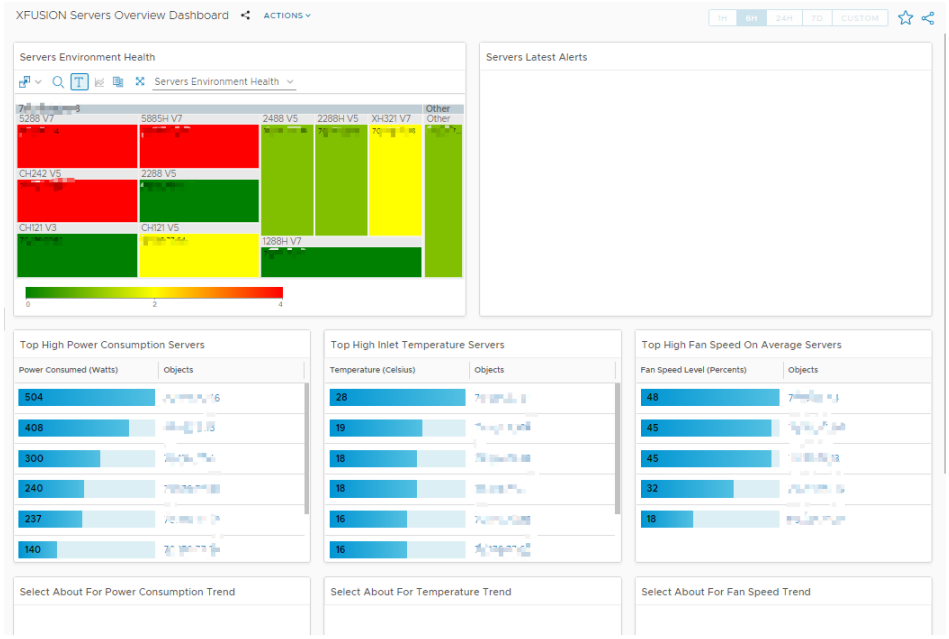

Step 3 In the **Servers Environment Heath** area, select a server. You can view the latest alarms of the server in the **Servers Latest Alerts** area, as shown in **Figure 6-9**.


Figure 6-9 XFUSION Servers Latest Alerts

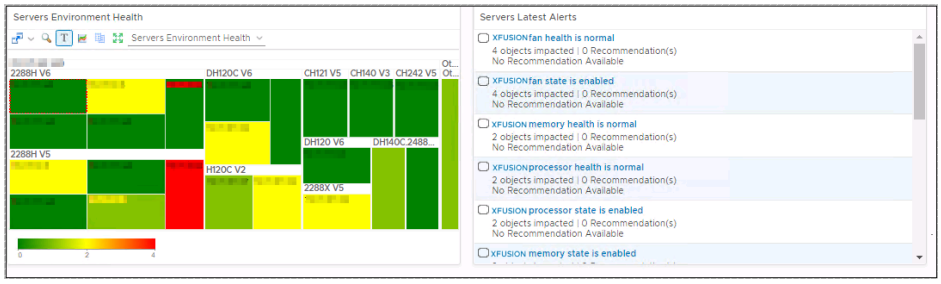

Step 4 In the **Top High Power Consumption Servers** area, select different servers. You can view power consumption trends of these servers in the **Select About For Power Consumption Trend** area, as shown in **Figure 6-10**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.


Figure 6-10 Power consumption trend

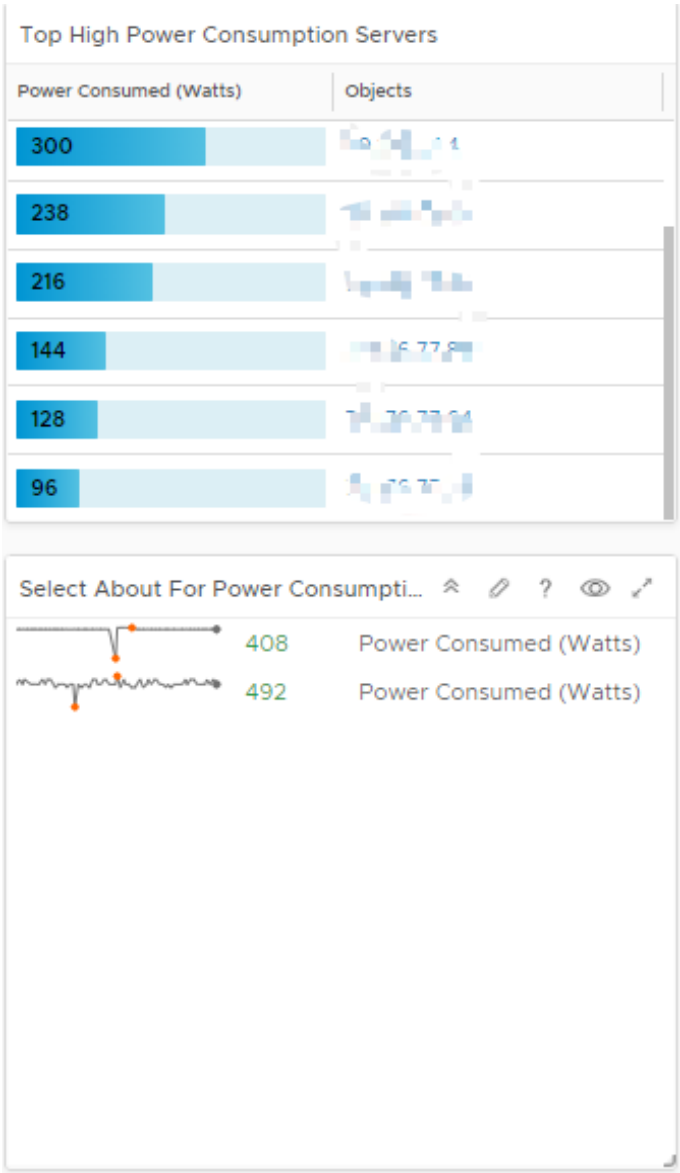

Step 5 In the **Top High Inlet Temperature Servers** area, select different servers. You can view temperature trends of these servers in the **Select About For Temperature Trend** area, as shown in **Figure 6-11**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.


Figure 6-11 Temperature trend

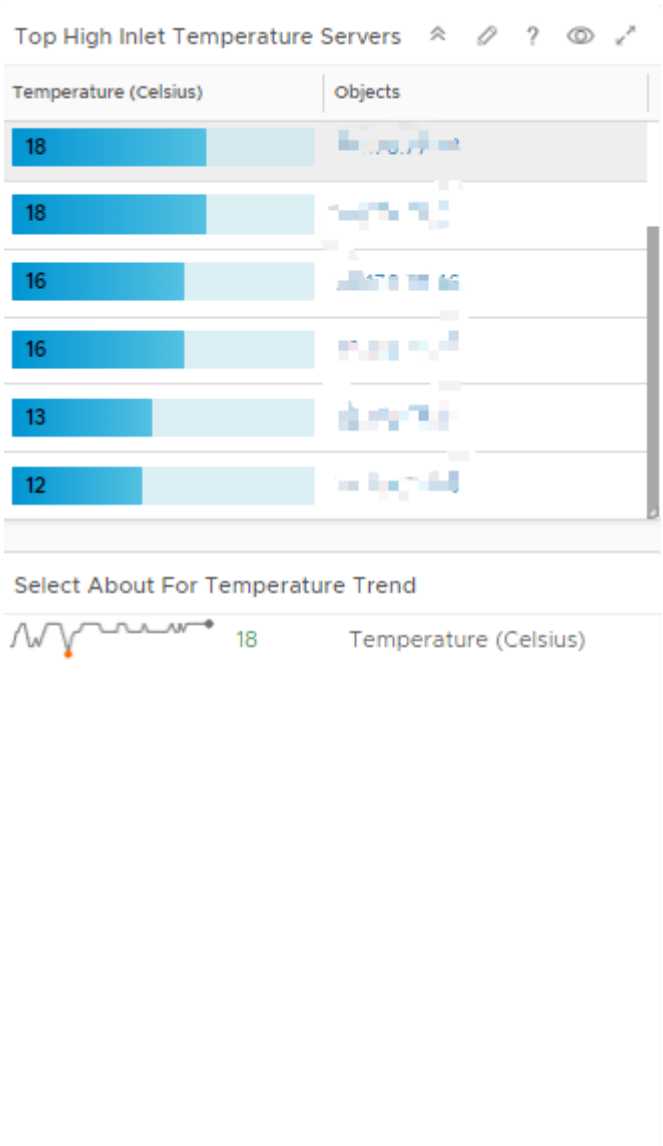

Step 6 In the **Top High Fan Speed On Average Servers** area, select different servers. You can view fan speed trends of these servers in the **Select About For Fan Speed Trend** area, as shown in **Figure 6-12**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 6-12 Fan speed trend

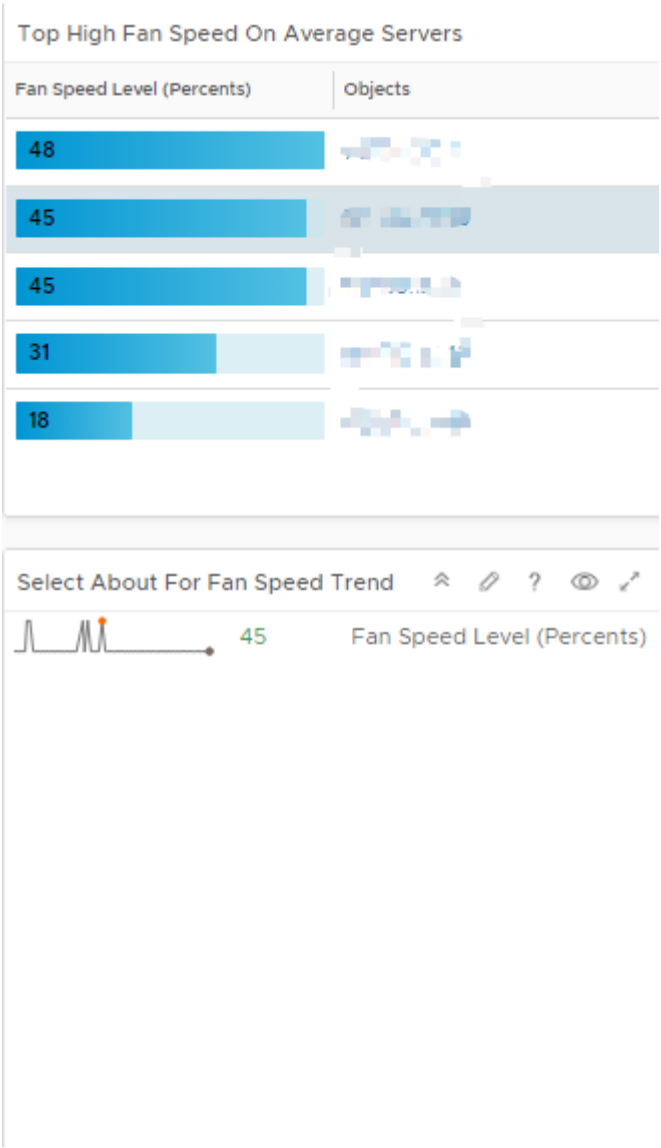

----End

6.3 Querying XFUSION Servers Detailed Dashboard

6.3.1 For the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, choose **Dashboards**.

The **Dashboards** page is displayed.

Step 2 In the navigation pane, choose **Dashboards** > **XFUSION Server Detailed Dashboard**.

The **XFUSION Server Detailed Dashboard** page is displayed.


Step 3 In the **XFUSION Server List** area, select the server to be viewed.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

You can view the following information, as shown in **Figure 6-13**.


- Object Relationship
- Latest Alerts
- Server Power Consumed Metric Chart

Figure 6-13 XFUSION Server Detailed Dashboard

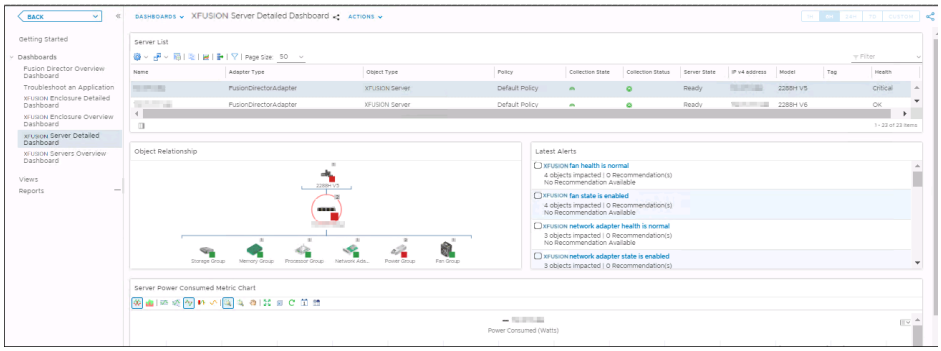

Step 4 The server topology is displayed in the **Object Relationship** area. You can click any server or component to view the alerts and detailed information about the server or component, as shown in **Figure 6-14**.

Figure 6-14 Object Relationship

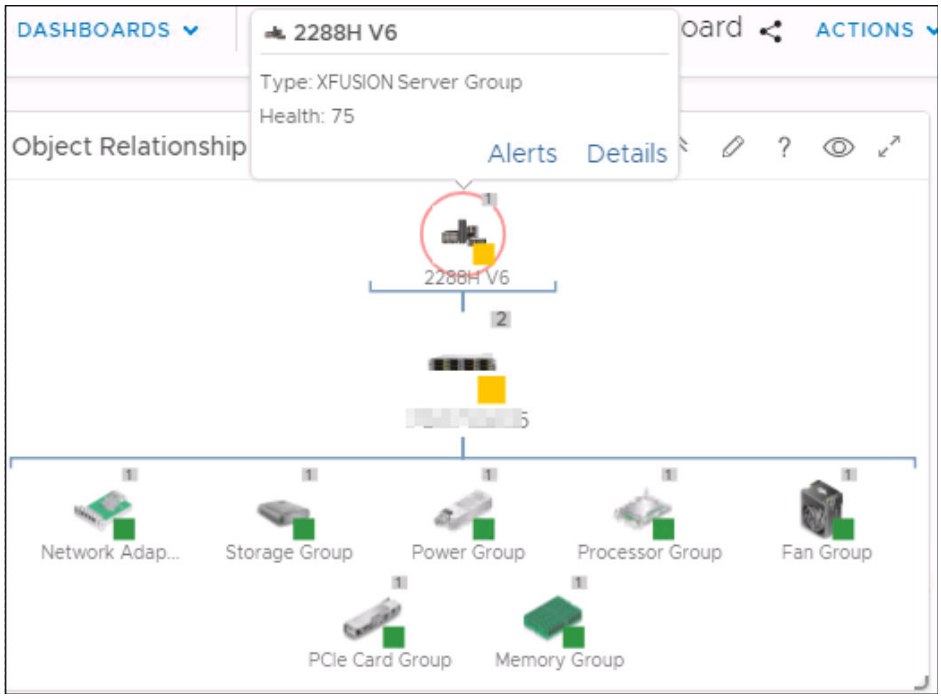

----End

6.3.2 For the vROps plug-in for version 8.12 and SaaS

Step 1 On the vROps WebUI, choose **Visualize >Dashboards > Manage**.

The **Dashboards** page is displayed.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Step 2 In the **Manage** page, choose **Dashboards** > **XFUSION Servers Detailed Dashboard**.


The **XFUSION Servers Detailed Dashboard** page is displayed.

Step 3 In the **XFUSION Server List** area, select the server to be viewed.

You can view the following information, as shown in **Figure 6-15**.


- Object Relationship
- Latest Alerts
- Server Power Consumed Metric Chart

Figure 6-15 XFUSION Server Detailed Dashboard

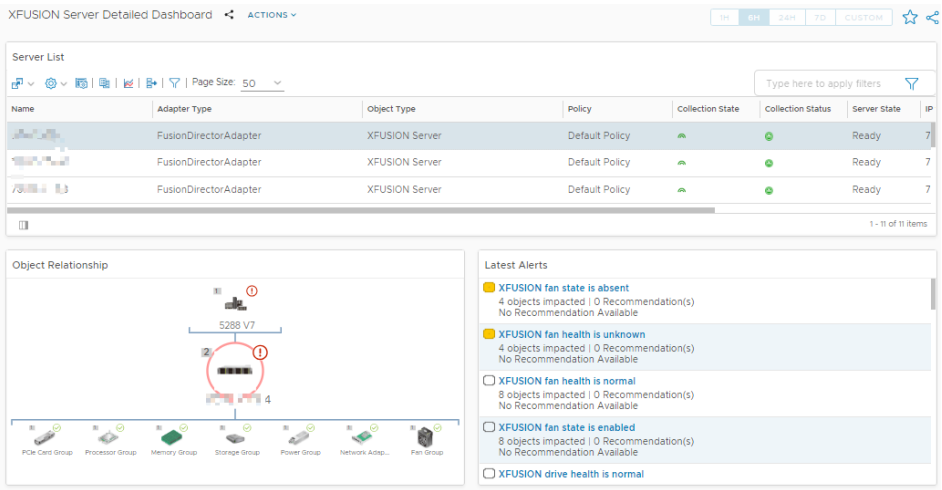

Step 4 The server topology is displayed in the **Object Relationship** area. You can click any server or component to view the alerts and detailed information about the server or component, as shown in **Figure 6-16**.

Figure 6-16 Object Relationship

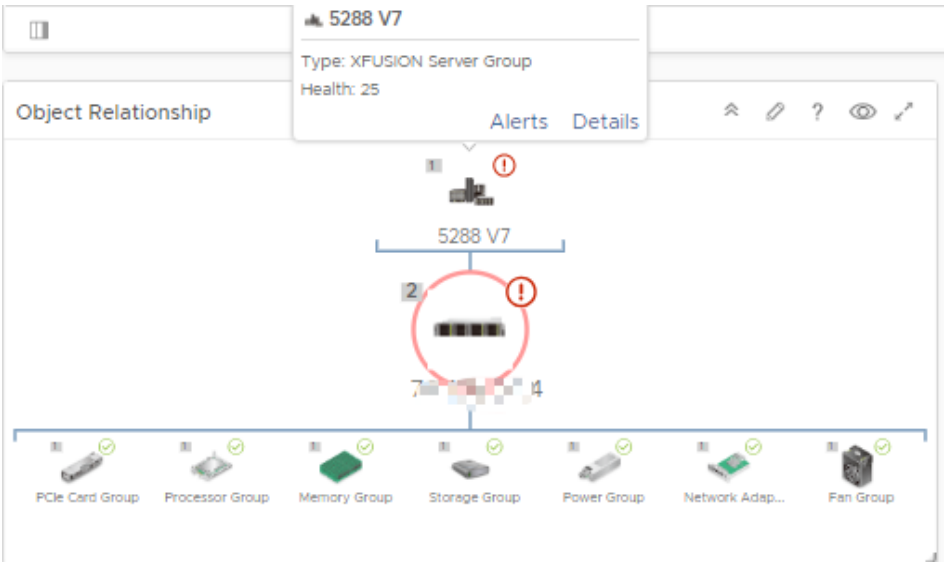

----End

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

6.4 Querying XFUSION Enclosure Overview Dashboard

6.4.1 For the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, choose **Dashboards**.

The **Dashboards** page is displayed.


Step 2 In the navigation pane, choose **Dashboards** > **XFUSION Enclosure Overview Dashboard**.

The **XFUSION Enclosure Overview Dashboard** page is displayed.

You can view the following information, as shown in **Figure 6-17**.

- Enclosure Environment Health
- Enclosure Latest Alerts

Figure 6-17 XFUSION Enclosure Overview Dashboard

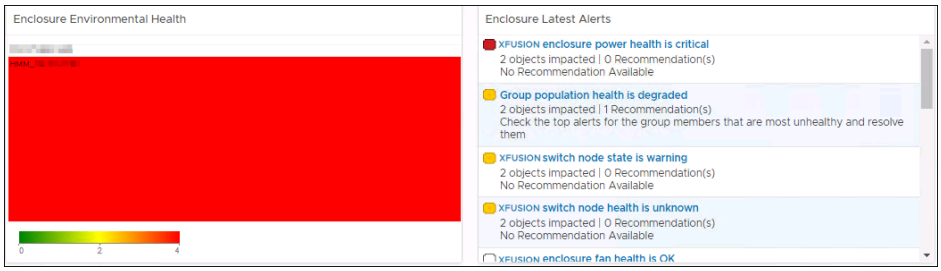

----End

6.4.2 For the vROps plug-in for version 8.12 and SaaS

Step 1 On the vROps WebUI, choose **Visualize >Dashboards > Manage**.

The **Dashboards** page is displayed.

Step 2 In the **Manage** page, choose **Dashboards** > **XFUSION Enclosure Overview Dashboard**.


The **XFUSION Enclosure Overview Dashboard** page is displayed.

Step 3 You can view the following information, as shown in **Figure 6-18**.

- Enclosure Environment Health
- Enclosure Latest Alerts

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 6-18 XFUSION Enclosure Overview Dashboard

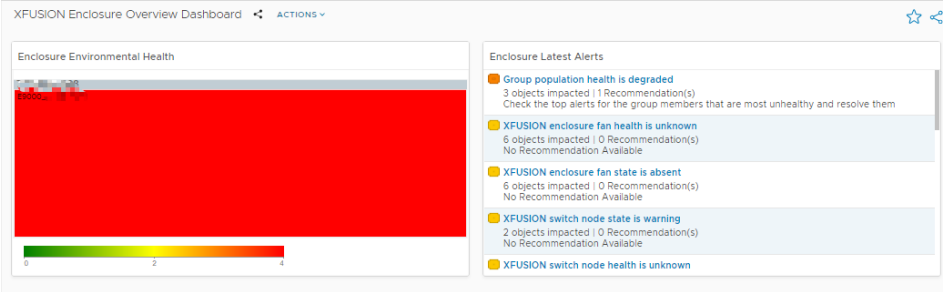

----End

6.5 Querying XFUSION Enclosure Detailed Dashboard

6.5.1 For the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, choose **Dashboards**.

The **Dashboards** page is displayed.

Step 2 In the navigation pane, choose **Dashboards** > **XFUSION Enclosure Detailed Dashboard**.


The **XFUSION Enclosure Detailed Dashboard** page is displayed.

Step 3 In the **Enclosure List** area, select the enclosure to be viewed.

You can view the following information, as shown in **Figure 6-19**.

- Latest Alerts
- Object Relationship


Figure 6-19 XFUSION Enclosure Detailed Dashboard

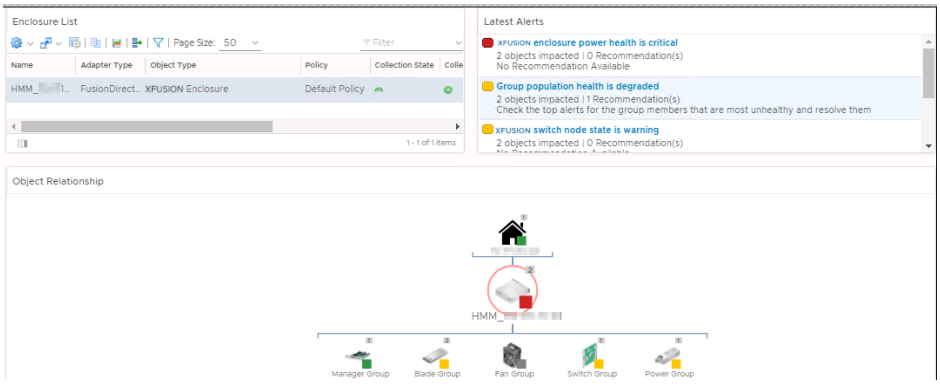

Step 4 The enclosure topology is displayed in the **Object Relationship** area. You can click any enclosure or component to view the alerts and detailed information about the enclosure or component, as shown in **Figure 6-20**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 6-20 Object Relationship

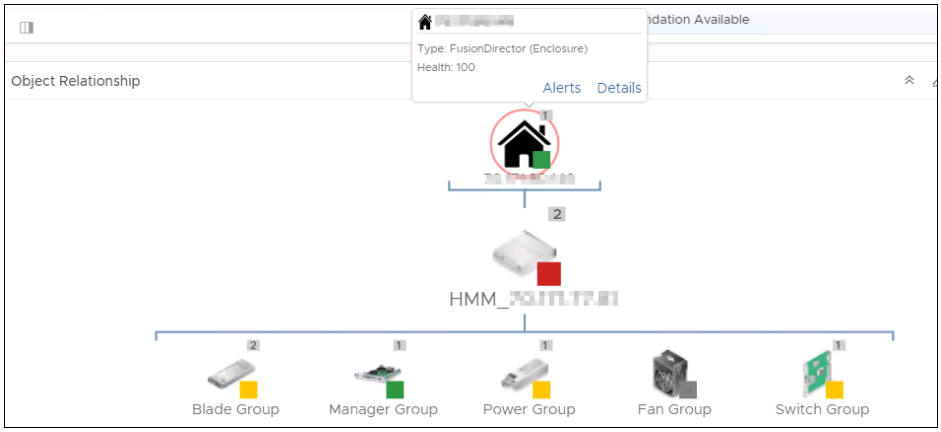

----End

6.5.2 For the vROps plug-in for version 8.12 and SaaS

Step 1 On the vROps WebUI, choose **Visualize >Dashboards > Manage**.

The **Manage** page is displayed.

Step 2 In the **Manage** page, choose **Dashboards** > **XFUSION Enclosure Detailed Dashboard**.


The **XFUSION Enclosure Detailed Dashboard** page is displayed.

Step 3 In the **Enclosure List** area, select the enclosure to be viewed.

You can view the following information, as shown in **Figure 6-21**.

- Latest Alerts
- Object Relationship


Figure 6-21 XFUSION Enclosure Detailed Dashboard

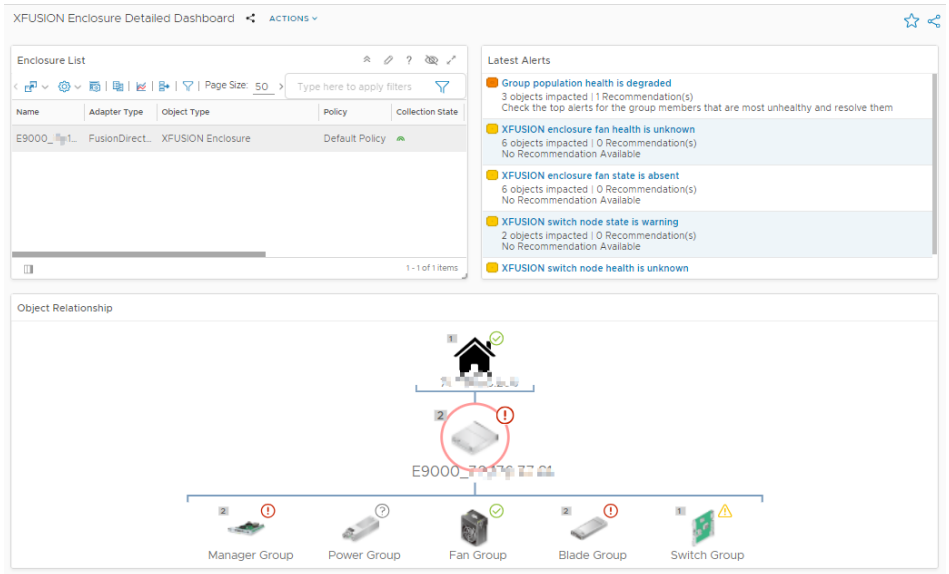

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Step 4 The enclosure topology is displayed in the **Object Relationship** area. You can click any enclosure or component to view the alerts and detailed information about the enclosure or component, as shown in **Figure 6-22**.

Figure 6-22 Object Relationship

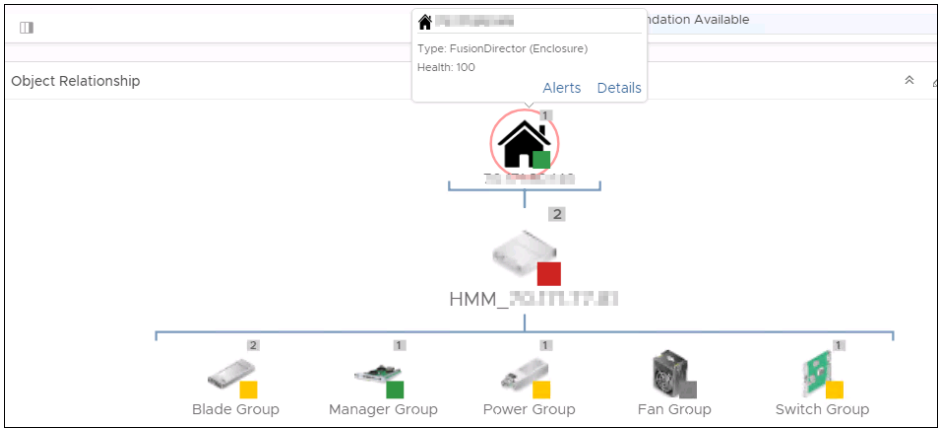

----End

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

7 Viewing Alerts

7.1 For the vROps plug-in for versions 8.1 or earlier
7.2 For the vROps plug-in for version 8.12 and SaaS

7.1 For the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, choose **Alerts**.

The **Alerts** page is displayed.

Step 2 In the navigation pane, choose **Triggered Alerts**.

The **Triggered Alerts** page is displayed.


Step 3 Select **Object Type** from the **Group By** drop-down list box.

Step 4 In the alarm column of the component for which the alarm is generated, click > to expand the list and click **Triggered On**, as shown in **Figure 7-1**.

NOTICE

You can only select a component, not a component group. Otherwise, the alerted server cannot be located.


Figure 7-1 All alerts

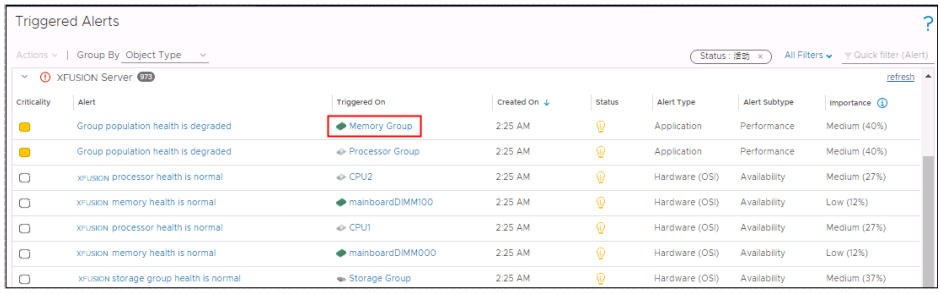

The page about the triggered object is displayed, as shown in **Figure 7-2**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 7-2 Triggered object

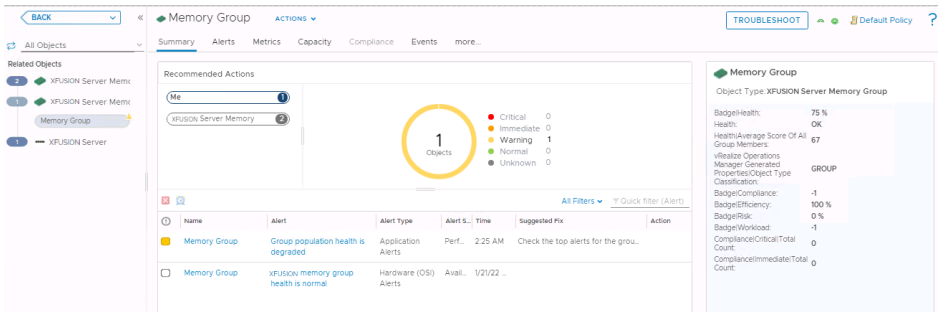

Step 5 In the navigation tree on the left, click an object (such as XFUSION Server Group or XFUSION Server) to view the server to which the trigger object belongs.

----End

7.2 For the vROps plug-in for version 8.12 and SaaS

Step 1 On the vROps WebUI, choose **Troubleshoot>Alerts**.

The **Alerts** page is displayed.


Step 2 Select **Object Type** from the **Group By** drop-down list box.

Step 3 In the alarm column of the component for which the alarm is generated, click > to expand the list and click **Triggered On**, as shown in **Figure 7-3**.

NOTICE

You can only select a component, not a component group. Otherwise, the alerted server cannot be located.


Figure 7-3 All alerts

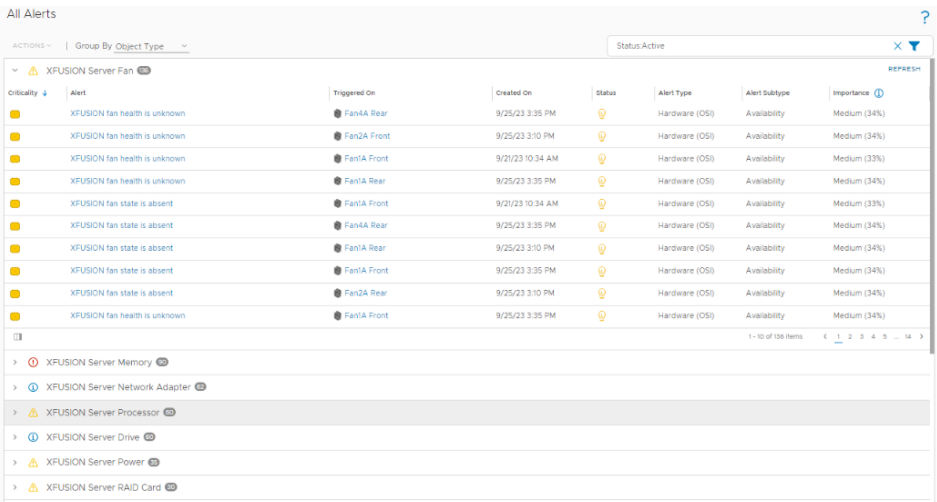

The page about the triggered object is displayed, as shown in **Figure 7-4**.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

Figure 7-4 Triggered object

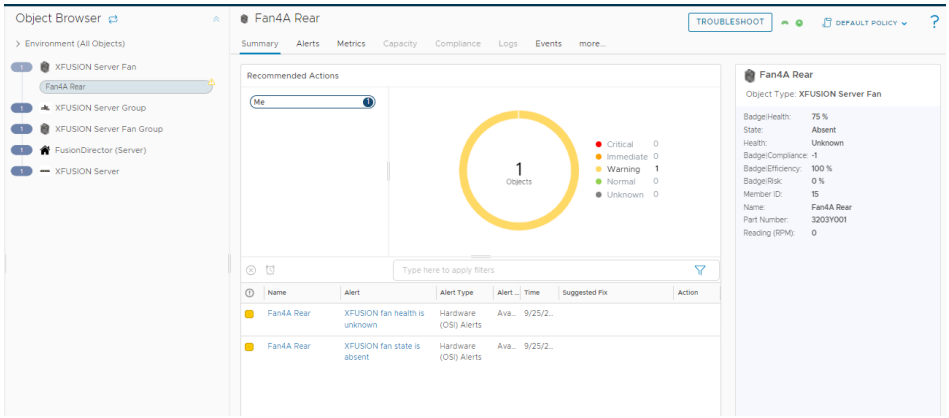

Step 4 In the navigation tree on the left, click an object (such as XFUSION Server Group or XFUSION Server) to view the server to which the trigger object belongs.

----End

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

8 Querying the XFUSION vROps Plug-in Version

8.1 For the vROps plug-in for versions 8.1 or earlier
8.2 For the vROps plug-in for version 8.12 and SaaS

8.1 For the vROps plug-in for versions 8.1 or earlier

Step 1 On the vROps WebUI, choose **Administration**.


The **Administration** page is displayed.

Step 2 In the navigation pane on the left, choose **Repository**.

The **Repository** page is displayed.

Step 3 Check the current version of the vROps plug-in, as shown in **Figure 8-1**.

Figure 8-1 Viewing the plug-in version

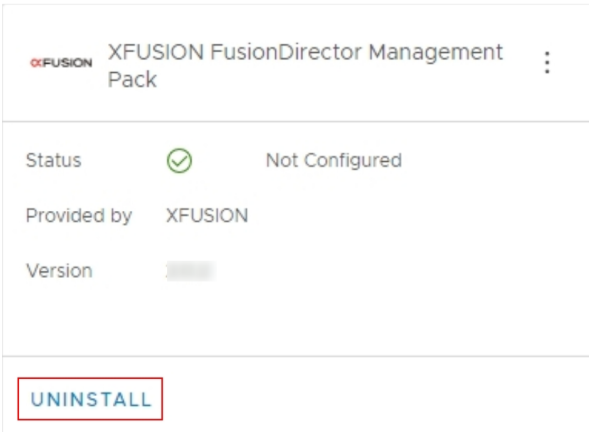

----End

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

8.2 For the vROps plug-in for version 8.12 and SaaS

Step 1 On the vROps WebUI, choose **Data Sources** > **Integrations**.

The **Integrations** page is displayed.

Step 2 In the **Integrations** page, choose **Repository**.

The **Repository** page is displayed.

Step 3 Check the current version of the vROps plug-in, as shown in **Figure 8-2**.

Figure 8-2 Viewing the plug-in version



----End

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

A Obtaining Technical Support

To obtain assistance, contact technical support as follows:

- Contact customer service center at **support@xfusion.com**.
- Contact technical support personnel.

 Copyright © XFUSION INTERNATIONAL PTE. LTD.

B Communication Matrix

Source Device	Source IP Address	Source Port Number	Destination Device	Destination IP Address	Destination Port Number	Protocol	Port Description	Destination Port Configurable	Authentication Mode	Encryption Mode
Device to which vRops belongs	IP address of the device to which vRops belongs	Random	Device to which FusionDirector belongs	IP address of the device to which FusionDirector belongs	443	TCP	HTTPS(Web) HTTPS standard protocol port is enabled by default. Plug-in, as a client, accesses FusionDirector service.	No	Token	TLS
Client	Client IP address	Random	Device to which vRops belongs	IP address of the device to which vRops belongs	44300-44399 Note: The port number ranges from 44300 to 44399.	TCP	The port that receives the report events of FusionDirector is enabled by default.	Yes	User name/ password	TLS

 Copyright © XFUSION INTERNATIONAL PTE. LTD.