
OpenEVSE

**Holster Install Template**

- Tape Template to Wall
- Drill Holes at marked locations
- Remove Template
- Position holster over holes
- Insert 4 Screws and tighten

Note. Included screws work well on many solid surfaces. For drywall, stucco or plaster anchors should be added following the manufacture's recommendations.

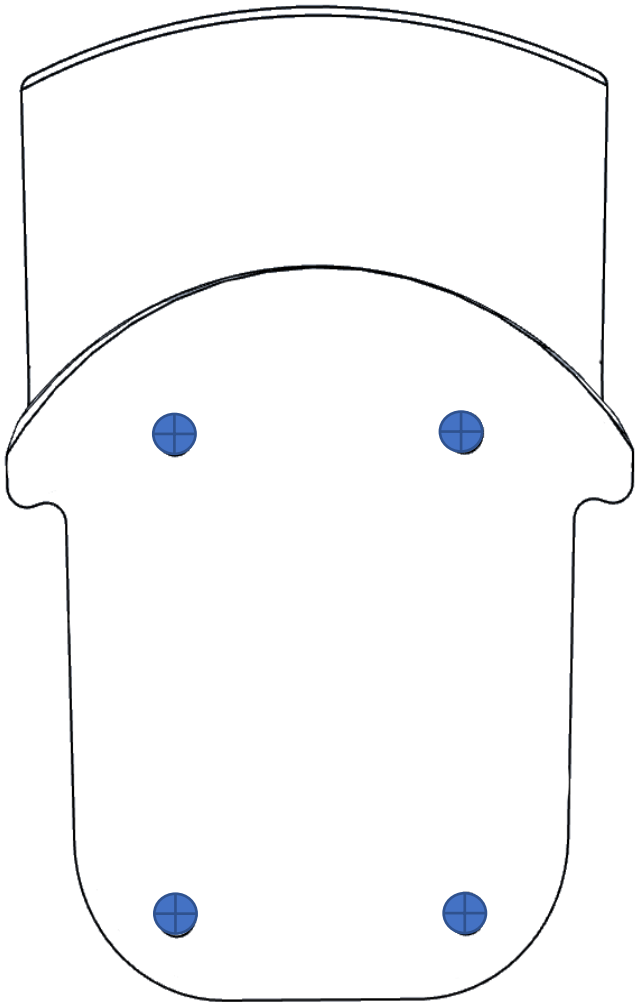

**Need Help**

Guides: guides.openevse.com
Email: support@openevse.com
Phone: (877) 967-3638

Copyright 2019 – OpenEVSE LLC