
Replace NAND flash to Nor Flash

Before solder Nor-flash use burner write OpenIPC bin into New nor-flash



Change boot HW config remove Resistor

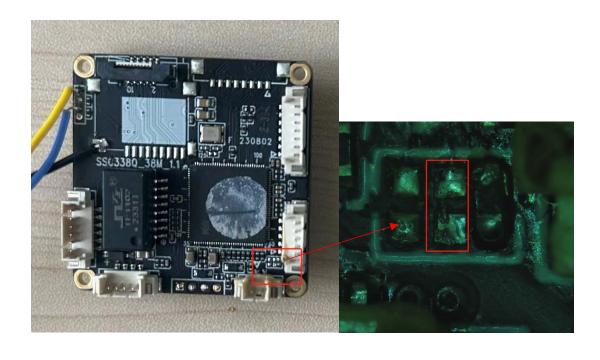


Nor-flash to NAND

Before solder Nor-flash use burner write OpenIPC bin into New NAND-flash.



Solder boot config resistor blank to 4.7K(0402)

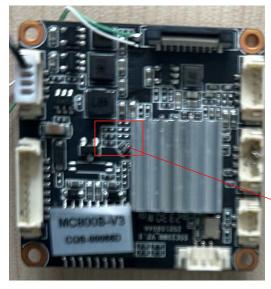



Burn config

