
FLEETWOOD WINDOWS & DOORS

## SERIES 3070-T

DWG NO.: 3070-T-15

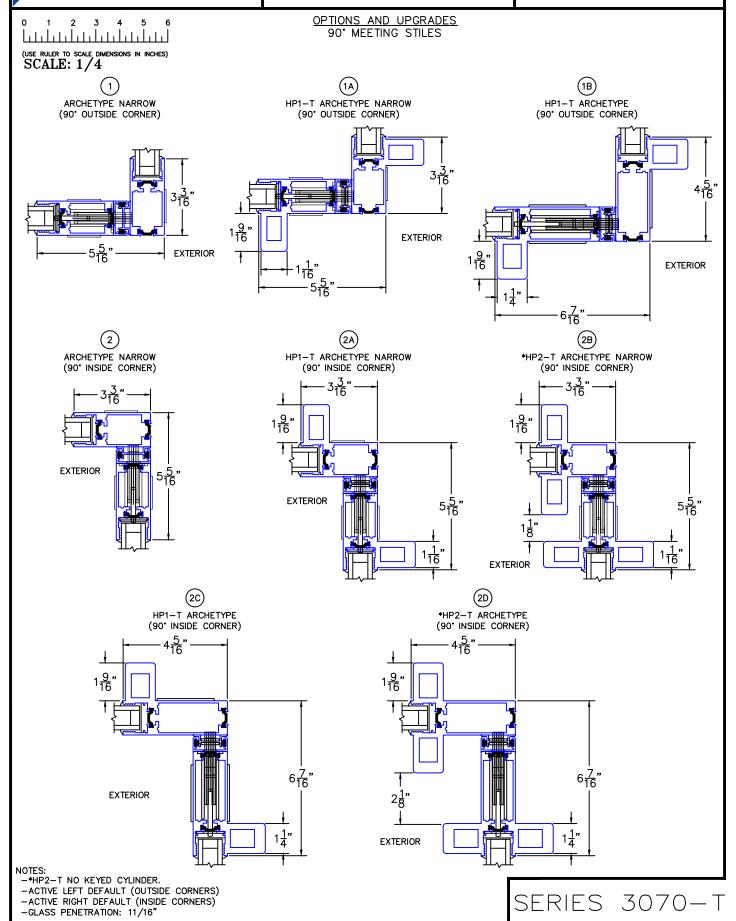



DWG NO.: 3070-T-15\_01

DATE: 4/6/18


0 0.5 1

OPTIONS AND UPGRADES

(use ruler to scale dimensions in inches)  $\begin{array}{ll} SCALE: & FULL \end{array}$ 



ARCHETYPE NARROW (90° OUTSIDE CORNER)

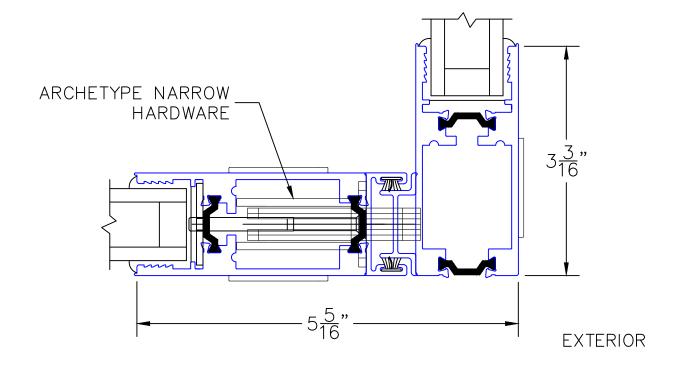



DWG NO.: 3070-T-15\_01A

DATE: 4/6/18

0 0.5 1


OPTIONS AND UPGRADES

(USE RULER TO SCALE DIMENSIONS IN INCHES)

SCALE: FULL




HP1-T ARCHETYPE NARROW (90° OUTSIDE CORNER)

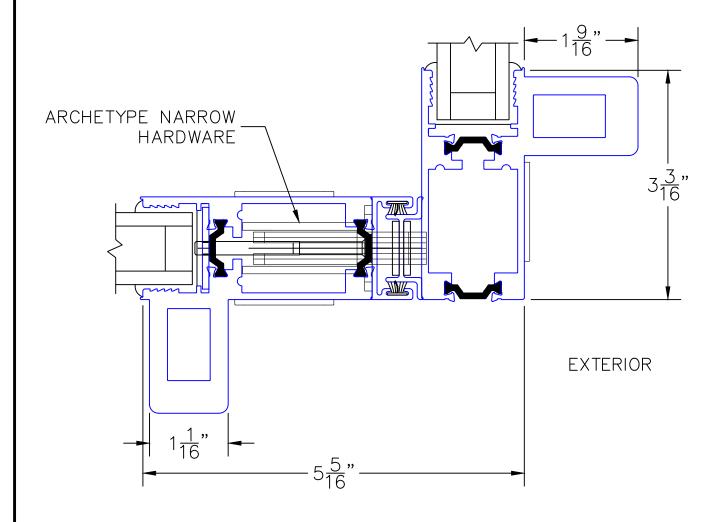



DWG NO.: 3070-T-15\_01B

DATE: 4/6/18




OPTIONS AND UPGRADES

(use ruler to scale dimensions in inches)  $\mathbf{SCALE}$ :  $\mathbf{FULL}$ 

(1B

HP1-T ARCHETYPE (90° OUTSIDE CORNER)

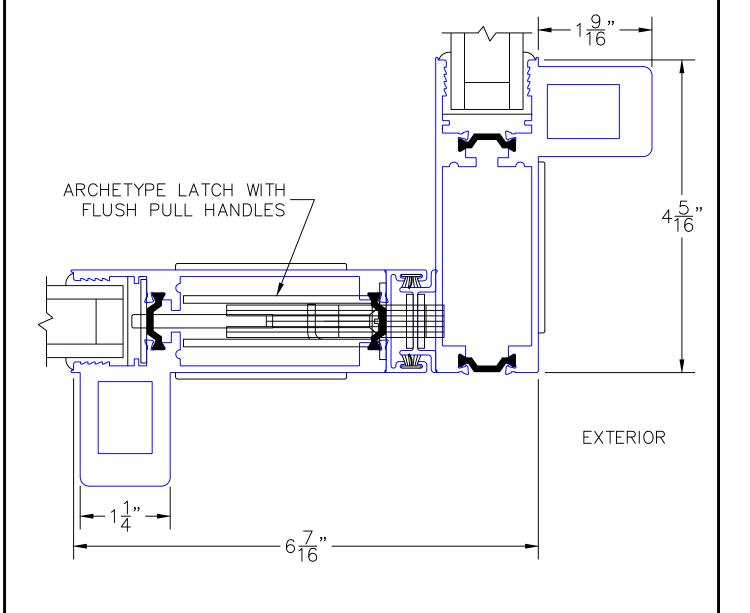



DWG NO.: 3070-T-15\_02

DATE: 4/6/18

0 0.5 1


(USE RULER TO SCALE DIMENSIONS IN INCHES)

SCALE: FULL

OPTIONS AND UPGRADES




ARCHETYPE NARROW (90° INSIDE CORNER)

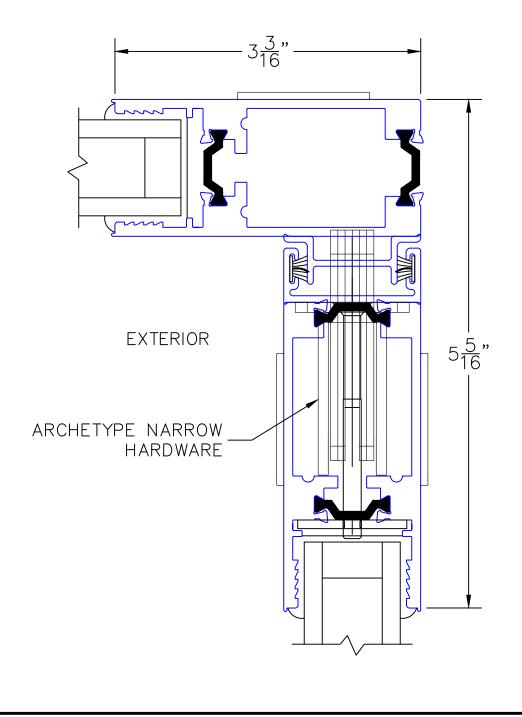




DWG NO.: 3070-T-15\_02A

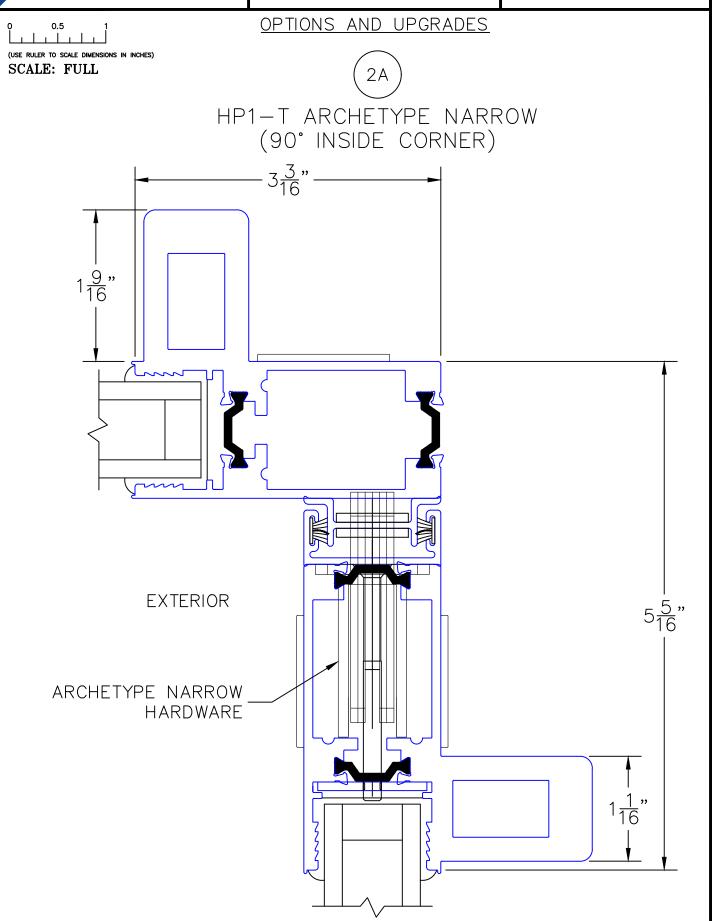




DWG NO.: 3070-T-15\_02B

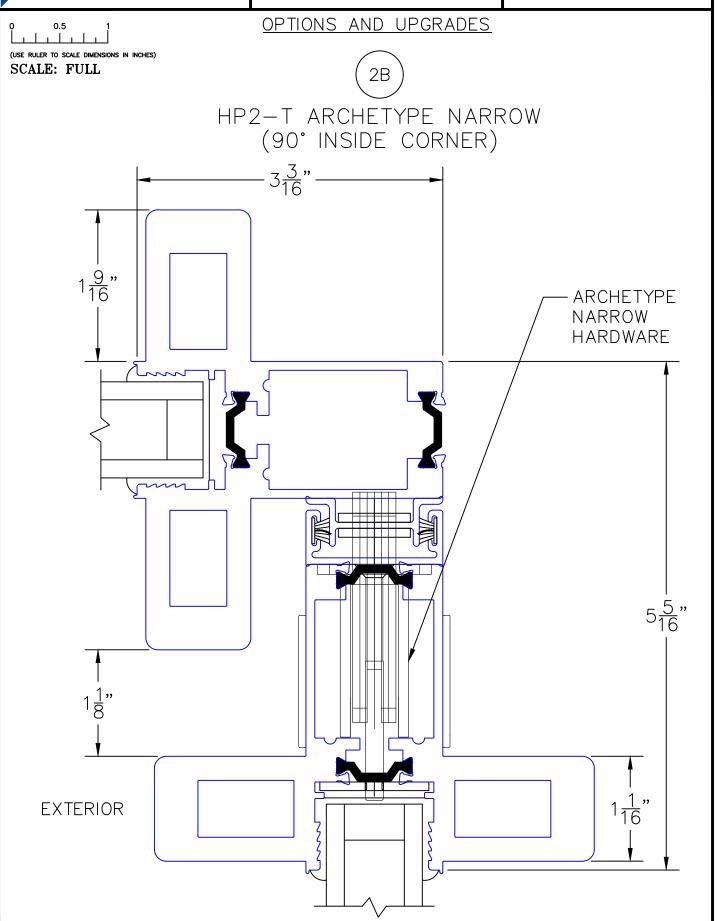



DWG NO.: 3070-T-15\_02C

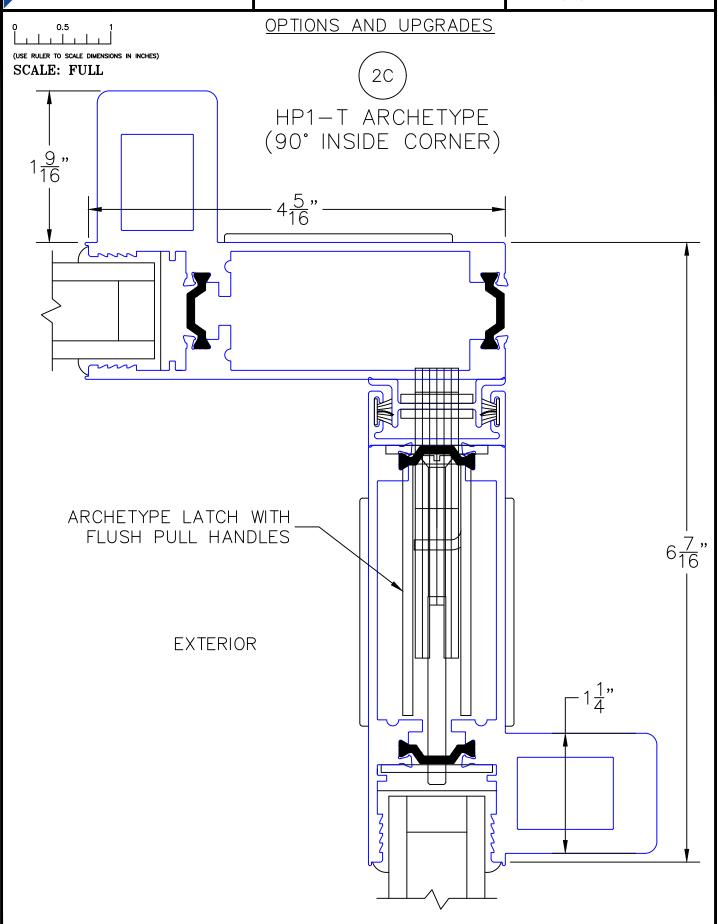



DWG NO.: 3070-T-15\_02D

