


DWG NO.: 3200-T-02

DATE: 2/1/18

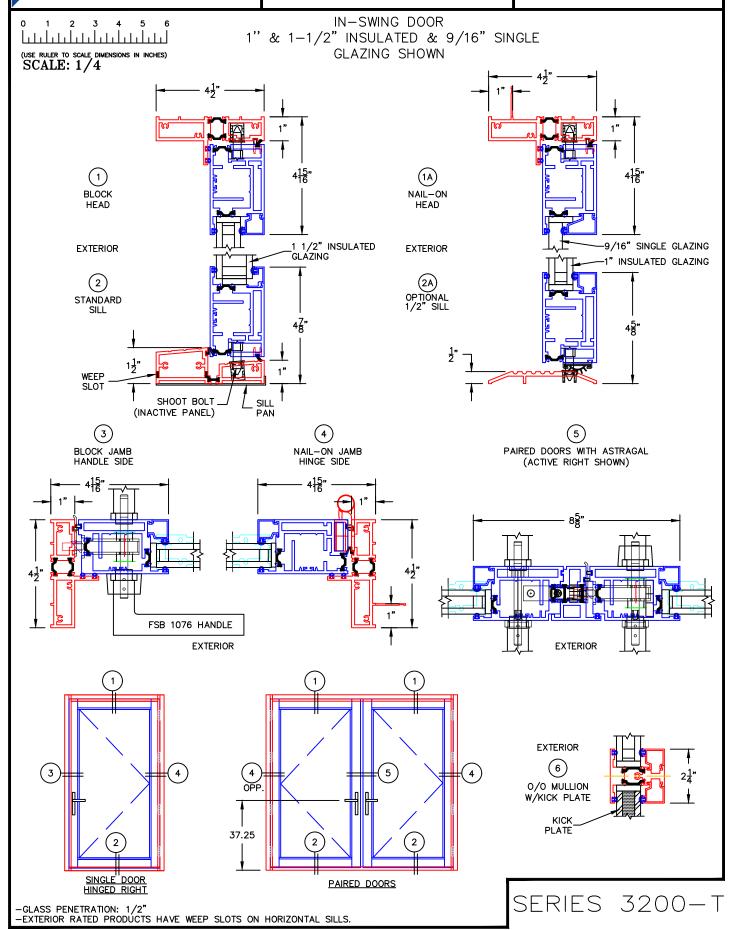




DWG NO.: 3200-T-02_01

DATE: 2/1/18

O 0.5 1 IN—SWING DOOR DETAILS
(USE RULER TO SCALE DIMENSIONS IN INCHES)


1" INSULATED GLAZING SHOWN
SCALE: FULL

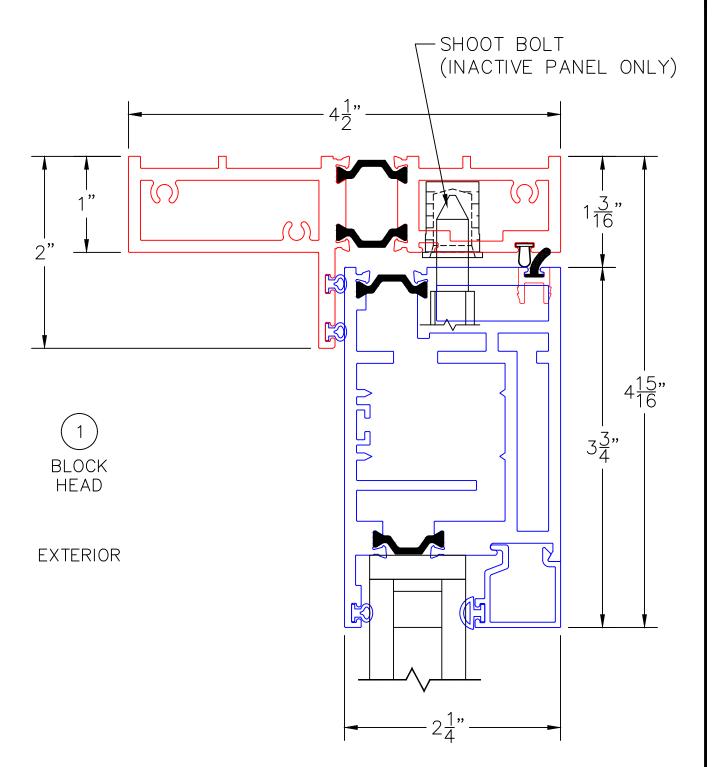



DWG NO.: 3200-T-02_01A

DATE: 2/1/18

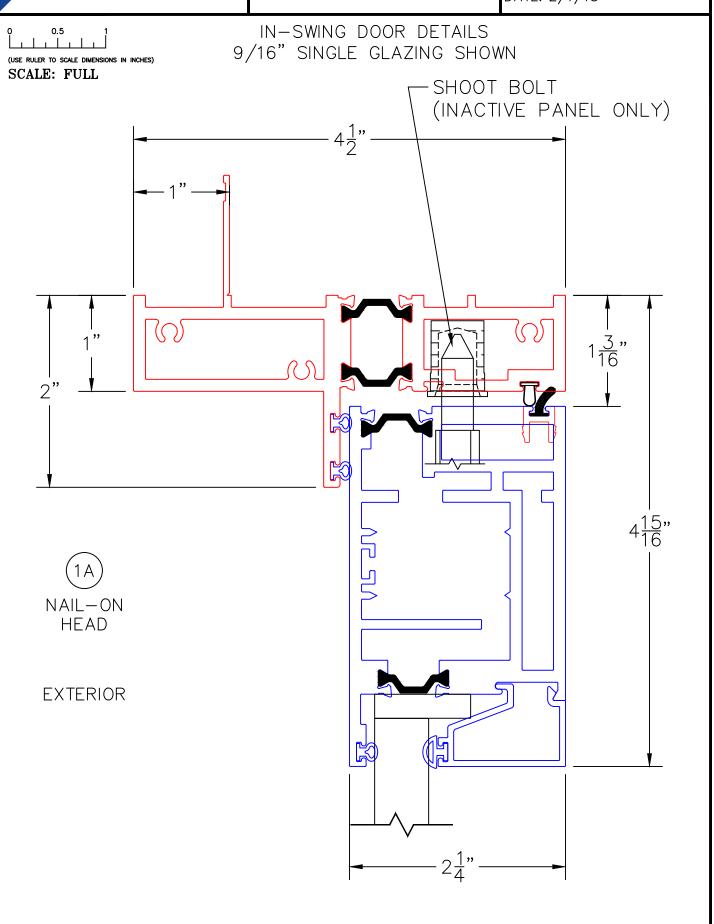




DWG NO.: 3200-T-02_02

DATE: 2/1/18

0 0.5 1
(USE RULER TO SCALE DIMENSIONS IN INCHES)
SCALE: FULL

IN-SWING DOOR DETAILS
1-1/2" INSULATED GLAZING SHOWN

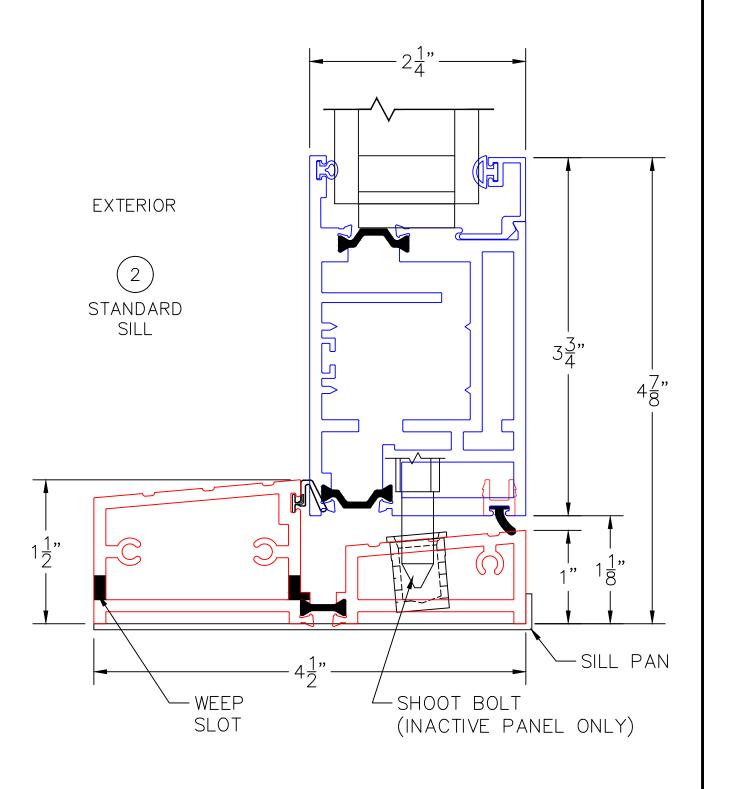



DWG NO.: 3200-T-02_02A


DATE: 2/1/18

0 0.5 1
(USE RULER TO SCALE DIMENSIONS IN INCHES)

SCALE: FULL

IN-SWING DOOR DETAILS


1" INSULATED GLAZING SHOWN

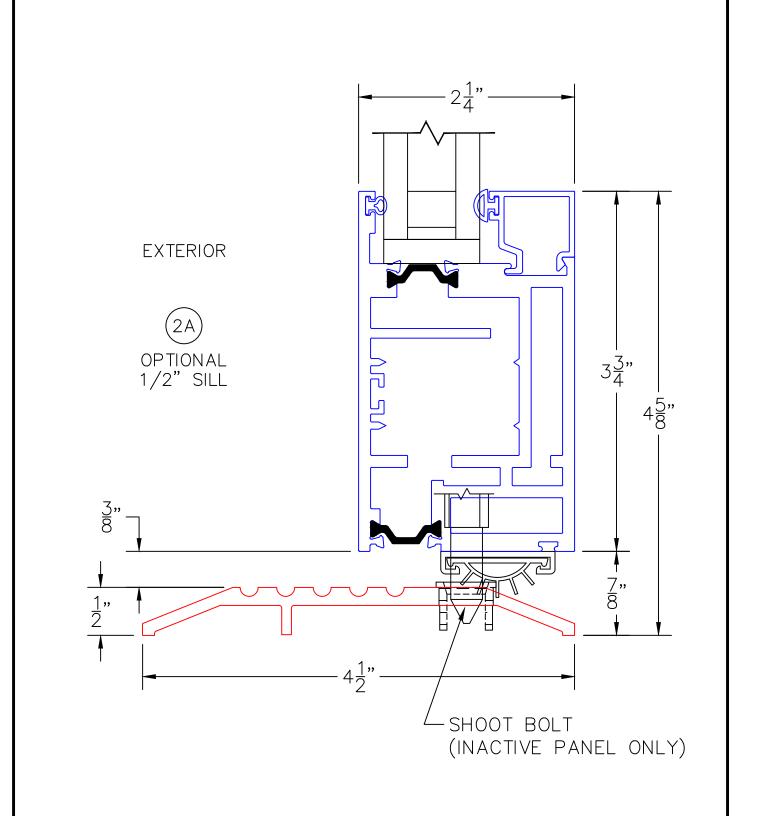



DWG NO.: 3200-T-02_03

DATE: 2/1/18

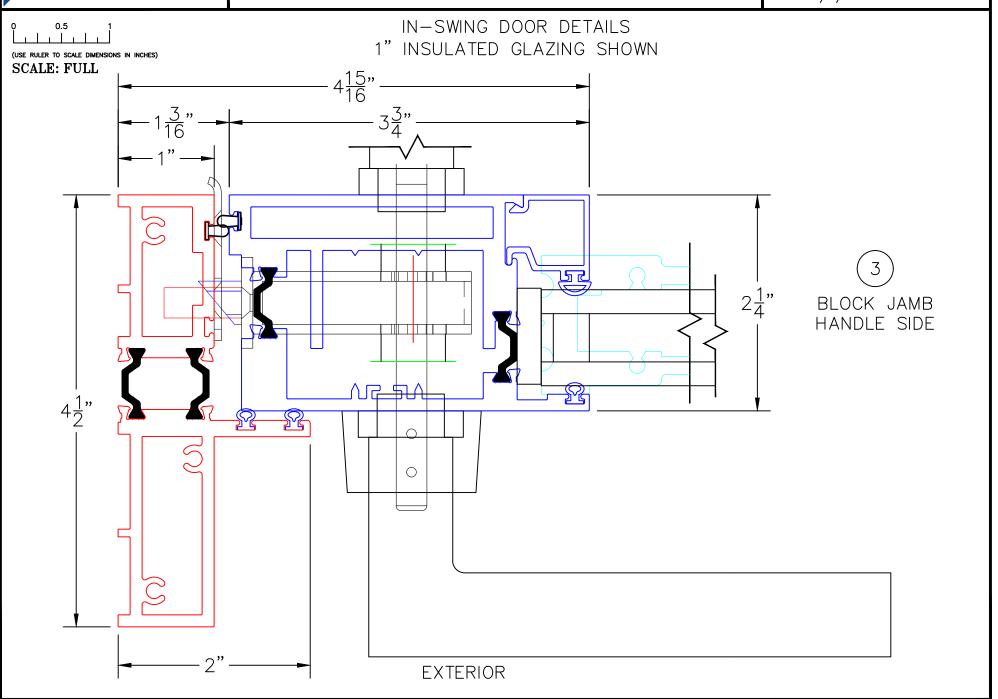

DWG NO.: 3200-T-02_04 SERIES 3200-T DATE: 2/1/18 IN-SWING DOOR DETAILS 1" INSULATED GLAZING SHOWN (USE RULER TO SCALE DIMENSIONS IN INCHES) SCALE: FULL NAIL-ON JAMB HINGE SIDE (PIVOT HINGE SHOWN)

EXTERIOR




DWG NO.: 3200-T-02_05

DATE: 2/1/18

0 0.5 1 IN—SWING DOOR DETAILS
(USE RULER TO SCALE DIMENSIONS IN INCHES)

1" INSULATED GLAZING SHOWN
SCALE: FULL

PAIRED DOORS

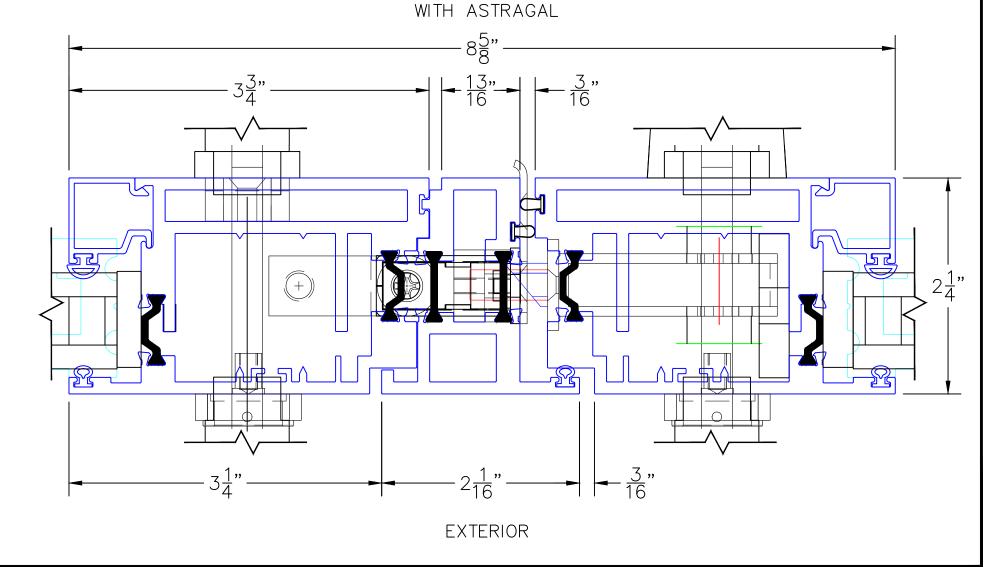



DWG NO.: 3200-T-02_06

DATE: 2/1/18

0 0.5 1
(USE RULER TO SCALE DIMENSIONS IN INCHES)

SCALE: FULL

IN-SWING DOOR DETAILS

1" INSULATED GLAZING SHOWN



