


SEE DRAWINGS 3070-07, 3070-08 & 3070-11.

SERIES 3070

DWG NO.: 3070-001

DATE: 4/20/18

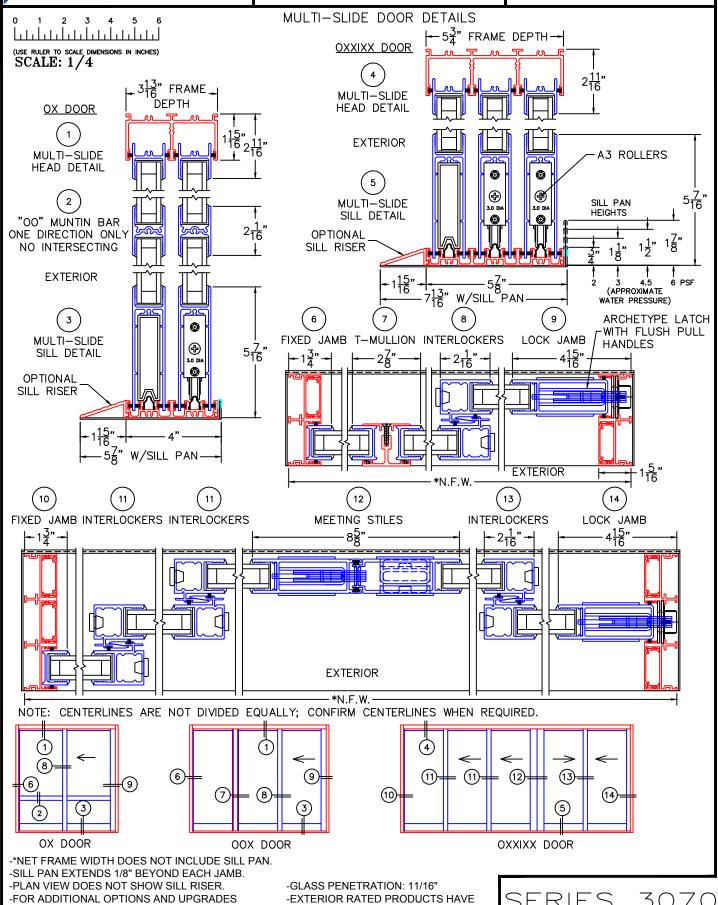

WEEP SLOTS ON HORIZONTAL SILLS.




DWG NO.: 3070-001_01

(USE RULER TO SCALE DIMENSIONS IN INCHES)

OX DOOR

SCALE: FULL

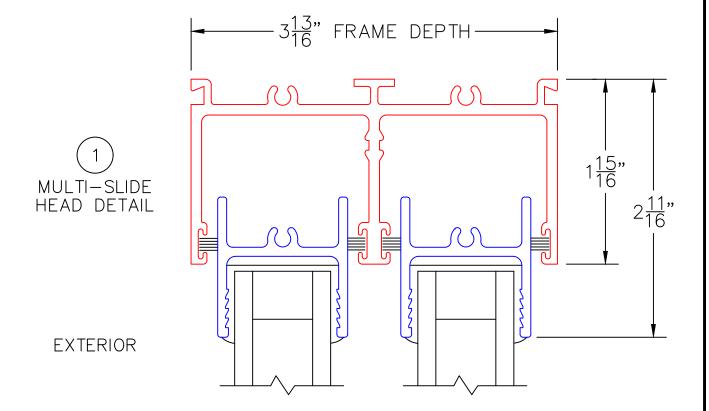



DWG NO.: 3070-001_02


OX DOOR


(USE RULER TO SCALE DIMENSIONS IN INCHES)

SCALE: FULL

EXTERIOR


"OO" MUNTIN BAR ONE DIRECTION ONLY NO INTERSECTING

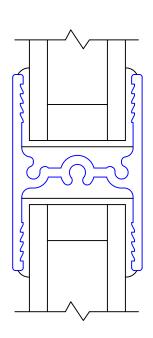

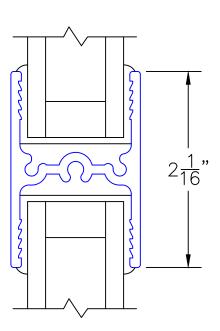



DWG NO.: 3070-001_03

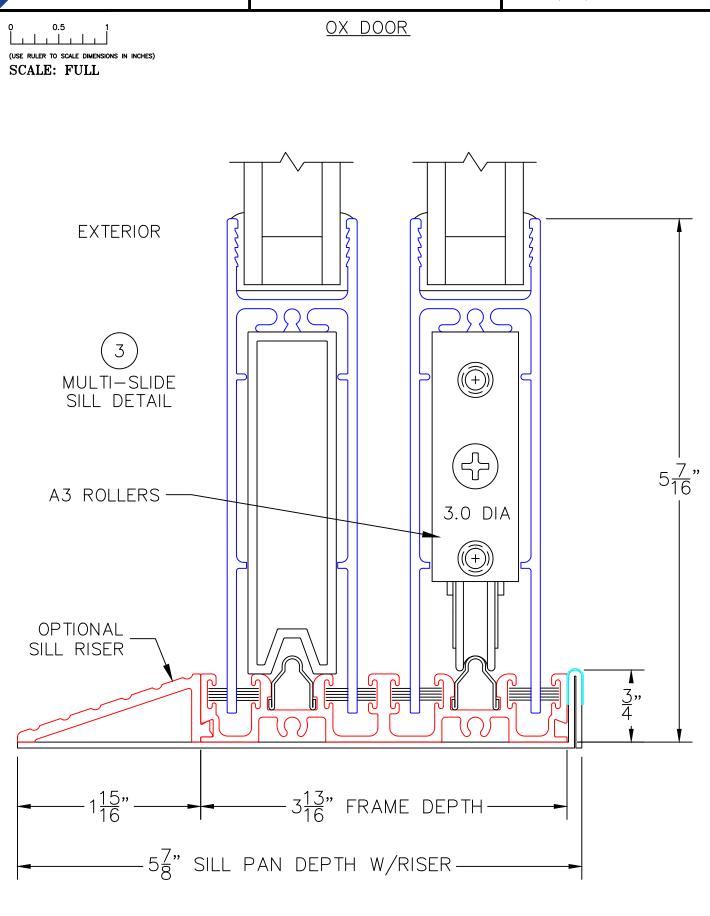




DWG NO.: 3070-001_04


(USE RULER TO SCALE DIMENSIONS IN INCHES)

OXXIXX DOOR

SCALE: FULL

MULTI-SLIDE HEAD DETAIL

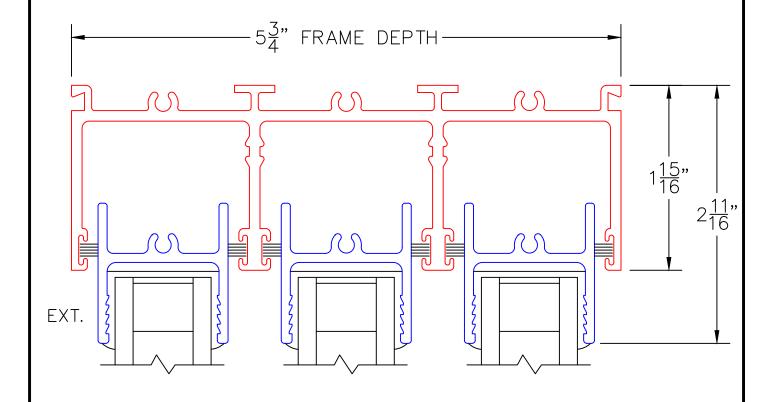

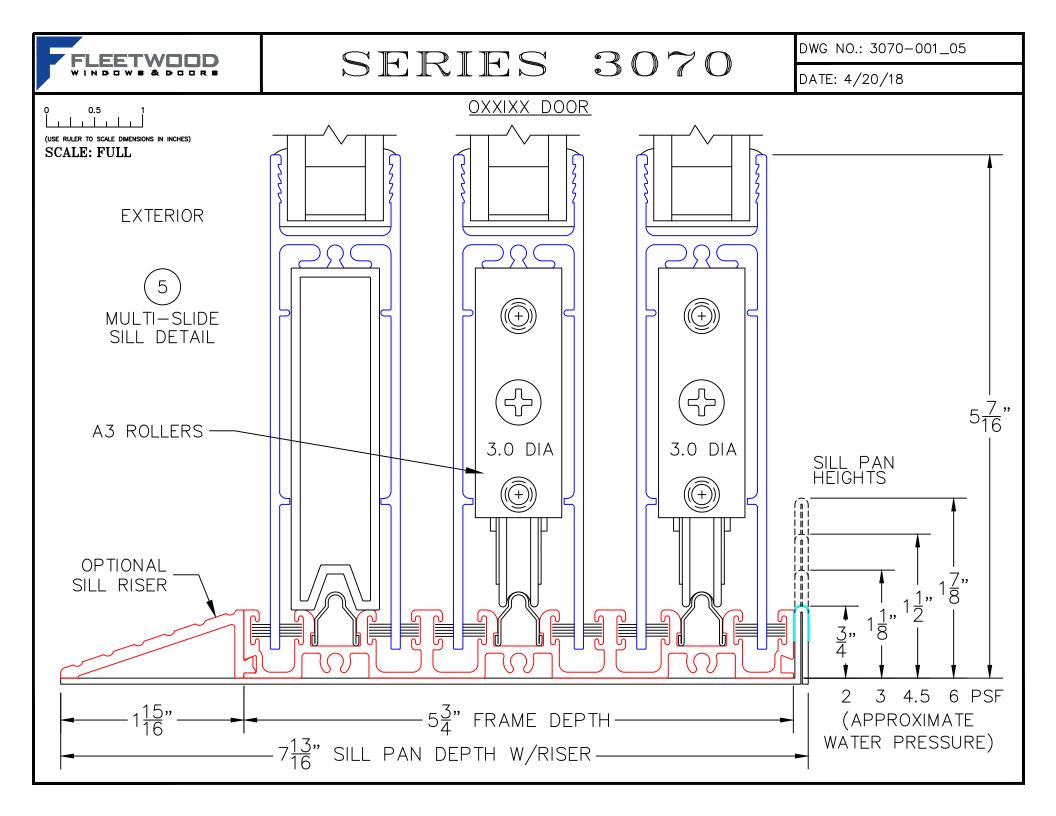




DWG NO.: 3070-001_06

(USE RULER TO SCALE DIMENSIONS IN INCHES)

OX DOOR

SCALE: FULL

FIXED JAMB

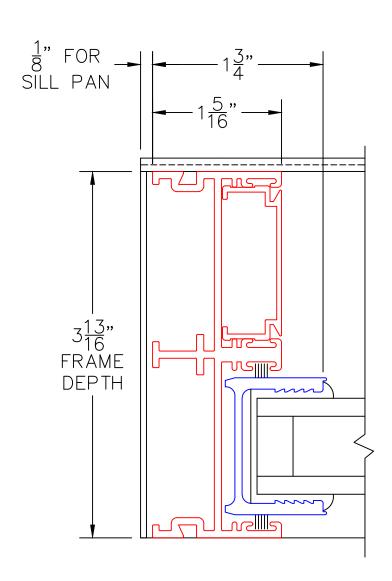

EXTERIOR




DWG NO.: 3070-001_07

(USE RULER TO SCALE DIMENSIONS IN INCHES)

OX DOOR

SCALE: FULL



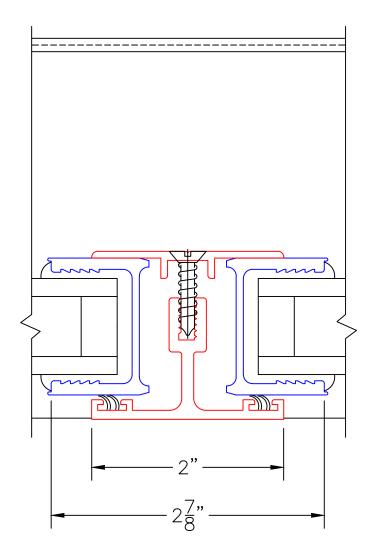

EXTERIOR




DWG NO.: 3070-001_08

OX DOOR

(USE RULER TO SCALE DIMENSIONS IN INCHES)

SCALE: FULL




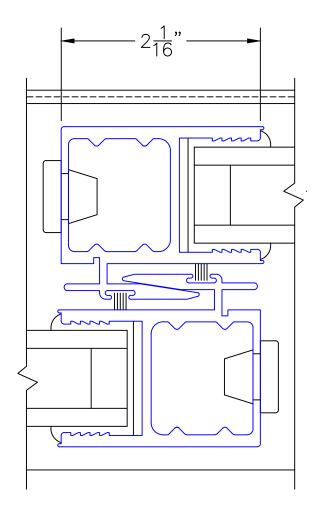

EXTERIOR



DWG NO.: 3070-001_09

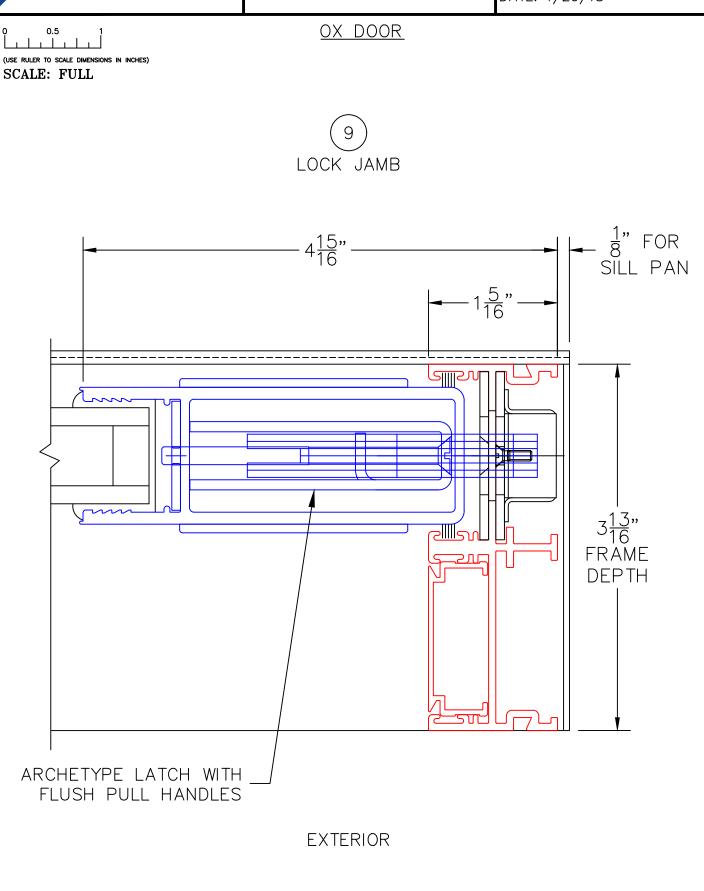



SERIES 3070

DWG NO.: 3070-001_12

DATE: 4/20/18

OXXIXX DOOR

(USE RULER TO SCALE DIMENSIONS IN INCHES)

SCALE: FULL

MEETING STILES

