
FLEETWOOD WINDOWS & DOORS

SEE DRAWINGS 3070-07, 3070-08 & 3070-11.

SERIES 3070

DWG NO.: 3070-005

DATE: 4/20/18

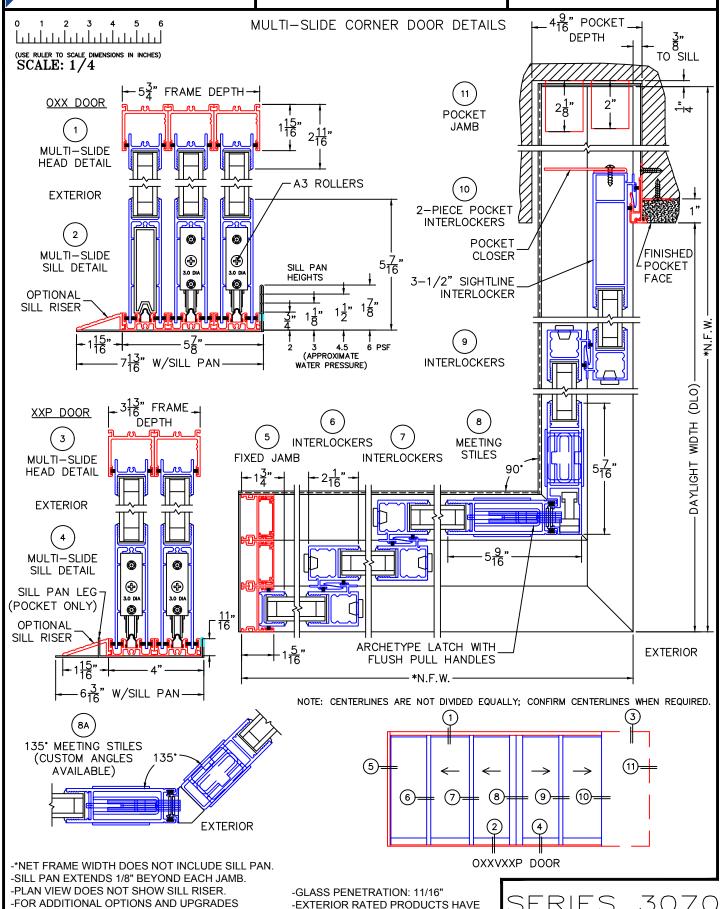

WEEP SLOTS ON HORIZONTAL SILLS




DWG NO.: 3070-005_01


(USE RULER TO SCALE DIMENSIONS IN INCHES)

OXX DOOR

SCALE: FULL

MULTI-SLIDE HEAD DETAIL

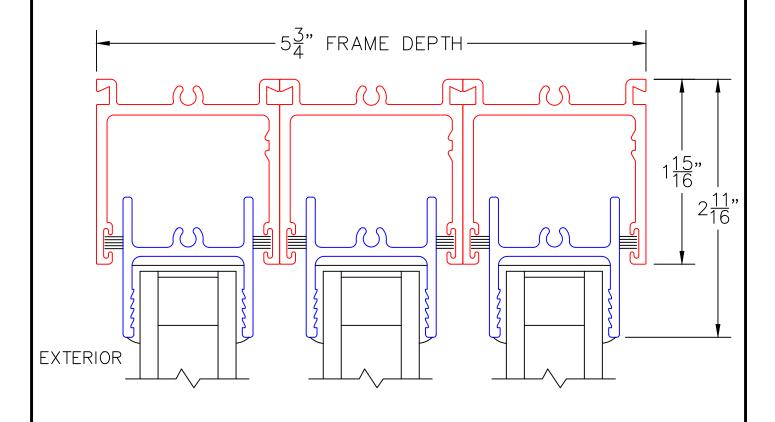

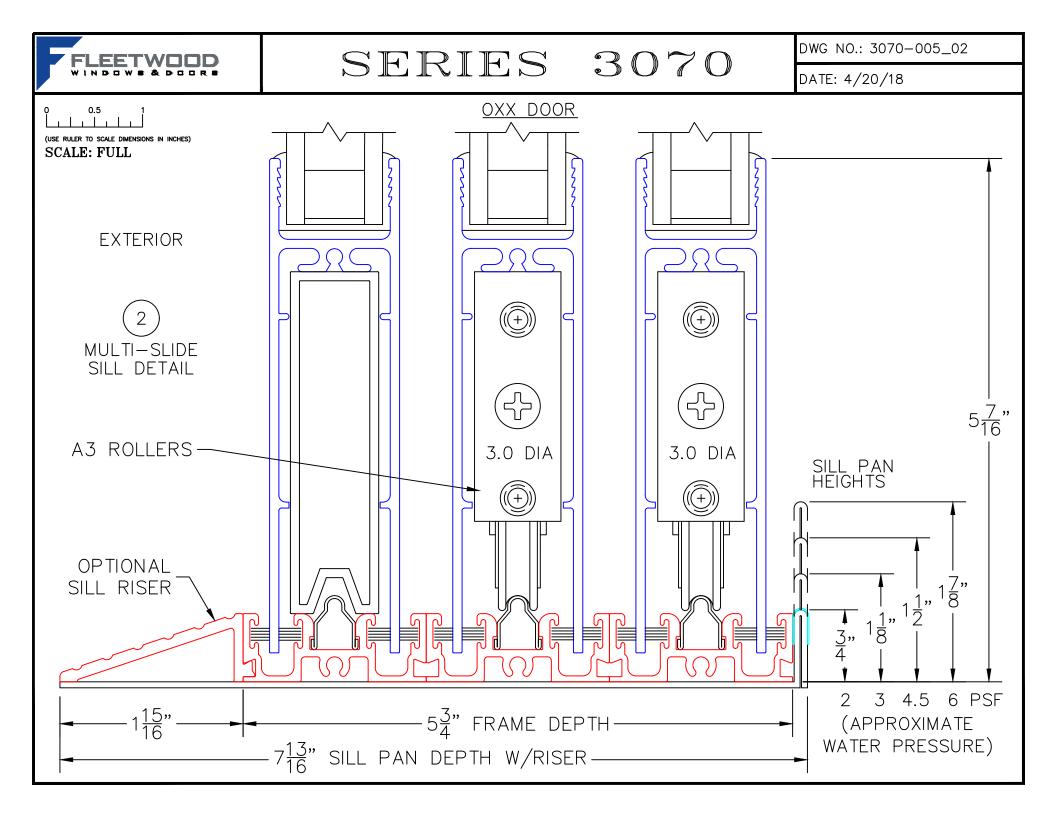




DWG NO.: 3070-005_03

(USE RULER TO SCALE DIMENSIONS IN INCHES)


XXP DOOR

SCALE: FULL

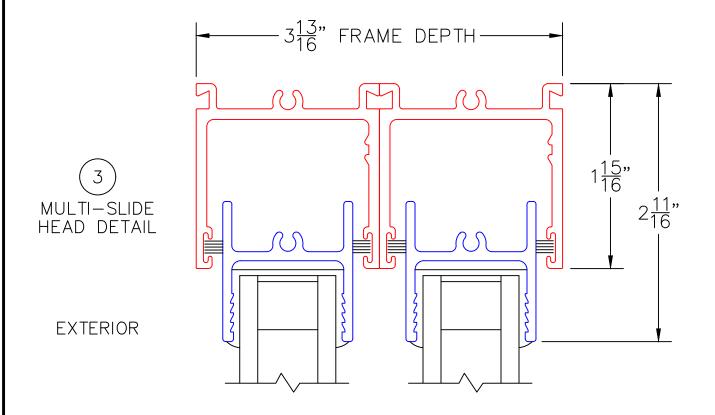



DWG NO.: 3070-005_04

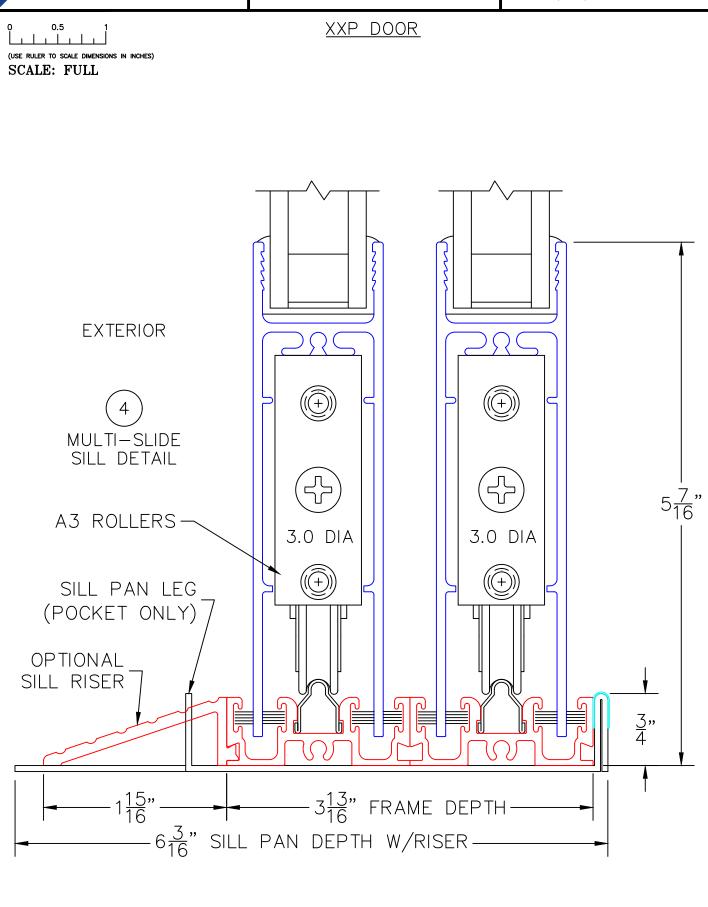




DWG NO.: 3070-005_05



SCALE: FULL

OXX DOOR



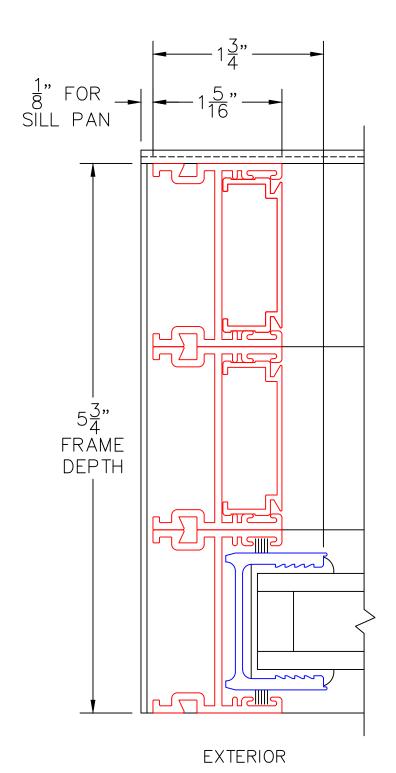




DWG NO.: 3070-005_06

(USE RULER TO SCALE DIMENSIONS IN INCHES)

SCALE: FULL

OXX DOOR




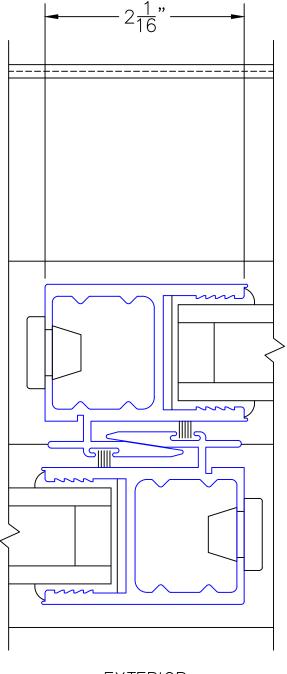

EXTERIOR



DWG NO.: 3070-005_08

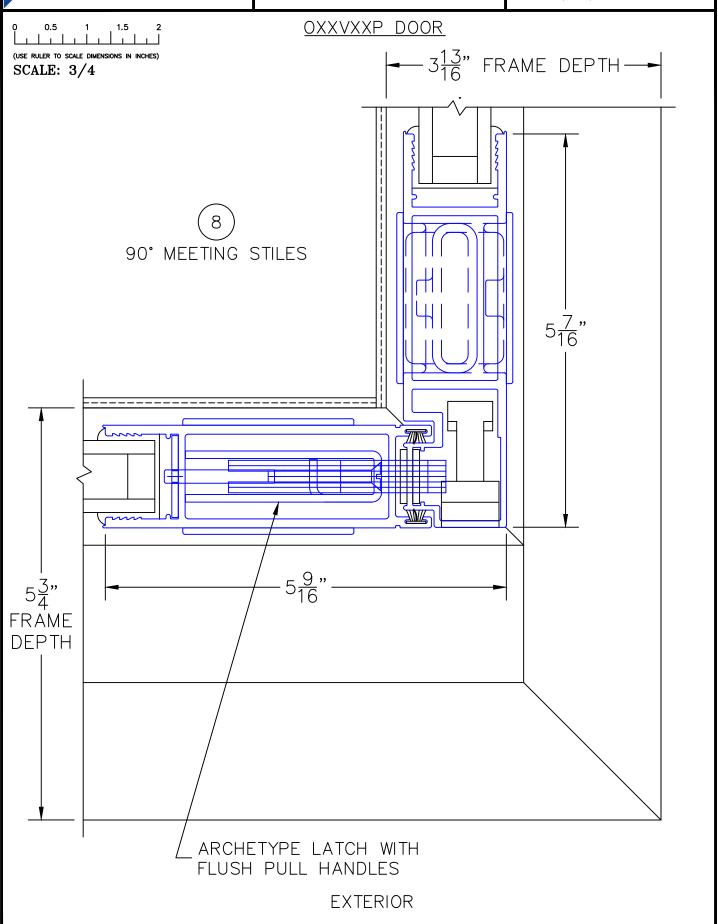



SERIES 3070


DWG NO.: 3070-005_08A

DATE: 4/20/18

(USE RULER TO SCALE DIMENSIONS IN INCHES)

OXXVXXP DOOR

SCALE: FULL

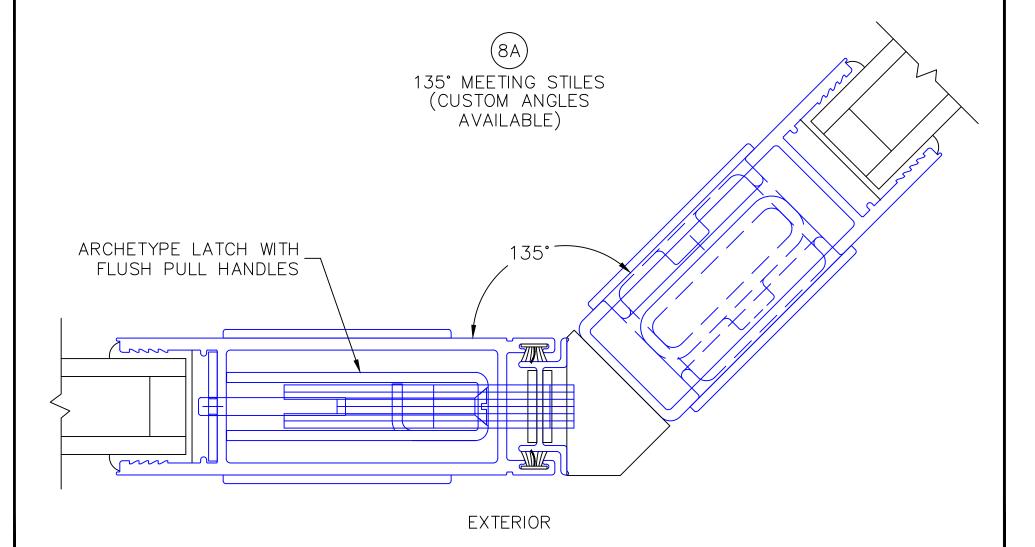




DWG NO.: 3070-005_09

(USE RULER TO SCALE DIMENSIONS IN INCHES)

XXP DOOR


SCALE: FULL



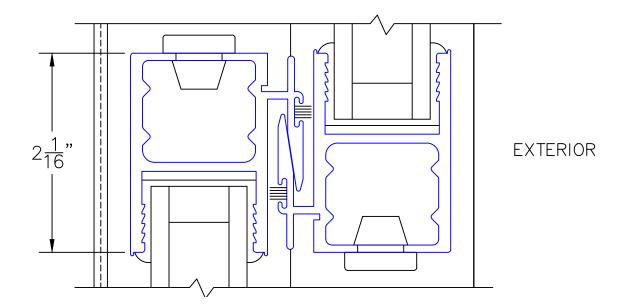



DWG NO.: 3070-005_10

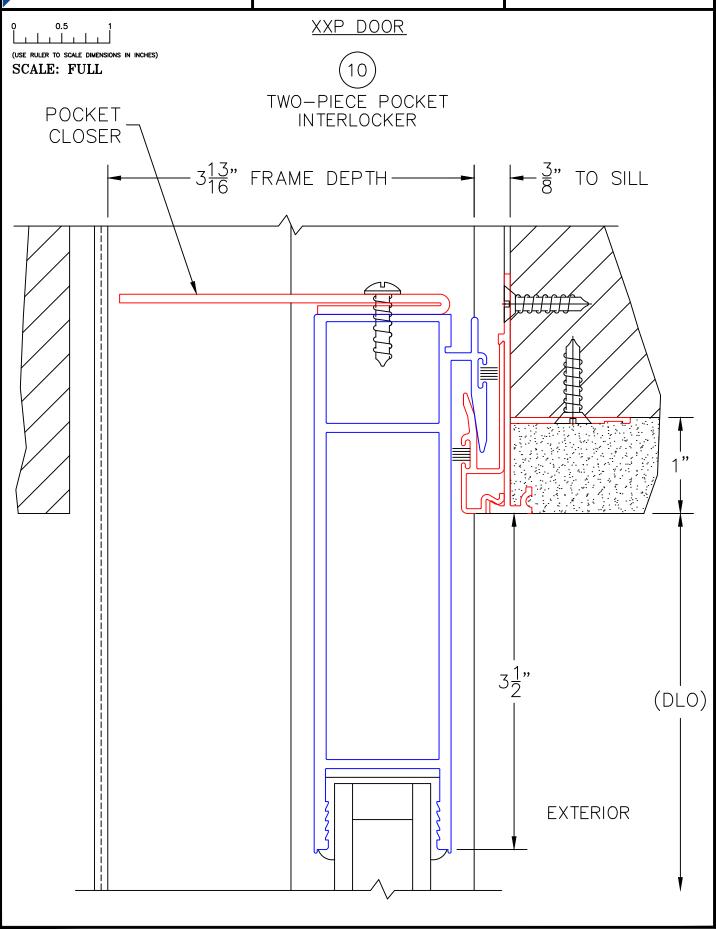



DWG NO.: 3070-005_11

XXP DOOR

SCALE: FULL

POCKET JAMB

