


DWG NO.: 250-T-05

DATE: 7/5/18

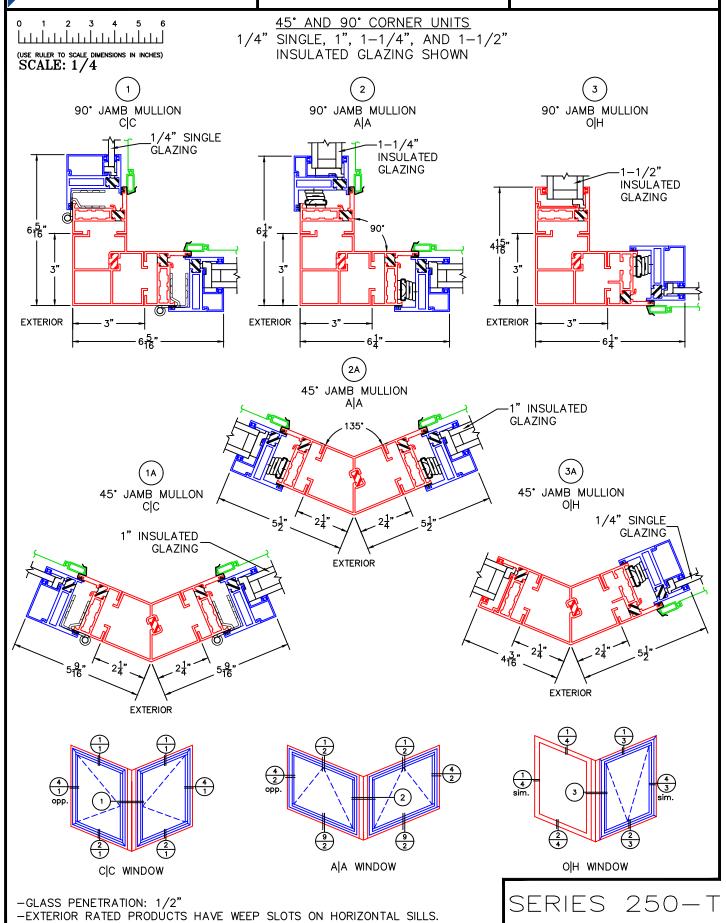




DWG NO.: 250-T-05_01

DATE: 7/5/18

0 0.5 1 1.5 2 (USE RULER TO SCALE DIMENSIONS IN INCHES) $\frac{3}{4}$

90° CORNER UNIT—CASEMENT 1/4" SINGLE AND 1" INSULATED GLAZING SHOWN

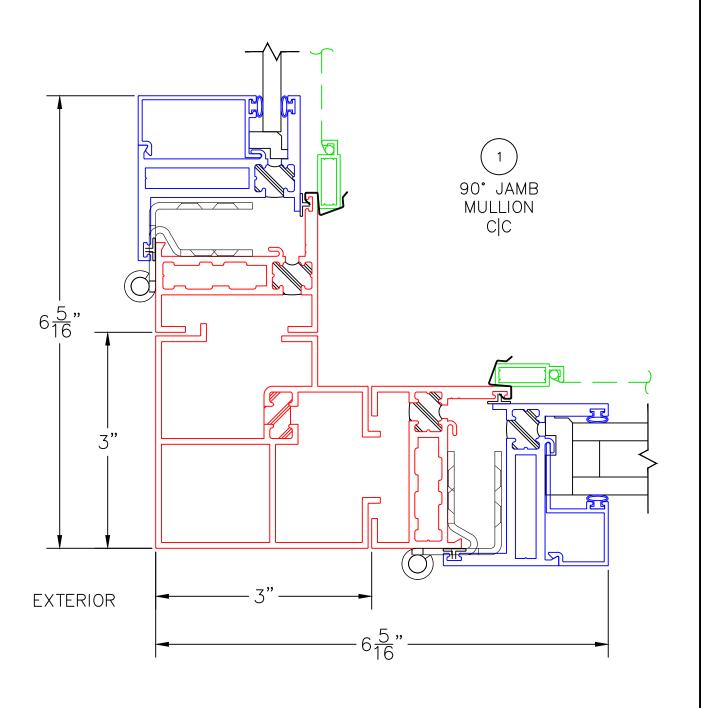




DWG NO.: 250-T-05_01A

DATE: 7/5/18



45° CORNER UNIT-CASEMENT 1/4" SINGLE AND 1" INSULATED GLAZING SHOWN

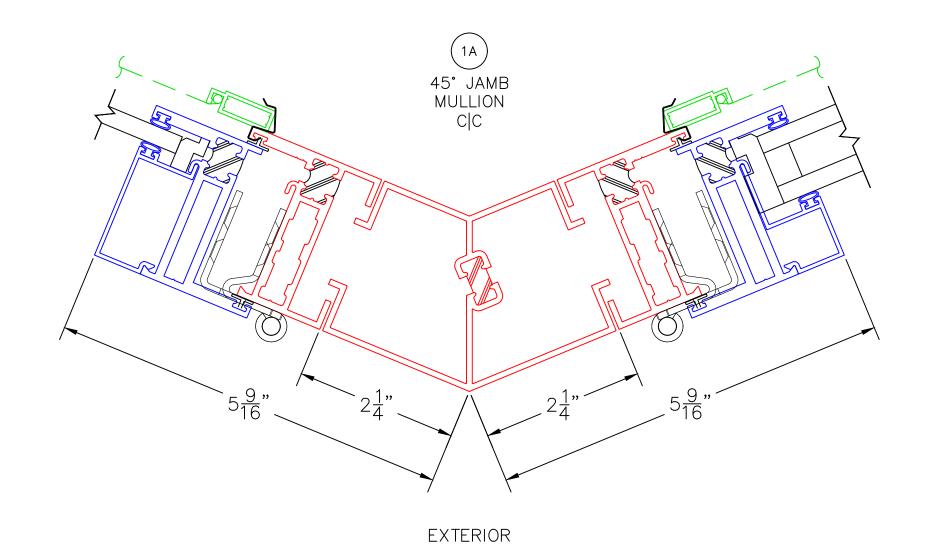




DWG NO.: 250-T-05_02

DATE: 7/5/18

0 0.5 1 1.5 2 (USE RULER TO SCALE DIMENSIONS IN INCHES) SCALE: 3/4

90° CORNER UNIT—AWNING 1" AND 1-1/4" INSULATED GLAZING SHOWN

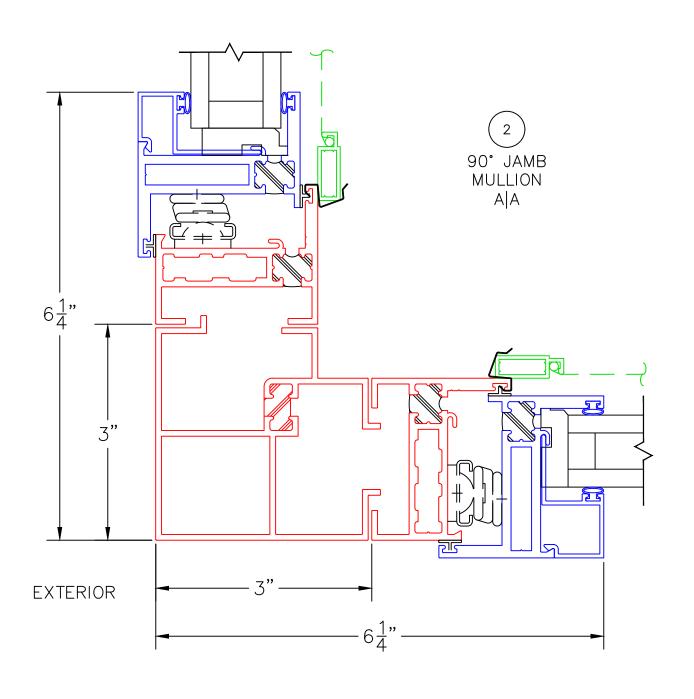




DWG NO.: 250-T-05_02A

DATE: 7/5/18



45° CORNER UNIT-AWNING
1" AND 1-1/4"
INSULATED GLAZING SHOWN

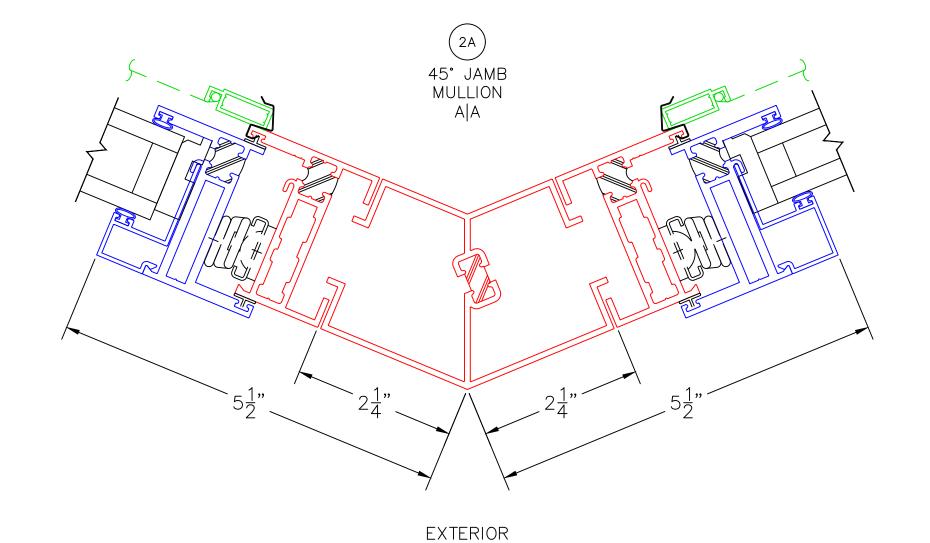




DWG NO.: 250-T-05_03

DATE: 7/5/18

0 0.5 1 1.5 2 (USE RULER TO SCALE DIMENSIONS IN INCHES) SCALE: 3/4


90° CORNER UNIT-GTF AND HOPPER 1/4" SINGLE AND 1-1/2" INSULATED GLAZING SHOWN

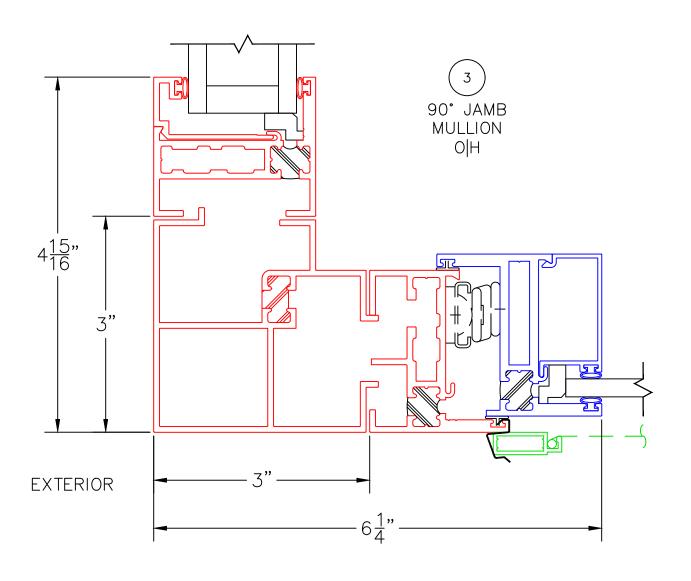



DWG NO.: 250-T-05_03A

DATE: 7/5/18



45° CORNER UNIT-GTF AND HOPPER
1" AND 1-1/2"
INSULATED GLAZING SHOWN

