



FASTEN MEMBRANE AND FLASH CURB OR WALL WITH CURED EPDM MEMBRANE FOLLOWING STANDARD PROCEDURES USING BONDING ADHESIVE AND SecurTAPE AT MEMBRANE SPLICE.

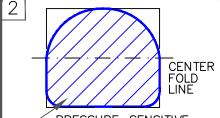


PRESSURE - SENSITIVE
ELASTOFORM FLASHING
6"X6" (152X152mm)


USE PRE-CUT T-JOINT COVERS OR CUT A 6"x6" (152X152mm) & 12"x12" (305X305mm) SECTION OF PRESSURE-SENSITIVE ELASTOFORM FLASHING AND ROUND CORNERS

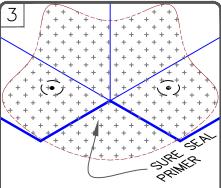

CLEAN THE DRY SPLICE AREA OF THE EPDM WITH EPDM PRIMER; APPLY LAP SEALANT 1/2" (13mm) MIN. FROM THE CURB AS SHOWN IN STEP 4.

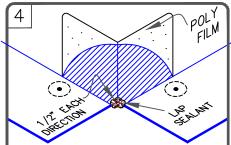


AFTER APPLYING LAP SEALANT, REMOVE & REPLACE POLY BACKING ON FLASHING. FOLD 6"X6" FLASHING IN HALF WITH ROUNDED PORTION TURNED UP. CENTER ON CORNER & FIRMLY PRESS AGAINST VERTICAL SURFACE

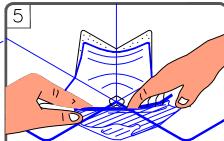



ROLL & CREASE FLASHING TIGHTLY INTO ANGLE CHANGE & FIRMLY ROLL FLASHING ONTO THE DECK MEMBRANE

USE HEAT GUN TO WARM THE FLASHING IN COLD WEATHER

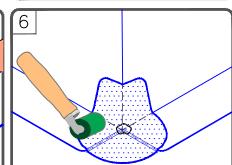



AFTER ADHERING, ROLL WITH A TWO INCH WIDE STEEL HAND ROLLER. PAY PARTICULAR ATTENTION TO THE STEP OFFS AND ANGLE CHANGES

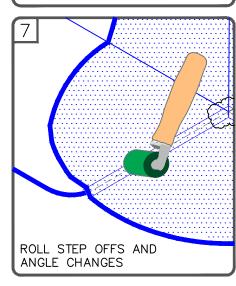

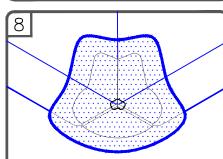

CLEAN THE SPLICE AREA WITH EPDM PRIMER. INSTALL THE 12"X12" SECTION OF PRESSURE—SENSITIVE ELASTOFORM FLASHING TO EXTEND A MINIMUM 2" BEYOND THE PREVIOUSLY APPLIED 6"X6" FLASHING (STEPS 4-6).

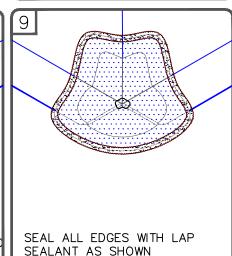

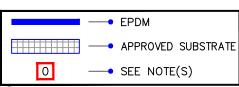

OUTSIDE CORNER FLASHING FOR PROJECTS WITH 90-MIL MEMBRANE OR 25 & 30-YEAR WARRANTIES

For additional information, refer to Specifications

