


NOTES:

- REFER TO <u>SecurEdge 200 INSTALLATION</u> INSTRUCTION MANUAL FOR STEP-BY-STEP INSTALLATION PROCEDURES.
- 2. WOOD NAILER MUST EXTEND PAST TOTAL WIDTH OF GRAVEL STOP DECK FLANGE.
- 3. APPLY EPDM PRIMER TO THE MEMBRANE SURFACE PRIOR TO INSTALLING PRESSURE—SENSITIVE FLASHING.
- 4. 6" (152 mm) WIDE SECTION OF PRESSURE—SENSITIVE ELASTOFORM FLASHING MAY ALSO BE CENTERED OVER FIELD SPLICE AT ANGLE CHANGE.
- 5. AT GUTTER EDGES, SCUPPERS MUST BE PROVIDED FOR DRAINAGE.
- 6. WHEN METAL FASCIA BY OTHERS IS USED, FASTENER TYPE AND FASTENING FREQUENCY SHALL BE RECOMMENDED BY METAL EDGE MANUFACTURER.

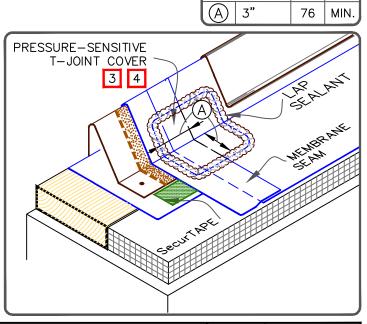

DIMENSION

mm

